


F9 (NO SOS Function)

1*Frequency writing Step

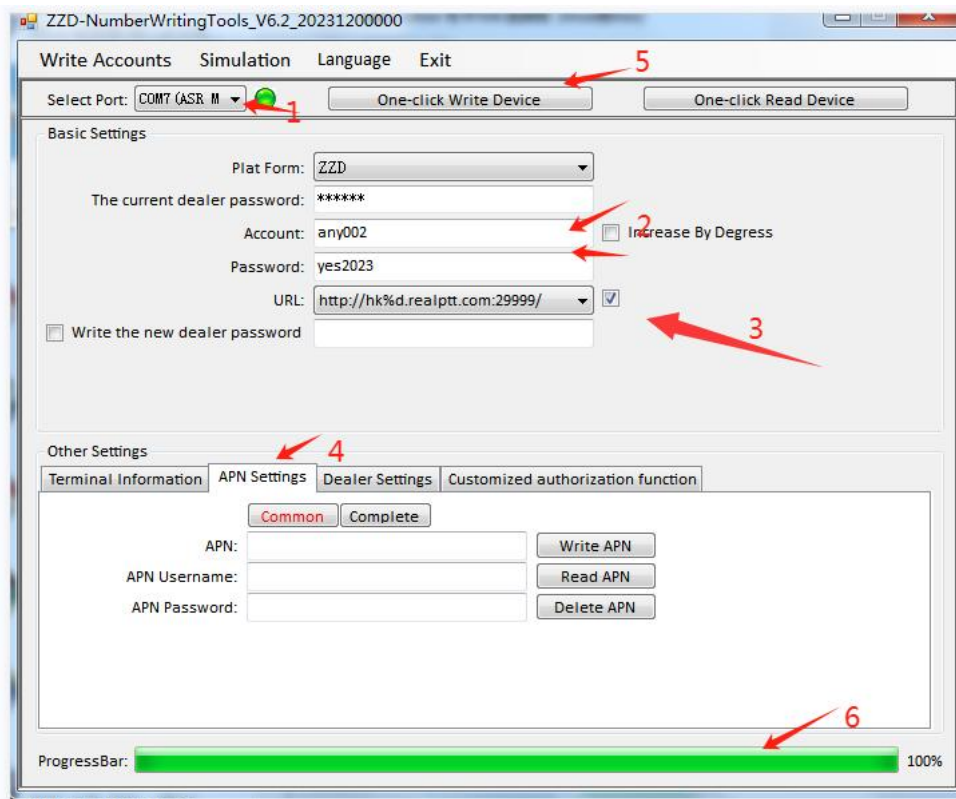

Step1: choose correct COM port,from your PC Device management you can see the port
(if no port, means driver Error,Must install driver to continue)

Step2: Fulfill your REALPTT account and password(REALPTT account cost Yearly fee, please buy from Anysecu. [About 15--50USD/Year/ID,depends on Function](#))

Step3: Choose your location URL(means server location,the nearest the fast communicate) (must ✓)

Step4: If your SIM card have APN please enter the detail information(from the Sim card provider)

Step5: One-Click Write Device

Step6: wait for Progress Bar 100%, that is all done, enjoy talk.

2*F9:4k,8k setting in the radio

Menu-setting-volume setting-sound quality switch-sound quality setting-4k 8k

