



Radioddity QR20 User Calibration Settings

The new firmware (20220504-V3.0.0) opens the user calibration authority and can calibrate some data of the radio station. The parameters that can be calibrated include transmitting frequency, receiving frequency, S meter and voltmeter.

Calibration steps:

Power on > long press Menu(3s) > select SET > select 0 item in the SET menu to KEY-LED > long press PA to prompt for "input a password" > enter user password "685911" > prompt for "agent setup" > long press menu to exit the main screen > Long press the number key 9, and the calibration interface will be displayed on the screen. Select the calibration item with the left and right keys, and adjust the calibration value with the up and down keys. After calibration, long press 9 to exit calibration. Shut down and save calibration parameters.

Parameters:

TF: transmission frequency, recommended value 50.

S: S meter, recommended value - 25.

5: Voltmeter, recommended value 40.

RF: receiving frequency -53.

