

IGNITION SYSTEM

CONTENTS

	page		page
GENERAL INFORMATION		SENSOR	8
INTRODUCTION	1	MAP SENSOR	7
DESCRIPTION AND OPERATION		SPARK PLUG CABLES	8
AUTOMATIC SHUTDOWN (ASD) RELAY	3	SPARK PLUG CONDITIONS	9
CAMSHAFT POSITION SENSOR	3	TESTING FOR SPARK AT COIL	4
CRANKSHAFT POSITION SENSOR	3	REMOVAL AND INSTALLATION	
DISTRIBUTOR	2	AUTOMATIC SHUTDOWN (ASD) RELAY	13
ENGINE COOLANT TEMPERATURE		CAMSHAFT POSITION SENSOR	14
SENSOR	4	CRANKSHAFT POSITION SENSOR	13
IGNITION COIL	3	DISTRIBUTOR	15
IGNITION SWITCH AND KEY LOCK		ENGINE COOLANT TEMPERATURE	
CYLINDER	4	SENSOR	15
IGNITION SYSTEM	1	IGNITION COIL	12
INTAKE MANIFOLD AIR TEMPERATURE		IGNITION SWITCH AND KEY CYLINDER	18
SENSOR	4	INTAKE MANIFOLD AIR TEMPERATURE	
MANIFOLD ABSOLUTE PRESSURE (MAP)		SENSOR	15
SENSOR	4	MANIFOLD ABSOLUTE PRESSURE (MAP)	
POWERTRAIN CONTROL MODULE	2	SENSOR	15
SPARK PLUG CABLES	2	POWERTRAIN CONTROL MODULE (PCM) ...	18
SPARK PLUGS	2	SHIFTER/IGNITION INTERLOCK	20
THROTTLE POSITION SENSOR	4	SPARK PLUG CABLES	11
DIAGNOSIS AND TESTING		SPARK PLUGS	12
AUTOMATIC SHUTDOWN		THROTTLE POSITION SENSOR	15
(ASD) RELAY TEST	4	SPECIFICATIONS	
CAMSHAFT POSITION SENSOR	8	ENGINE FIRING ORDER—2.5L 4-CYLINDER	
CRANKSHAFT POSITION SENSOR	7	ENGINE	20
DISTRIBUTOR CAP	7	ENGINE FIRING ORDER—4.0L 6-CYLINDER	
DISTRIBUTOR ROTOR	7	ENGINE	20
ENGINE COOLANT TEMPERATURE		IGNITION COIL RESISTANCE	21
SENSOR	8	IGNITION TIMING	20
FAILURE TO START TEST	6	SPARK PLUG CABLE RESISTANCE	21
IGNITION COIL TEST	5	SPARK PLUGS	21
IGNITION TIMING	7	TORQUE CHART	21
INTAKE MANIFOLD AIR TEMPERATURE		VECI LABEL	20

GENERAL INFORMATION

INTRODUCTION

This group describes the ignition systems for both the 2.5L 4-cylinder and the 4.0L 6-cylinder engines.

On Board Diagnostics is described in Group 25, Emission Control Systems.

Group 0, Lubrication and Maintenance, contains general maintenance information (in time or mileage intervals) for ignition related items. The Owner's Manual also contains maintenance information.

DESCRIPTION AND OPERATION

IGNITION SYSTEM

The ignition systems used on the 2.5L 4-cylinder and the 4.0L 6-cylinder engine are basically identical. Similarities and differences between the systems will be discussed.

The ignition system is controlled by the powertrain control module (PCM) on all engines.

The ignition system consists of:

- Spark Plugs
- Ignition Coil

DESCRIPTION AND OPERATION (Continued)

- Secondary Ignition Cables
- Distributor (contains rotor and camshaft position sensor)
- Powertrain Control Module (PCM)
- Crankshaft Position, Camshaft Position, Throttle Position and MAP Sensors

POWERTRAIN CONTROL MODULE

The Powertrain Control Module (PCM) is located in the engine compartment (Fig. 1).

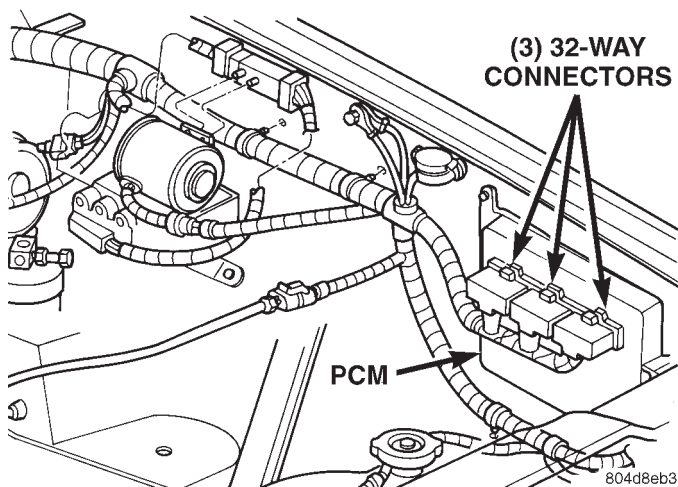


Fig. 1 Powertrain Control Module (PCM) Location

The ignition system is controlled by the PCM.

NOTE: Base ignition timing by rotation of distributor is not adjustable.

The PCM opens and closes the ignition coil ground circuit to operate the ignition coil. This is done to adjust ignition timing, both initial (base) and advance, and for changing engine operating conditions.

The amount of electronic spark advance provided by the PCM is determined by five input factors: engine coolant temperature, engine rpm, intake manifold temperature, manifold absolute pressure and throttle position.

DISTRIBUTOR

All engines are equipped with a camshaft driven mechanical distributor containing a shaft driven distributor rotor. All distributors are equipped with an internal camshaft position (fuel sync) sensor (Fig. 2). This sensor provides fuel injection synchronization and cylinder identification.

The distributors on both the 2.5L 4-cylinder and the 4.0L-6 cylinder engines do not have built in centrifugal or vacuum assisted advance. Base ignition timing and all timing advance is controlled by the powertrain control module (PCM). Because ignition

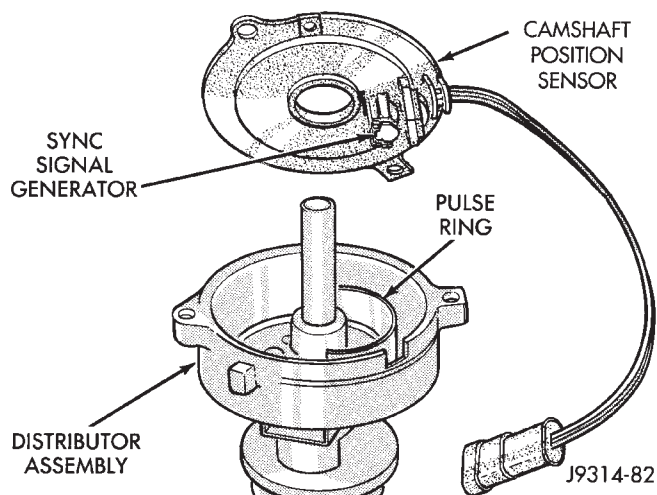


Fig. 2 Distributor and Camshaft Position Sensor-Typical

timing is controlled by the PCM, **base ignition timing is not adjustable on any of these engines.**

The distributor is locked in place by a fork with a slot located on the distributor housing base. The distributor holddown clamp bolt passes through this slot when installed. Because the distributor position is locked when installed, its rotational position can not be changed. **Do not attempt to modify the distributor housing to get distributor rotation. Distributor position will have no effect on ignition timing. The position of the distributor will determine fuel synchronization only.**

All distributors contain an internal oil seal that prevents oil from entering the distributor housing. The seal is not serviceable.

SPARK PLUGS

All engines use resistor type spark plugs. Remove the spark plugs and examine them for burned electrodes and fouled, cracked or broken porcelain insulators. Keep plugs arranged in the order in which they were removed from the engine. A single plug displaying an abnormal condition indicates that a problem exists in the corresponding cylinder. Replace spark plugs at the intervals recommended in Group O, Lubrication and Maintenance.

Spark plugs that have low mileage may be cleaned and reused if not otherwise defective, carbon or oil fouled. Refer to the Spark Plug Condition section of this group.

SPARK PLUG CABLES

Spark plug cables are sometimes referred to as secondary ignition wires. These cables transfer electrical current from the ignition coil(s) and/or distributor, to individual spark plugs at each cylinder. The resistive spark plug cables are of nonmetallic construction.

DESCRIPTION AND OPERATION (Continued)

The cables provide suppression of radio frequency emissions from the ignition system.

IGNITION COIL

Battery voltage is supplied to the ignition coil positive terminal from the ASD relay.

The Powertrain Control Module (PCM) opens and closes the ignition coil ground circuit for ignition coil operation.

Base ignition timing is not adjustable on any engine. By controlling the coil ground circuit, the PCM is able to set the base timing and adjust the ignition timing advance. This is done to meet changing engine operating conditions.

The ignition coil is not oil filled. The windings are embedded in an epoxy compound. This provides heat and vibration resistance that allows the ignition coil to be mounted on the engine.

AUTOMATIC SHUTDOWN (ASD) RELAY

As one of its functions, the ASD relay will supply battery voltage to the ignition coil. The ground circuit for the ASD relay is controlled by the Powertrain Control Module (PCM). The PCM regulates ASD relay operation by switching the ground circuit on-and-off.

CRANKSHAFT POSITION SENSOR

The crankshaft position sensor is mounted to the transmission bellhousing at the left/rear side of engine block (Fig. 3).

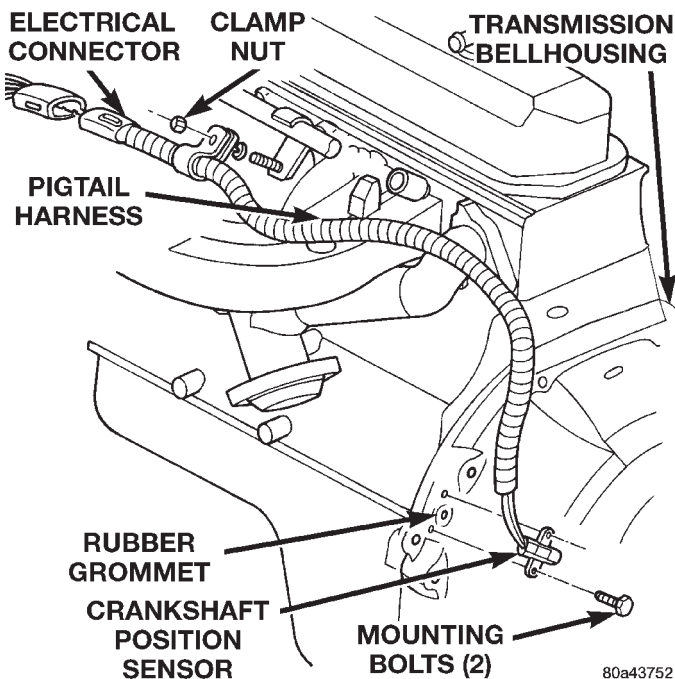


Fig. 3 Crankshaft Position Sensor—Typical

Engine speed and crankshaft position are provided through the crankshaft position sensor. The sensor

generates pulses that are the input sent to the powertrain control module (PCM). The PCM interprets the sensor input to determine the crankshaft position. The PCM then uses this position, along with other inputs, to determine injector sequence and ignition timing.

The sensor is a hall effect device combined with an internal magnet. It is also sensitive to steel within a certain distance from it.

SENSOR OPERATION

The flywheel/drive plate has groups of four notches at its outer edge. On 4.0L 6-cylinder engines there are three sets of notches (Fig. 5). On 2.5L 4-cylinder engines there are two sets of notches (Fig. 4).

The notches cause a pulse to be generated when they pass under the sensor. The pulses are the input to the PCM. For each engine revolution there are two groups of four pulses generated on 2.5L 4-cylinder engines. There are 3 groups of four pulses generated on 4.0L 6-cylinder engines.

The trailing edge of the fourth notch, which causes the pulse, is four degrees before top dead center (TDC) of the corresponding piston.

The engine will not operate if the PCM does not receive a crankshaft position sensor input.

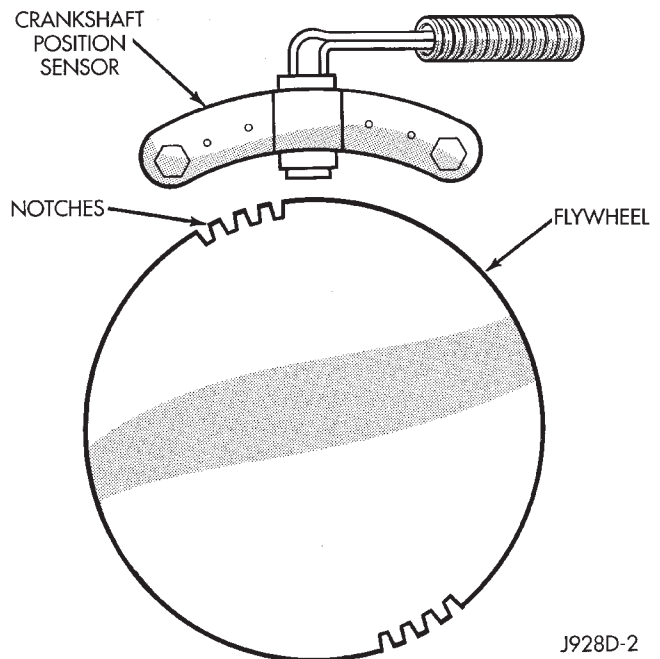


Fig. 4 Sensor Operation—2.5L 4-Cyl. Engine

CAMSHAFT POSITION SENSOR

The camshaft position sensor is located in the distributor on all engines.

The sensor contains a hall effect device called a sync signal generator to generate a fuel sync signal. This sync signal generator detects a rotating pulse ring (shutter) on the distributor shaft. The pulse ring

DESCRIPTION AND OPERATION (Continued)

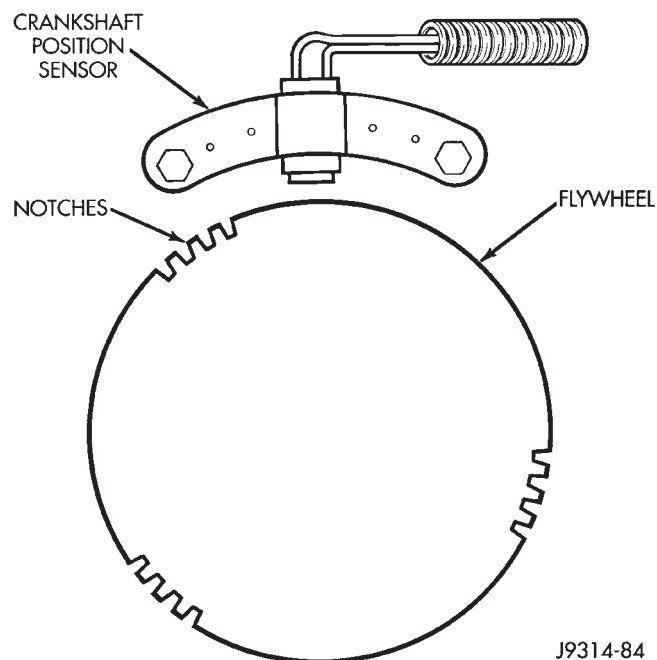


Fig. 5 Sensor Operation—4.0L 6-Cyl. Engine

rotates 180 degrees through the sync signal generator. Its signal is used in conjunction with the crankshaft position sensor to differentiate between fuel injection and spark events. It is also used to synchronize the fuel injectors with their respective cylinders.

When the leading edge of the pulse ring (shutter) enters the sync signal generator, the following occurs: The interruption of magnetic field causes the voltage to switch high resulting in a sync signal of approximately 5 volts.

When the trailing edge of the pulse ring (shutter) leaves the sync signal generator, the following occurs: The change of the magnetic field causes the sync signal voltage to switch low to 0 volts.

MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR

For an operational description, diagnosis and removal/installation procedures, refer to Group 14, Fuel System.

ENGINE COOLANT TEMPERATURE SENSOR

For an operational description, diagnosis and removal/installation procedures, refer to Group 14, Fuel System.

THROTTLE POSITION SENSOR

For an operational description, diagnosis and removal/installation procedures, refer to Group 14, Fuel System.

INTAKE MANIFOLD AIR TEMPERATURE SENSOR

For an operational description, diagnosis and removal/installation procedures, refer to Group 14, Fuel System.

IGNITION SWITCH AND KEY LOCK CYLINDER

The ignition switch is located on the steering column. The Key-In-Switch is located in the ignition switch module. For electrical diagnosis of the Key-In-Switch, refer to Group 8U, Chime/Buzzer Warning Systems. For removal/installation of either the key lock cylinder or ignition switch, refer to Ignition Switch and Key Cylinder Removal/Installation in this group.

On vehicles equipped with an automatic transmission, a cable connects an interlock device within the steering column assembly to the transmission floor shift lever. This interlock device is used to lock the transmission shifter in the PARK position when the key is in the LOCKED or ACCESSORY position. The interlock device is not serviceable. If repair is necessary, the steering column assembly must be replaced. Refer to Group 19, Steering for procedures. The shifter interlock cable can be adjusted or replaced. Refer to Group 21, Transmissions for procedures.

DIAGNOSIS AND TESTING

AUTOMATIC SHUTDOWN (ASD) RELAY TEST

To perform a complete test of this relay and its circuitry, refer to the DRB scan tool. Also refer to the appropriate Powertrain Diagnostics Procedures manual. To test the relay only, refer to Relays—Operation/Testing in the Group 14, Fuel Systems section.

TESTING FOR SPARK AT COIL

CAUTION: When disconnecting a high voltage cable from a spark plug or from the distributor cap, twist the rubber boot slightly (1/2 turn) to break it loose (Fig. 6). Grasp the boot (not the cable) and pull it off with a steady, even force.

(1) Disconnect the ignition coil secondary cable from center tower of the distributor cap. Hold the cable terminal approximately 12 mm (1/2 in.) from a good engine ground (Fig. 7).

WARNING: BE VERY CAREFUL WHEN THE ENGINE IS CRANKING. DO NOT PUT YOUR HANDS NEAR THE PULLEYS, BELTS OR THE FAN. DO NOT WEAR LOOSE FITTING CLOTHING.

DIAGNOSIS AND TESTING (Continued)

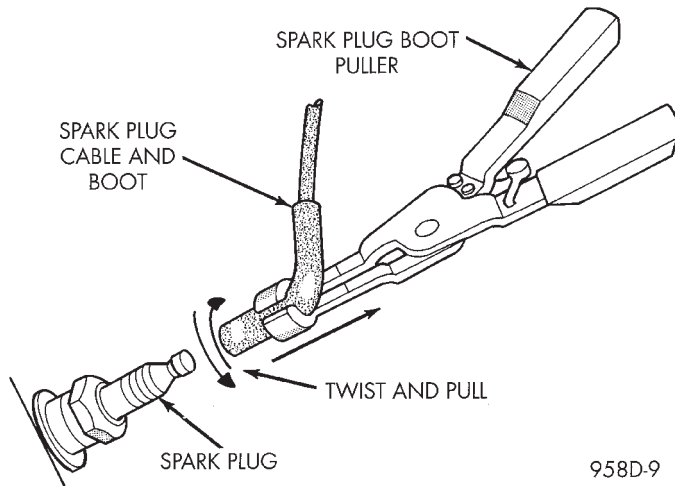


Fig. 6 Cable Removal

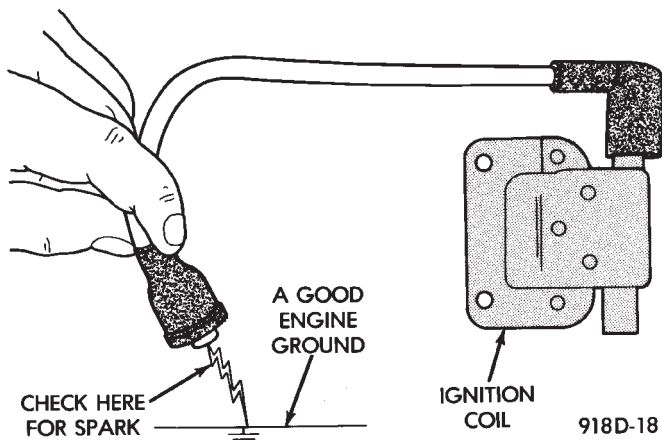


Fig. 7 Checking for Spark—Typical

(2) Rotate (crank) the engine with the starter motor and observe the cable terminal for a steady arc. If steady arcing does not occur, inspect the secondary coil cable. Refer to Spark Plug Cables in this group. Also inspect the distributor cap and rotor for cracks or burn marks. Repair as necessary. If steady arcing occurs, connect ignition coil cable to the distributor cap.

(3) Remove a cable from one spark plug.

(4) Using insulated pliers, hold the cable terminal approximately 12 mm (1/2 in.) from the engine cylinder head or block while rotating the engine with the starter motor. Observe the spark plug cable terminal for an arc. If steady arcing occurs, it can be expected that the ignition secondary system is operating correctly. **(If the ignition coil cable is removed for this test, instead of a spark plug cable, the spark intensity will be much higher).** If steady arcing occurs at the spark plug cables, but the engine will not start, connect the DRB scan tool. Refer to the appropriate Powertrain Diagnostic Procedures service manual.

IGNITION COIL TEST

To perform a complete test of the ignition coil and its circuitry, refer to the DRB scan tool. Also refer to the appropriate Powertrain Diagnostics Procedures manual. To test the coil only, refer to the following:

The ignition coil (Fig. 8) or (Fig. 9) is designed to operate without an external ballast resistor.

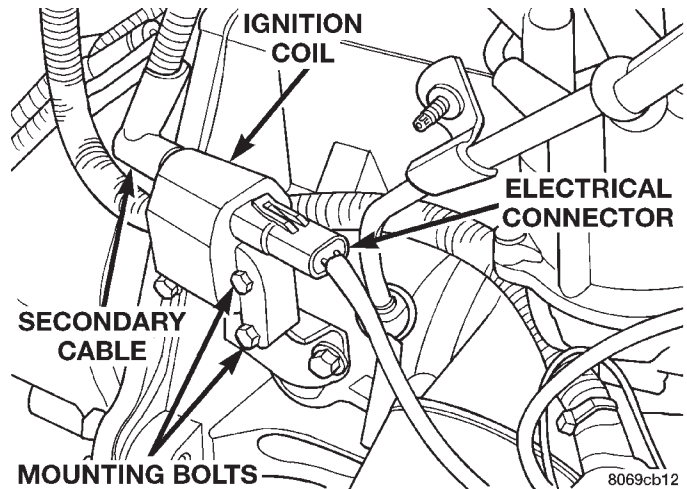


Fig. 8 Ignition Coil—2.5L Engine

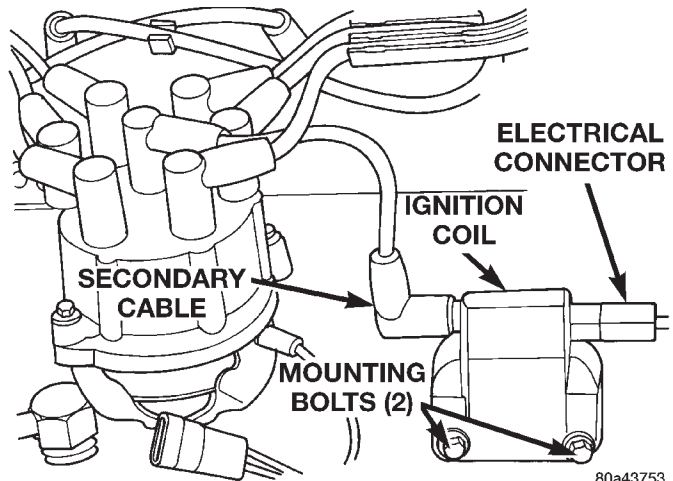


Fig. 9 Ignition Coil—4.0L Engine

Inspect the ignition coil for arcing. Test the coil according to coil tester manufacturer's instructions. Test the coil primary and secondary resistance. Replace any coil that does not meet specifications. Refer to the Ignition Coil Resistance chart.

If the ignition coil is being replaced, the secondary spark plug cable must also be checked. Replace cable if it has been burned or damaged.

Arcing at the tower will carbonize the cable boot, which if it is connected to a new ignition coil, will cause the coil to fail.

If the secondary coil cable shows any signs of damage, it should be replaced with a new cable and new

DIAGNOSIS AND TESTING (Continued)

COIL (MANUFACTURER)	PRIMARY RESISTANCE 21-27°C (70-80°F)	SECONDARY RESISTANCE 21-27°C (70-80°F)
Diamond	0.97 - 1.18 Ohms	11,300 - 15,300 Ohms
Toyodenso	0.95 - 1.20 Ohms	11,300 - 13,300 Ohms

J918D-2

IGNITION COIL RESISTANCE

terminal. Carbon tracking on the old cable can cause arcing and the failure of a new ignition coil.

FAILURE TO START TEST

To prevent unnecessary diagnostic time and wrong test results, the Testing For Spark At Coil test should be performed prior to this test.

WARNING: SET PARKING BRAKE OR BLOCK THE DRIVE WHEELS BEFORE PROCEEDING WITH THIS TEST.

(1) Unplug the ignition coil harness connector at the coil (Fig. 9).

(2) Connect a set of small jumper wires (18 gauge or smaller) between the disconnected harness terminals and the ignition coil terminals. To determine polarity at connector and coil, refer to the Wiring Diagrams section.

(3) Attach one lead of a voltmeter to the positive (12 volt) jumper wire. Attach the negative side of voltmeter to a good ground.

(4) Determine that sufficient battery voltage (12.4 volts) is present for the starting and ignition systems.

(5) Crank the engine for 5 seconds while monitoring the voltage at the coil positive terminal:

- If the voltage remains near zero during the entire period of cranking, refer to On-Board Diagnostics in Group 14, Fuel Systems. Check the Powertrain Control Module (PCM) and auto shutdown relay.

- If voltage is at or near battery voltage and drops to zero after 1-2 seconds of cranking, check the powertrain control module circuit. Refer to On-Board Diagnostics in Group 14, Fuel Systems.

- If voltage remains at or near battery voltage during the entire 5 seconds, turn the key off. Remove the three 32-way connectors (Fig. 10) from the PCM. Check 32-way connectors for any spread terminals or corrosion.

(6) Remove test lead from the coil positive terminal. Connect an 18 gauge jumper wire between the

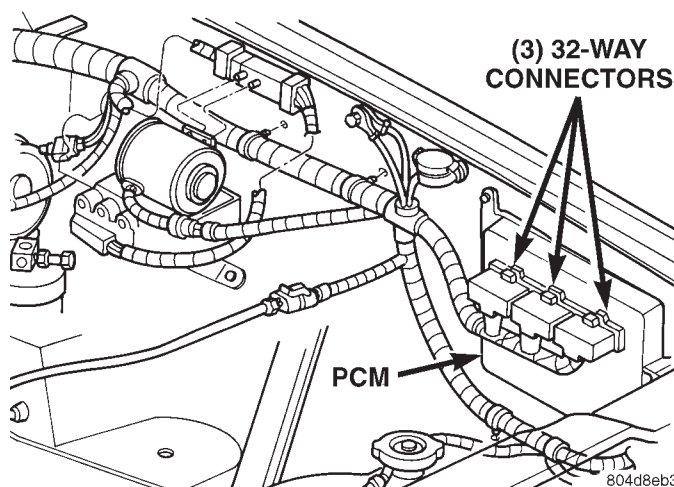


Fig. 10 PCM and Three 32-Way Connectors

battery positive terminal and the coil positive terminal.

(7) Make the special jumper shown in (Fig. 11). Using the jumper, **momentarily** ground the ignition coil driver circuit at the PCM connector (cavity A-7). For cavity/terminal location of this circuit, refer to Group 8W, Wiring. A spark should be generated at the coil cable when the ground is removed.

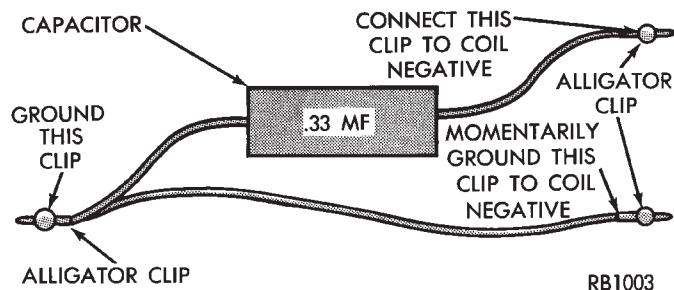


Fig. 11 Special Jumper Ground-to-Coil Negative Terminal

(8) If spark is generated, replace the PCM.

(9) If spark is not seen, use the special jumper to ground the coil negative terminal directly.

(10) If spark is produced, repair wiring harness for an open condition.

DIAGNOSIS AND TESTING (Continued)

(11) If spark is not produced, replace the ignition coil.

DISTRIBUTOR CAP

Remove the distributor cap and wipe it clean with a dry lint free cloth. Visually inspect the cap for cracks, carbon paths, broken towers or damaged rotor button (Fig. 12) or (Fig. 13). Also check for white deposits on the inside (caused by condensation entering the cap through cracks). Replace any cap that displays charred or eroded terminals. The machined surface of a terminal end (faces toward rotor) will indicate some evidence of erosion from normal operation. Examine the terminal ends for evidence of mechanical interference with the rotor tip.

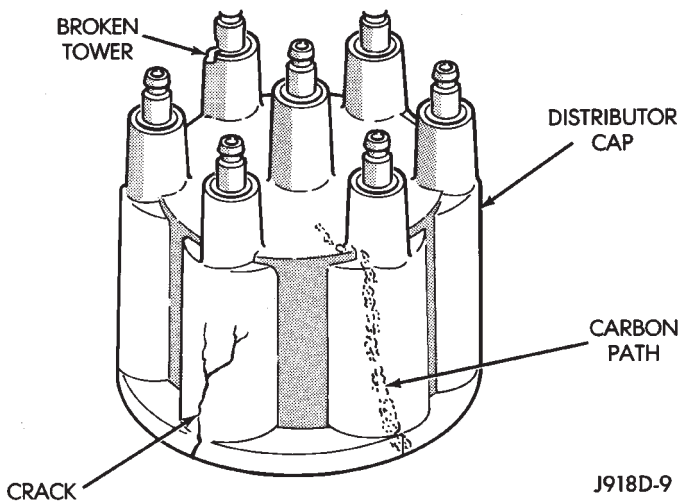


Fig. 12 Cap Inspection—External—Typical

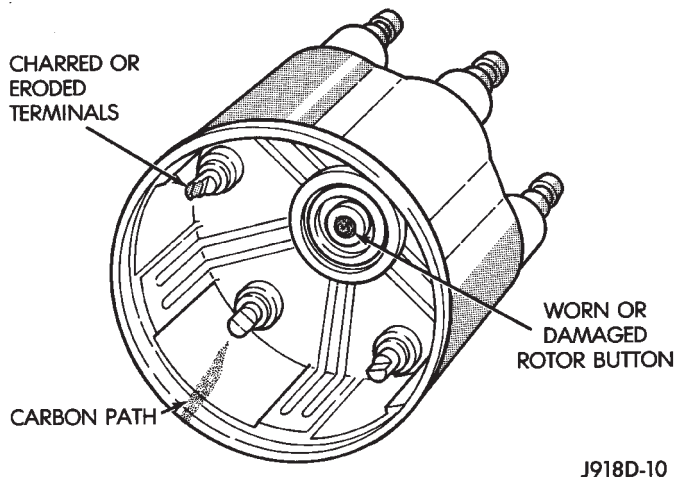


Fig. 13 Cap Inspection—Internal—Typical

DISTRIBUTOR ROTOR

Visually inspect the rotor (Fig. 14) for cracks, evidence of corrosion or the effects of arcing on the metal tip. Also check for evidence of mechanical interference with the cap. Some charring is normal on the end of the metal tip. The silicone-dielectric-

varnish-compound applied to the rotor tip for radio interference noise suppression, will appear charred. This is normal. **Do not remove the charred compound.** Test the spring for insufficient tension. Replace a rotor that displays any of these adverse conditions.

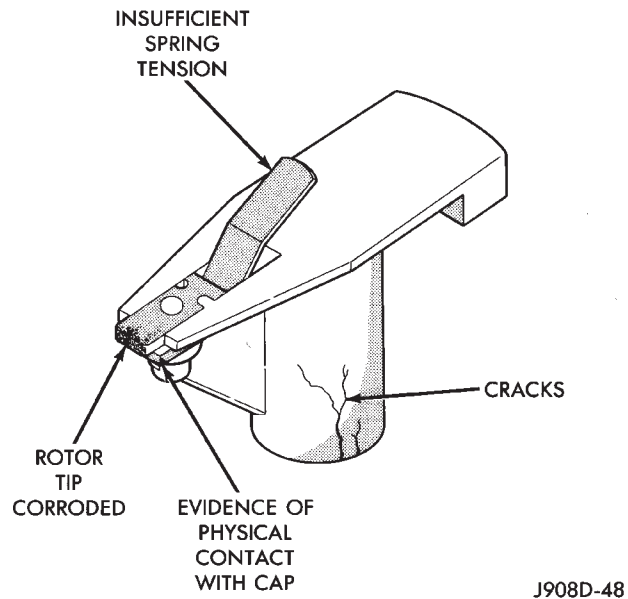


Fig. 14 Rotor Inspection—Typical

IGNITION TIMING

NOTE: Base (initial) ignition timing is NOT adjustable on any 2.5L 4-cylinder or 4.0L 6-cylinder engine. Do not attempt to adjust ignition timing by rotating the distributor.

NOTE: Do not attempt to modify the distributor housing to get distributor rotation. Distributor position will have no effect on ignition timing.

All ignition timing functions are controlled by the powertrain control module (PCM). For additional information, refer to the appropriate Powertrain Diagnostics Procedures service manual for operation of the DRB Scan Tool.

MAP SENSOR

For an operational description, diagnosis or removal/ installation procedures, refer to Group 14, Fuel Systems.

CRANKSHAFT POSITION SENSOR

To perform a complete test of this sensor and its circuitry, refer to the DRB scan tool. Also refer to the appropriate Powertrain Diagnostics Procedures manual.

DIAGNOSIS AND TESTING (Continued)

CAMSHAFT POSITION SENSOR

The camshaft position sensor is located in the distributor (Fig. 15) on all engines.

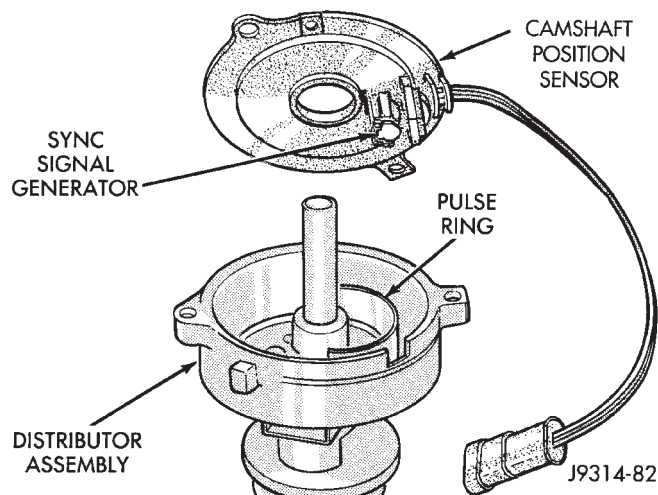


Fig. 15 Camshaft Position Sensor—Typical

To perform a complete test of this sensor and its circuitry, refer to the appropriate Powertrain Diagnostics Procedures service manual. To test the sensor only, refer to the following:

For this test, an analog (non-digital) voltmeter is needed. Do not remove the distributor connector from the distributor. Using small paper clips, insert them into the backside of the distributor wire harness connector to make contact with the terminals. Be sure that the connector is not damaged when inserting the paper clips. Attach voltmeter leads to these paper clips.

(1) Connect the positive (+) voltmeter lead into the sensor output wire. This is at done the distributor wire harness connector. For wire identification, refer to Group 8W, Wiring Diagrams.

(2) Connect the negative (-) voltmeter lead into the ground wire. For wire identification, refer to Group 8W, Wiring Diagrams.

(3) Set the voltmeter to the 15 Volt DC scale.

(4) Remove distributor cap from distributor (two screws). Rotate (crank) the engine until the distributor rotor is approximately in the 11 o'clock position. The movable pulse ring should now be within the sensor pickup.

(5) Turn ignition key to ON position. Voltmeter should read approximately 5.0 volts.

(6) If voltage is not present, check the voltmeter leads for a good connection.

(7) If voltage is still not present, check for voltage at the supply wire. For wire identification, refer to Group 8W, Wiring Diagrams.

(8) If 5 volts is not present at supply wire, check for voltage at PCM 32-way connector (cavity A-17). Refer to Group 8W, Wiring for location of connector/

terminal. Leave the PCM connector connected for this test.

(9) If voltage is still not present, perform vehicle test using the DRB scan tool.

(10) If voltage is present at cavity A-17, but not at the supply wire:

(a) Check continuity between the supply wire. This is checked between the distributor connector and cavity A-17 at the PCM. If continuity is not present, repair the harness as necessary.

(b) Check for continuity between the camshaft position sensor output wire and cavity A-18 at the PCM. If continuity is not present, repair the harness as necessary.

(c) Check for continuity between the ground circuit wire at the distributor connector and ground. If continuity is not present, repair the harness as necessary.

(11) While observing the voltmeter, crank the engine with ignition switch. The voltmeter needle should fluctuate between 0 and 5 volts while the engine is cranking. This verifies that the camshaft position sensor in the distributor is operating properly and a sync pulse signal is being generated.

If sync pulse signal is not present, replacement of the camshaft position sensor is necessary

ENGINE COOLANT TEMPERATURE SENSOR

For an operational description, diagnosis and removal/installation procedures, refer to Group 14, Fuel System.

INTAKE MANIFOLD AIR TEMPERATURE SENSOR

For an operational description, diagnosis and removal/installation procedures, refer to Group 14, Fuel System.

SPARK PLUG CABLES

Check the spark plug cable connections for good contact at the coil(s), distributor cap towers, and spark plugs. Terminals should be fully seated. The insulators should be in good condition and should fit tightly on the coil, distributor and spark plugs. Spark plug cables with insulators that are cracked or torn must be replaced.

Clean high voltage ignition cables with a cloth moistened with a non-flammable solvent. Wipe the cables dry. Check for brittle or cracked insulation.

TESTING

When testing secondary cables for damage with an oscilloscope, follow the instructions of the equipment manufacturer.

If an oscilloscope is not available, spark plug cables may be tested as follows:

DIAGNOSIS AND TESTING (Continued)

CAUTION: Do not leave any one spark plug cable disconnected for longer than necessary during testing. This may cause possible heat damage to the catalytic converter. Total test time must not exceed ten minutes.

With the engine running, remove spark plug cable from spark plug (one at a time) and hold next to a good engine ground. If the cable and spark plug are in good condition, the engine rpm should drop and the engine will run poorly. If engine rpm does not drop, the cable and/or spark plug may not be operating properly and should be replaced. Also check engine cylinder compression.

With the engine not running, connect one end of a test probe to a good ground. Start the engine and run the other end of the test probe along the entire length of all spark plug cables. If cables are cracked or punctured, there will be a noticeable spark jump from the damaged area to the test probe. The cable running from the ignition coil to the distributor cap can be checked in the same manner. Cracked, damaged or faulty cables should be replaced with resistance type cable. This can be identified by the words **ELECTRONIC SUPPRESSION** printed on the cable jacket.

Use an ohmmeter to test for open circuits, excessive resistance or loose terminals. Remove the distributor cap from the distributor. **Do not remove cables from cap.** Remove cable from spark plug. Connect ohmmeter to spark plug terminal end of cable and to corresponding electrode in distributor cap. Resistance should be 250 to 1000 Ohms per inch of cable. If not, remove cable from distributor cap tower and connect ohmmeter to the terminal ends of cable. If resistance is not within specifications as found in the Spark Plug Cable Resistance chart, replace the cable. Test all spark plug cables in this manner.


MINIMUM	MAXIMUM
250 Ohms Per Inch	1000 Ohms Per Inch
3000 Ohms Per Foot	12,000 Ohms Per Foot

SPARK PLUG CABLE RESISTANCE

To test ignition coil-to-distributor cap cable, do not remove the cable from the cap. Connect ohmmeter to rotor button (center contact) of distributor cap and terminal at ignition coil end of cable. If resistance is not within specifications as found in the Spark Plug Cable Resistance chart, remove the cable from the distributor cap. Connect the ohmmeter to the terminal ends of the cable. If resistance is not within specifications as found in the Spark Plug Cable Resistance chart, replace the cable. Inspect the ignition coil tower for cracks, burns or corrosion.

SPARK PLUG CONDITIONS*NORMAL OPERATING*

The few deposits present on the spark plug will probably be light tan or slightly gray in color. This is evident with most grades of commercial gasoline (Fig. 16). There will not be evidence of electrode burning. Gap growth will not average more than approximately 0.025 mm (.001 in) per 1600 km (1000 miles) of operation. Spark plugs that have normal wear can usually be cleaned, have the electrodes filed, have the gap set and then be installed.

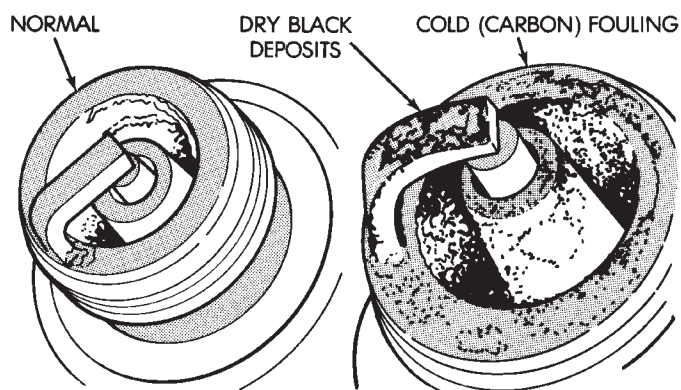

J908D-15

Fig. 16 Normal Operation and Cold (Carbon) Fouling

Some fuel refiners in several areas of the United States have introduced a manganese additive (MMT) for unleaded fuel. During combustion, fuel with MMT causes the entire tip of the spark plug to be coated with a rust colored deposit. This rust color can be misdiagnosed as being caused by coolant in the combustion chamber. Spark plug performance is not affected by MMT deposits.

COLD FOULING/CARBON FOULING

Cold fouling is sometimes referred to as carbon fouling. The deposits that cause cold fouling are basically carbon (Fig. 16). A dry, black deposit on one or two plugs in a set may be caused by sticking valves or defective spark plug cables. Cold (carbon) fouling of the entire set of spark plugs may be caused by a clogged air cleaner element or repeated short operating times (short trips).

WET FOULING OR GAS FOULING

A spark plug coated with excessive wet fuel or oil is wet fouled. In older engines, worn piston rings, leaking valve guide seals or excessive cylinder wear can cause wet fouling. In new or recently overhauled engines, wet fouling may occur before break-in (normal oil control) is achieved. This condition can usu-

DIAGNOSIS AND TESTING (Continued)

ally be resolved by cleaning and reinstalling the fouled plugs.

OIL OR ASH ENCRUSTED

If one or more spark plugs are oil or oil ash encrusted (Fig. 17), evaluate engine condition for the cause of oil entry into that particular combustion chamber.

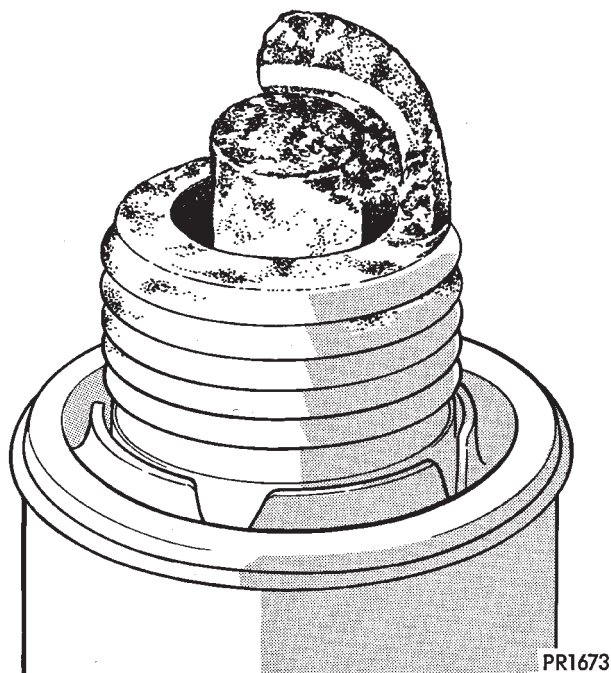


Fig. 17 Oil or Ash Encrusted

ELECTRODE GAP BRIDGING

Electrode gap bridging may be traced to loose deposits in the combustion chamber. These deposits accumulate on the spark plugs during continuous stop-and-go driving. When the engine is suddenly subjected to a high torque load, deposits partially liquefy and bridge the gap between electrodes (Fig. 18). This short circuits the electrodes. Spark plugs with electrode gap bridging can be cleaned using standard procedures.

SCAVENGER DEPOSITS

Fuel scavenger deposits may be either white or yellow (Fig. 19). They may appear to be harmful, but this is a normal condition caused by chemical additives in certain fuels. These additives are designed to change the chemical nature of deposits and decrease spark plug misfire tendencies. Notice that accumulation on the ground electrode and shell area may be heavy, but the deposits are easily removed. Spark plugs with scavenger deposits can be considered normal in condition and can be cleaned using standard procedures.

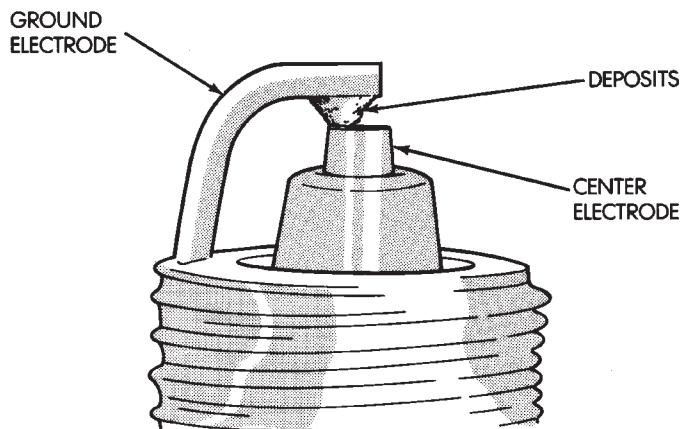


Fig. 18 Electrode Gap Bridging

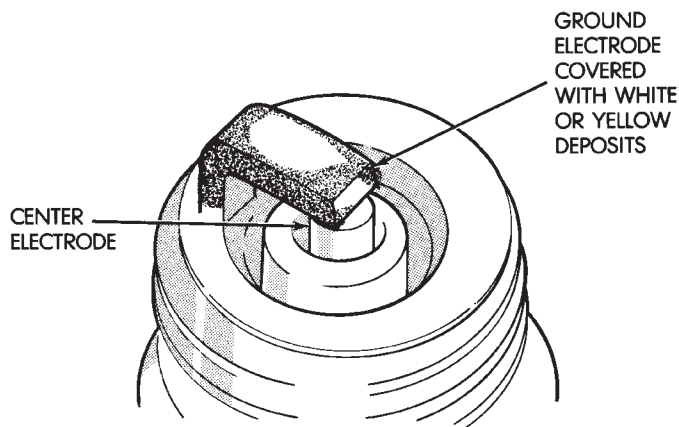


Fig. 19 Scavenger Deposits


CHIPPED ELECTRODE INSULATOR

A chipped electrode insulator usually results from bending the center electrode while adjusting the spark plug electrode gap. Under certain conditions, severe detonation can also separate the insulator from the center electrode (Fig. 20). Spark plugs with this condition must be replaced.

PREIGNITION DAMAGE

Preignition damage is usually caused by excessive combustion chamber temperature. The center electrode dissolves first and the ground electrode dissolves somewhat later (Fig. 21). Insulators appear relatively deposit free. Determine if the spark plug has the correct heat range rating for the engine. Determine if ignition timing is over advanced or if other operating conditions are causing engine overheating. (The heat range rating refers to the operating temperature of a particular type spark plug. Spark plugs are designed to operate within specific temperature ranges. This depends upon the thick-


DIAGNOSIS AND TESTING (Continued)

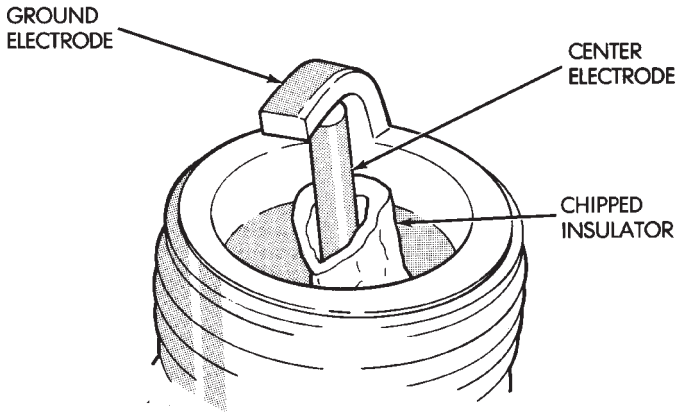

J908D-13

Fig. 20 Chipped Electrode Insulator

ness and length of the center electrodes porcelain insulator.)

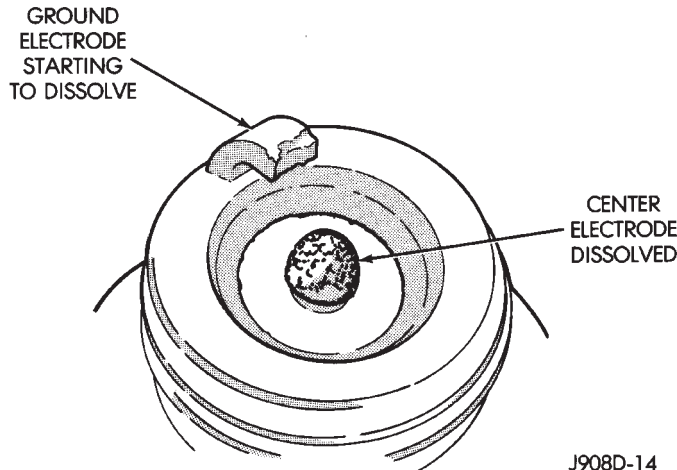

J908D-14

Fig. 21 Preignition Damage


SPARK PLUG OVERHEATING

Overheating is indicated by a white or gray center electrode insulator that also appears blistered (Fig. 22). The increase in electrode gap will be considerably in excess of 0.001 inch per 1000 miles of operation. This suggests that a plug with a cooler heat range rating should be used. Over advanced ignition timing, detonation and cooling system malfunctions can also cause spark plug overheating.

REMOVAL AND INSTALLATION


SPARK PLUG CABLES

CAUTION: When disconnecting a high voltage cable from a spark plug or from the distributor cap, twist the rubber boot slightly (1/2 turn) to break it loose (Fig. 23). Grasp the boot (not the cable) and pull it off with a steady, even force.

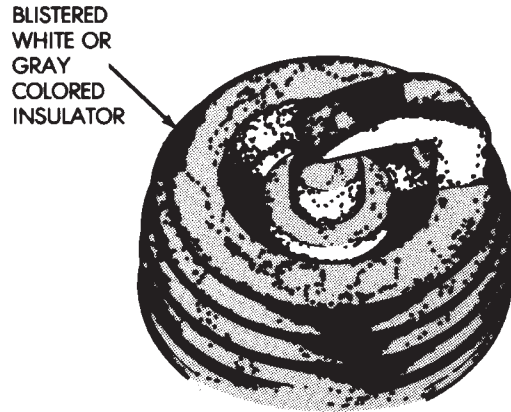

J908D-16


Fig. 22 Spark Plug Overheating

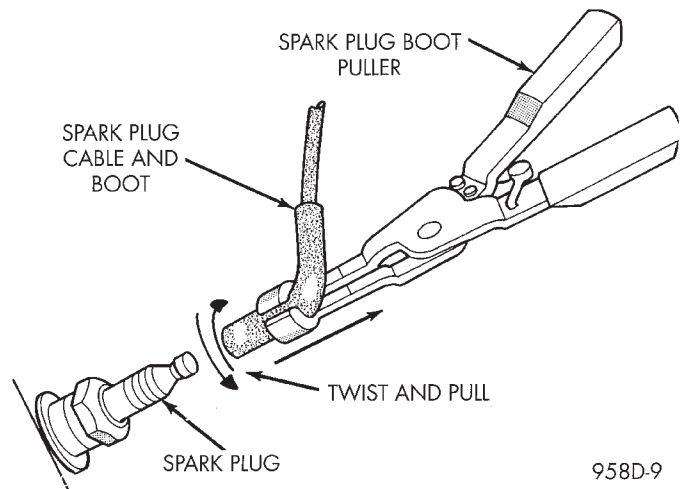

958D-9

Fig. 23 Cable Removal


Install cables into the proper engine cylinder firing order (Fig. 24) or (Fig. 25).

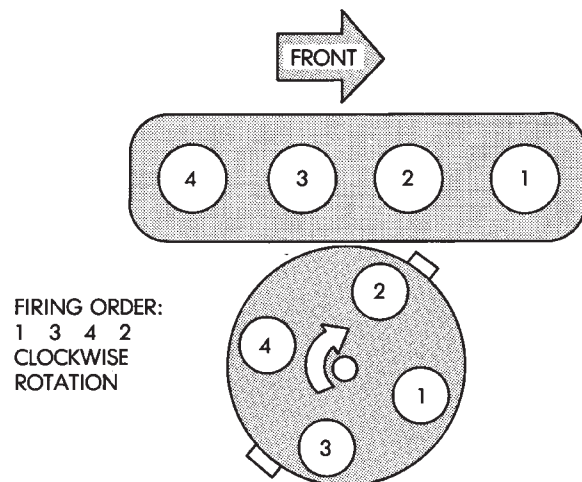

J908D-6

Fig. 24 Engine Firing Order—2.5L 4-Cylinder Engine

REMOVAL AND INSTALLATION (Continued)

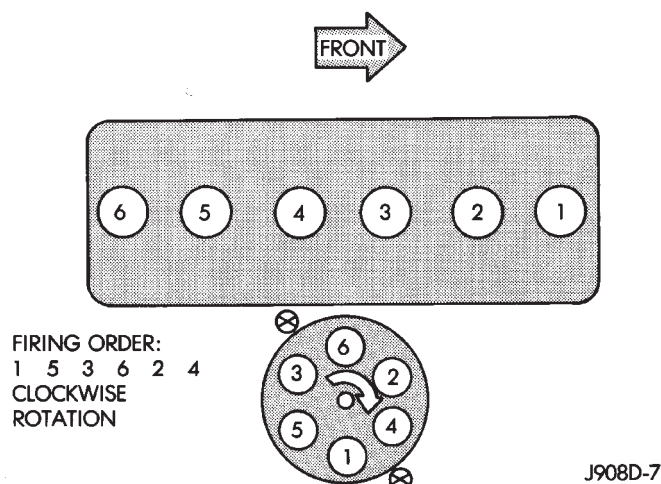**Fig. 25 Engine Firing Order—4.0L 6-Cylinder Engine**

When replacing the spark plug and coil cables, route the cables correctly and secure in the proper retainers. Failure to route the cables properly can cause the radio to reproduce ignition noise. It could also cause cross ignition of the plugs or short circuit the cables to ground.

When installing new cables, make sure a positive connection is made. A snap should be felt when a good connection is made between the plug cable and the distributor cap tower.

SPARK PLUGS**PLUG REMOVAL**

(1) Always remove spark plug or ignition coil cables by grasping at the cable boot (Fig. 23). Turn the cable boot 1/2 turn and pull straight back in a steady motion. Never pull directly on the cable. Internal damage to cable will result.

(2) Prior to removing the spark plug, spray compressed air around the spark plug hole and the area around the spark plug. This will help prevent foreign material from entering the combustion chamber.

(3) Remove the spark plug using a quality socket with a rubber or foam insert.

(4) Inspect the spark plug condition. Refer to Spark Plugs in the Diagnostics/Service Procedures section of this group.


PLUG CLEANING

The plugs may be cleaned using commercially available spark plug cleaning equipment. After cleaning, file the center electrode flat with a small point file or jewelers file before adjusting gap.

CAUTION: Never use a motorized wire wheel brush to clean the spark plugs. Metallic deposits will remain on the spark plug insulator and will cause plug misfire.

PLUG GAP ADJUSTMENT

Check the spark plug gap with a gap gauge tool. If the gap is not correct, adjust it by bending the ground electrode (Fig. 26). **Never attempt to adjust the gap by bending the center electrode.**

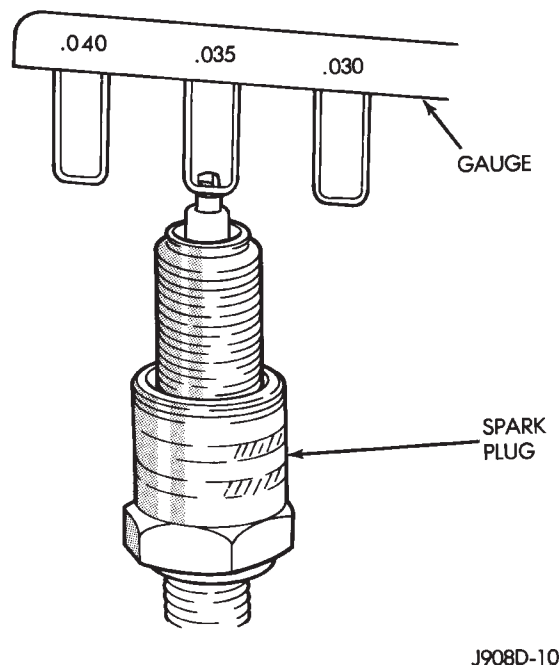**Fig. 26 Setting Spark Plug Gap—Typical****SPARK PLUG GAP**

- 2.5L 4-Cylinder Engine Spark Plug Gap: .89 mm (.035 in).
- 4.0L 6-Cylinder Engine Spark Plug Gap: .89 mm (.035 in).

PLUG INSTALLATION

Always tighten spark plugs to the specified torque. Over tightening can cause distortion. This may result in a change in the spark plug gap, or a cracked porcelain insulator.

When replacing the spark plug and ignition coil cables, route the cables correctly and secure them in the appropriate retainers. Failure to route the cables properly can cause the radio to reproduce ignition noise. It could cause cross ignition of the spark plugs, or short circuit the cables to ground.

(1) Start the spark plug into the cylinder head by hand to avoid cross threading.

(2) Tighten the spark plugs to 35-41 N·m (26-30 ft. lbs.) torque.

(3) Install spark plug cables over spark plugs.

IGNITION COIL

The ignition coil is an epoxy filled type. If the coil is replaced, it must be replaced with the same type.

REMOVAL AND INSTALLATION (Continued)

REMOVAL

On the 2.5L 4-cylinder engine, the ignition coil is mounted to a bracket on side of engine (to rear of distributor) (Fig. 27).

On the 4.0L 6-cylinder engine, the ignition coil is mounted to a bracket on side of engine (to front of distributor) (Fig. 28).

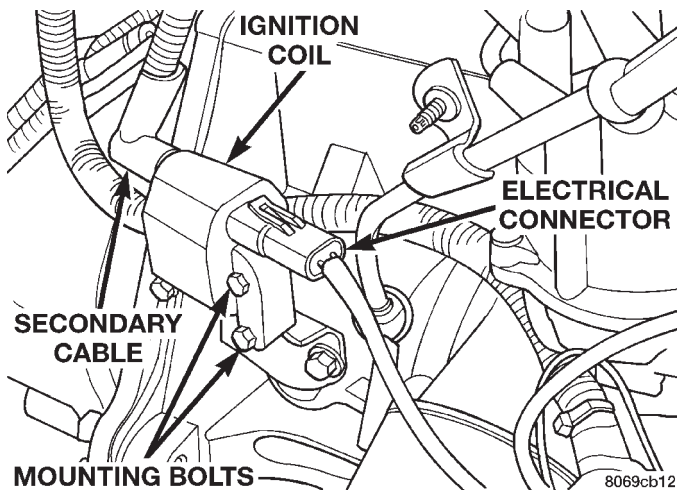


Fig. 27 Ignition Coil—2.5L Engine

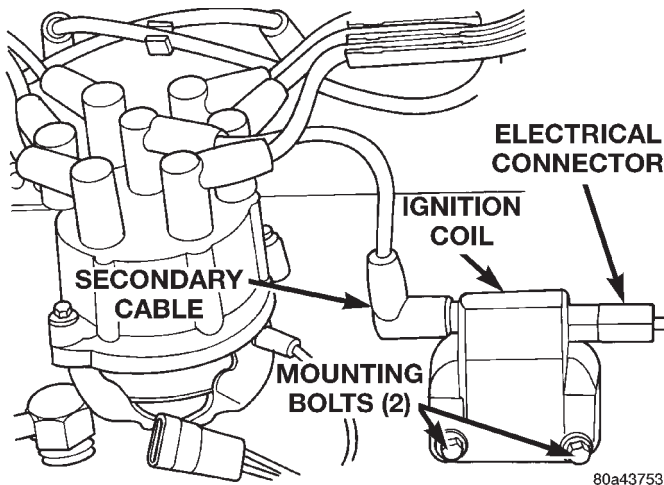


Fig. 28 Ignition Coil—4.0L Engine

- (1) Disconnect ignition coil secondary cable from ignition coil.
- (2) Disconnect engine harness connector from ignition coil.
- (3) Remove ignition coil mounting bolts (nuts are used on back side of bracket on some coils).
- (4) Remove coil from vehicle.

INSTALLATION

(1) Install ignition coil to bracket on cylinder block with mounting bolts (and nuts if equipped). If equipped with nuts and bolts, tighten to 11 N·m (100 in. lbs.) torque. If equipped with bolts only, tighten to 5 N·m (50 in. lbs.) torque.

- (2) Connect engine harness connector to coil.
- (3) Connect ignition coil cable to ignition coil.

AUTOMATIC SHUTDOWN (ASD) RELAY

The ASD relay is located in the power distribution center (PDC). The PDC is located in engine compartment (Fig. 29). Refer to label on PDC cover for relay location.

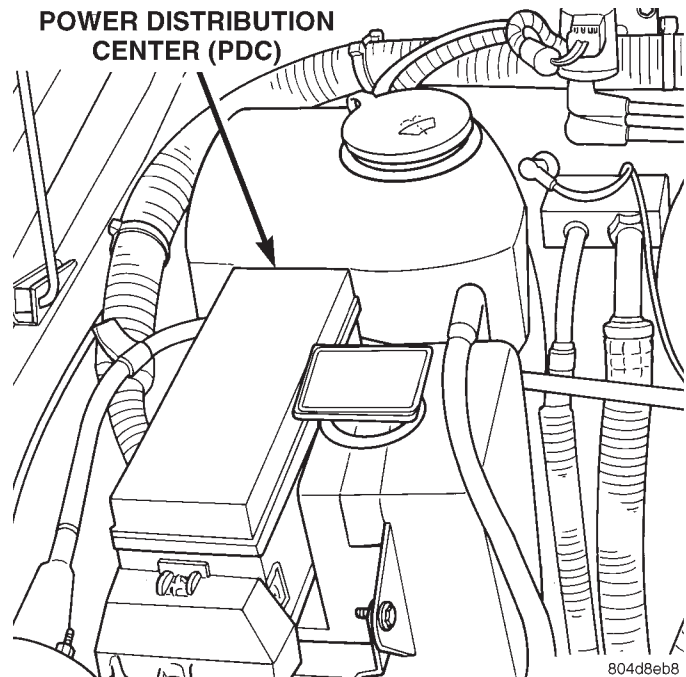


Fig. 29 PDC Location

REMOVAL

- (1) Remove PDC cover.
- (2) Remove relay by lifting straight up.

INSTALLATION

- (1) Check condition of relay wire terminals at PDC for corrosion or damage. Also check heights of relay terminal pins at PDC. Pin height should be the same for all pins. Repair as necessary before installing relay.
- (2) Push relay into connector.
- (3) Install relay cover.

CRANKSHAFT POSITION SENSOR

The crankshaft position sensor is mounted to the transmission bellhousing at the left/rear side of engine block (Fig. 30) or (Fig. 31).

On 2.5L 4-cylinder equipped with a manual transmission, the sensor is attached with two bolts. On 2.5L engines equipped with an automatic transmission, the sensor is attached with two nuts. All 4.0L 6-cylinder engines have the sensor attached with two bolts.

REMOVAL AND INSTALLATION (Continued)

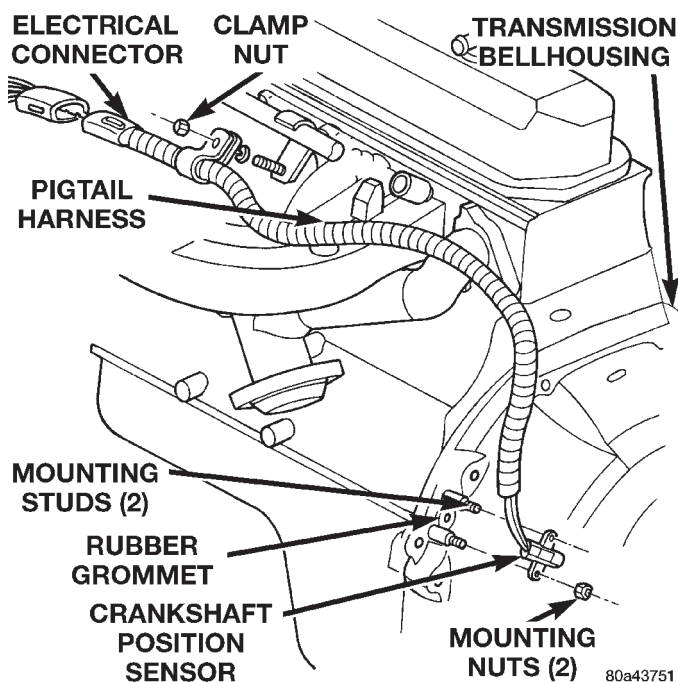


Fig. 30 Crankshaft Position Sensor—2.5L 4-Cyl. Engine With Auto. Trans.

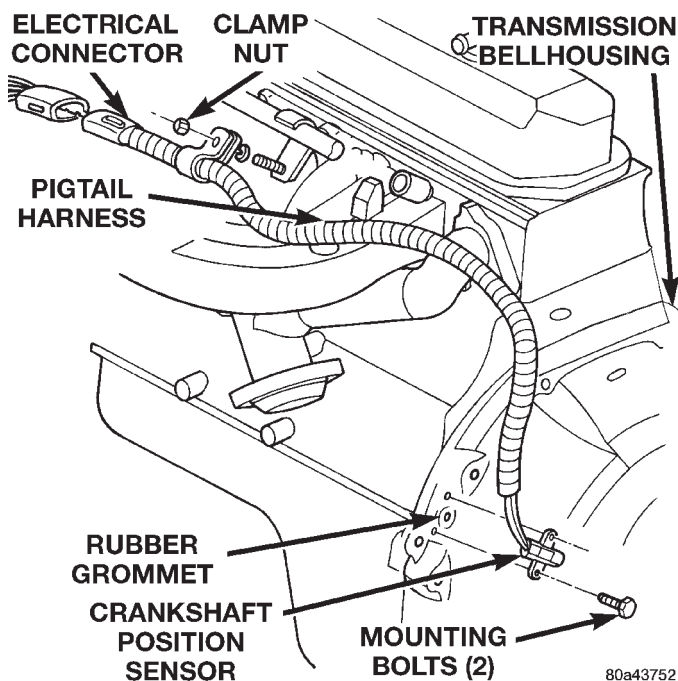


Fig. 31 Crankshaft Position Sensor—Except 2.5L 4-Cyl. Engine With Auto. Trans.

REMOVAL

Some model/engine combinations may require removal of air cleaner tubes for access to sensor.

(1) Remove air cleaner tube(s) at throttle body (if necessary).

(2) Near rear of intake manifold, disconnect pigtail harness (electrical connector) from main electrical harness.

(3) Remove nut holding sensor harness wire clamp to fuel rail mounting stud.

(4) Depending upon application, remove either sensor mounting bolts or nuts.

(5) Remove sensor.

(6) Remove clamp from sensor wire harness.

INSTALLATION

(1) Install sensor flush against opening in transmission housing.

(2) 2.5L engines equipped with automatic transmission: Install and tighten two sensor mounting nuts to 19 N·m (14 ft. lbs.) torque.

(3) 2.5L engines equipped with manual transmission or any 4.0L engines: Install and tighten two sensor mounting bolts to 19 N·m (14 ft. lbs.) torque. **The two sensor mounting bolts are specially machined to correctly space unit to flywheel. Do not attempt to install any other bolts.**

(4) Connect sensor pigtail harness electrical connector to main wiring harness.

(5) Install clamp on sensor wire harness.

(6) Install clamp over fuel rail mounting stud.

(7) Install clamp mounting nut.

(8) Install air cleaner tube to throttle body (if necessary).

CAMSHAFT POSITION SENSOR

The camshaft position sensor is located in the distributor (Fig. 32).

REMOVAL

Distributor removal is not necessary to remove camshaft position sensor.

(1) Disconnect negative battery cable at battery.

(2) Remove distributor cap from distributor (two screws).

(3) Disconnect camshaft position sensor wiring harness from main engine wiring harness.

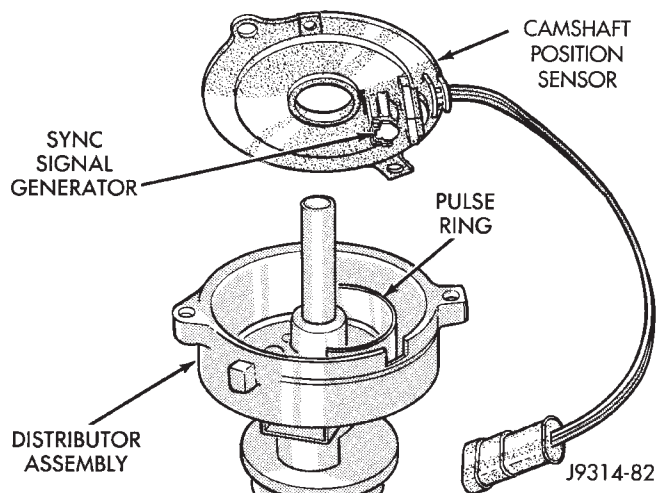


Fig. 32 Camshaft Position Sensor

REMOVAL AND INSTALLATION (Continued)

- (4) Remove distributor rotor from distributor shaft.
- (5) Lift camshaft position sensor assembly from distributor housing (Fig. 32).

INSTALLATION

- (1) Install camshaft position sensor to distributor. Align sensor into notch on distributor housing.
- (2) Connect wiring harness.
- (3) Install rotor.
- (4) Install distributor cap. Tighten mounting screws.

MANIFOLD ABSOLUTE PRESSURE (MAP) SENSOR

For removal and installation, refer to Manifold Absolute Pressure Sensor in group 14, Fuel Systems.

ENGINE COOLANT TEMPERATURE SENSOR

For an operational description, diagnosis and removal/installation procedures, refer to Group 14, Fuel System.

THROTTLE POSITION SENSOR

For an operational description, diagnosis and removal/installation procedures, refer to Group 14, Fuel System.

INTAKE MANIFOLD AIR TEMPERATURE SENSOR

For an operational description, diagnosis and removal/installation procedures, refer to Group 14, Fuel System.

DISTRIBUTOR

All distributors contain an internal oil seal that prevents oil from entering the distributor housing. The seal is not serviceable.

Factory replacement distributors are equipped with a plastic alignment pin already installed. The pin is located in an access hole on the bottom of the distributor housing (Fig. 33). It is used to temporarily lock the rotor to the cylinder number 1 position during installation. The pin must be removed after installing the distributor.

The camshaft position sensor is located in the distributor on all engines (Fig. 34). For removal/installation procedures, refer to Camshaft Position Sensor. Distributor removal is not necessary for sensor removal.

Refer to (Fig. 34) for an exploded view of the distributor.

A fork with a slot is supplied on the bottom of the distributor housing where the housing base seats against the engine block (Fig. 34). The centerline of the slot aligns with the distributor holddown bolt hole in the engine block. Because of the fork, the distributor cannot be rotated. Distributor rotation is not necessary as all ignition timing requirements are handled by the powertrain control module (PCM).

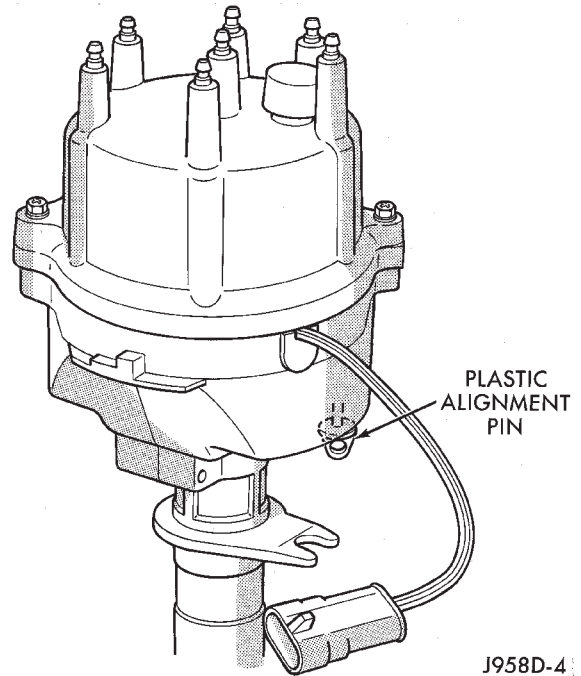


Fig. 33 Plastic Alignment Pin

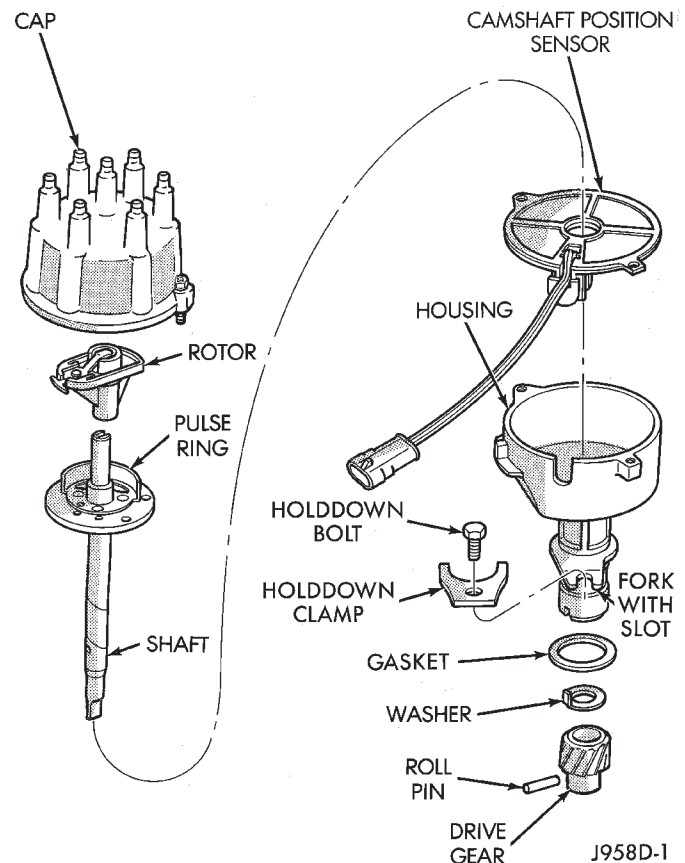


Fig. 34 Distributor—2.5L Or 4.0L Engines—Typical


The position of the distributor determines fuel synchronization only. It does not determine ignition timing.

REMOVAL AND INSTALLATION (Continued)

NOTE: Do not attempt to modify this fork to attain ignition timing.

REMOVAL—2.5L OR 4.0L ENGINE

- (1) Disconnect the negative battery cable at the battery.
- (2) Disconnect coil secondary cable at coil.
- (3) Remove distributor cap from distributor (2 screws). Do not remove cables from cap. Do not remove rotor.
- (4) Disconnect the distributor wiring harness from the main engine harness.
- (5) Remove the cylinder number 1 spark plug.
- (6) Hold a finger over the open spark plug hole. Rotate the engine at the vibration dampener bolt until compression (pressure) is felt.
- (7) Slowly continue to rotate the engine. Do this until the timing index mark on the vibration damper pulley aligns with the top dead center (TDC) mark (0 degree) on timing degree scale (Fig. 35). Always rotate the engine in direction of normal rotation. Do not rotate the engine backward to align the timing marks.
- (8) On models equipped with A/C, remove the electrical cooling fan and shroud assembly from the radiator. Refer to Group 7, Cooling System for procedures.
- (9) This will provide room to turn the engine crankshaft with a socket and ratchet using the vibration damper bolt.

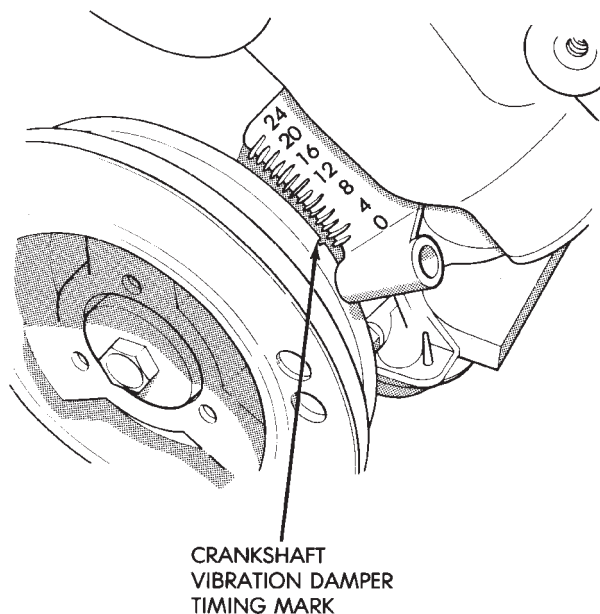

J898D-14

Fig. 35 Align Timing Marks

- (10) Remove the distributor holddown bolt and clamp.

- (11) Remove the distributor from engine by slowly lifting straight up.

- (12) Note that the rotor will rotate slightly in a counterclockwise direction while lifting up the distributor. The oil pump gear will also rotate slightly in a counterclockwise direction while lifting up the distributor. This is due to the helical cut gears on the distributor and camshaft.

- (13) Note the removed position of the rotor during distributor removal. During installation, this will be referred to as the Pre-position.

- (14) **2.5L 4-Cylinder Engine:** Observe the slot in the oil pump gear through the hole on the side of the engine. It should be slightly before (counterclockwise of) the 10 o'clock position (Fig. 36).

- (15) **4.0L 6-Cylinder Engine:** Observe the slot in the oil pump gear through the hole on the side of the engine. It should be slightly before (counterclockwise of) the 11 o'clock position (Fig. 37).

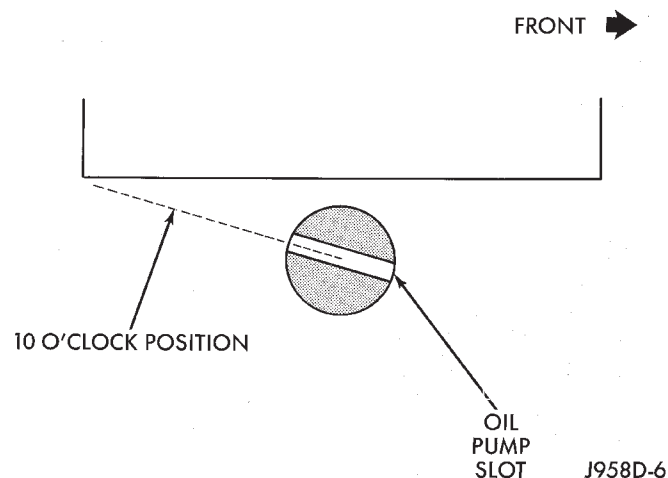


Fig. 36 Slot At 10 O'clock Position—2.5L Engine

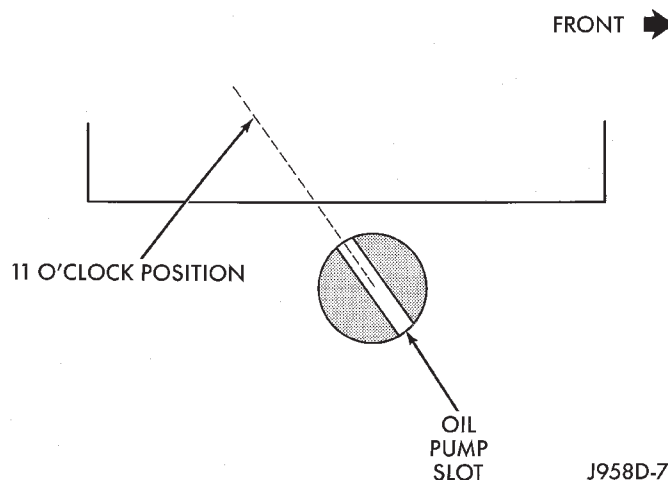


Fig. 37 Slot At 11 O'clock Position—4.0L Engine

- (16) Remove and discard the old distributor-to-engine block gasket.

REMOVAL AND INSTALLATION (Continued)

INSTALLATION

(1) If the engine crankshaft has been rotated after distributor removal, cylinder number 1 must be returned to its proper firing stroke. Refer to previous REMOVAL Step 5 and Step 6. These steps must be done before installing distributor.

(2) Check the position of the slot on the oil pump gear. On the 2.5L engine, it should be just slightly before (counterclockwise of) the 10 o'clock position (Fig. 36). On the 4.0L engine, it should be just slightly before (counterclockwise of) the 11 o'clock position (Fig. 37). If not, place a flat blade screwdriver into the oil pump gear and rotate it into the proper position.

(3) Factory replacement distributors are equipped with a plastic alignment pin already installed (Fig. 33). This pin is used to temporarily hold the rotor to the cylinder number 1 firing position during distributor installation. If this pin is in place, proceed to Step 8. If not, proceed to next step.

(4) If the original distributor is to be reinstalled, such as during engine overhaul, the plastic pin will not be available. A 3/16 inch drift pin punch tool may be substituted for the plastic pin.

(5) Remove the camshaft position sensor from the distributor housing. Lift straight up.

(6) Four different alignment holes are provided on the plastic ring (Fig. 38). **Note that 2.5L and 4.0L engines have different alignment holes (Fig. 38).**

(7) Rotate the distributor shaft and install the pin punch tool through the proper alignment hole in the plastic ring (Fig. 38) and into the mating access hole in the distributor housing. This will prevent the distributor shaft and rotor from rotating.

(8) Clean the distributor mounting hole area of the engine block.

(9) Install a new distributor-to-engine block gasket (Fig. 34).

(10) Install the rotor to the distributor shaft.

(11) **2.5L 4-Cylinder Engine:** Pre-position the distributor into the engine while holding the centerline of the base slot in the 1 o'clock position (Fig. 39). Continue to engage the distributor into the engine. The rotor and distributor will rotate clockwise during installation. This is due to the helical cut gears on the distributor and camshaft. When the distributor is fully seated to the engine block, the centerline of the base slot should be aligned to the clamp bolt mounting hole on the engine (Fig. 40). The rotor should also be pointed slightly past (clockwise of) the 3 o'clock position.

4.0L 6-Cylinder Engine: Pre-position the distributor into the engine while holding the centerline of the base slot in the 1 o'clock position (Fig. 39). Continue to engage the distributor into the engine. The

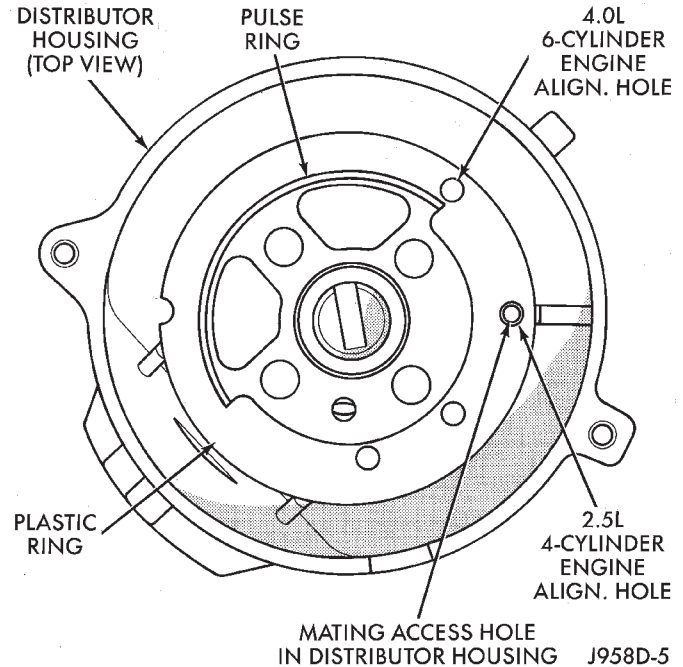


Fig. 38 Pin Alignment Holes

rotor and distributor will rotate clockwise during installation. This is due to the helical cut gears on the distributor and camshaft. When the distributor is fully seated to the engine block, the centerline of the base slot should be aligned to the clamp bolt mounting hole on the engine (Fig. 41). The rotor should also be pointed at the 5 o'clock position.

It may be necessary to rotate the rotor and distributor shaft (very slightly) to engage the distributor shaft with the slot in the oil pump gear. The same may have to be done to engage the distributor gear with the camshaft gear.

The distributor is correctly installed when:



- the rotor is pointed at the 3 o'clock position (2.5L engine), or at the 5 o'clock position (4.0L engine).
- the plastic alignment pin (or pin punch tool) is still installed to distributor.
- the number 1 cylinder piston is set at top dead center (TDC) (compression stroke).
- the centerline of the slot at the base of the distributor is aligned to the centerline of the distributor holddown bolt hole on the engine. In this position, the holddown bolt should easily pass through the slot and into the engine.

No adjustments are necessary. Proceed to next step.

(12) Install the distributor holddown clamp and bolt. Tighten the bolt to 23 N·m (17 ft. lbs.) torque.

(13) Remove the pin punch tool from the distributor. Or, if the plastic alignment pin was used, remove it straight down from the bottom of the distributor. Discard plastic pin.


REMOVAL AND INSTALLATION (Continued)

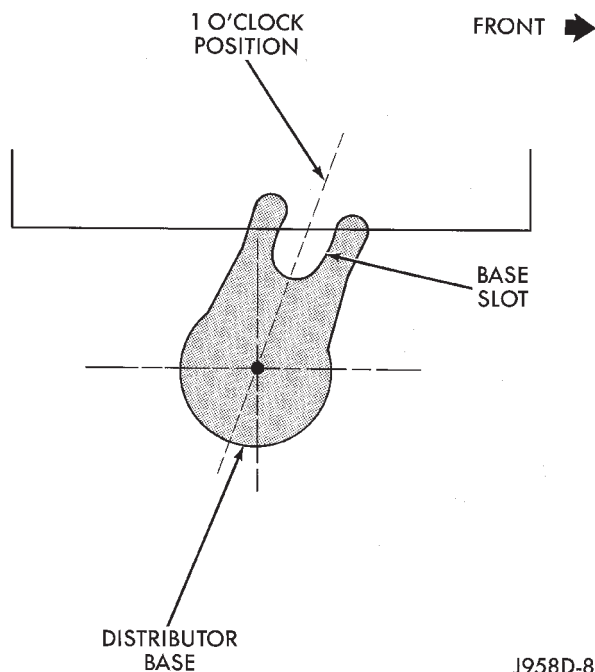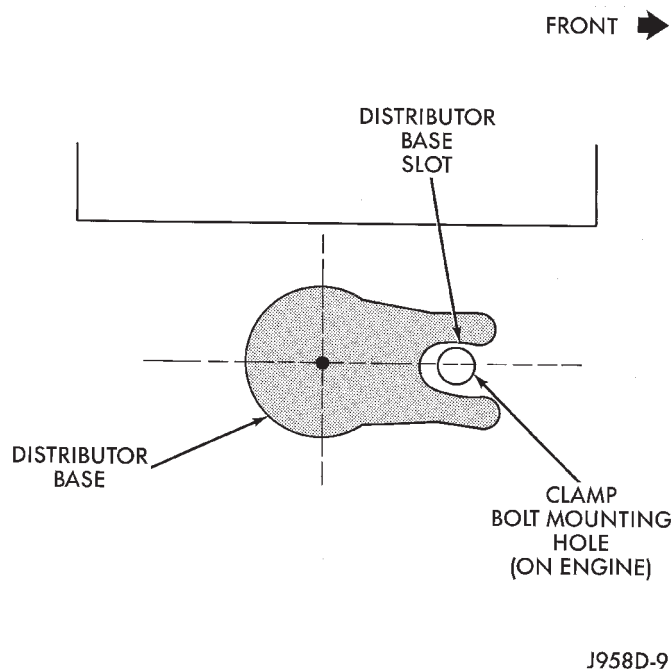**Fig. 39 Distributor Pre-position—All Engines****Fig. 40 Distributor Engaged Position—2.5L 4-Cylinder Engine**

(14) If removed, install the camshaft position sensor to the distributor. Align the wiring harness grommet to the notch in the distributor housing.

(15) Install the rotor.

CAUTION: If the distributor cap is incorrectly positioned on distributor housing, the cap or rotor may be damaged when engine is started.

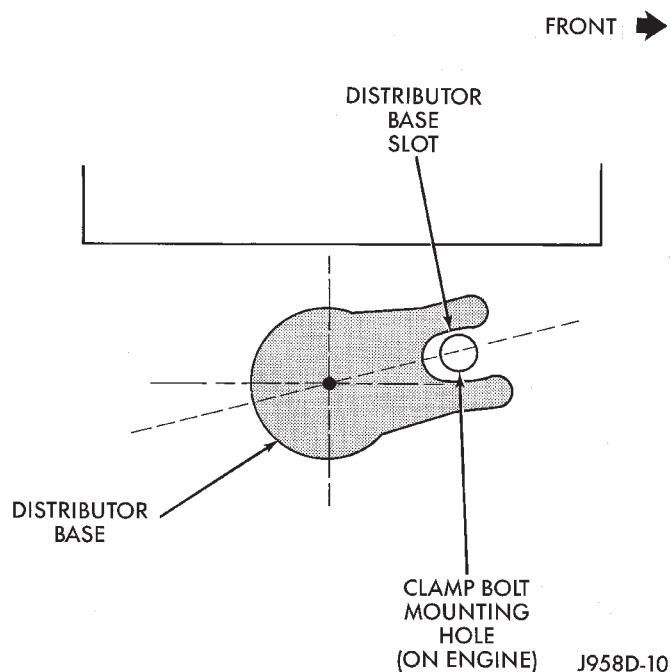**Fig. 41 Distributor Engaged Position—4.0L 6-Cylinder Engine**

(16) Install the distributor cap. Tighten distributor cap hold-down screws to 3 N·m (26 in. lbs.) torque.

(17) If removed, install the spark plug cables to the distributor cap. For proper firing order, refer to the Specifications section at the end of this group. See Engine Firing Order.

(18) Connect the distributor wiring harness to the main engine harness.

(19) Connect battery cable to battery.

POWERTRAIN CONTROL MODULE (PCM)

Refer to Group 14, Fuel System for procedures.


IGNITION SWITCH AND KEY CYLINDER

The ignition key must be in the key cylinder for cylinder removal. The key cylinder must be removed first before removing ignition switch.

KEY CYLINDER REMOVAL


- (1) Disconnect negative battery cable at battery.
- (2) If equipped with an automatic transmission, place shifter in PARK position.
- (3) Rotate key to ON position.
- (4) A release tang is located on bottom of key cylinder (Fig. 42).
- (5) Position a small screwdriver or pin punch into tang access hole on bottom of steering column lower cover (Fig. 43).
- (6) Push the pin punch up while pulling key cylinder from steering column.

REMOVAL AND INSTALLATION (Continued)

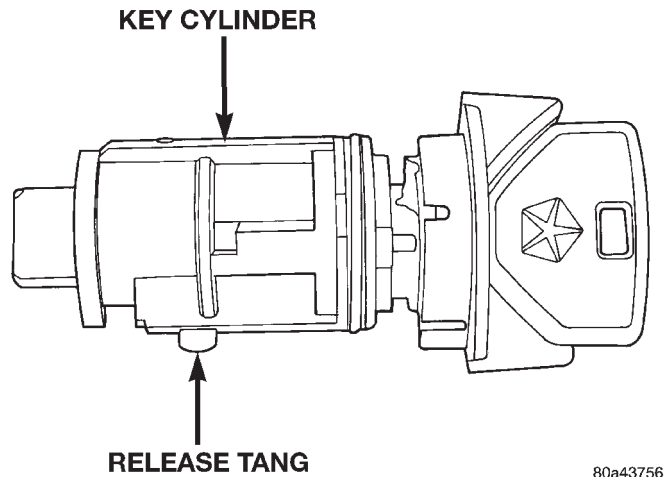

80a43756

Fig. 42 Key Cylinder Release Tang

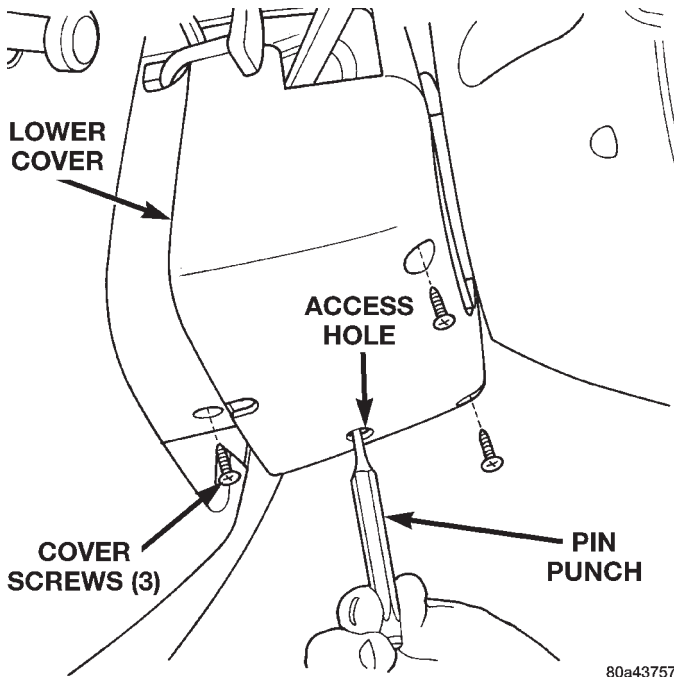

80a43757


Fig. 43 Key Cylinder and Cover Removal

IGNITION SWITCH REMOVAL

- (1) Remove key cylinder. Refer to previous steps.
- (2) Remove lower steering column cover screws and remove cover (Fig. 43).
- (3) Remove ignition switch mounting screw (Fig. 46). Use tamper proof torx bit (Snap-On® SDMTR10 or equivalent) to remove the screw.
- (4) Using a small screwdriver, push on locking tab (Fig. 44) and remove switch from steering column.
- (5) Disconnect two electrical connectors at rear of ignition switch (Fig. 46).


IGNITION SWITCH INSTALLATION

- (1) Before installing ignition switch, rotate the slot in the switch to the ON position (Fig. 45).

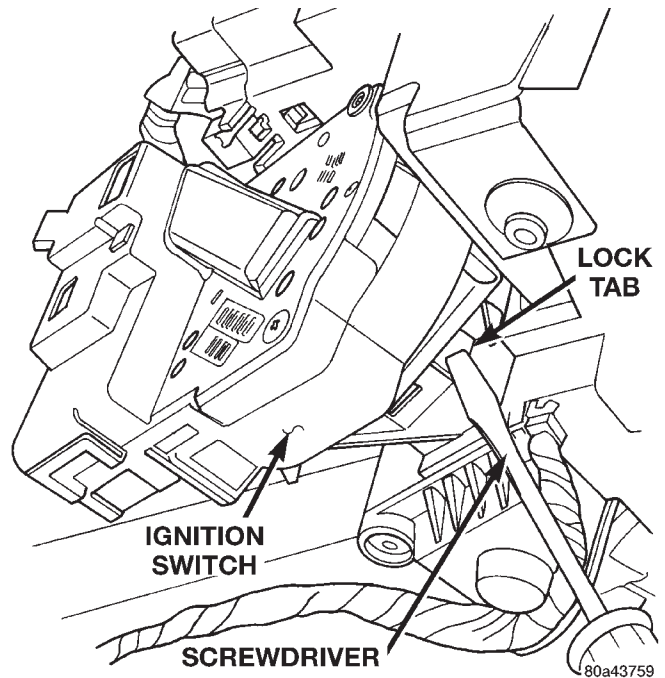

80a43759

Fig. 44 Ignition Switch Lock Tab

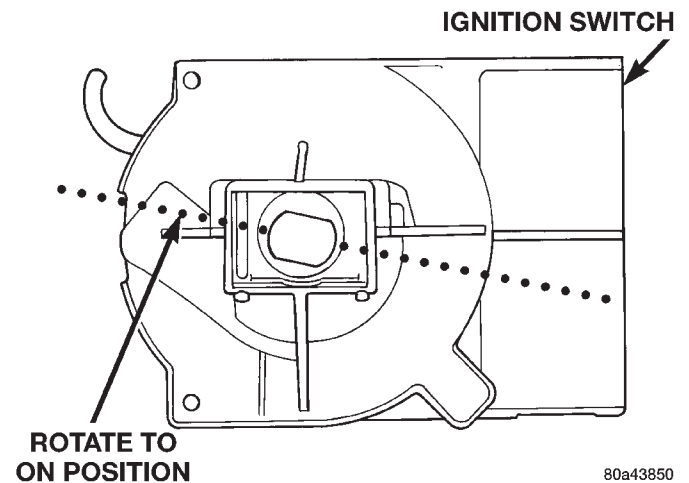

80a43850

Fig. 45 Switch In ON Position

- (2) Connect two electrical connectors to rear of ignition switch. Make sure that locking tabs are fully seated into wiring connectors.
- (3) Position switch to column and install tamper proof screw. Tighten screw to 3 N-m (26 in. lbs.).
- (4) Install steering column lower cover.

KEY CYLINDER INSTALLATION

- (1) If equipped with an automatic transmission, place shifter in PARK position.
- (2) Position key cylinder into steering column as it would normally be in the ON position.
- (3) Press key cylinder into column until it snaps into position.
- (4) Check mechanical operation of switch. **Automatic Transmission:** Be sure transmission lever is

REMOVAL AND INSTALLATION (Continued)

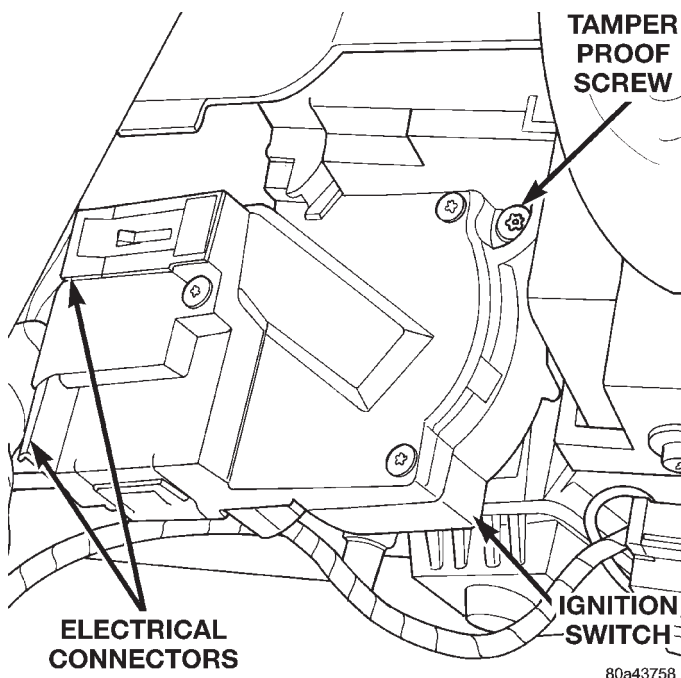


Fig. 46 Ignition Switch Removal/Installation

locked in PARK position after key removal. If key is difficult to rotate or is difficult to remove, the shift lever-to-steering column cable may be out of adjustment or defective. Refer to Group 21, Transmission for procedures. **Manual Transmission:** Be sure key cannot be removed until release lever is operated. If key can be removed, release lever mechanism may be defective. Release lever mechanism is not serviced separately. If repair is necessary, the steering column must be replaced. Refer to Group 19, Steering for procedures.

- (5) Connect negative cable to battery.
- (6) Check electrical operation of switch.

SHIFTER/IGNITION INTERLOCK

On models equipped with an automatic transmission, a cable connects the ignition switch with the floor shift lever. The shifter will be locked in the PARK position when the ignition key is in the LOCK or ACCESSORY positions. The cable can be adjusted or replaced. Refer to Group 21, Transmissions for procedures. The ignition interlock device within the steering column is not serviceable. If service is necessary, the steering column must be replaced. Refer to Group 19, Steering for procedures.

SPECIFICATIONS

VECI LABEL


If anything differs between the specifications found on the Vehicle Emission Control Information (VECI) label and the following specifications, use specifica-

tions on VECI label. The VECI label is located in the engine compartment.


IGNITION TIMING

Ignition timing is not adjustable on any engine. Refer to Ignition Timing in the Diagnostics/Service Procedures section of this group for more information.

ENGINE FIRING ORDER—2.5L 4-CYLINDER ENGINE

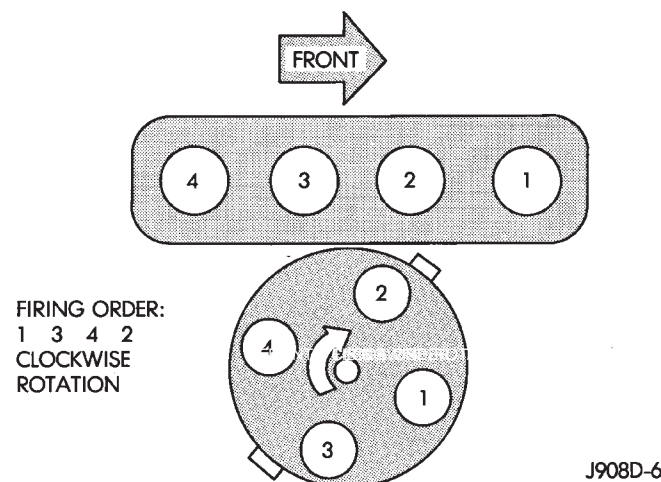

ENGINE FIRING ORDER—4.0L 6-CYLINDER ENGINE

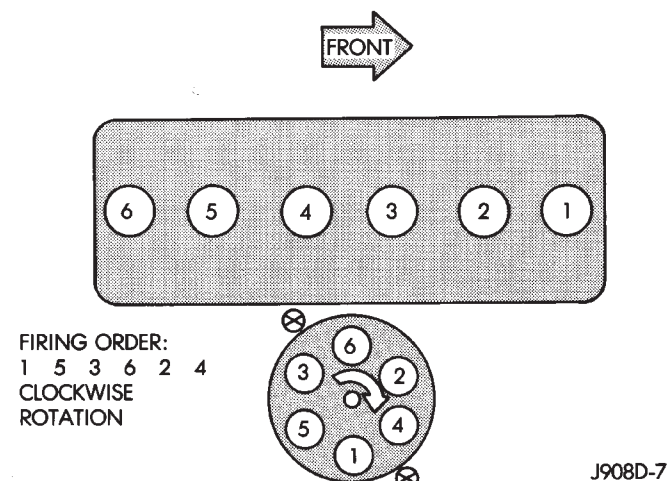

SPECIFICATIONS (Continued)

SPARK PLUGS

ENGINE	PLUG TYPE	ELECTRODE GAP
2.5/4.0L	RC12LYC	0.89 mm (0.035 in.)

SPARK PLUG CABLE RESISTANCE

MINIMUM	MAXIMUM
250 Ohms Per Inch	1000 Ohms Per Inch
3000 Ohms Per Foot	12,000 Ohms Per Foot

IGNITION COIL RESISTANCE

COIL	TOYODENSO	DIAMOND
Primary Resistance	.95 - 1.20 Ohms	.96 - 1.18 Ohms
Secondary Resistance at 70° - 80°F	11,300 - 13,300 Ohms	11,300 - 15,300 Ohms

TORQUE CHART

DESCRIPTION	TORQUE
Crankshaft Position Sensor	
Mounting Bolts	19 N·m (14 ft. lbs.)
Crankshaft Position Sensor	
Mounting Nuts	19 N·m (14 ft. lbs.)
Distributor Hold Down Bolt	23 N·m (17 ft. lbs.)
Ignition Coil Mounting	
(if tapped bolts are used)	5 N·m (50 in. lbs.)
Ignition Coil Mounting	
(if nuts/bolts are used)	11 N·m (100 in. lbs.)
Powertrain Control Module (PCM)	
Mounting Screws	1 N·m (9 in. lbs.)
Spark Plugs (all engines)	41 N·m (30 ft. lbs.)

