

Service Hints

I16 Inner Mirror

7-Ground: Approx. 12 volts with ignition SW at ON or ST position

6-Ground : Always continuity

: Parts Location

Code	See Page	Code	See Page	Code	See Page
l16	44	J7	43		

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2B	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)

: Connector Joining Wire Harness and Wire Harness

	Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ſ	IE1 52 Instrument Panel Wire and Roof Wire (Inside of Front Left Pillar)		

∇

: Ground Points

Code	See Page	Ground Points Location
IM	52	Instrument Panel Reinforcement RH