


* 1 : Automatic A/C
* 2 : Manual A/C

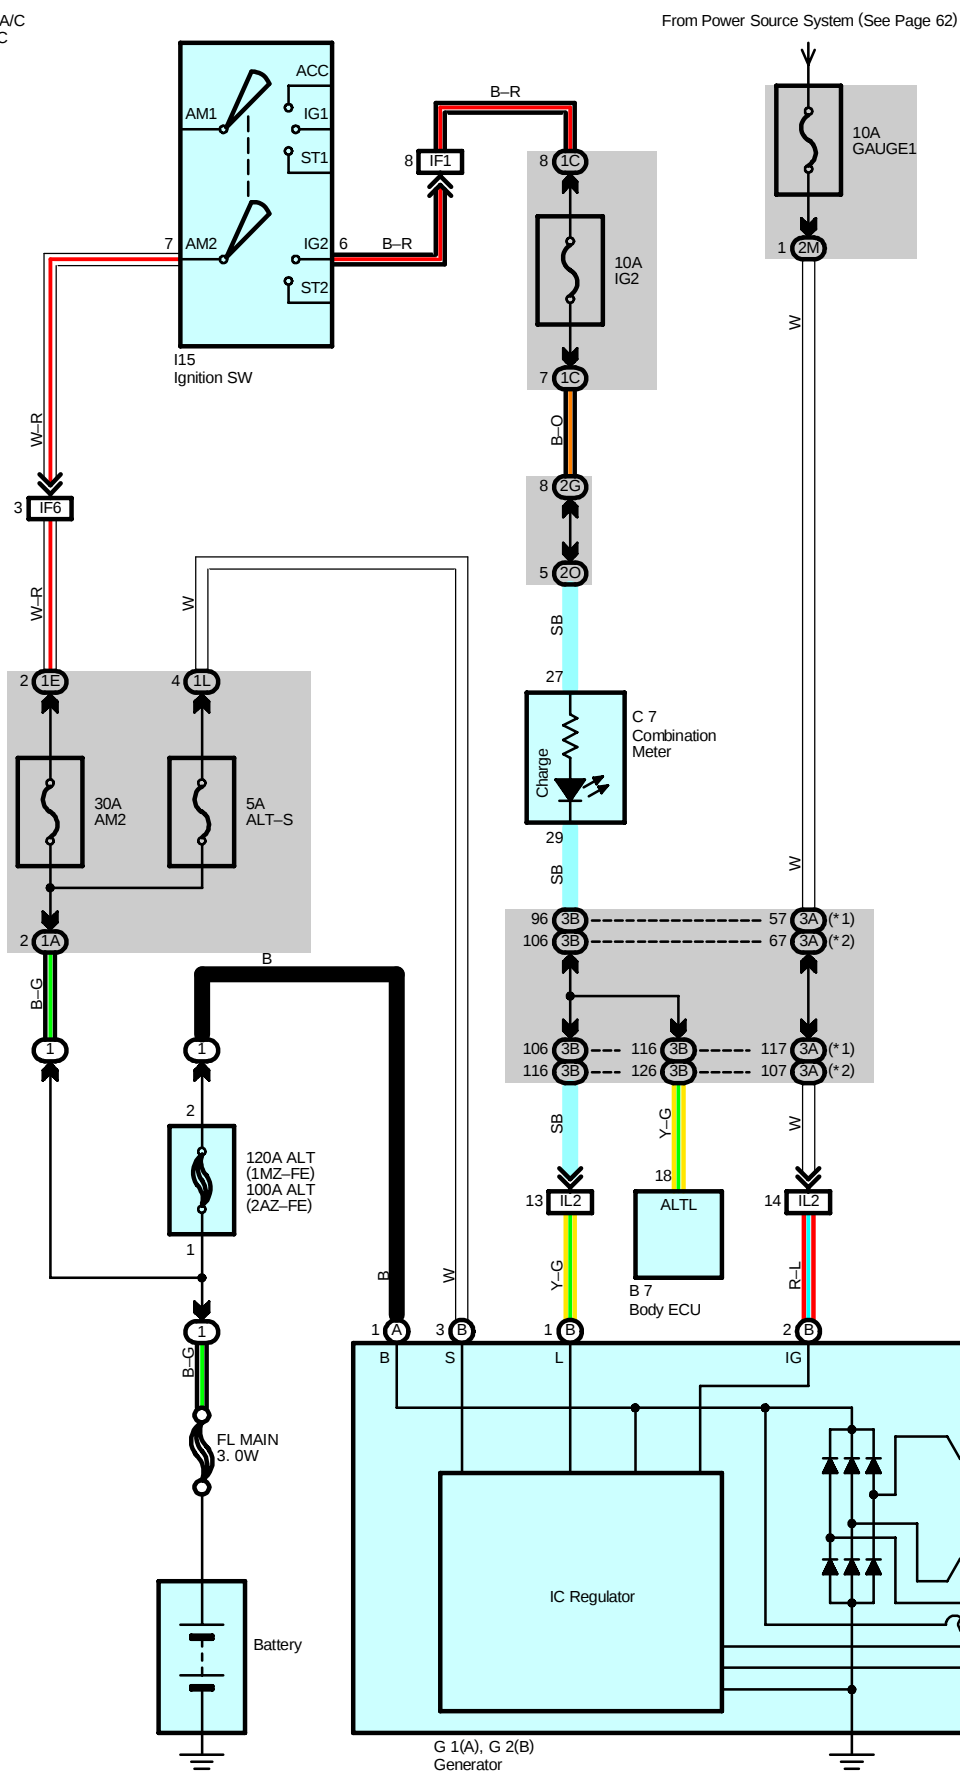

Service Hints

G2 (B) Generator

- (B) 3–Ground : 13.9–15.1 volts with the engine running at 2000 rpm and 25°C (77°F)
 13.5–14.3 volts with the engine running at 5000 rpm and 115°C (239°F)
 (B) 1–Ground : 0–4 volts with the ignition SW at ON position and the engine not running

○ : Parts Location

Code		See Page		Code		See Page		Code		See Page	
B7		42		G1	A	40 (2AZ–FE)		I15	43		
C7		42		G2	B	38 (1MZ–FE)					
G1	A	38 (1MZ–FE)				40 (2AZ–FE)					

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	25	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1C		
1E		
1L	25	Engine Wire and Engine Room J/B (Engine Compartment Left)
2G	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
2M	29	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2O		
3A	34 (*1)	Instrument Panel Wire and Passenger Side J/B (Instrument Panel Brace RH)
	35 (*3)	
	36 (*2)	
	37 (*4)	
3B	34 (*1)	
	35 (*3)	
	36 (*2)	
	37 (*4)	

* 1 : TMC Made Automatic A/C * 2 : TMC Made Manual A/C * 3 : TMMK Made Automatic A/C * 4 : TMMK Made Manual A/C

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF1	52	Engine Room Main Wire and Instrument Panel Wire (Right Side of Steering Column Tube)
IF6		
IL2	54	Engine Wire and Instrument Panel Wire (Behind the Glove Box)