


From Power Source System (See Page 62)

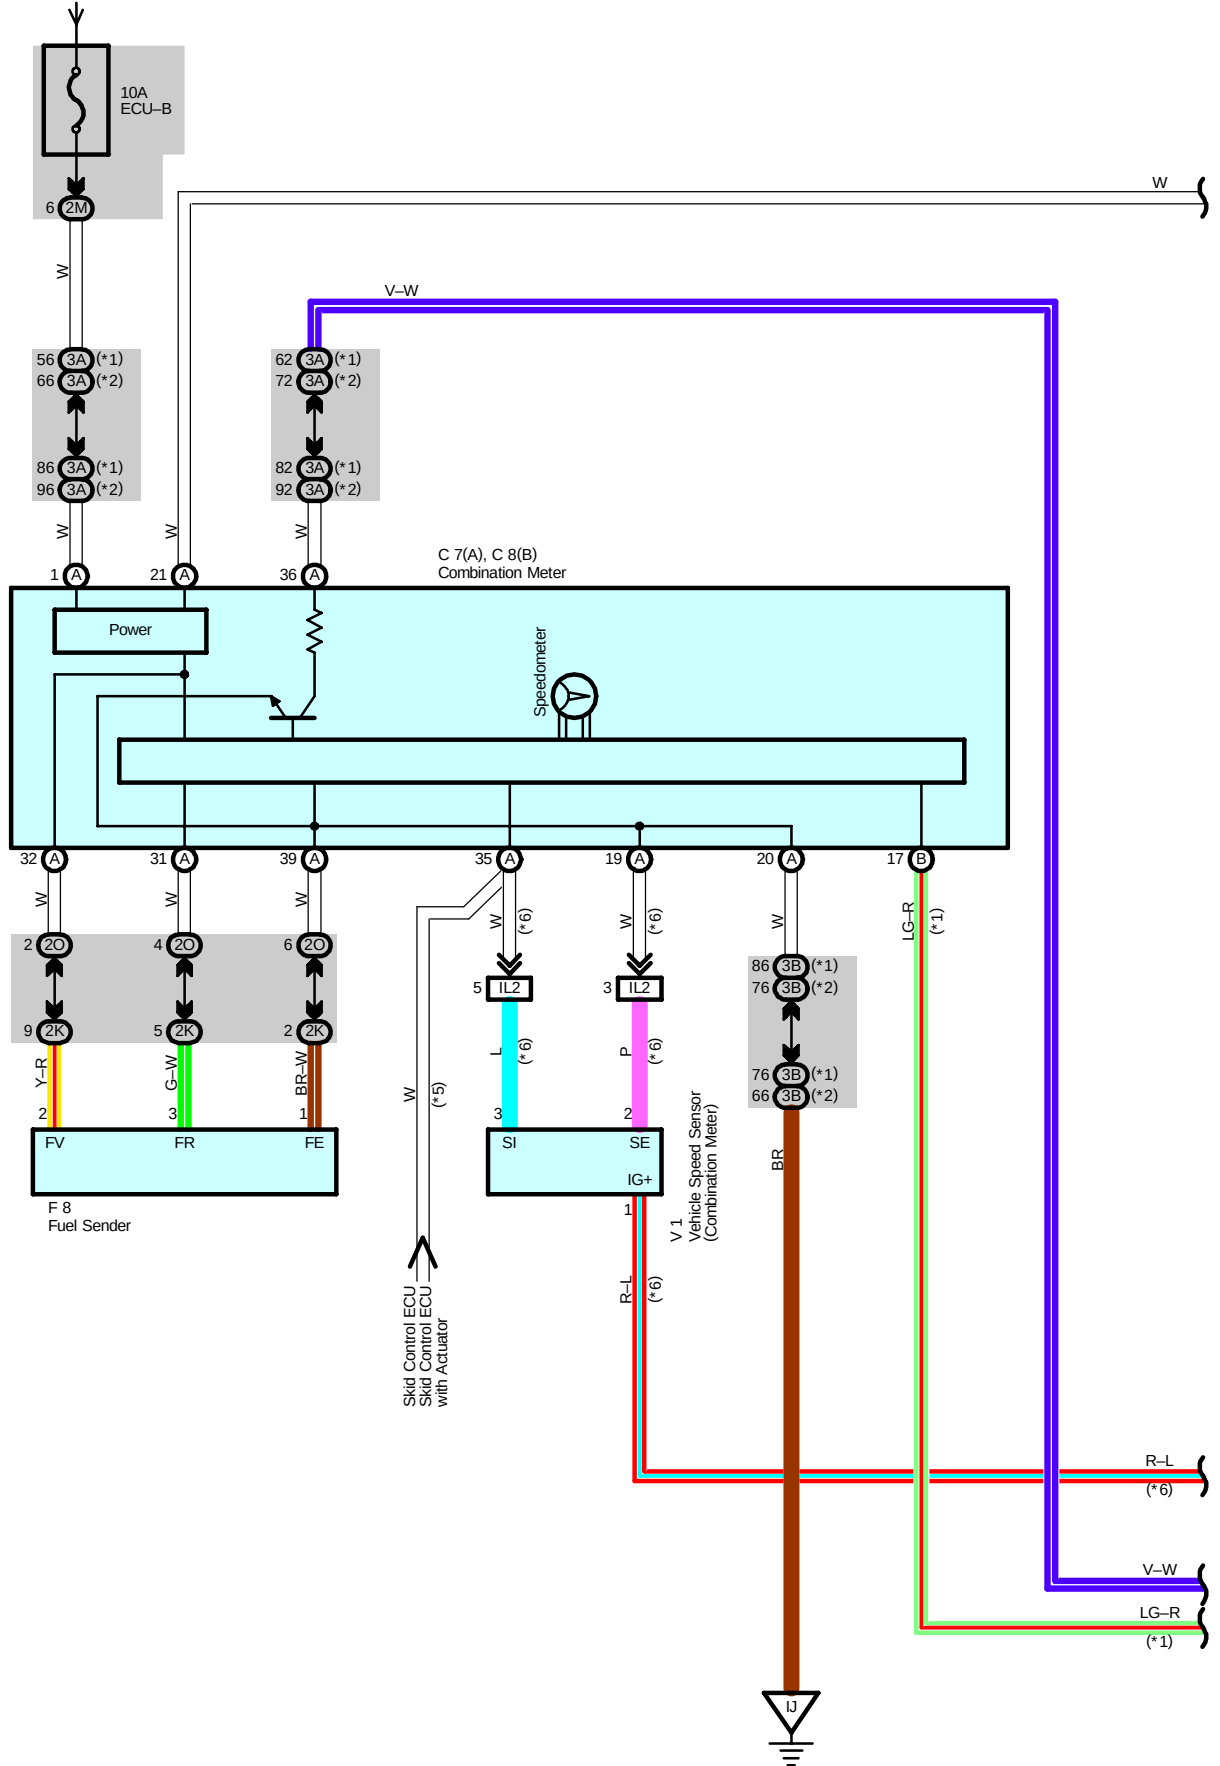

Clock

Service Hints

C5 Clock

- 20 (Automatic A/C), 12 (Manual A/C)–Ground : Approx. 12 volts with ignition SW at ON or ST position
 22 (Automatic A/C), 13 (Manual A/C)–Ground : Approx. 12 volts with ignition SW at ACC or ON position
 24 (Automatic A/C), 14 (Manual A/C)–Ground : Always approx. 12 volts
 1 (Automatic A/C), 1 (Manual A/C)–Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A1	38 (1MZ–FE)	C7	A	42	39 (1MZ–FE)
	40 (2AZ–FE)	C8	B	42	41 (2AZ–FE)
A13	42	C10	42	V1	41 (2AZ–FE)
C5	42	F8	44		

□ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1L	25	Engine Wire and Engine Room J/B (Engine Compartment Left)
2K	28	Floor Wire and Driver Side J/B (Lower Finish Panel)
2L	29	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2M		
2O		
2R		
3A	34 (*1)	Instrument Panel Wire and Passenger Side J/B (Instrument Panel Brace RH)
	35 (*3)	
	36 (*2)	
	37 (*4)	
3B	34 (*1)	
	35 (*3)	
	36 (*2)	
	37 (*4)	

* 1 : TMC Made Automatic A/C * 2 : TMC Made Manual A/C * 3 : TMMK Made Automatic A/C * 4 : TMMK Made Manual A/C

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF3	52	Engine Room Main Wire and Instrument Panel Wire (Right Side of Steering Column Tube)
IJ1	54	Instrument Panel Wire and Instrument Panel Wire (Instrument Panel Reinforcement RH)
IL1	54	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IL2		

▽ : Ground Points

Code	See Page	Ground Points Location
II	52	Cowl Side Panel LH
IJ	52	Instrument Panel Brace LH

○ : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E5	48 (1MZ–FE)	Engine Wire	E13	50 (2AZ–FE)	Engine Wire

