




Combination Meter

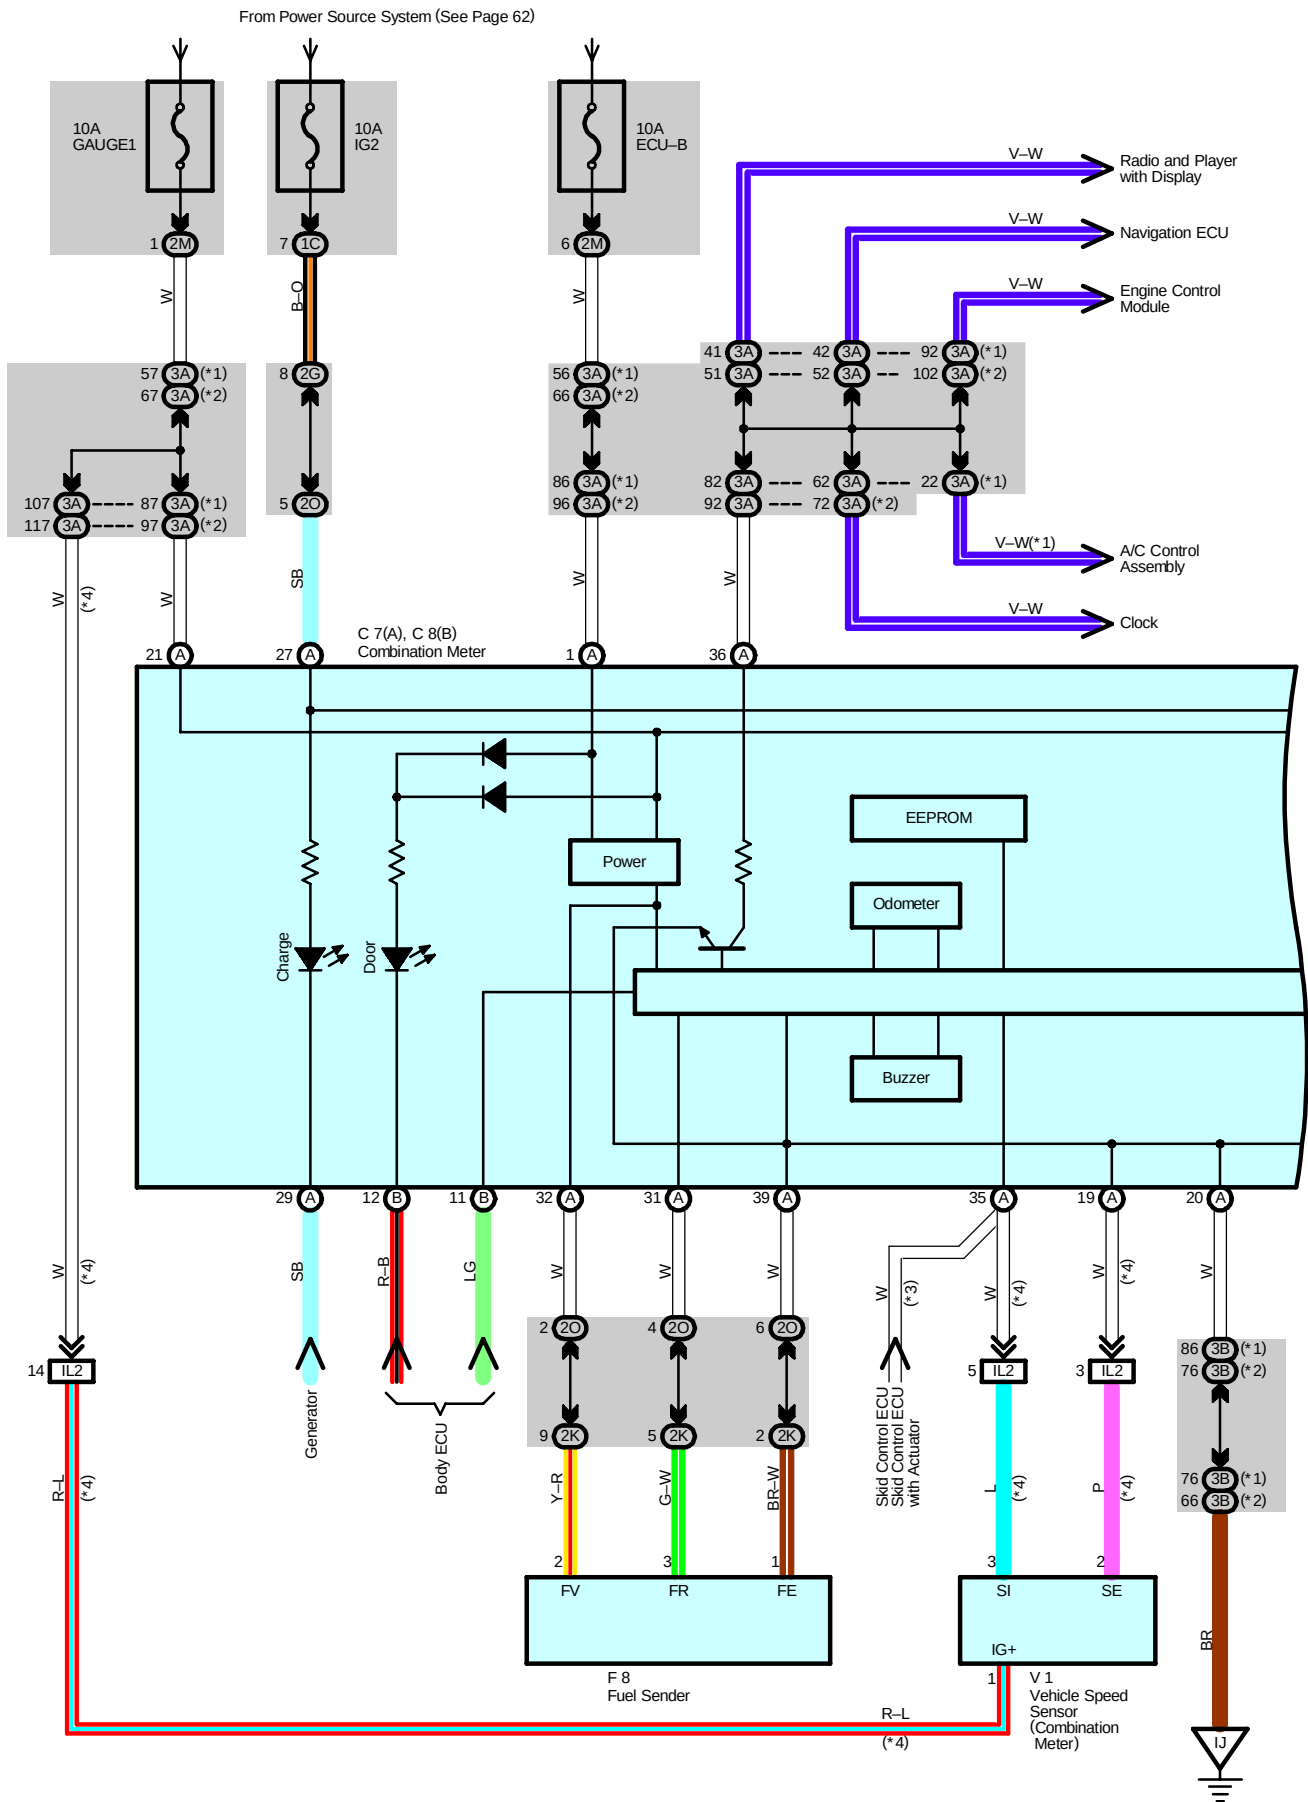


- * 1 : Automatic A/C
- * 2 : Manual A/C
- * 3 : 1MZ-FE
- * 4 : 2AZ-FE
- * 5 : w/o VSC

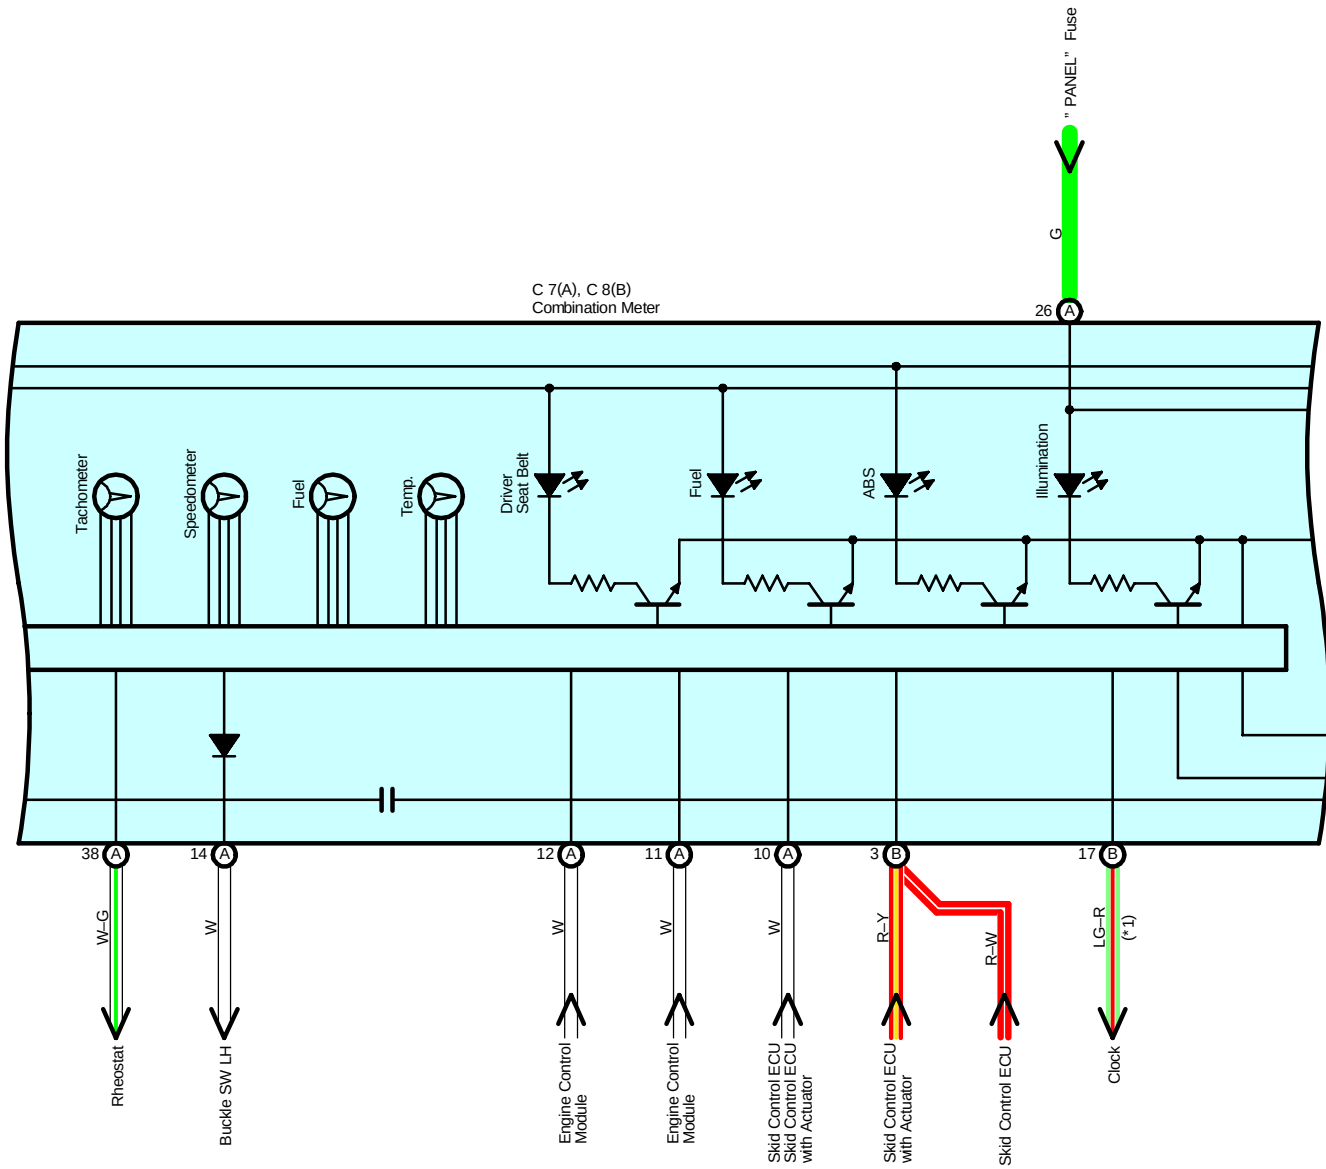

Combination Meter

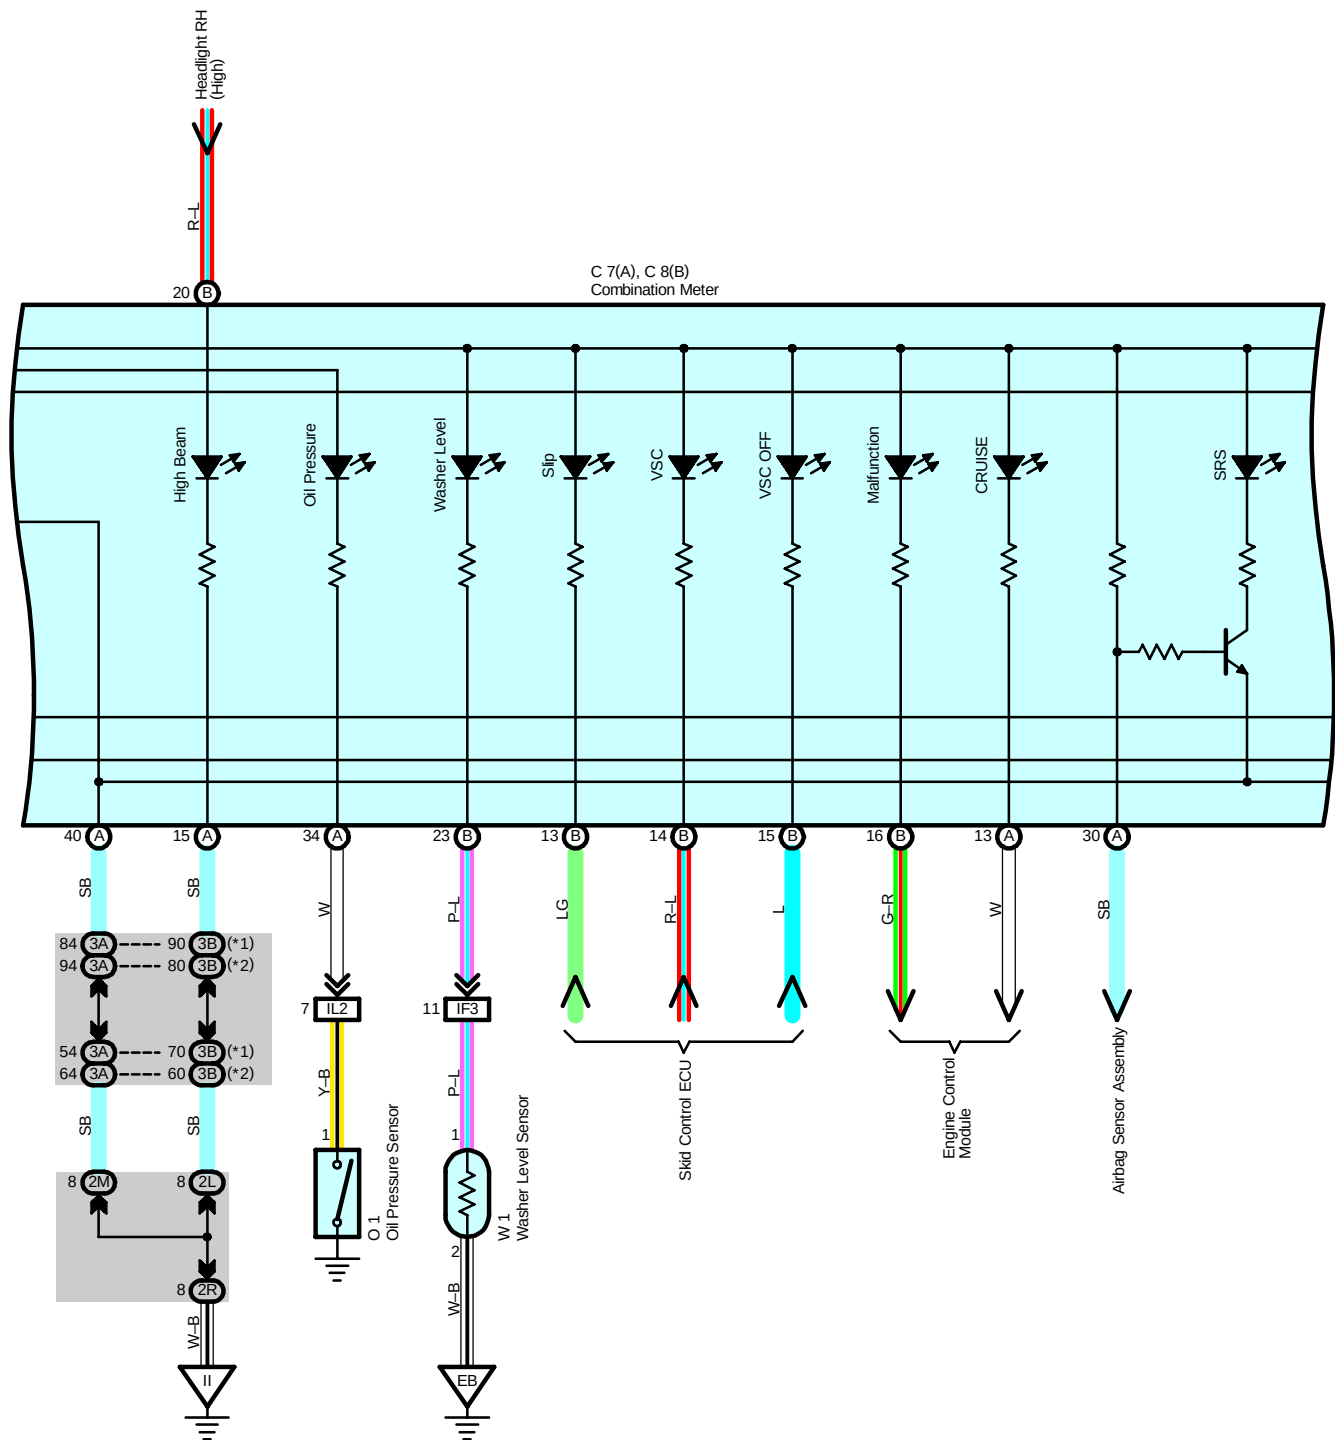

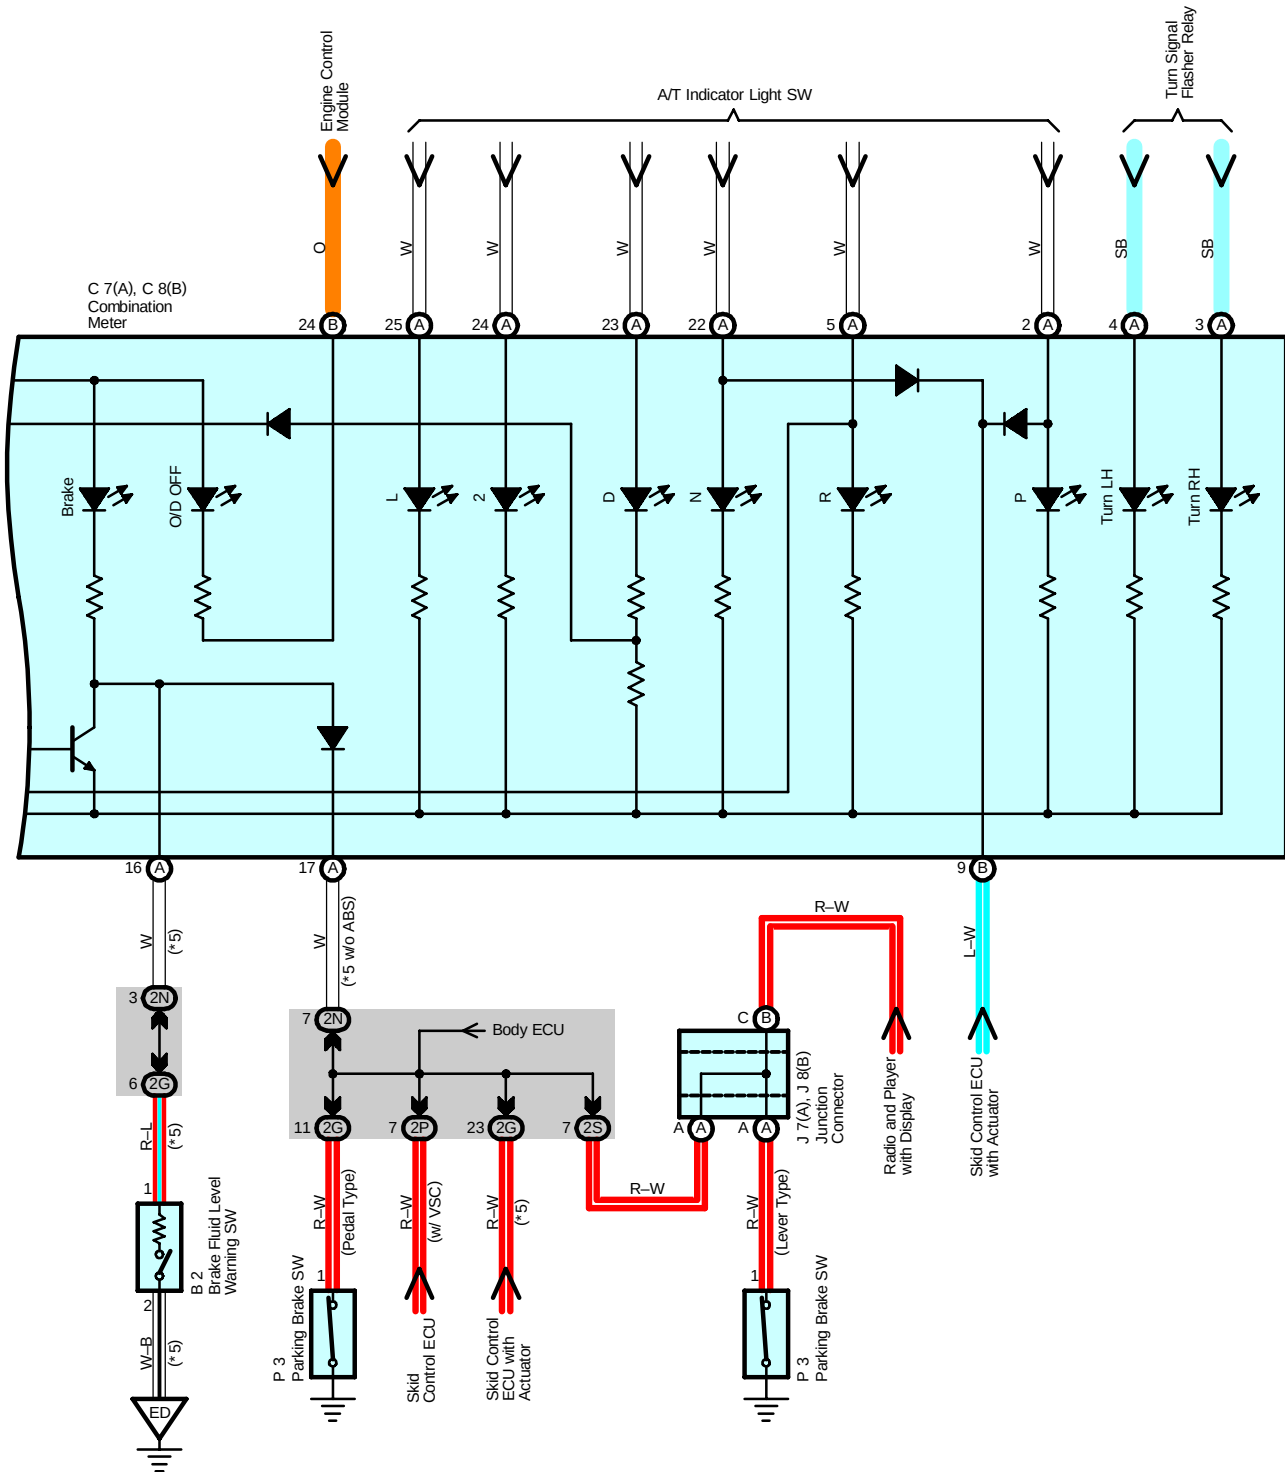

Combination Meter

Service Hints

B2 Brake Fluid Level Warning SW

1-2 : Closed with the float down

C7 (A) Combination Meter

(A) 21, (A) 27-Ground : Approx. 12 volts with ignition SW at ON or ST position

(A) 1-Ground : Always approx. 12 volts

(A)15, (A) 20, (A) 40-Ground : Always continuity

O1 Oil Pressure SW

1-Ground : Continuity with the oil pressure above approx. 20 kpa (2.8 psi, 0.2 kgf/cm²)

P3 Parking Brake SW

1-Ground : Continuity with the parking brake pedal depressed (Pedal type)

Continuity with the parking brake lever pulled up (Lever type)

○ : Parts Location

Code		See Page		Code		See Page		Code		See Page	
B2		38 (1MZ–FE)		J7	A	43		V1	41 (2AZ–FE)		
		40 (2AZ–FE)		J8	B	43		W1	39 (1MZ–FE)		
C7	A	42		O1		39 (1MZ–FE)				41 (2AZ–FE)	
C8	B	42				41 (2AZ–FE)					
F8		44		P3		43					

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	25	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2G	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
2K	28	Floor Wire and Driver Side J/B (Lower Finish Panel)
2L	29	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2M		
2N		
2O		
2P		
2R		
2S		
3A	34 (*1)	Instrument Panel Wire and Passenger Side J/B (Instrument Panel Brace RH)
	35 (*3)	
	36 (*2)	
	37 (*4)	
3B	34 (*1)	
	35 (*3)	
	36 (*2)	
	37 (*4)	

* 1 : TMC Made Automatic A/C * 2 : TMC Made Manual A/C * 3 : TMMK Made Automatic A/C * 4 : TMMK Made Manual A/C

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF3	52	Engine Room Main Wire and Instrument Panel Wire (Right Side of Steering Column Tube)
IL2	54	Engine Wire and Instrument Panel Wire (Behind the Glove Box)



: Ground Points

Code	See Page	Ground Points Location
EB	48 (1MZ-FE)	Right Fender
	50 (2AZ-FE)	
ED	48 (1MZ-FE)	Left Fender
	50 (2AZ-FE)	
II	52	Cowl Side Panel LH
IJ	52	Instrument Panel Brace LH