



## Service Hints

### FOG Relay

5-3 : Closed with the light control SW at HEAD position, dimmer SW at LOW position and fog SW on

### : Parts Location

Code	See Page	Code	See Page	Code	See Page
C11	<a href="#">42</a>	F1	<a href="#">40 (2AZ-FE)</a>	F2	<a href="#">40 (2AZ-FE)</a>
F1	<a href="#">38 (1MZ-FE)</a>	F2	<a href="#">38 (1MZ-FE)</a>	J4	<a href="#">43</a>

### : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	<a href="#">22</a>	Engine Room R/B (Engine Compartment Left)

### : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2C	<a href="#">28</a>	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2G	<a href="#">28</a>	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
2R	<a href="#">29</a>	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)

### : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF2	<a href="#">52</a>	Engine Room Main Wire and Instrument Panel Wire (Right Side of Steering Column Tube)

### : Ground Points

Code	See Page	Ground Points Location
EB	<a href="#">48 (1MZ-FE)</a> <a href="#">50 (2AZ-FE)</a>	Right Fender
EC	<a href="#">48 (1MZ-FE)</a> <a href="#">50 (2AZ-FE)</a>	Left Fender
IK	<a href="#">52</a>	Instrument Panel Brace LH

### : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E10	<a href="#">48 (1MZ-FE)</a>	Engine Room Main Wire	E10	<a href="#">50 (2AZ-FE)</a>	Engine Room Main Wire