




I GROUND POINT



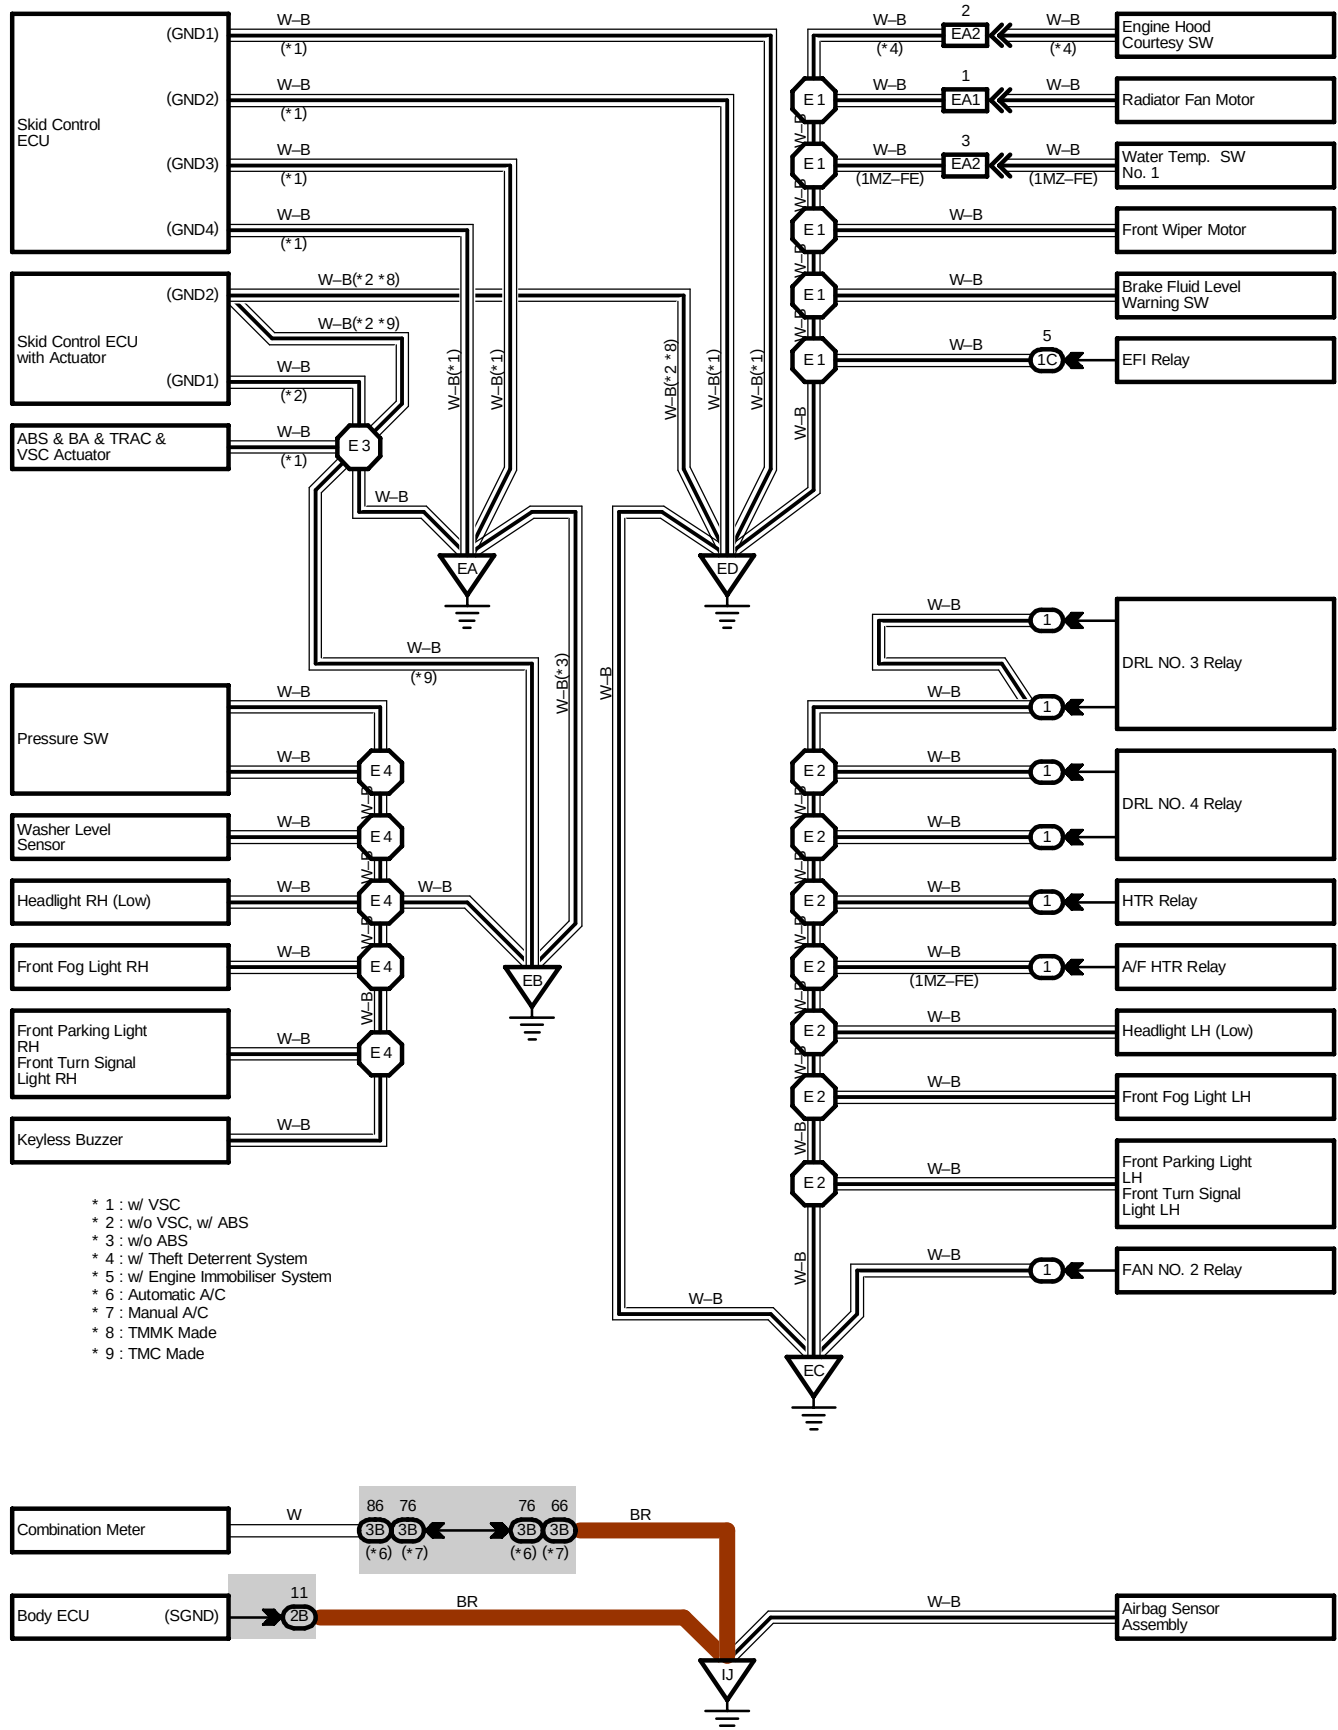

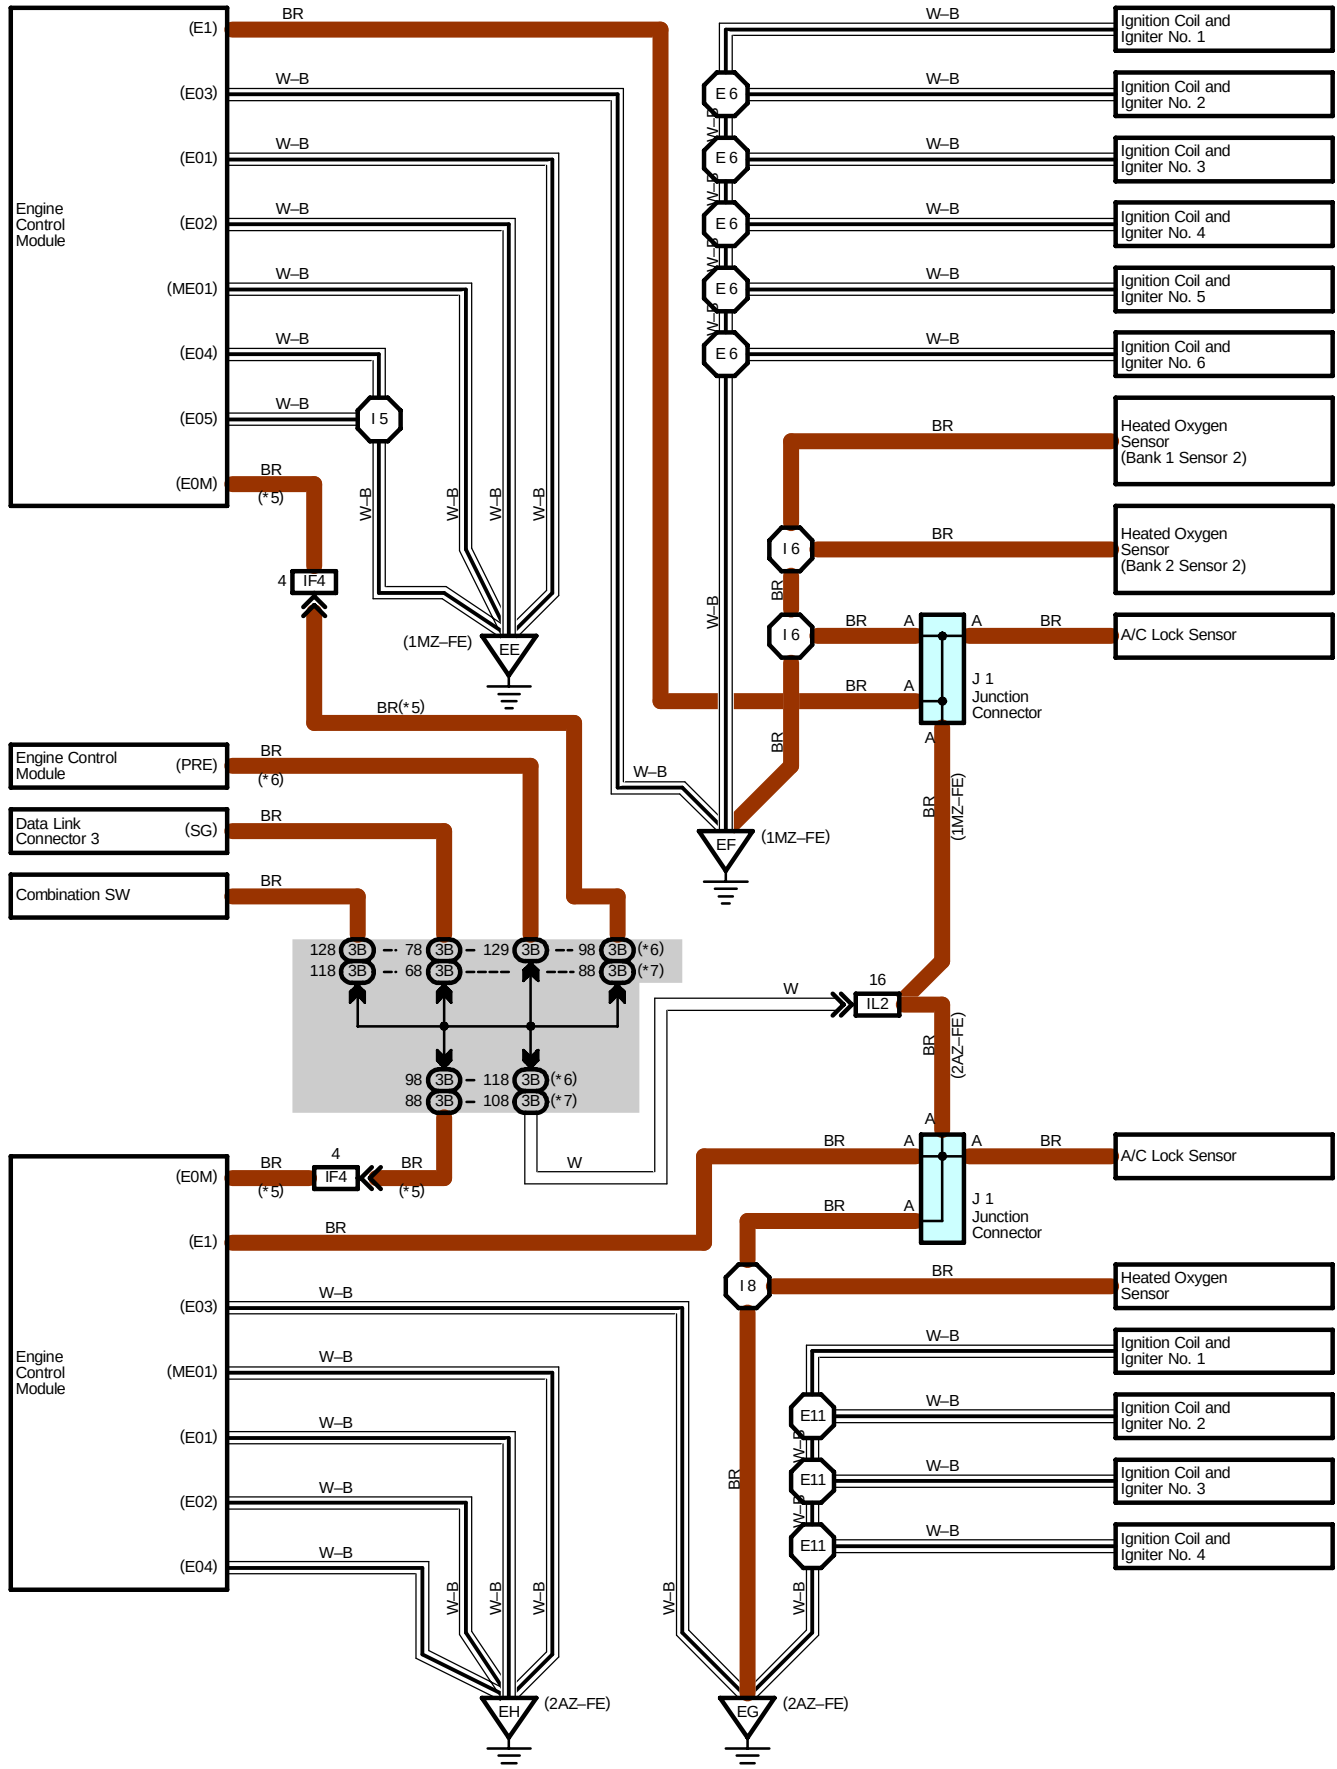

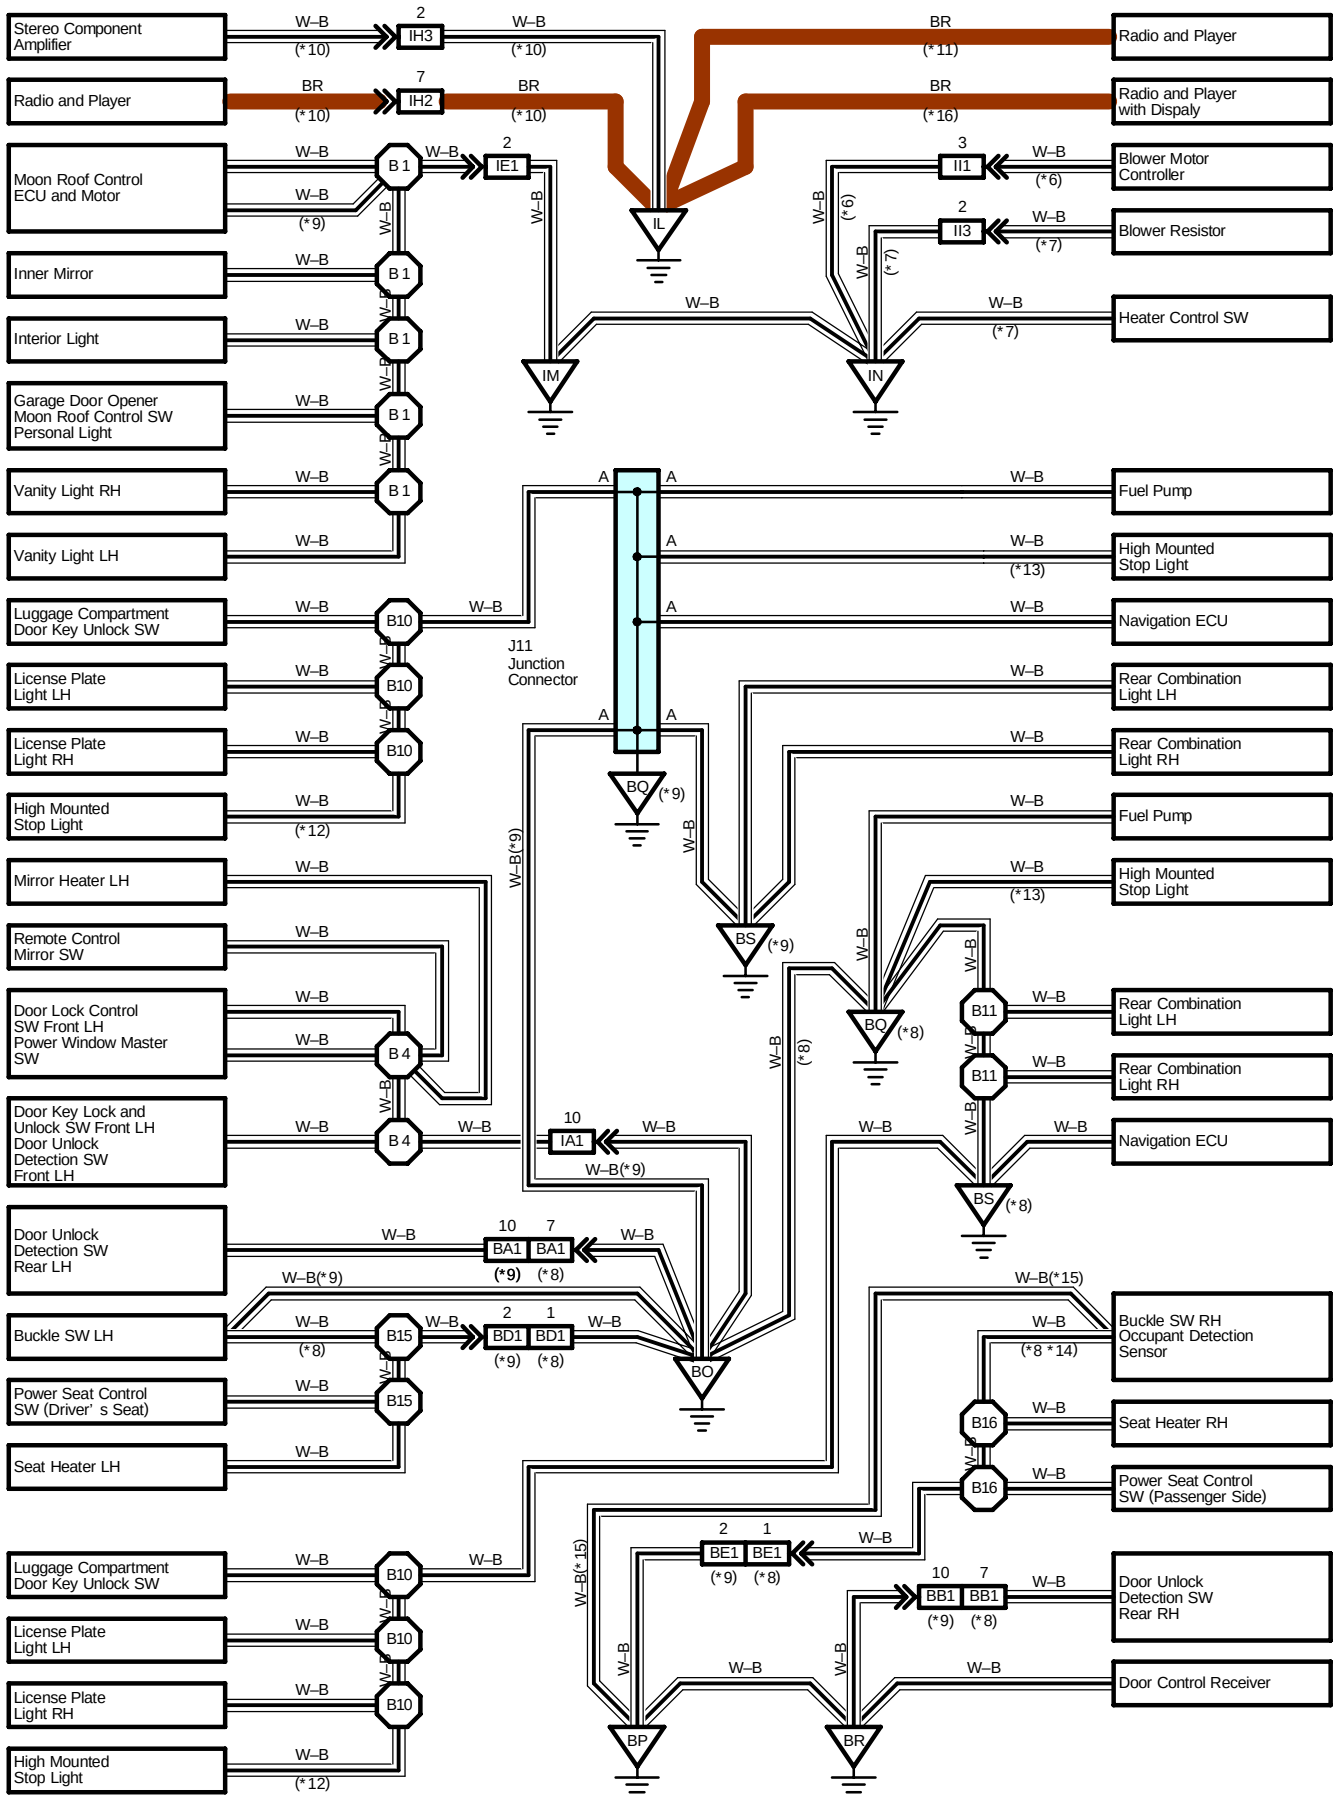

I GROUND POINT

: Parts Location

Code	See Page	Code	See Page	Code	See Page
J1	43	J4	43		
J2	43	J11	44		

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1C	25	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1J		
1K	25	Engine Wire and Engine Room J/B (Engine Compartment Left)
2B	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2D		
2L	29	
2M		
2P		
2R		
3A	34 (*1)	Instrument Panel Wire and Passenger Side J/B (Instrument Panel Brace RH)
	35 (*3)	
	36 (*2)	
	37 (*4)	
3B	34 (*1)	
	35 (*3)	
	36 (*2)	
	37 (*4)	

* 1 : TMC Made Automatic A/C * 2 : TMC Made Manual A/C * 3 : TMMK Made Automatic A/C * 4 : TMMK Made Manual A/C

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	48 (1MZ-FE)	Engine Room Main Wire and Engine Room No.2 Wire (Radiator Side Support LH)
	50 (2AZ-FE)	
EA2	48 (1MZ-FE)	
	50 (2AZ-FE)	
IA1	52	Front Door LH Wire and Floor Wire (Left Kick Panel)
IE1	52	Instrument Panel Wire and Roof Wire (Inside of Front Left Pillar)
IF4	52	Engine Room Main Wire and Instrument Panel Wire (Right Side of Steering Column Tube)
IG1	52	Instrument Panel Wire and Engine Room Main Wire (Instrument Panel Brace LH)
IH2	52	Instrument Panel Wire and Instrument Panel No.2 Wire (Instrument Panel Brace RH)
IH3		
II1	54	Instrument Panel Wire and Instrument Panel No.3 Wire (Behind the Glove Box)
II3		
IL1	54	Engine Wire and Instrument Panel Wire (Behind the Glove Box)
IL2		
IM1	54	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
BA1	56	Rear Door LH Wire and Floor Wire (Left Center Pillar)
BB1	56	Rear Door RH Wire and Floor No.2 Wire (Right Center Pillar)
BD1	58	Floor Wire and Front Seat LH Wire (Under the Driver's Seat)
BE1	58	Floor No.2 Wire and Front Seat RH Wire (Under the Front Passenger's Seat)



: Ground Points

Code	See Page	Ground Points Location
EA	48 (1MZ-FE)	Right Fender
	50 (2AZ-FE)	
EB	48 (1MZ-FE)	
	50 (2AZ-FE)	
EC	48 (1MZ-FE)	Left Fender
	50 (2AZ-FE)	
ED	48 (1MZ-FE)	
	50 (2AZ-FE)	
EE	48 (1MZ-FE)	Surge Tank RH
EF	48 (1MZ-FE)	Rear Side of Surge Tank
EG	50 (2AZ-FE)	Left Side of Cylinder Head
EH	50 (2AZ-FE)	Intake Side of Cylinder Block
II	52	Cowl Side Panel LH
IJ	52	Instrument Panel Brace LH
IK		
IL	52	Instrument Panel Brace RH
IM	52	Instrument Panel Reinforcement RH
IN		
BO	56	Under the Driver's Seat
BP	56	Under the Front Passenger's Seat
BQ	56	Front Side of Rear Quarter Wheel House LH
BR	56	Front Side of Rear Quarter Wheel House RH
BS	56	Lower Back Panel Center



: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E1	48 (1MZ-FE)	Engine Room Main Wire	I5	54	Engine Wire
	50 (2AZ-FE)		I6		
E2	48 (1MZ-FE)		I8		
	50 (2AZ-FE)		B1	56	Roof Wire
E3	48 (1MZ-FE)		B4	56	Front Door LH Wire
	50 (2AZ-FE)		B10	56	Floor Wire
E4	48 (1MZ-FE)		B11		
	50 (2AZ-FE)		B13	56	Front Door RH Wire
E6	48 (1MZ-FE)	Engine Wire	B15	58	Front Seat LH Wire
E11	50 (2AZ-FE)		B16	58	Front Seat RH Wire