



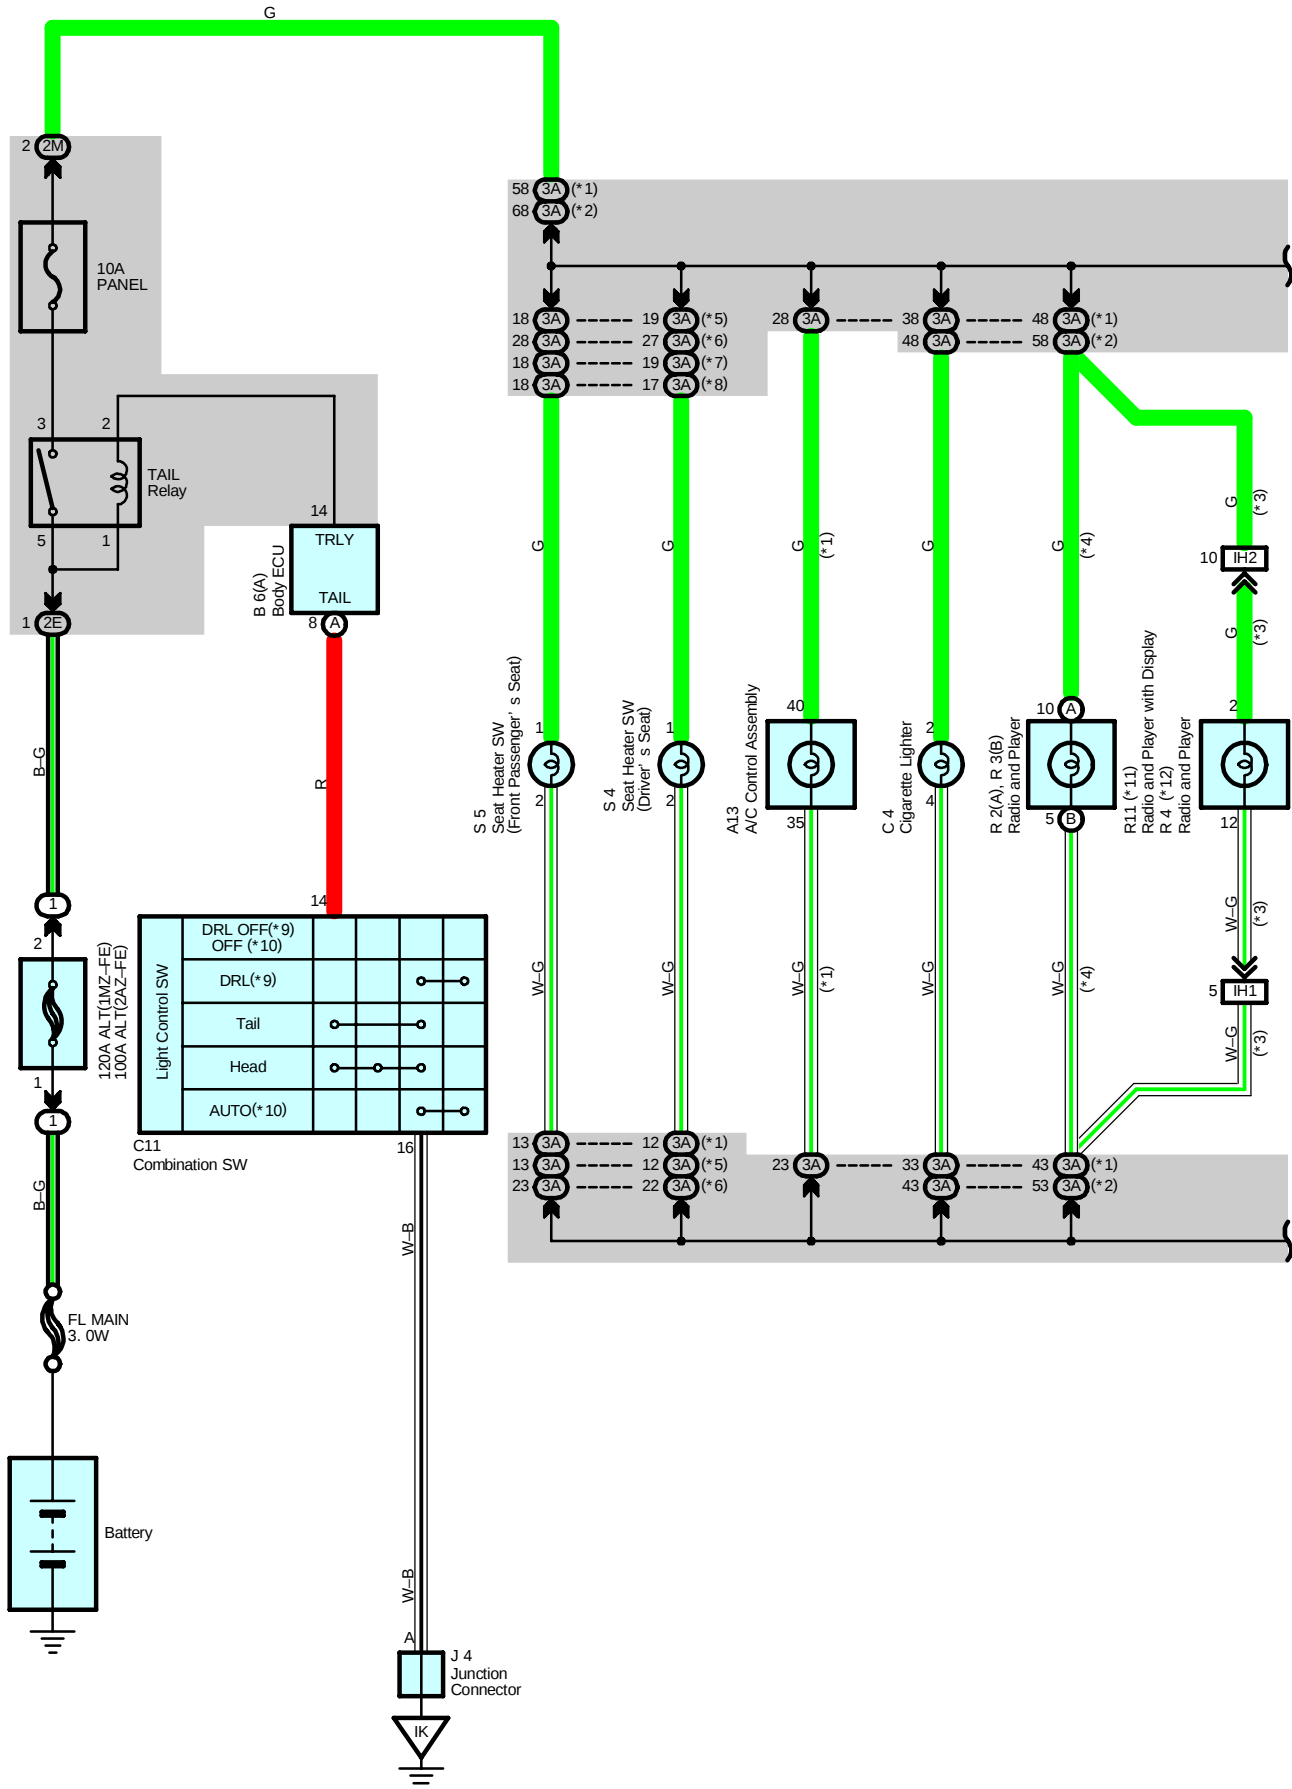

- * 1 : Automatic A/C
- * 2 : Manual A/C
- * 3 : Separate Type Amplifier
- * 4 : Built-In Type Amplifier
- * 5 : Manual A/C TMMK Made
- * 6 : Manual A/C TMC Made

- * 7 : Automatic A/C TMMK Made
- * 8 : Automatic A/C TMC Made
- * 9 : USA
- * 10 : Canada
- * 11 : w/ TOYOTA Navigation System
- * 12 : w/o TOYOTA Navigation System

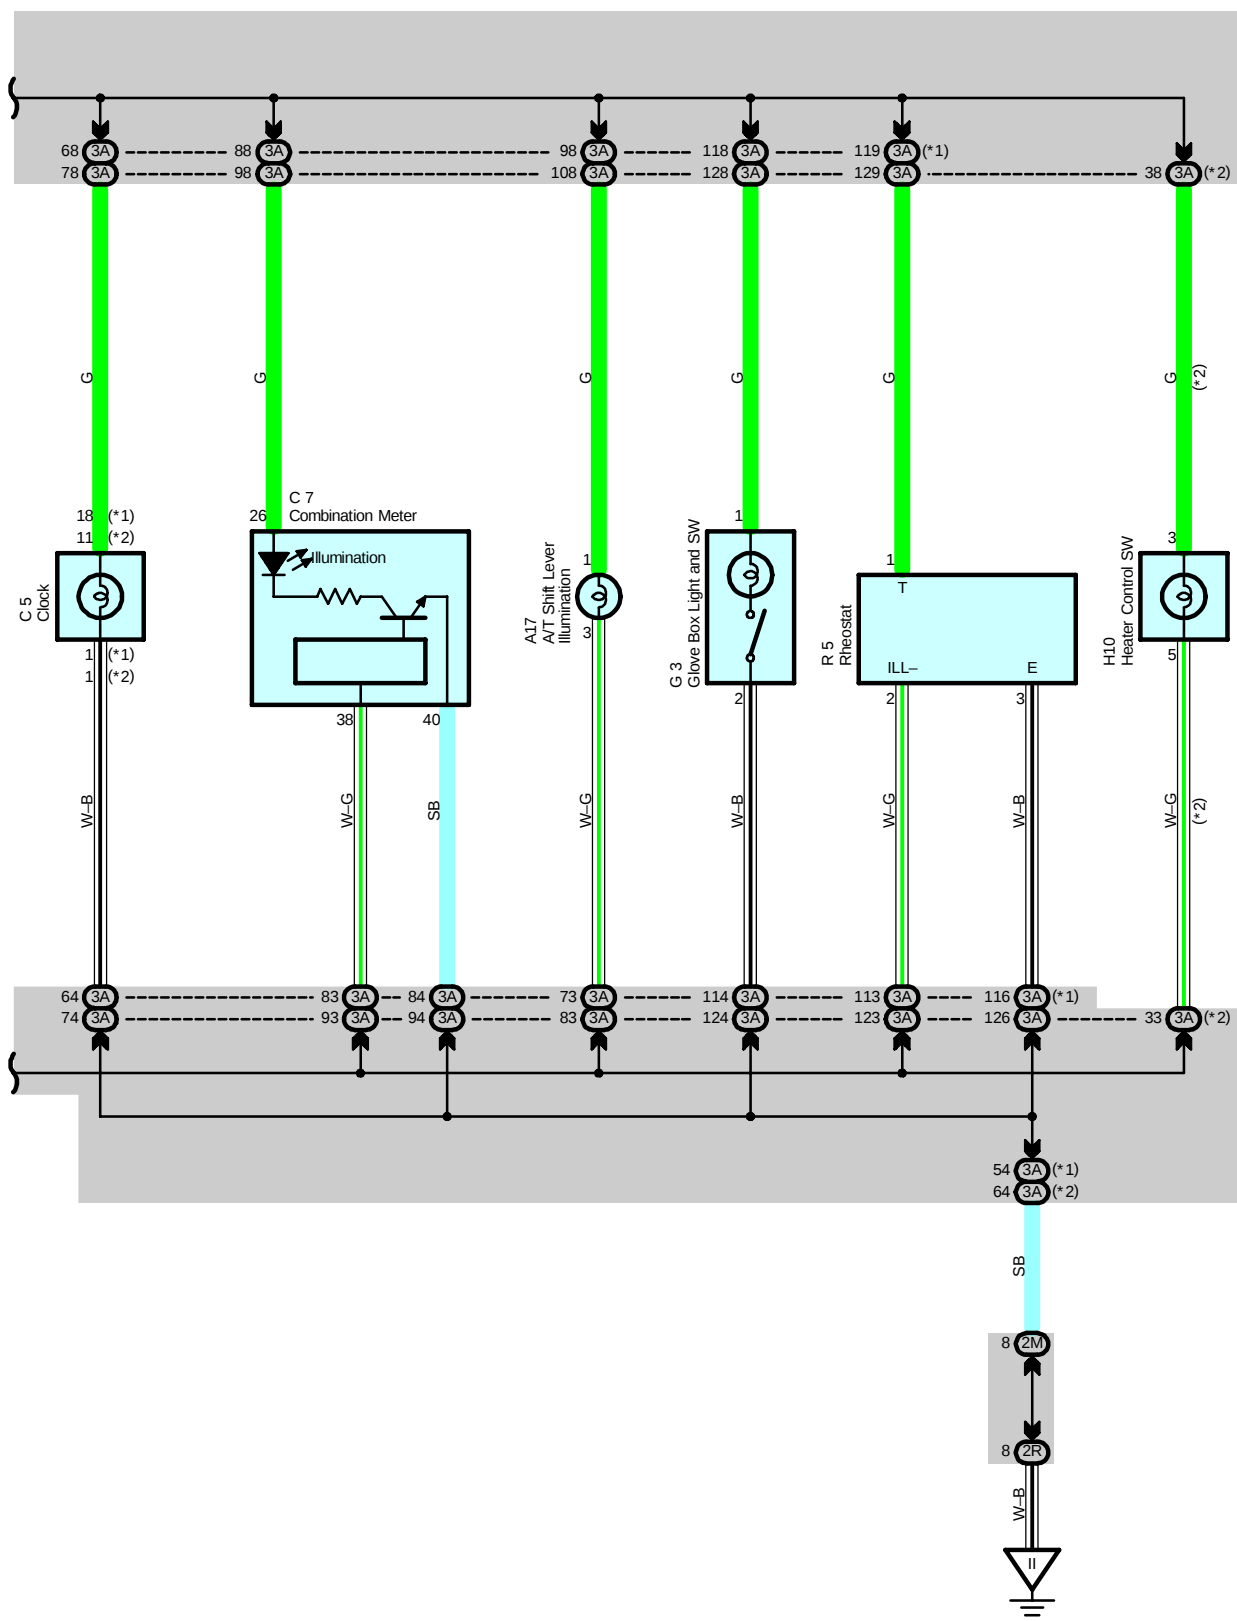

Illumination

Service Hints

TAIL Relay

5-3 : Closed with the light control SW at TAIL or HEAD position

C11 Combination SW

14-16 : Closed with the light control SW at TAIL or HEAD position

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A13	42	C7	42	R3 B	43
A17	42	C11	42	R4	43
A31	42	G3	43	R5	43
B6 A	42	H10	43	S4	43
C4	42	J4	43	S5	43
C5	42	R2 A	43		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2E	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
2M	29	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2R		
3A	34 (*1)	Instrument Panel Wire and Passenger Side J/B (Instrument Panel Brace RH)
	35 (*3)	
	36 (*2)	
	37 (*4)	

* 1 : TMC Made Automatic A/C * 2 : TMC Made Manual A/C * 3 : TMMK Made Automatic A/C * 4 : TMMK Made Manual A/C

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IH1	52	Instrument Panel Wire and Instrument Panel No.2 Wire (Instrument Panel Brace RH)
IH2		

▽ : Ground Points

Code	See Page	Ground Points Location
II	52	Cowl Side Panel LH
IK	52	Instrument Panel Brace LH

