



Interior Light

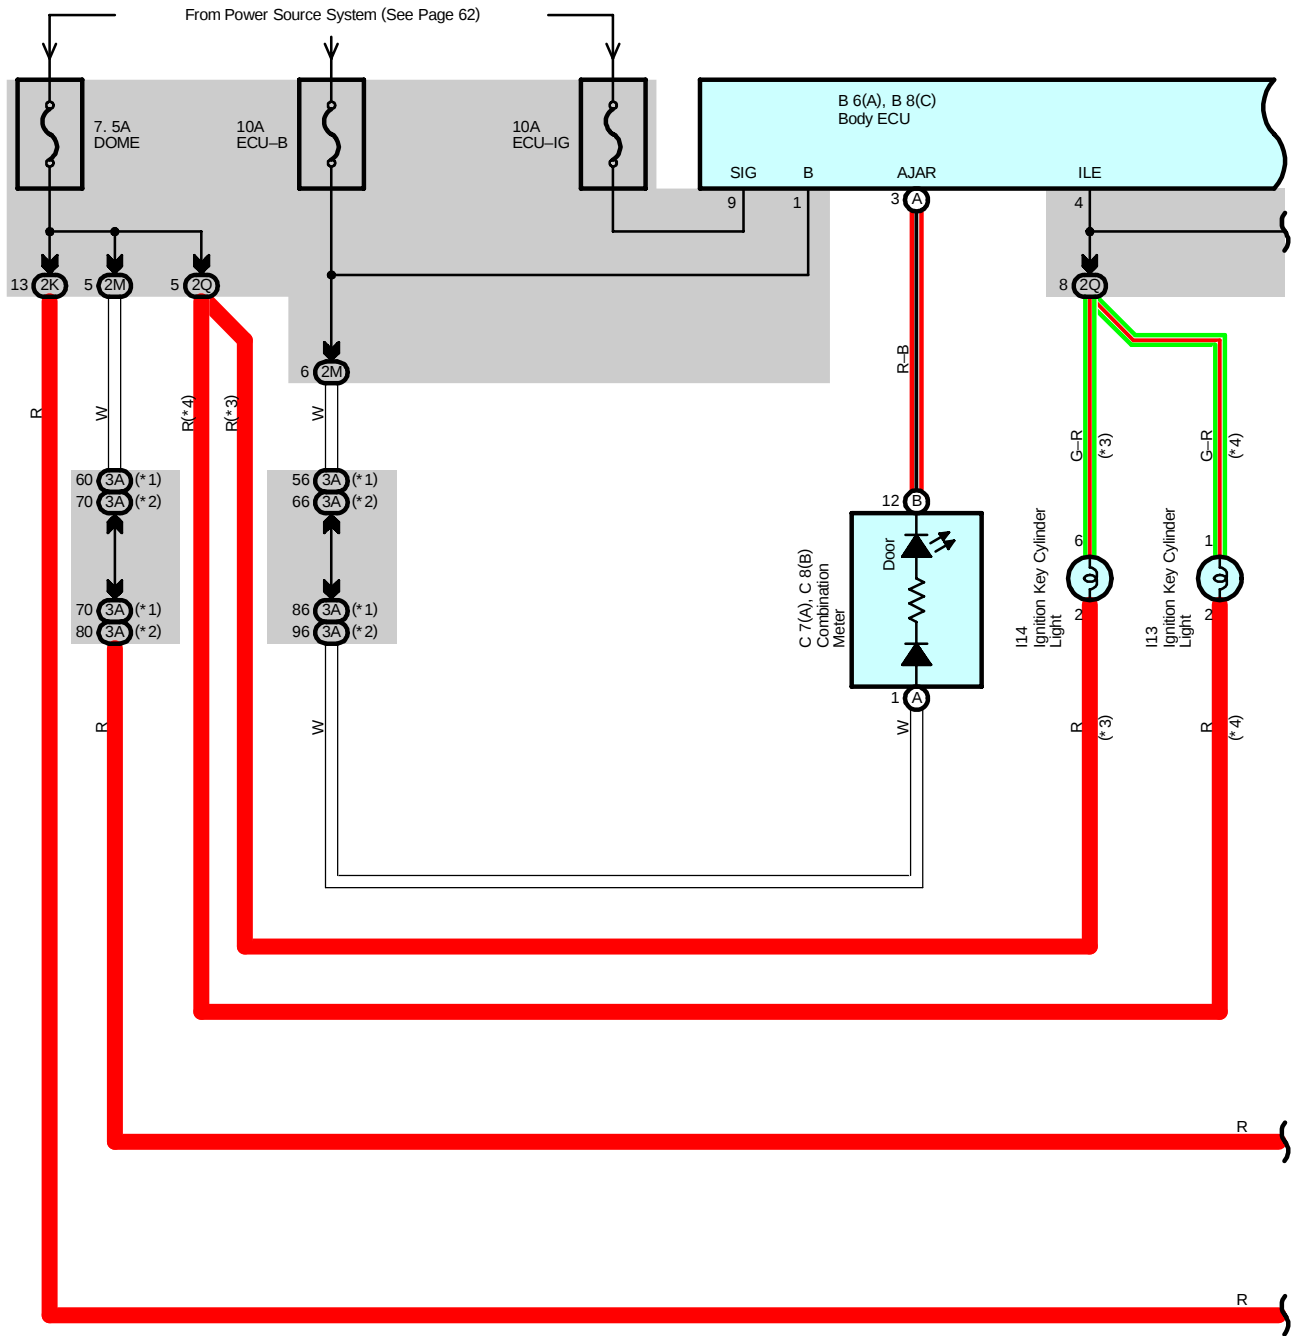


* 1 : Automatic A/C
* 2 : Manual A/C

* 3 : w/ Engine Immobiliser System
* 4 : w/o Engine Immobiliser System

* 5 : TMMK Made
* 6 : TMC Made

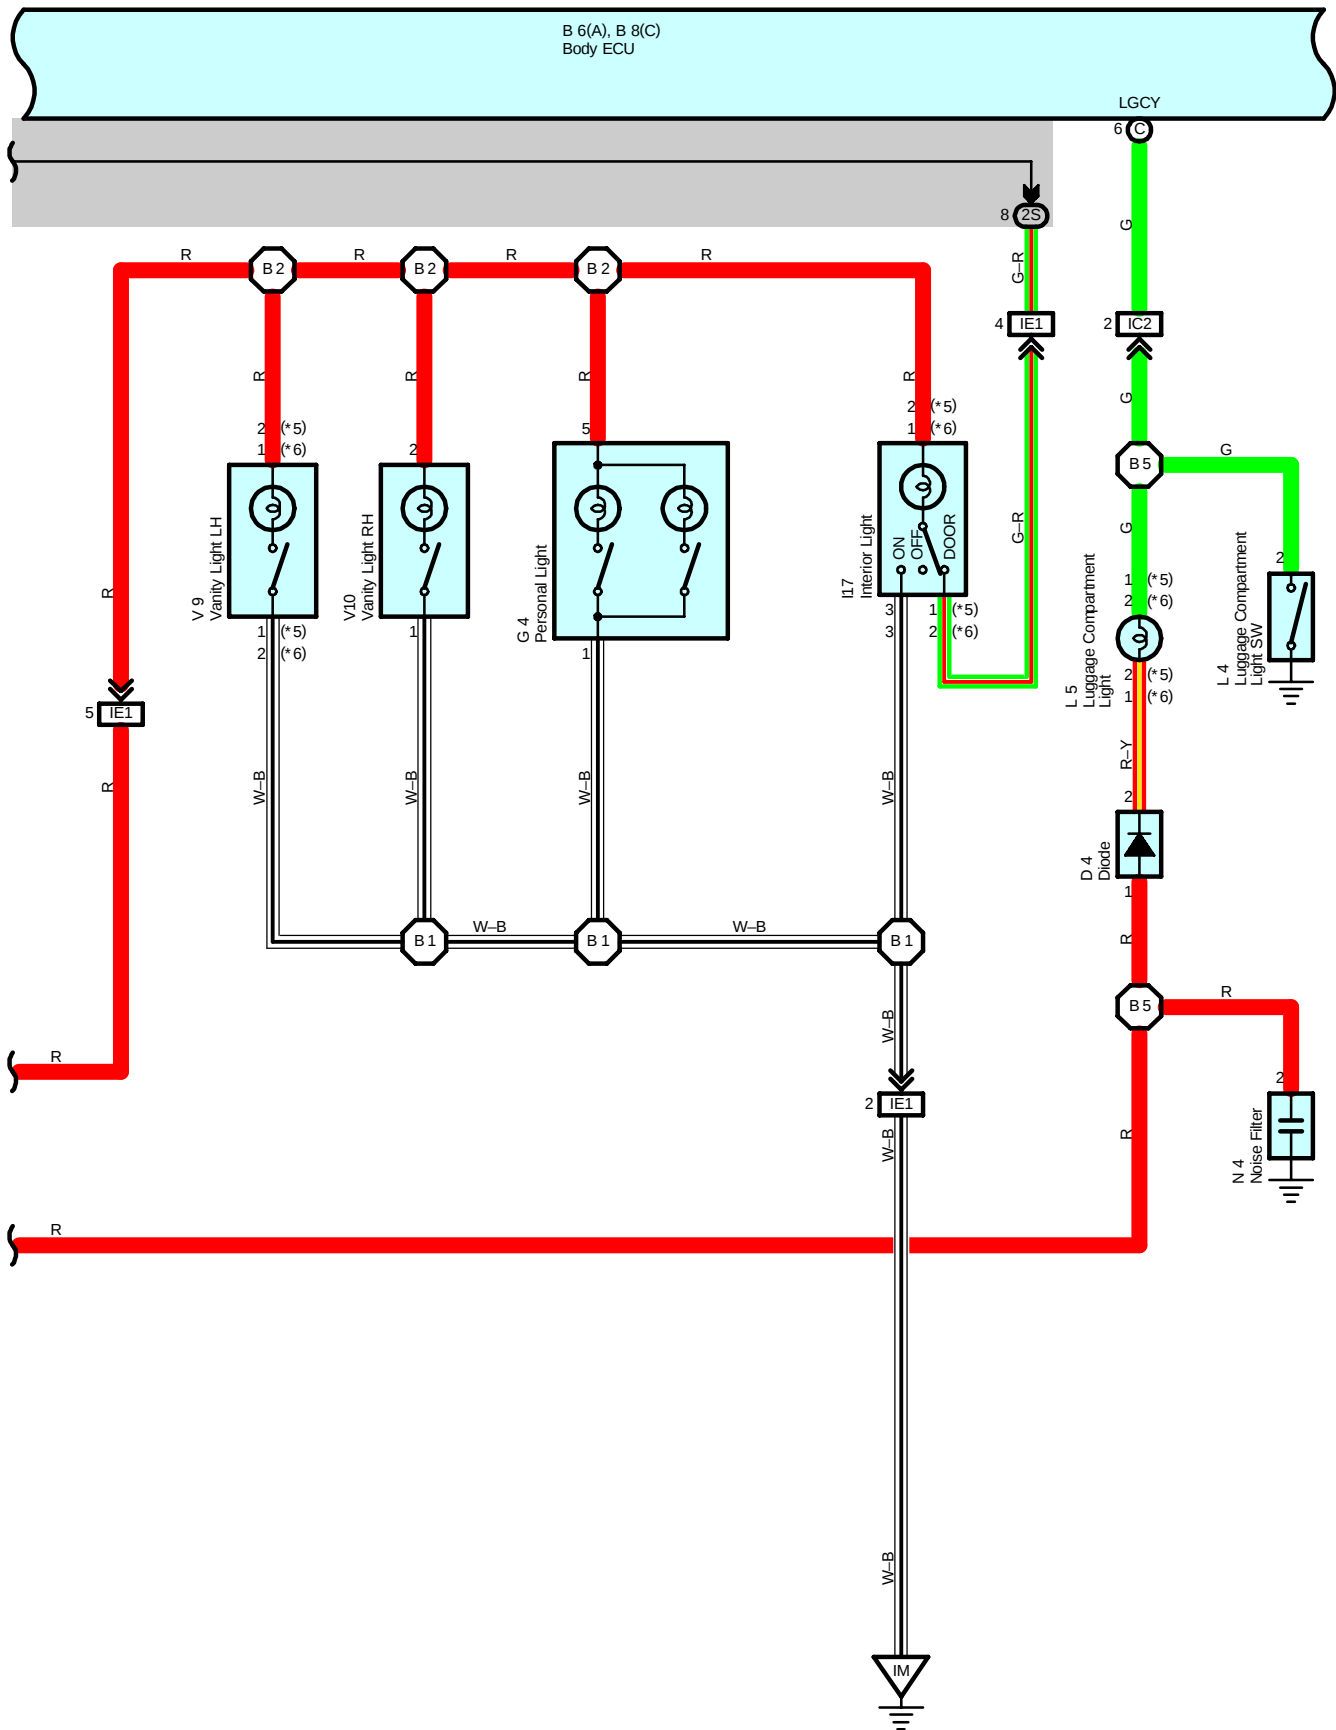

Interior Light

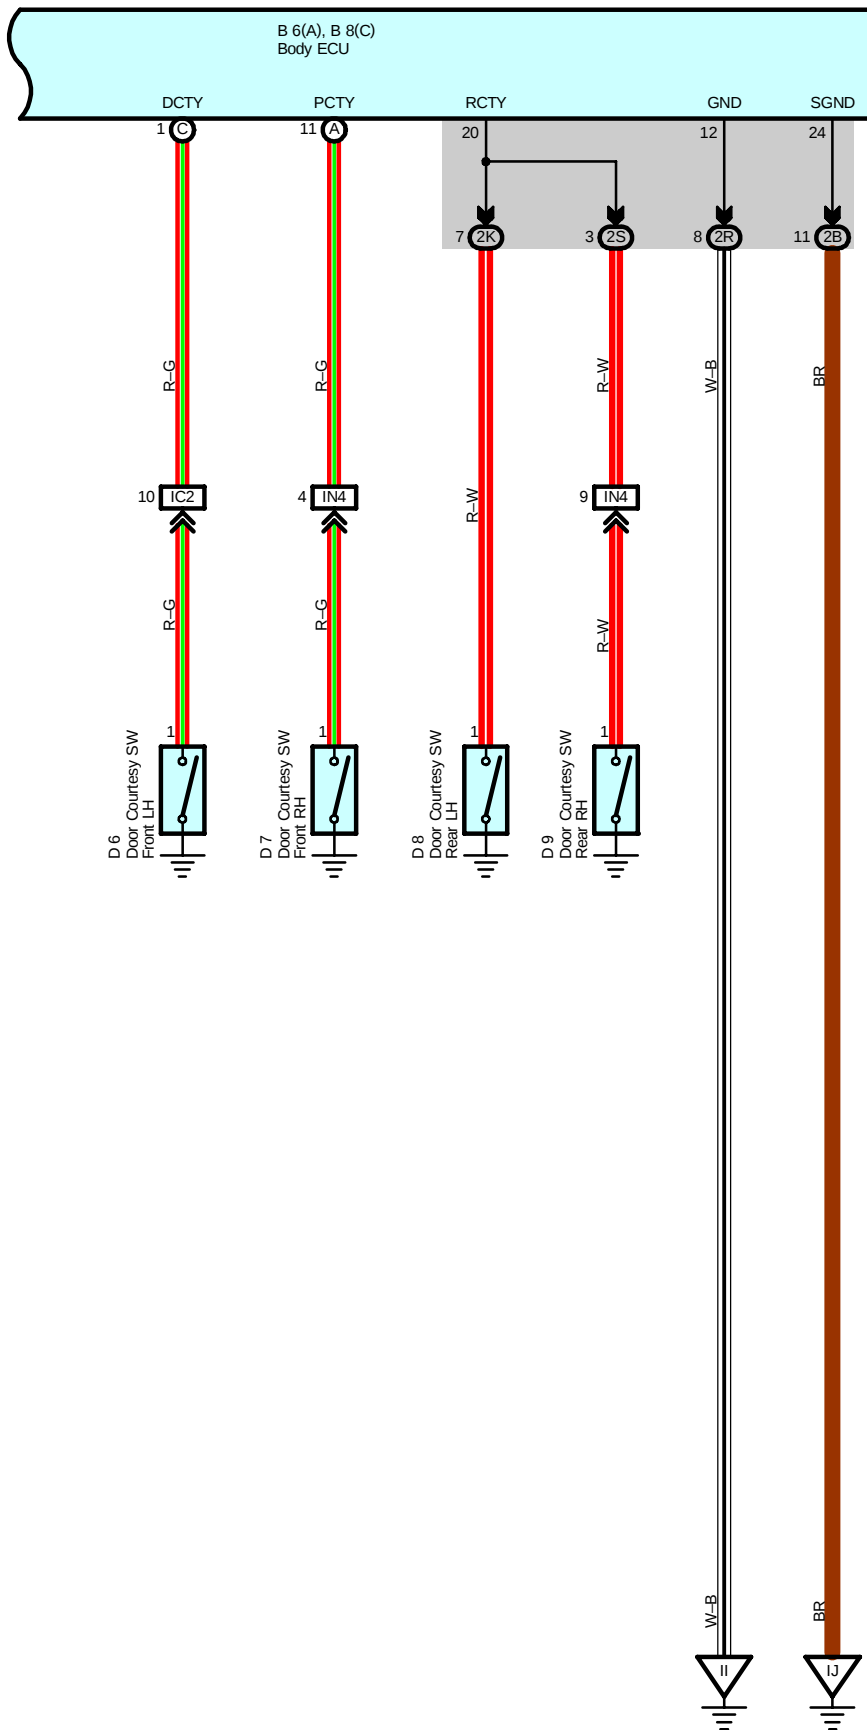

Service Hints

Body ECU

- 9–Ground : Approx. 12 volts with ignition SW at ON or ST position
- 12, 24–Ground : Always continuity
- 1–Ground : Always approx. 12 volts

D6, D7, D8, D9 Door Courtesy SW Front LH, RH, Rear LH, RH

- 1–Ground : Closed with each of the door

○ : Parts Location

Code		See Page	Code	See Page	Code	See Page
B6	A	42	D7	44	I17	44
B8	C	42	D8	44	L4	45
C7	A	42	D9	44	L5	45
C8	B	42	G4	44	N4	45
D4		44	I13	43	V9	45
D6		44	I14	43	V10	45

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2B	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2K	28	Floor Wire and Driver Side J/B (Lower Finish Panel)
2M	29	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2Q		
2R		
2S		
3A	34 (*1)	Instrument Panel Wire and Passenger Side J/B (Instrument Panel Brace RH)
	35 (*3)	
	36 (*2)	
	37 (*4)	

* 1 : TMC Made Automatic A/C * 2 : TMC Made Manual A/C * 3 : TMMK Made Automatic A/C * 4 : TMMK Made Manual A/C

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC2	52	Instrument Panel Wire and Floor Wire (Left Kick Panel)
IE1	52	Instrument Panel Wire and Roof Wire (Inside of Front Left Pillar)
IN4	54	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)

▽ : Ground Points

Code	See Page	Ground Points Location
II	52	Cowl Side Panel LH
IJ	52	Instrument Panel Brace LH
IM	52	Instrument Panel Reinforcement RH

○ : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B1	56	Roof Wire	B5	56	Floor Wire
B2					