


## Power Outlet and Cigarette Lighter

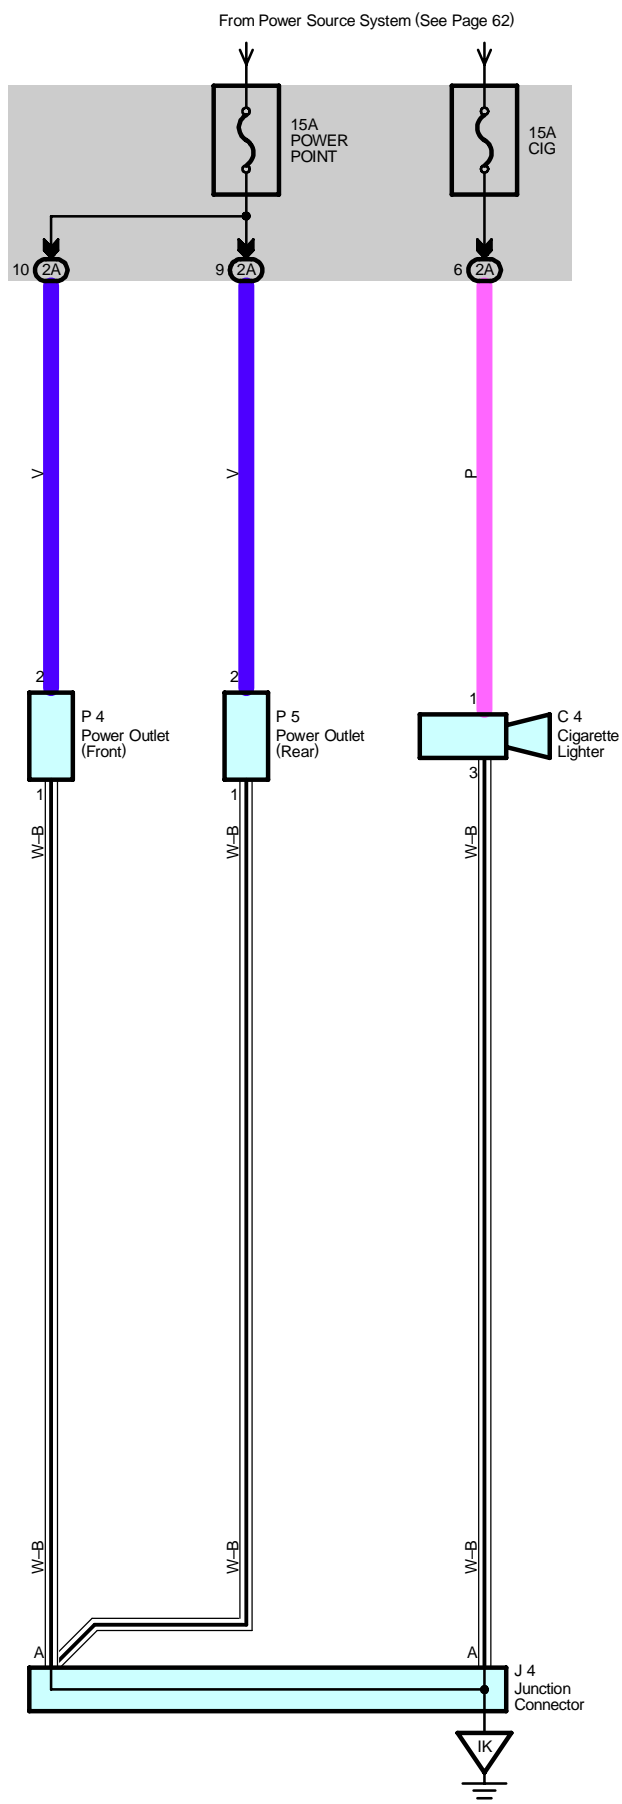

## Service Hints

### C4 Cigarette Lighter

- 1—Ground : Approx. 12 volts with ignition SW at ACC or ON position
- 3—Ground : Always continuity

### P4 Power Outlet (Front)

- 2—Ground : Approx. 12 volts with ignition SW at ACC or ON position
- 1—Ground : Always continuity

### P5 Power Outlet (Rear)

- 2—Ground : Approx. 12 volts with ignition SW at ACC or ON position
- 1—Ground : Always continuity

## : Parts Location

Code	See Page	Code	See Page	Code	See Page
C4	<a href="#">42</a>	P4	<a href="#">43</a>		
J4	<a href="#">43</a>	P5	<a href="#">43</a>		

## : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2A	<a href="#">28</a>	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)

## : Ground Points

Code	See Page	Ground Points Location
IK	<a href="#">52</a>	Instrument Panel Brace LH