



Power Seat (TMC Made)

From Power Source System (See Page 62)

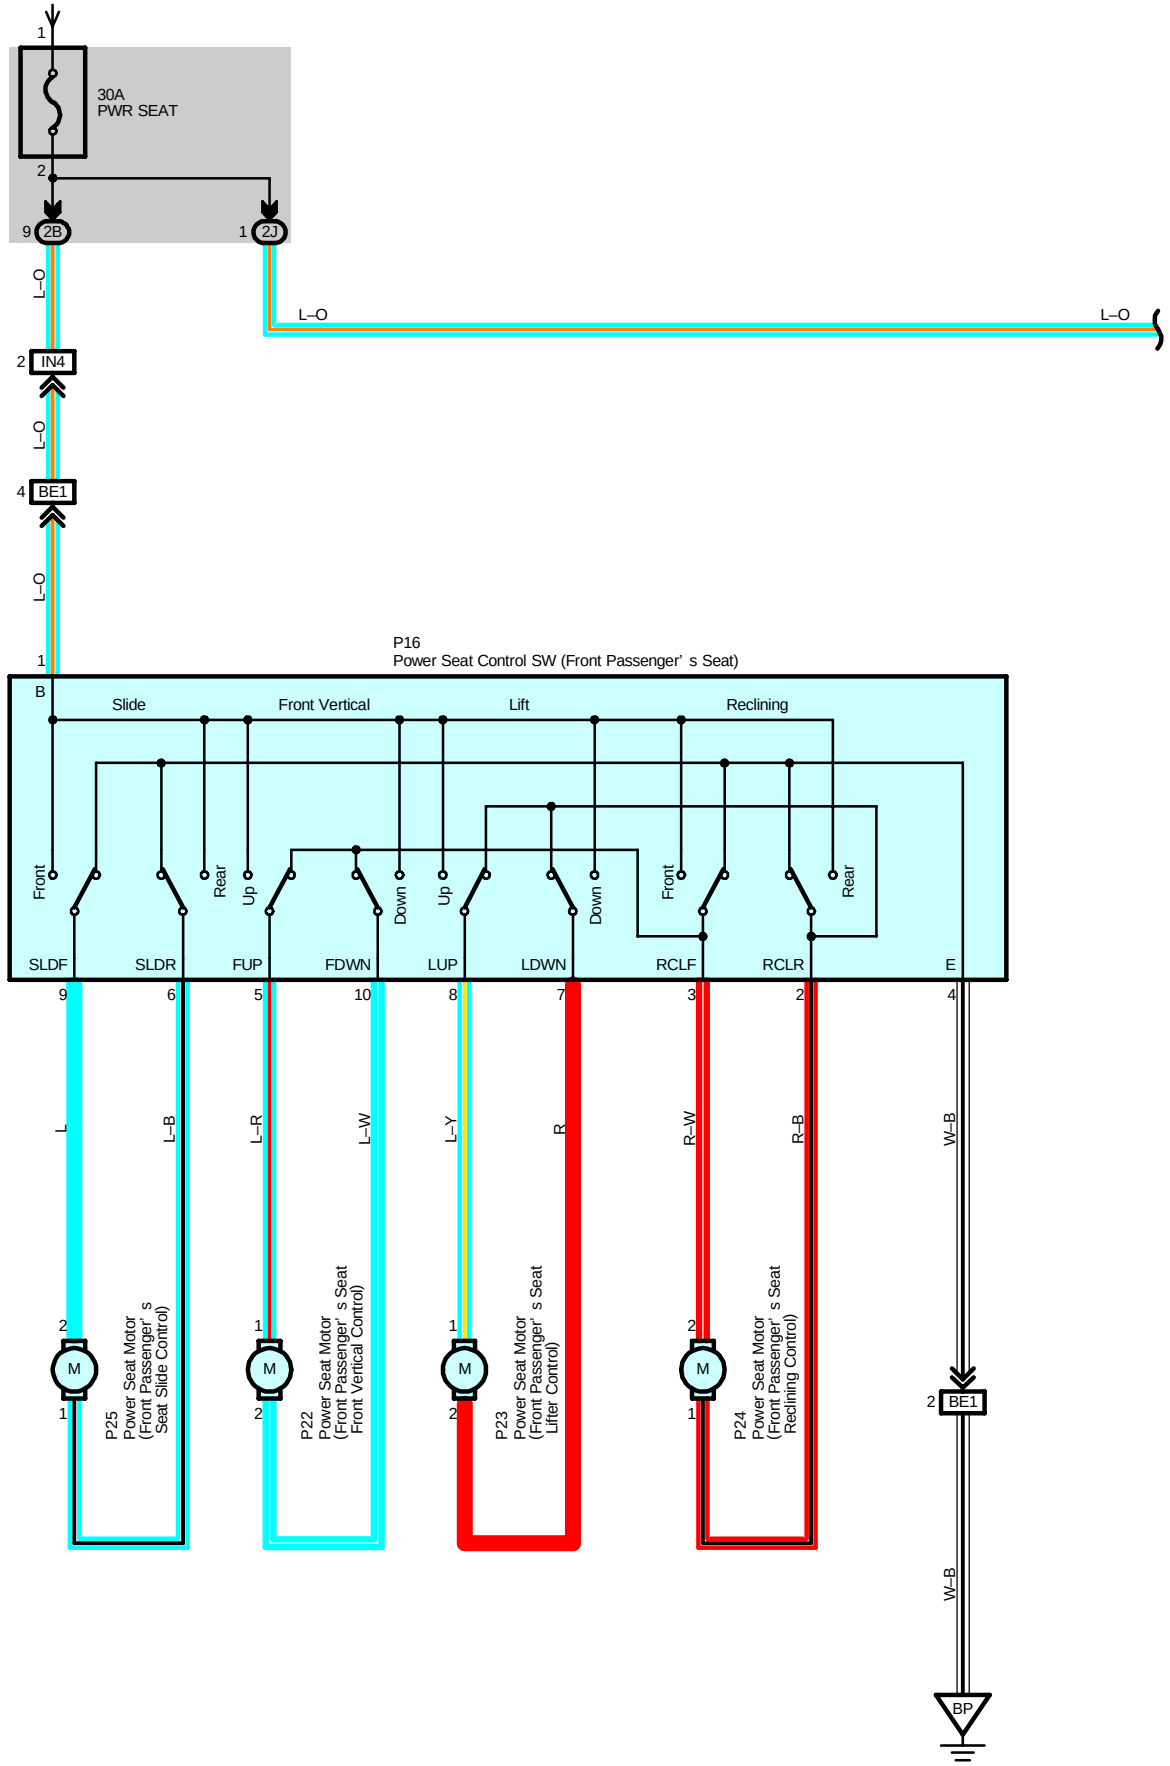

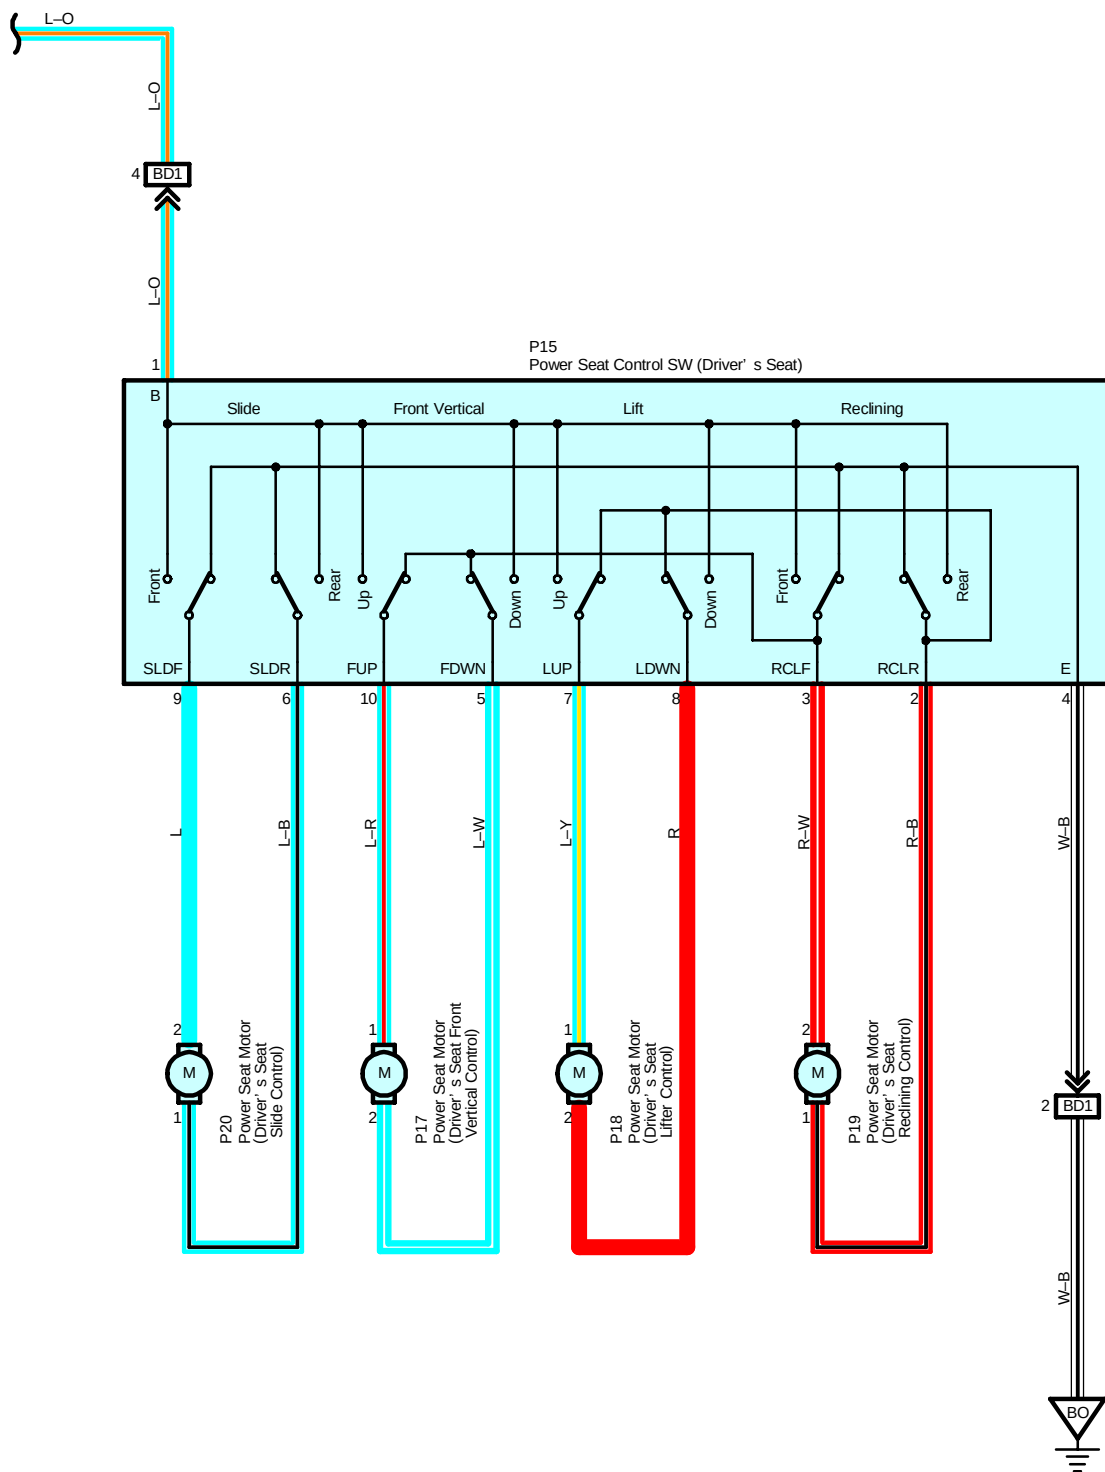

Power Seat (TMC Made)

Service Hints

P15 Power Seat Control SW (Driver's Seat)

1-Ground : Always approx. 12 volts

4-Ground : Always continuity

P16 Power Seat Control SW (Front Passenger's Seat)

1-Ground : Always approx. 12 volts

4-Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
P15	46	P19	46	P24	46
P16	46	P20	46	P25	46
P17	46	P22	46		
P18	46	P23	46		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2B	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2J	28	Floor Wire and Driver Side J/B (Lower Finish Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IN4	54	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
BD1	58	Floor Wire and Front Seat LH Wire (Under the Driver's Seat)
BE1	58	Floor No.2 Wire and Front Seat RH Wire (Under the Front Passenger's Seat)

▽ : Ground Points

Code	See Page	Ground Points Location
BO	56	Under the Driver's Seat
BP	56	Under the Front Passenger's Seat

