



Radio and Player

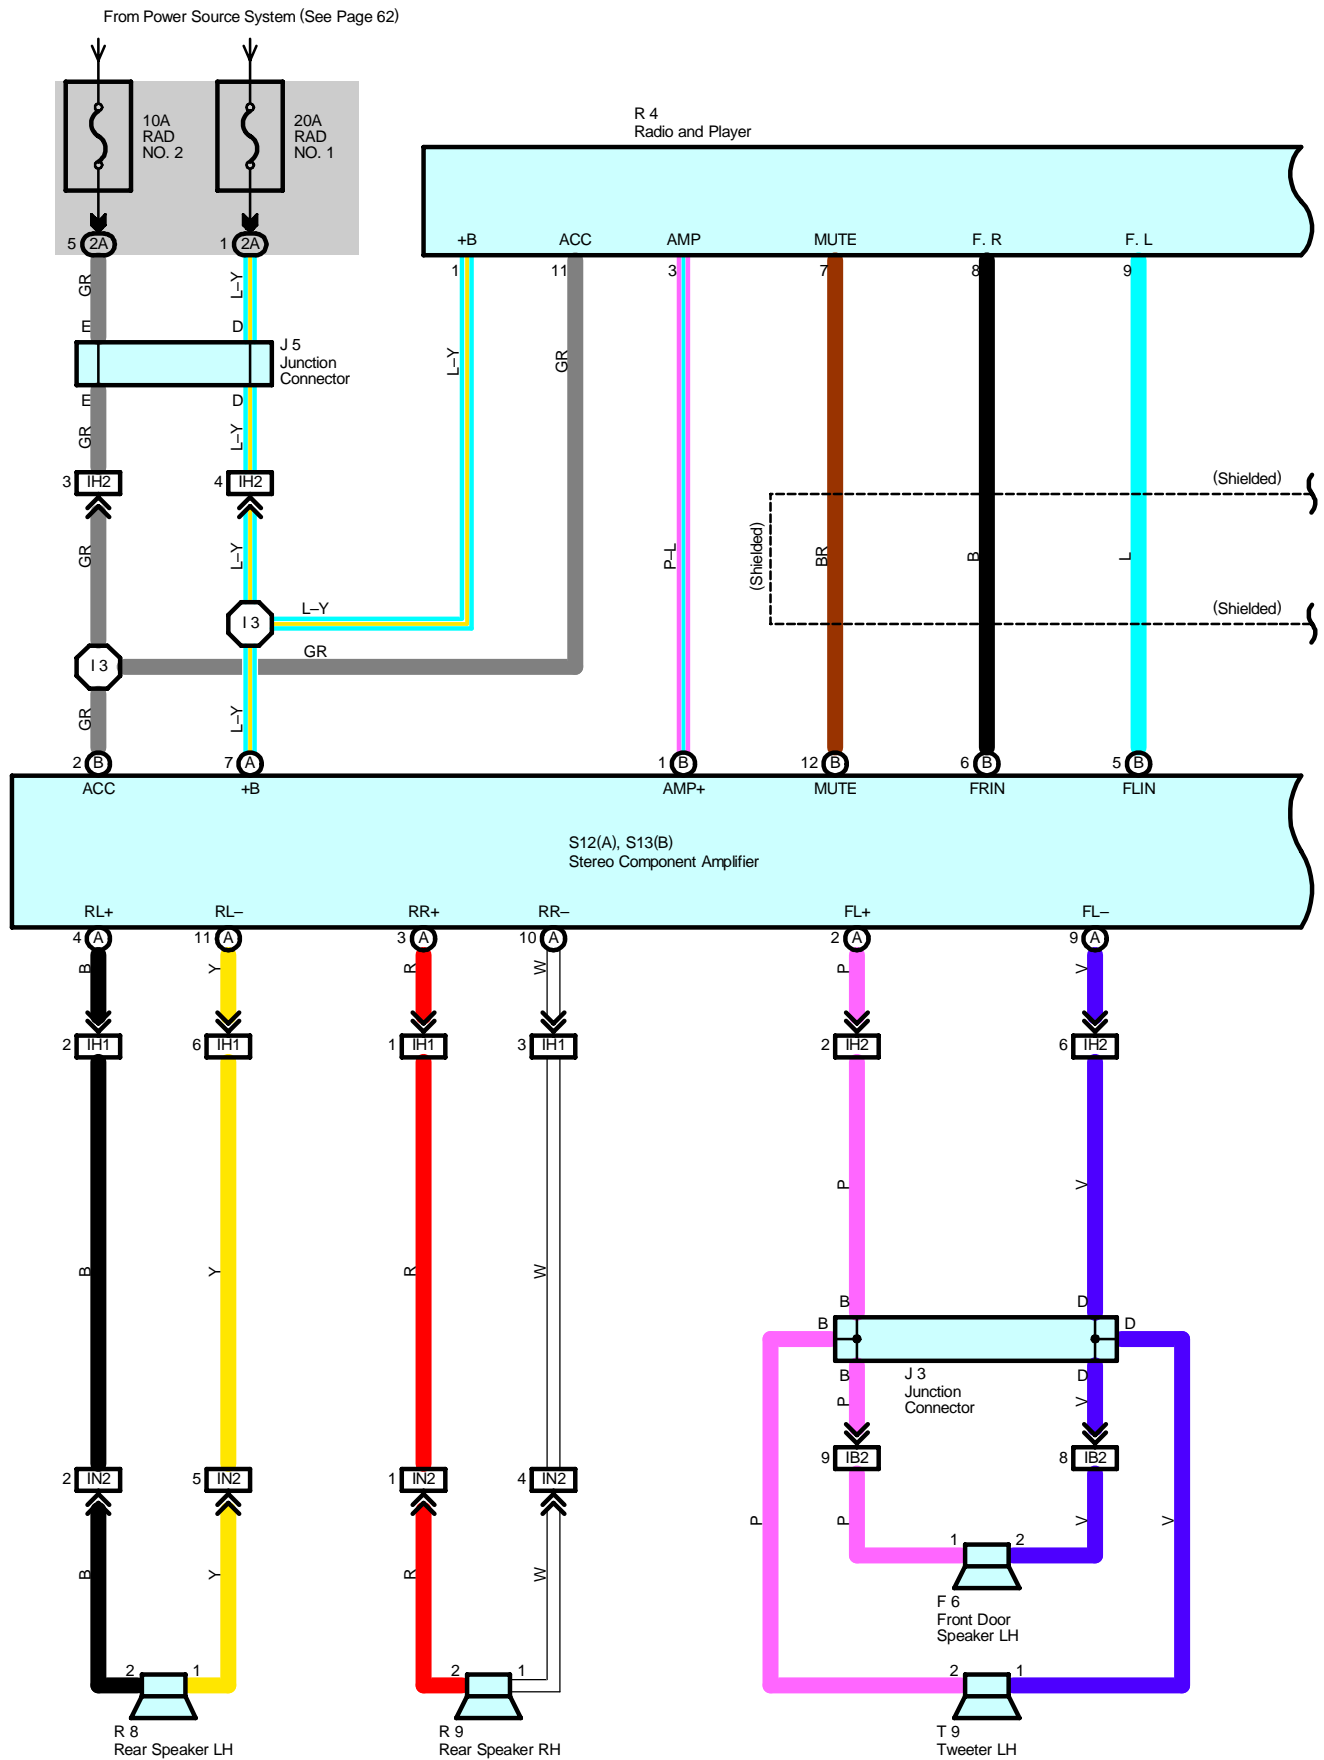

(Separate Type Amplifier w/o TOYOTA Navigation System)

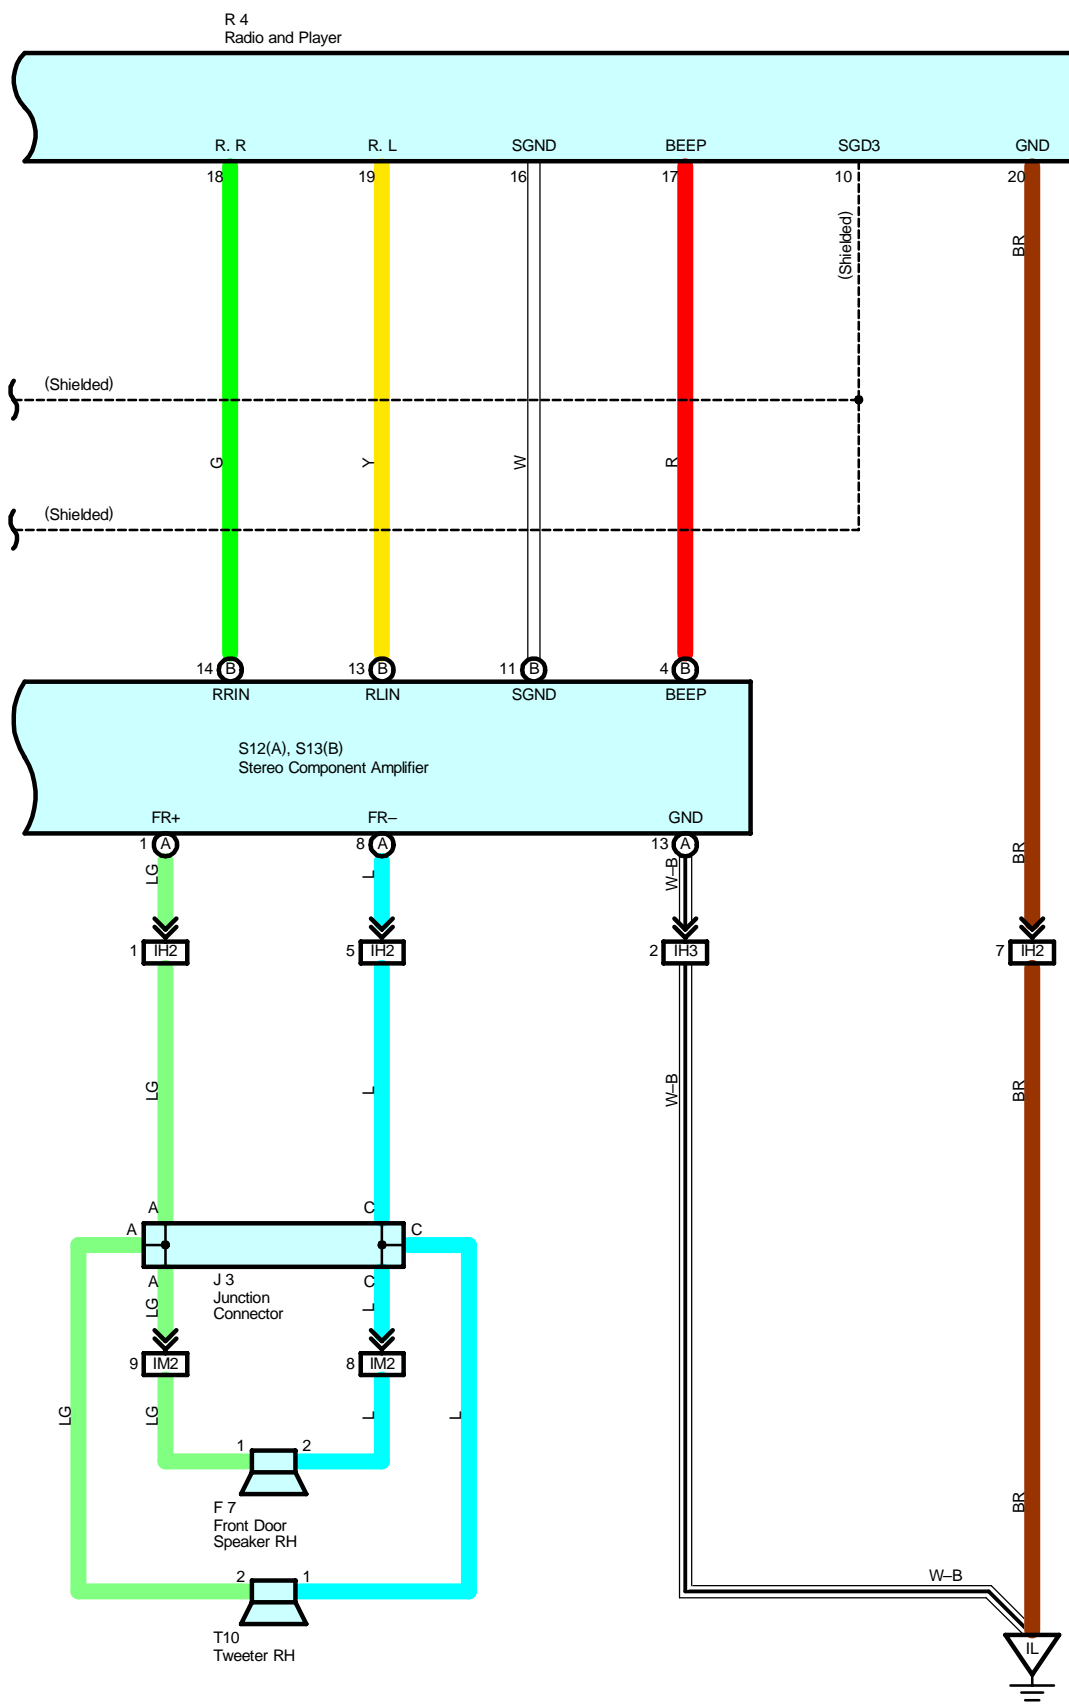

Radio and Player (Separate Type Amplifier w/o TOYOTA Navigation System)

Service Hints

R4 Radio and Player

- 11—Ground : Approx. 12 volts with ignition SW at ACC or ON position
- 1—Ground : Always approx. 12 volts
- 20—Ground : Always continuity

S12 (A), S13 (B) Stereo Component Amplifier

- (B) 2—Ground : Approx. 12 volts with ignition SW at ACC or ON position
- (A) 7—Ground : Always approx. 12 volts
- (A)13—Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
F6	44	R4	43	S13 B	43
F7	44	R8	45	T9	43
J3	43	R9	45	T10	43
J5	43	S12 A	43		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2A	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB2	52	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IH1	52	Instrument Panel Wire and Instrument Panel No.2 Wire (Instrument Panel Brace RH)
IH2		
IH3		
IM2	54	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IN2	54	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)

▽ : Ground Points

Code	See Page	Ground Points Location
IL	52	Instrument Panel Brace RH

○ : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I3	54	Instrument Panel No.2 Wire			

