


Radio and Player

From Power Source System (See Page 62)

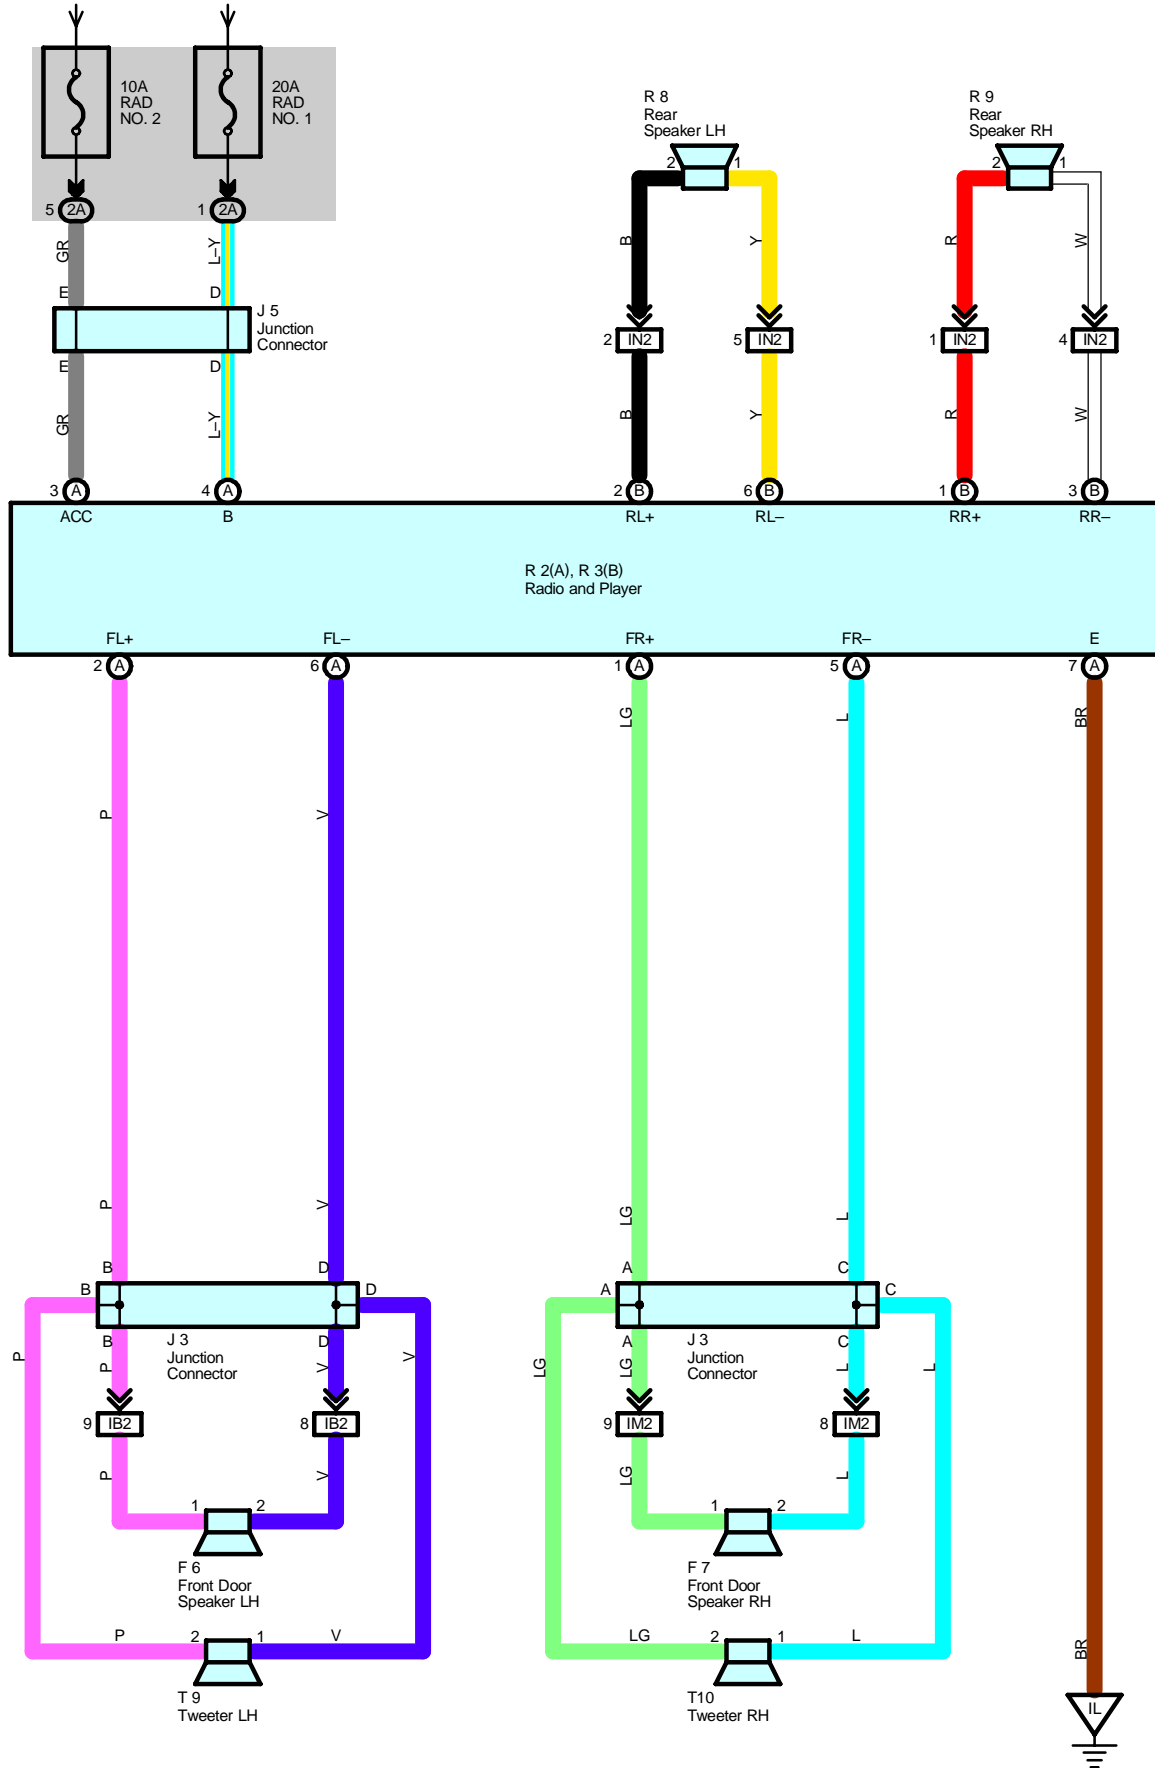

(Built-In Type Amplifier w/o TOYOTA Navigation System)

Service Hints

R2 (A) Radio and Player

(A) 3-Ground : Approx. 12 volts with ignition SW at ACC or ON position

(A) 4-Ground : Always approx. 12 volts

(A) 7-Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
F6	44	R2	A	43	
F7	44	R3	B	43	
J3	43	R8	45		
J5	43	R9	45		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2A	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB2	52	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IM2	54	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IN2	54	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)

▽ : Ground Points

Code	See Page	Ground Points Location
IL	52	Instrument Panel Brace RH