


Remote Control Mirror

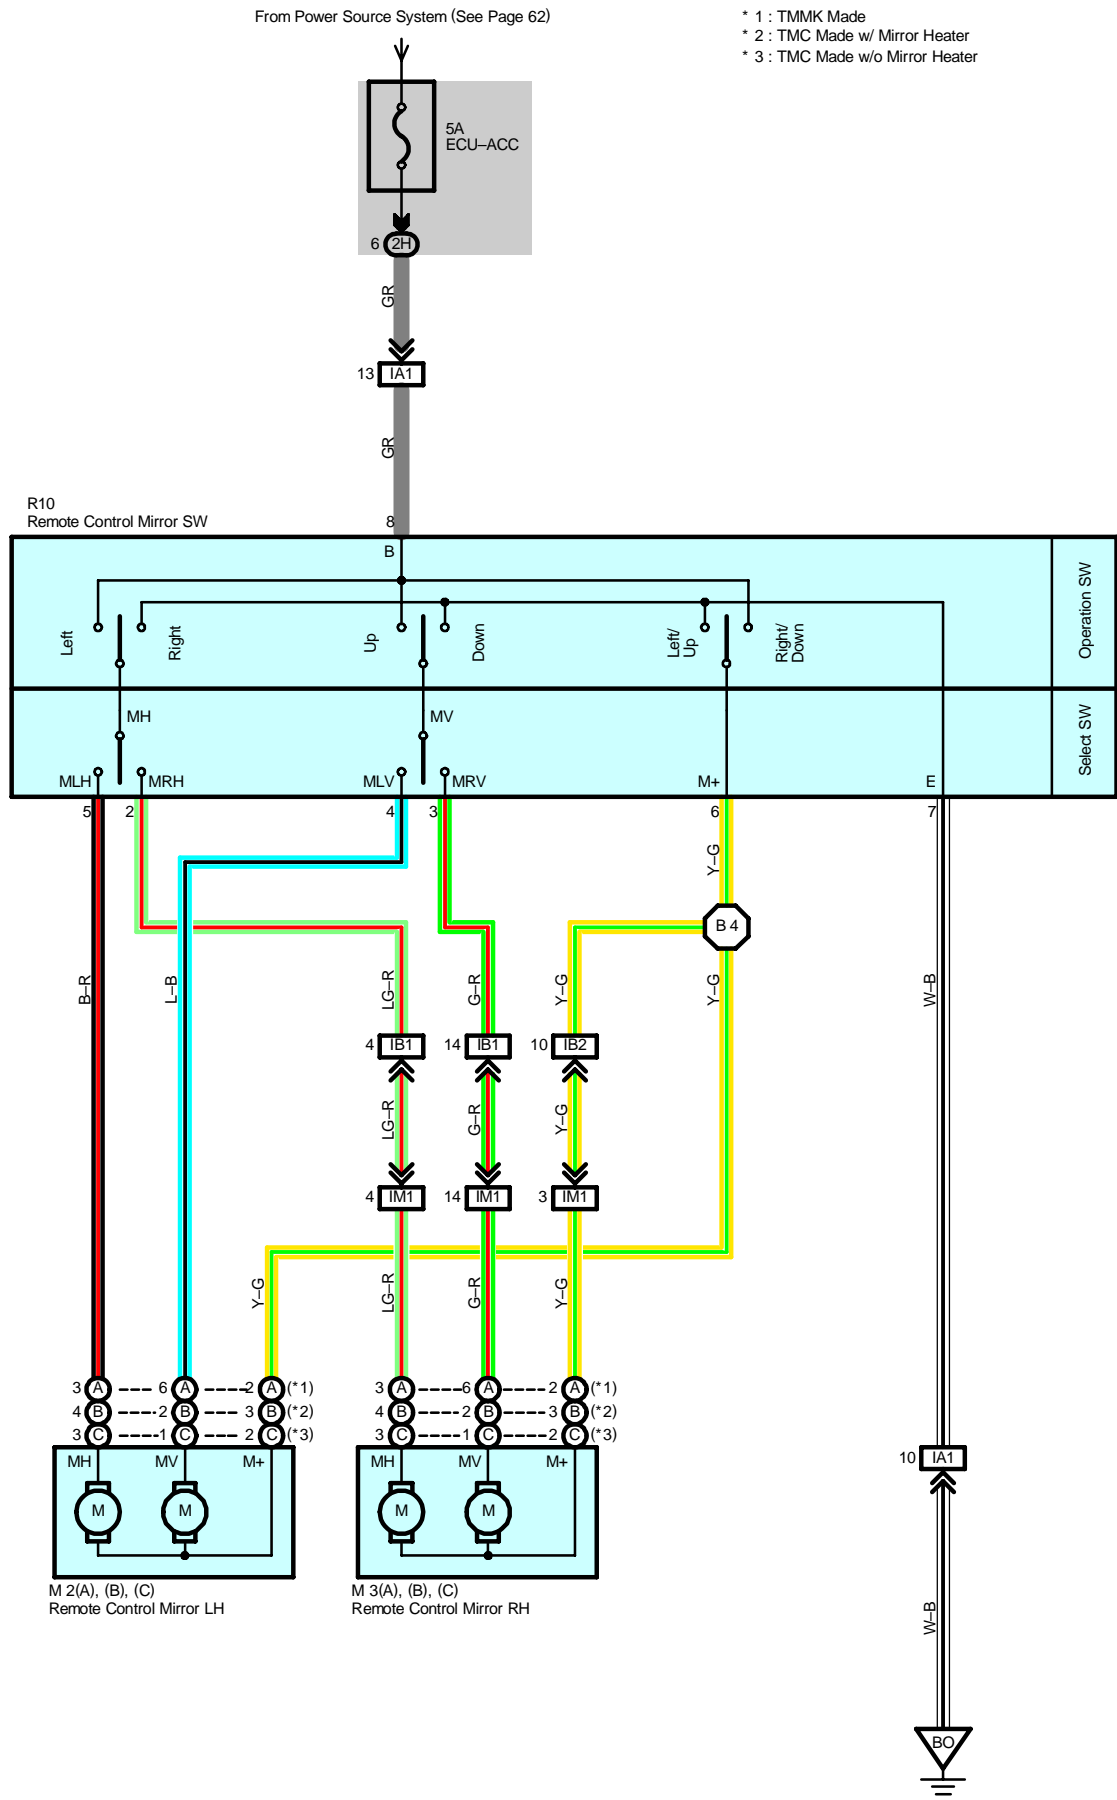

Service Hints

R10 Remote Control Mirror SW

8-Ground : Approx. 12 volts with ignition SW at ACC or ON position

7-Ground : Always continuity

8-6 : Continuity with the operation SW at DOWN or RIGHT position

6-7 : Continuity with the operation SW at UP or LEFT position

: Parts Location

Code	See Page	Code	See Page	Code	See Page
M2	A	45	M3	A	45
	B	45		B	45
	C	45		C	45
				R10	45

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2H	28	Floor Wire and Driver Side J/B (Lower Finish Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	52	Front Door LH Wire and Floor Wire (Left Kick Panel)
IB1	52	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IB2		Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IM1	54	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)

: Ground Points

Code	See Page	Ground Points Location
BO	56	Under the Driver's Seat

: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B4	56	Front Door LH Wire			