


Seat Heater

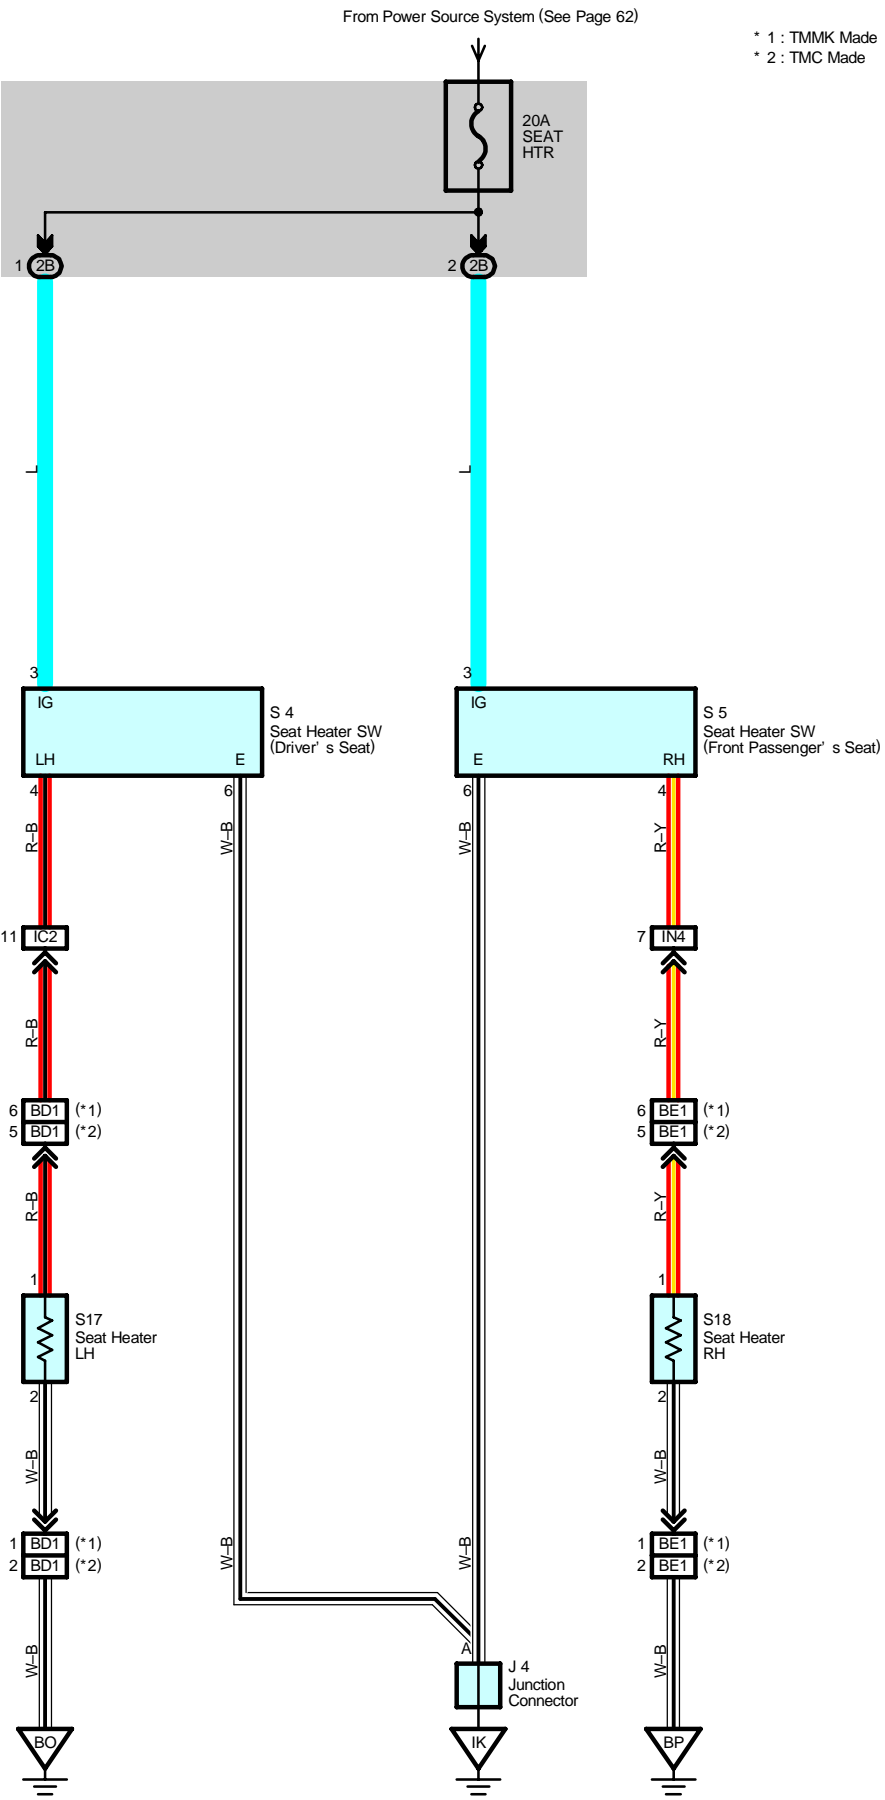

Service Hints

S4 Seat Heater SW (Driver's Seat)

3-Ground : Approx. 12 volts with ignition SW at ON or ST position

6-Ground : Always continuity

S5 Seat Heater SW (Front Passenger's Seat)

3-Ground : Approx. 12 volts with ignition SW at ON or ST position

6-Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
J4	43	S5	43	S18	46
S4	43	S17	46		

□ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2B	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC2	52	Instrument Panel Wire and Floor Wire (Left Kick Panel)
IN4	54	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
BD1	58	Floor Wire and Front Seat LH Wire (Under the Driver's Seat)
BE1	58	Floor No.2 Wire and Front Seat RH Wire (Under the Front Passenger's Seat)

▽ : Ground Points

Code	See Page	Ground Points Location
IK	52	Instrument Panel Brace LH
BO	56	Under the Driver's Seat
BP	56	Under the Front Passenger's Seat