



Starting and Ignition (2AZ-FE)

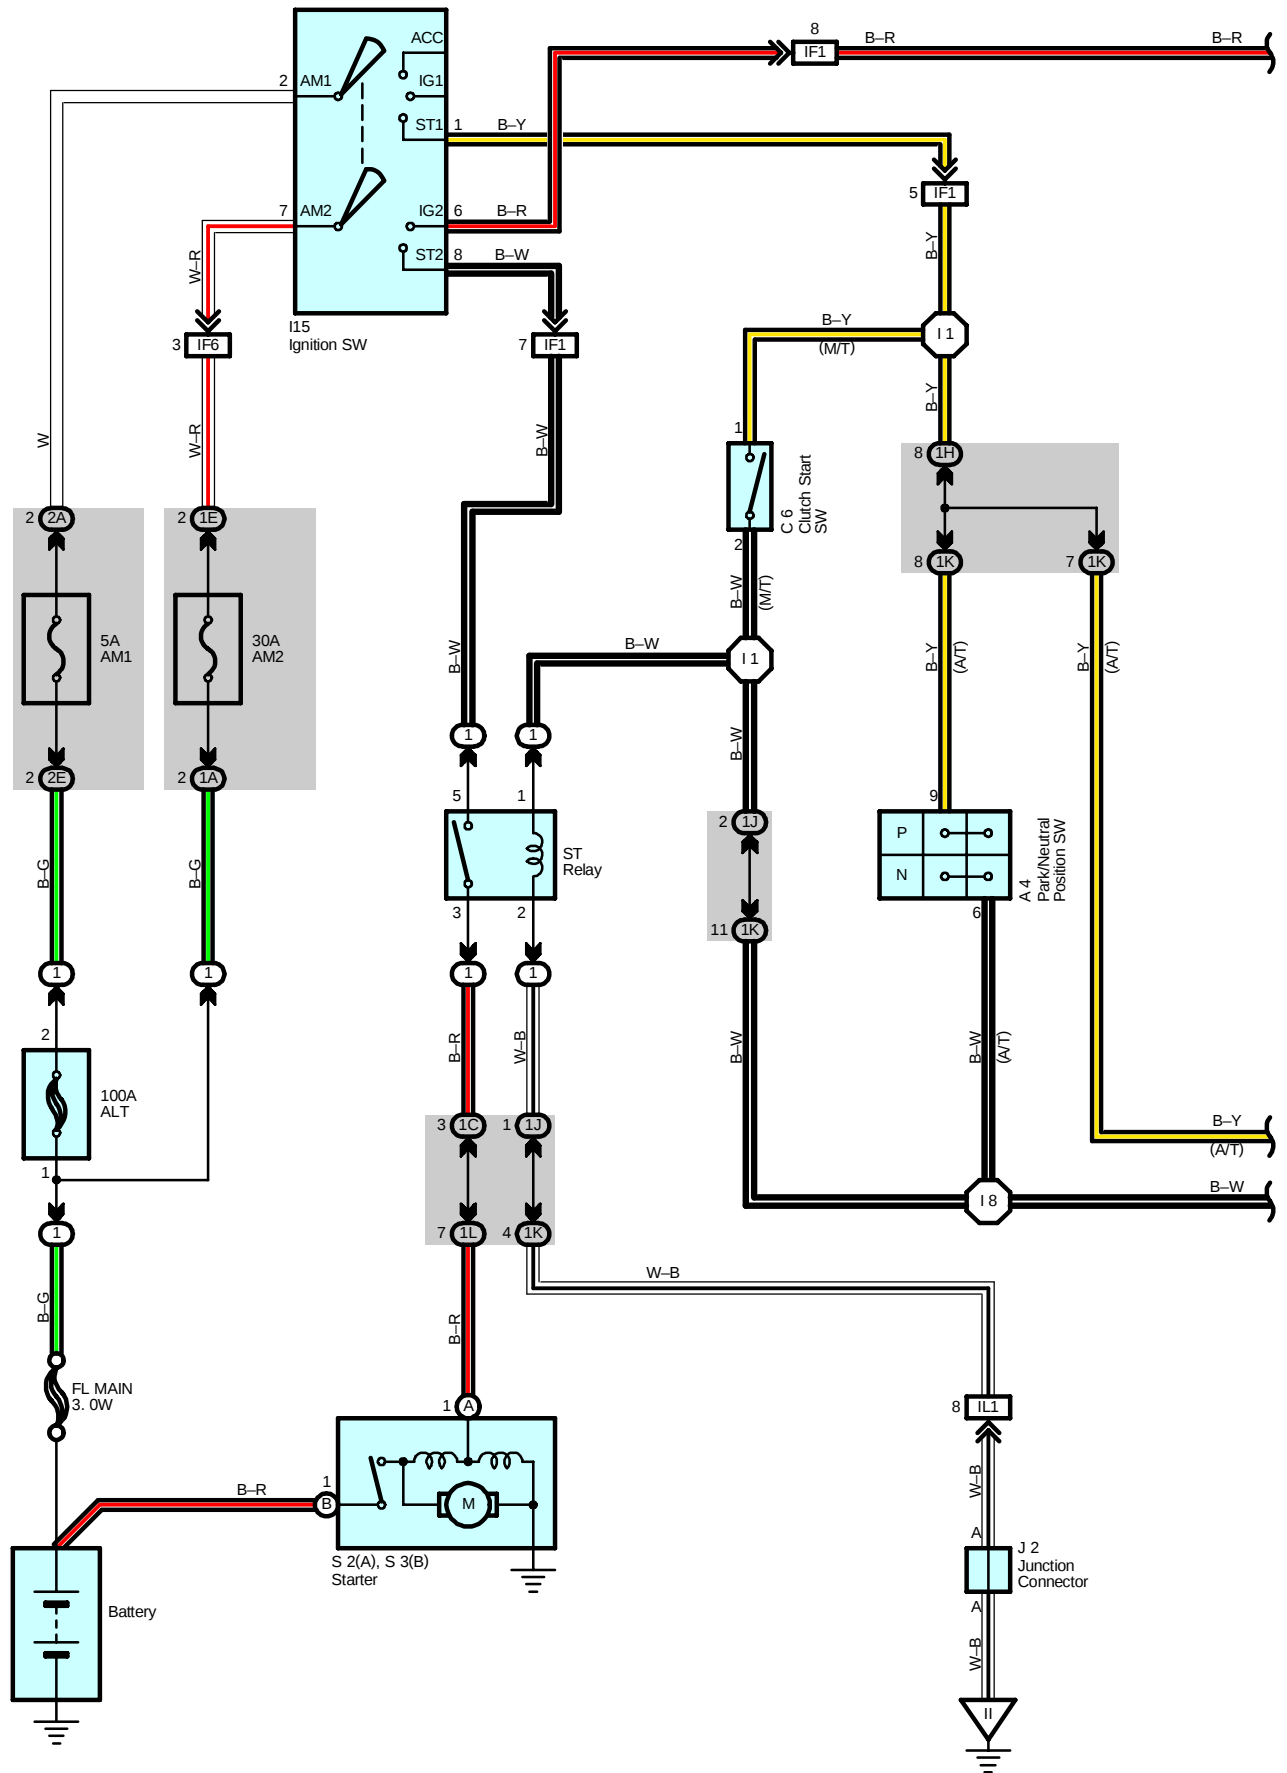

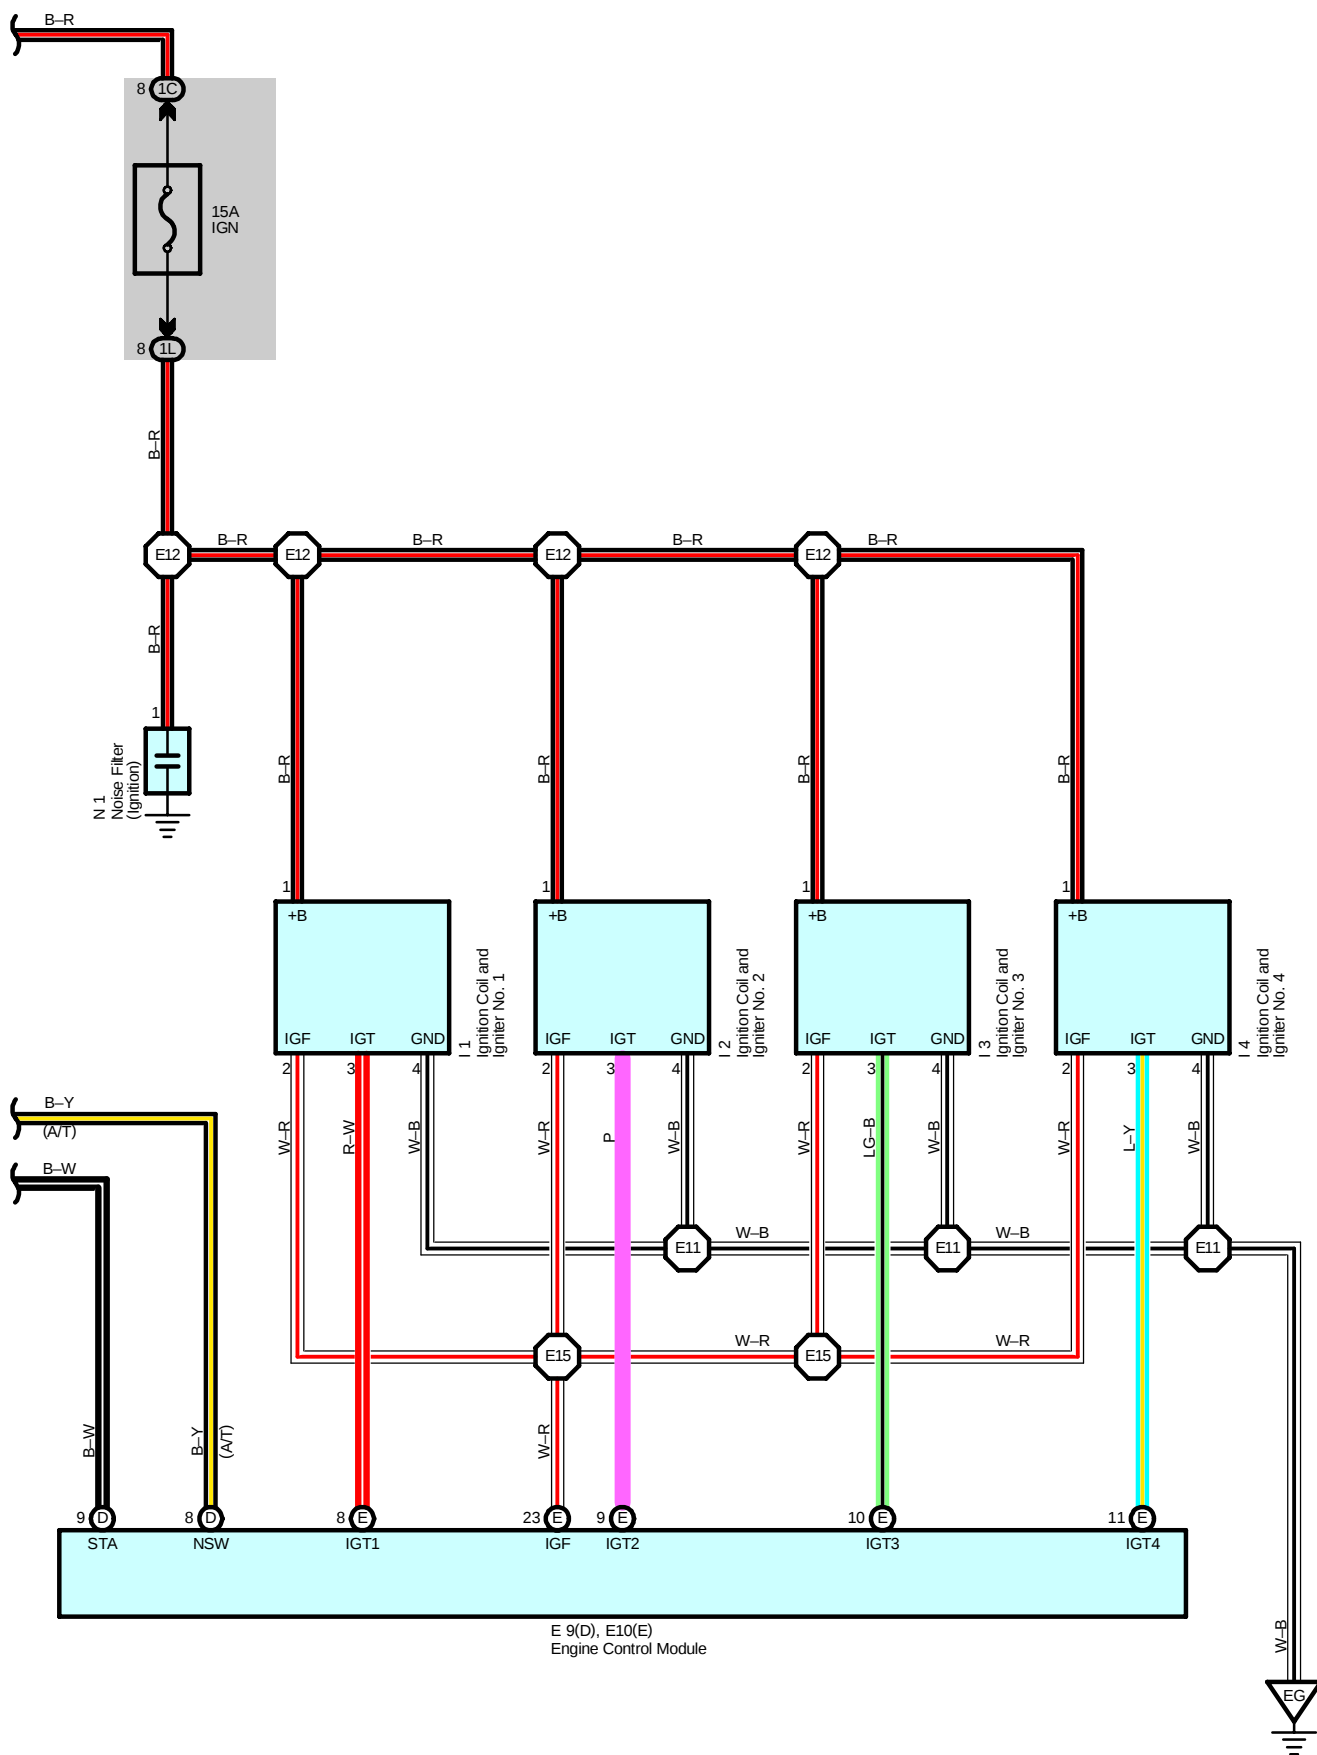

Starting and Ignition (2AZ-FE)

Service Hints

I15 Ignition SW

- 2-1 : Closed with the ignition SW at ST position
- 7-6 : Closed with the ignition SW at ON or ST position
- 7-8 : Closed with the ignition SW at ST position

A4 Park/Neutral Position SW (A/T)

- 9-6 : Closed with the A/T shift lever in P or N position

S2 (A), S3 (B) Starter

- Point closed with the Park/Neutral position SW at P or N position and the ignition SW at ST position (A/T)
- Point closed with the clutch start SW on and the ignition SW at ST position (M/T)

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A4	40 (2AZ-FE)	I2	41 (2AZ-FE)	N1	41 (2AZ-FE)
C6	42	I3	41 (2AZ-FE)	S2	41 (2AZ-FE)
E9	42	I4	41 (2AZ-FE)	S3	41 (2AZ-FE)
E10	42	I15	43		
I1	41 (2AZ-FE)	J2	43		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1A	25	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1C		
1E		
1H		
1J		
1K	25	Engine Wire and Engine Room J/B (Engine Compartment Left)
1L		
2A	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2E	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF1	52	Engine Room Main Wire and Instrument Panel Wire (Right Side of Steering Column Tube)
IF6		
IL1	54	Engine Wire and Instrument Panel Wire (Behind the Glove Box)

▽ : Ground Points

Code	See Page	Ground Points Location
EG	50 (2AZ-FE)	Left Side of Cylinder Head
II	52	Cowl Side Panel LH

○ : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E11	50 (2AZ-FE)	Engine Wire	I1	54	Engine Room Main Wire
E12			I8	54	Engine Wire
E15					

