



Service Hints

TAIL Relay

5-3 : Closed with the light control SW at TAIL or HEAD position

C11 Combination SW

14-16 : Closed with the light control SW at TAIL or HEAD position

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
B6	A	F4	38 (1MZ-FE)	L1	45
C11	42		40 (2AZ-FE)	L2	45
F3	38 (1MZ-FE)	J4	43	R6	45
	40 (2AZ-FE)	J11	44	R7	45

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
1	22	Engine Room R/B (Engine Compartment Left)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2E	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
2G		
2K	28	Floor Wire and Driver Side J/B (Lower Finish Panel)

▽ : Ground Points

Code	See Page	Ground Points Location
EB	48 (1MZ-FE)	Right Fender
	50 (2AZ-FE)	
EC	48 (1MZ-FE)	Left Fender
	50 (2AZ-FE)	
IK	52	Instrument Panel Brace LH
BQ	56	Front Side of Rear Quarter Wheel House LH
BS	56	Lower Back Panel Center

○ : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B3	56	Floor Wire	B10	56	Floor Wire
B8			B11		
B9					