


Theft Deterrent and Door Lock Control


From Power Source System (See Page 62)

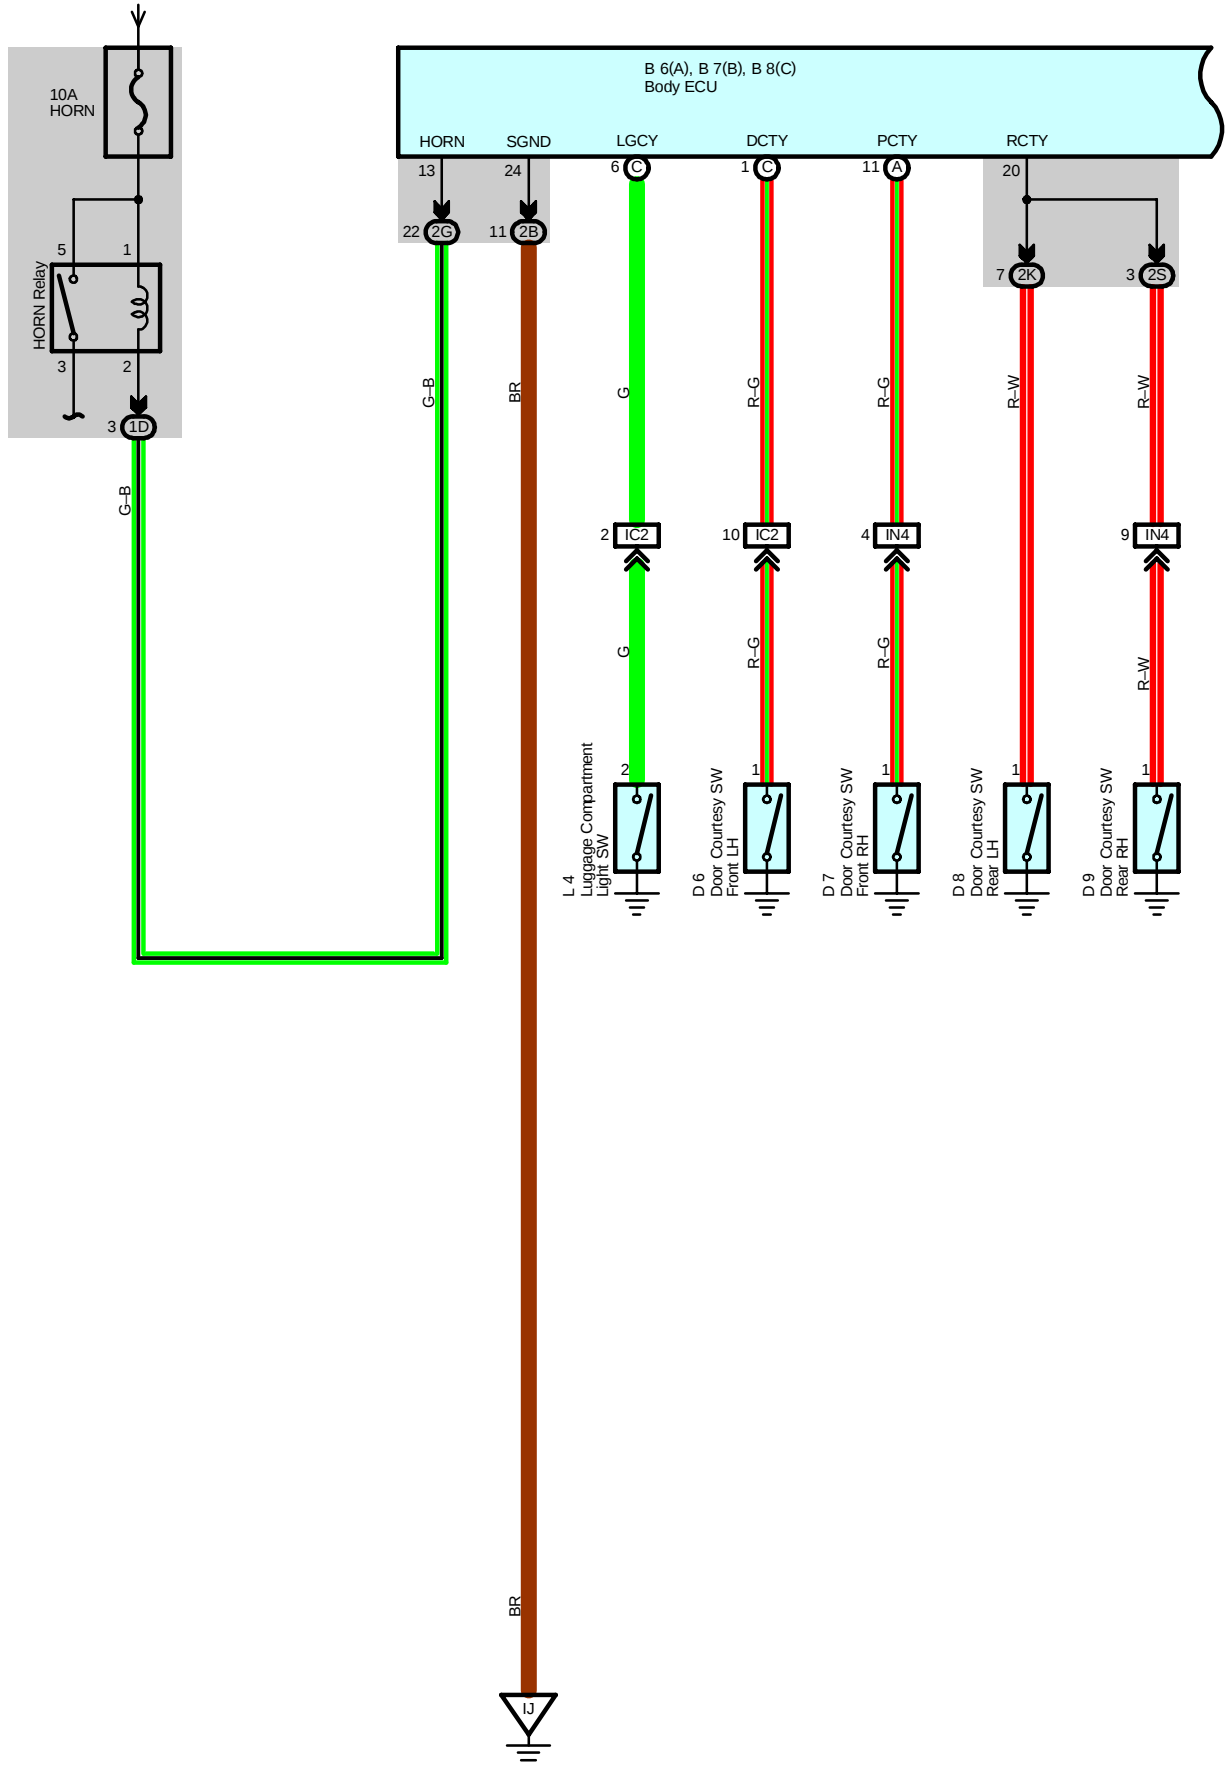


* 1 : Automatic A/C
* 2 : Manual A/C


* 3 : w/ Theft Deterrent System
* 4 : w/o Theft Deterrent System

* 5 : TMMK Made
* 6 : TMC Made

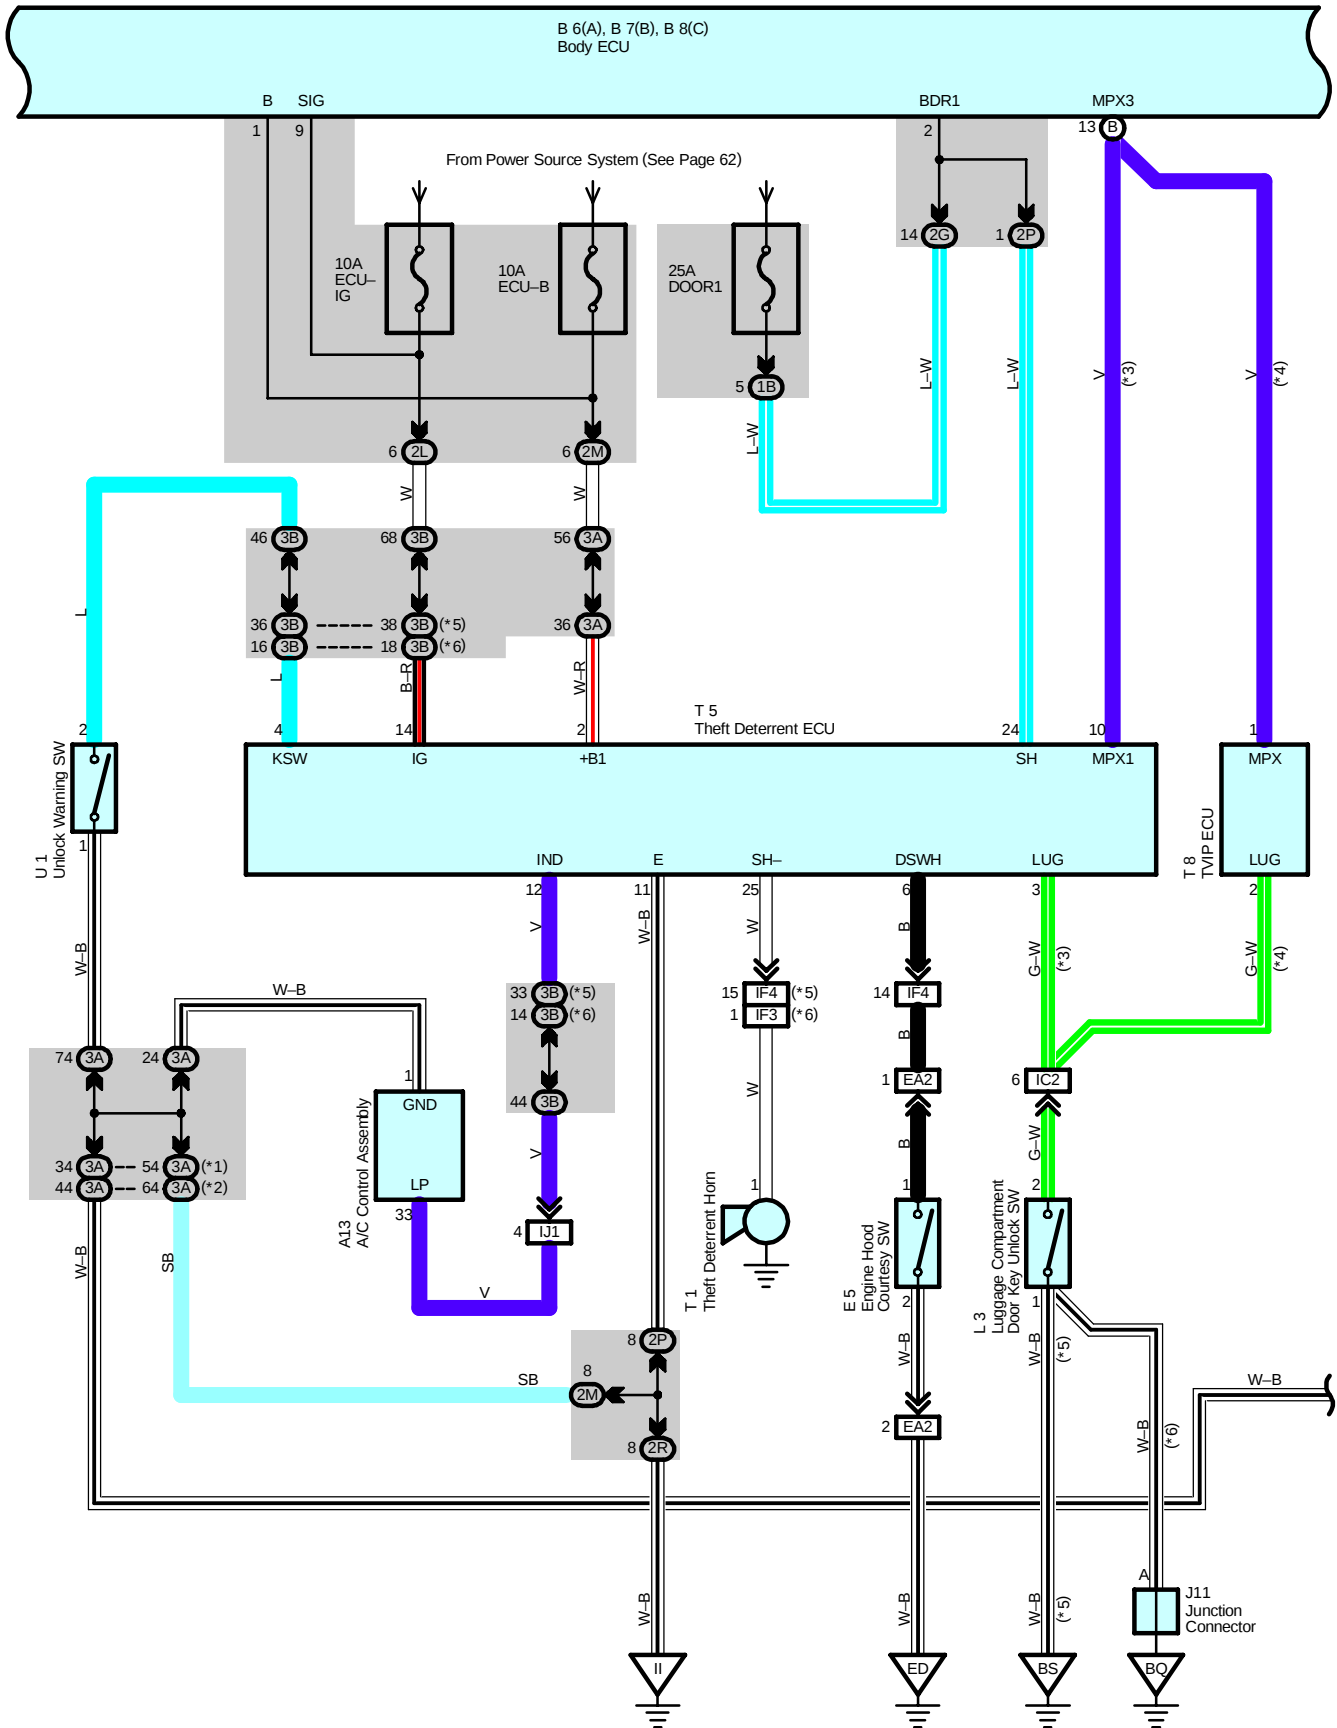

Theft Deterrent and Door Lock Control

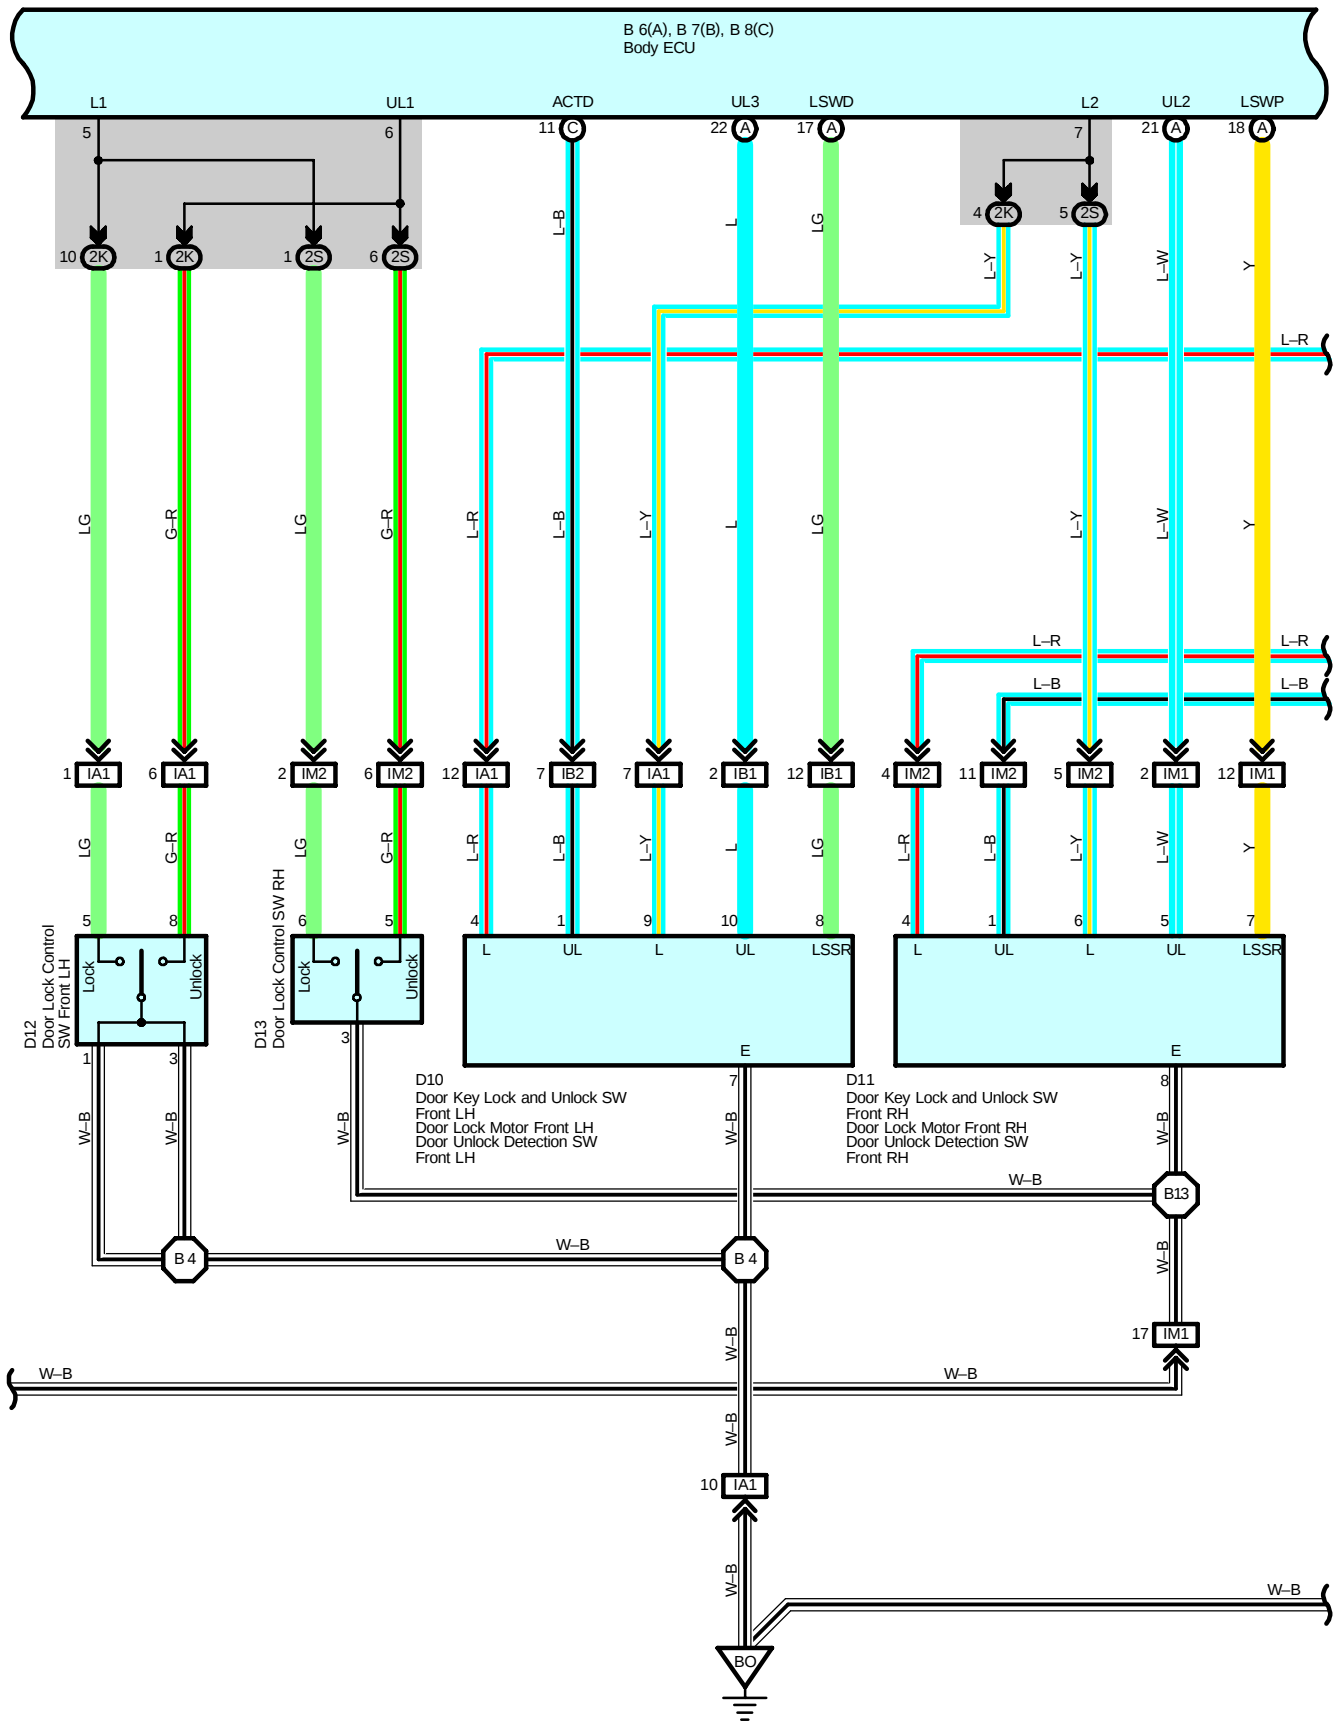

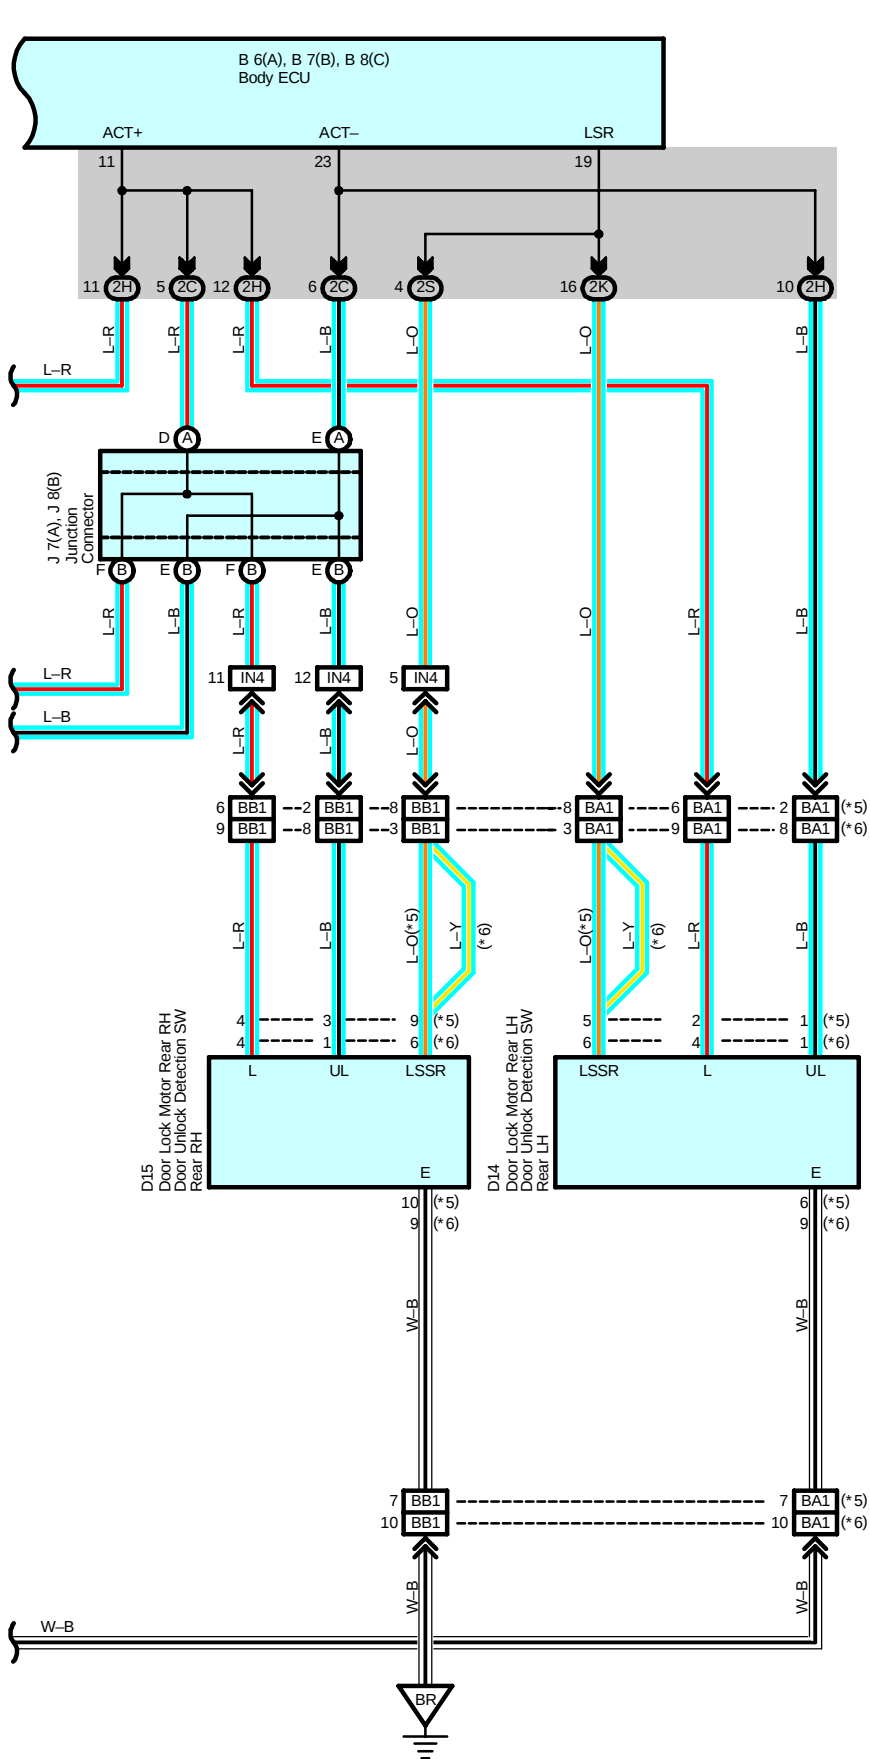

* 5 : TMMK Made
 * 6 : TMC Made

Theft Deterrent and Door Lock Control

System Outline

1. Manual Unlock Operation

When the door lock control SW of the driver's or passenger's side door is pushed to UNLOCK, the door lock will unlock.

2. Manual Lock Operation

When the door lock control SW of the driver's or passenger's side door is pushed to LOCK, the door lock will lock.

3. Door Key Unlock Operation

* Unlock operation from driver's side door

When the driver's side door is unlocked once using the ignition key, only the driver's side door is unlocked. If this operation is repeated within 3 seconds, all the other doors are unlocked.

* Unlock operation from front passenger's side door

When the front passenger's side door is unlocked using the ignition key, all the other doors are unlocked, too.

Service Hints

Body ECU

9-Ground : Approx. 12 volts with ignition SW at ON or ST position

24-Ground : Always continuity

1, 2-Ground : Always approx. 12 volts

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A13	42	D11	44	J11	44
B6	A 42	D12	44	L3	45
B7	B 42	D13	44	L4	45
B8	C 42	D14	44	T1	39 (1MZ-FE)
D6	44	D15	44		41 (2AZ-FE)
D7	44	E5	38 (1MZ-FE)	T5	43
D8	44		40 (2AZ-FE)	T8	43
D9	44	J7	A 43	U1	43
D10	44	J8	B 43		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	25	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
1D		
2B	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2C		
2G	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
2H	28	Floor Wire and Driver Side J/B (Lower Finish Panel)
2K		
2L	29	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2M		
2P		
2R		
2S		
3A	34 (*1)	Instrument Panel Wire and Passenger Side J/B (Instrument Panel Brace RH)
	35 (*3)	
	36 (*2)	
	37 (*4)	
3B	34 (*1)	
	35 (*3)	
	36 (*2)	
	37 (*4)	

* 1 : TMC Made Automatic A/C * 2 : TMC Made Manual A/C * 3 : TMMK Made Automatic A/C * 4 : TMMK Made Manual A/C

 : **Connector Joining Wire Harness and Wire Harness**

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA2	48 (1MZ-FE)	Engine Room Main Wire and Engine Room No.2 Wire (Radiator Side Support LH)
	50 (2AZ-FE)	
IA1	52	Front Door LH Wire and Floor Wire (Left Kick Panel)
IB1	52	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IB2		
IC2	52	Instrument Panel Wire and Floor Wire (Left Kick Panel)
IF3	52	Engine Room Main Wire and Instrument Panel Wire (Right Side of Steering Column Tube)
IF4		
IJ1	54	Instrument Panel Wire and Instrument Panel Wire (Instrument Panel Reinforcement RH)
IM1	54	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IM2		
IN4	54	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
BA1	56	Rear Door LH Wire and Floor Wire (Left Center Pillar)
BB1	56	Rear Door RH Wire and Floor No.2 Wire (Right Center Pillar)

 : **Ground Points**

Code	See Page	Ground Points Location
ED	48 (1MZ-FE)	Left Fender
	50 (2AZ-FE)	
II	52	Cowl Side Panel LH
IJ	52	Instrument Panel Brace LH
BO	56	Under the Driver's Seat
BQ	56	Front Side of Rear Quarter Wheel House LH
BR	56	Front Side of Rear Quarter Wheel House RH
BS	56	Lower Back Panel Center

 : **Splice Points**

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B4	56	Front Door LH Wire	B13	56	Front Door RH Wire