




TOYOTA Navigation System, Radio and Player

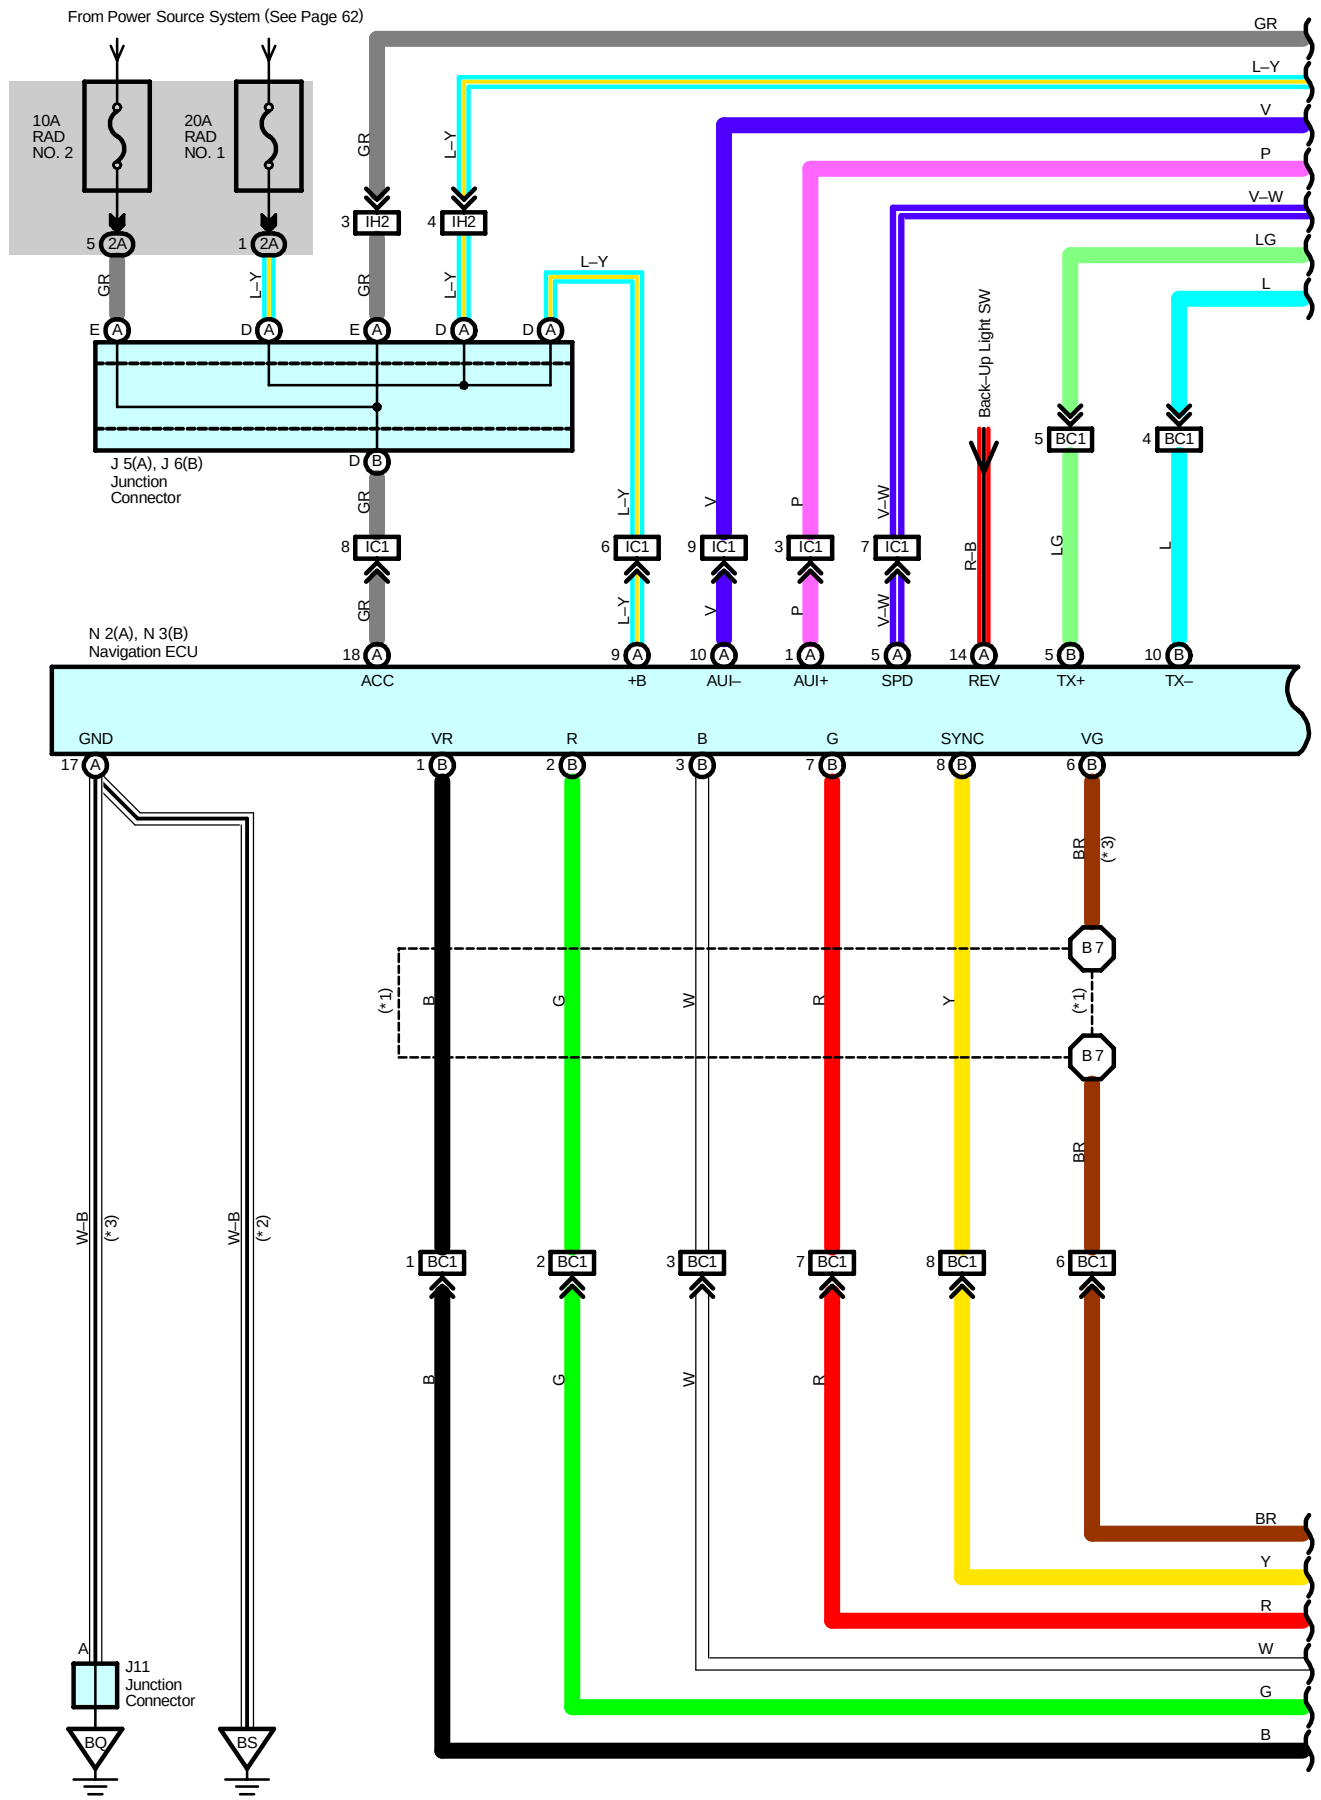

TOYOTA Navigation System, Radio and Player

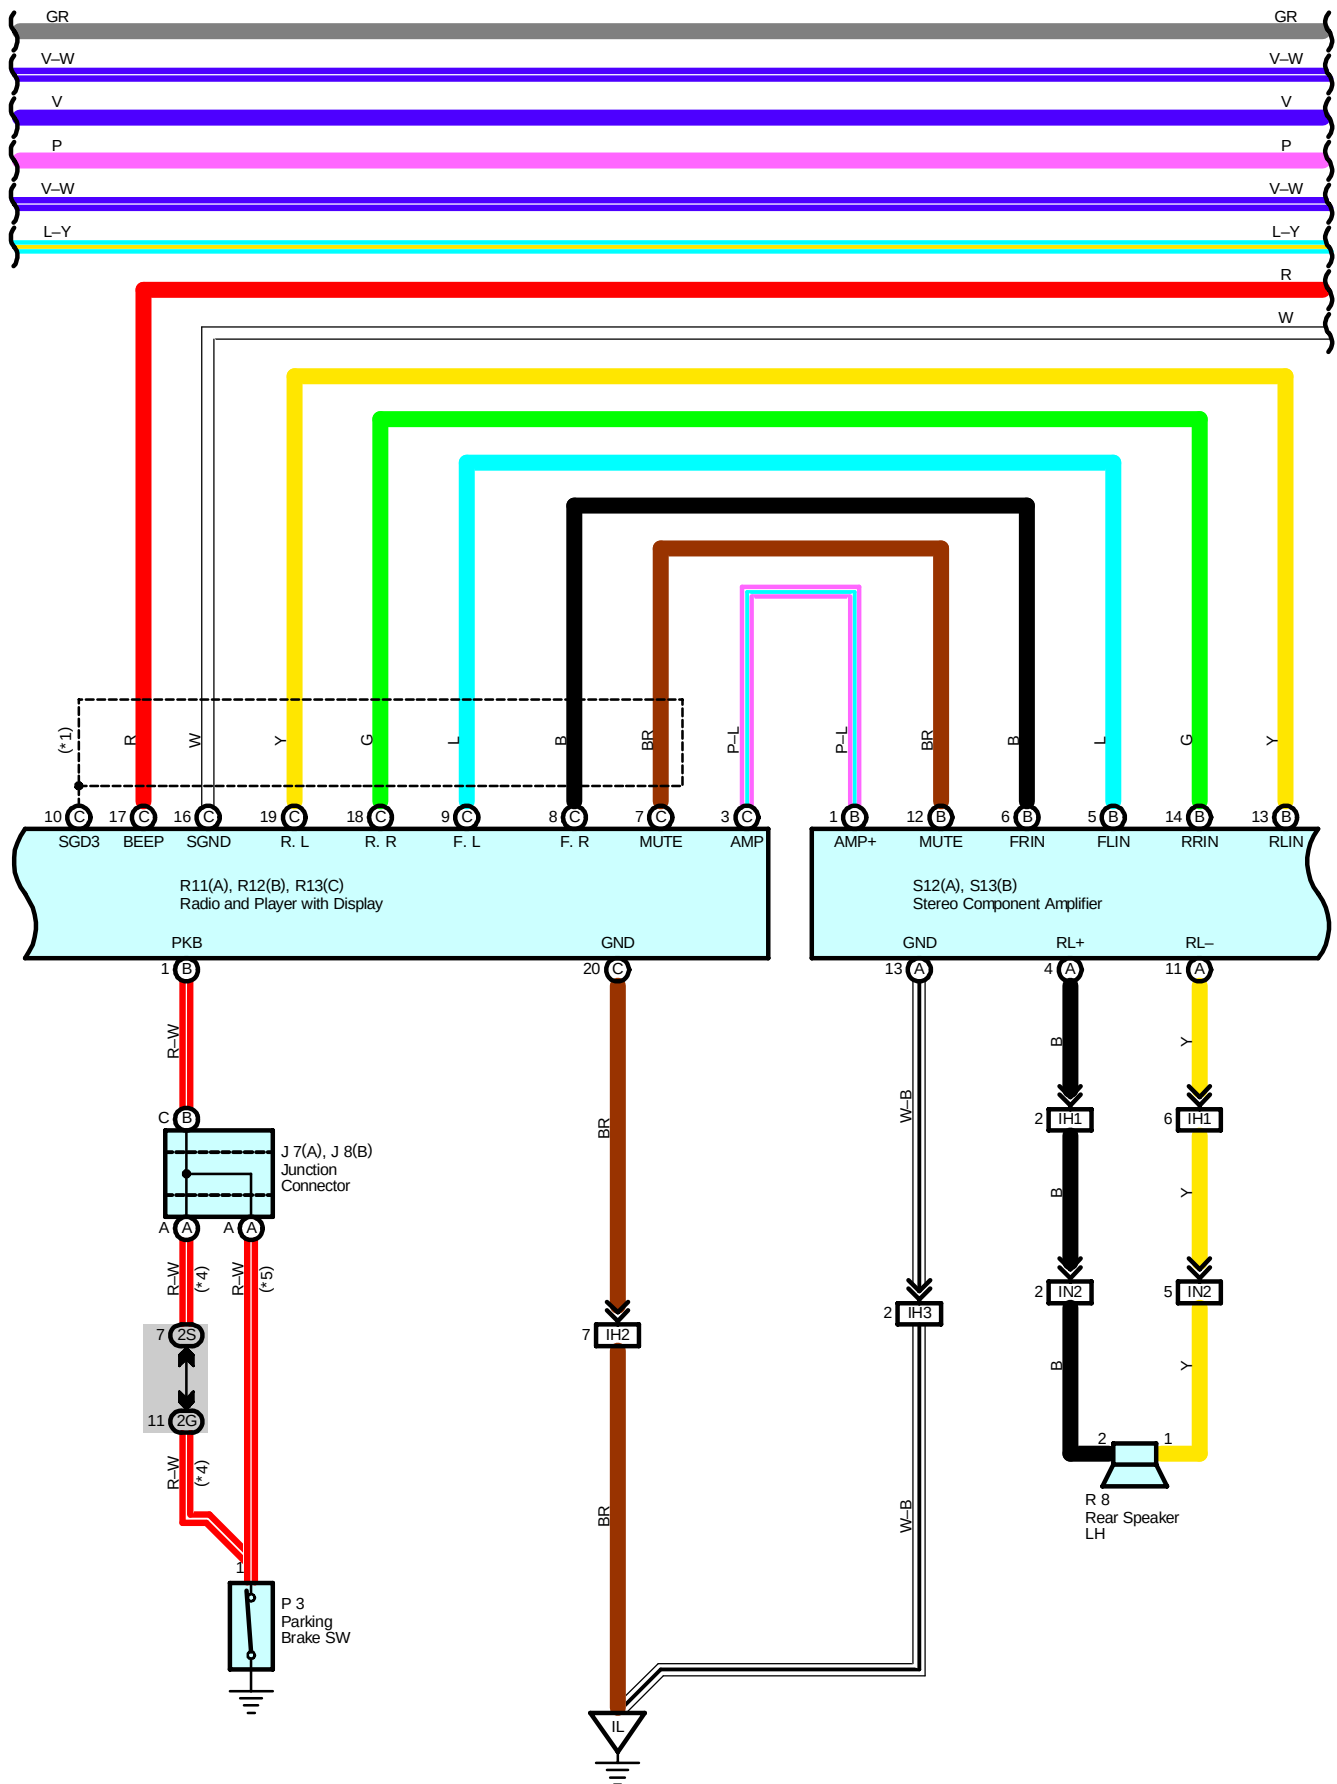

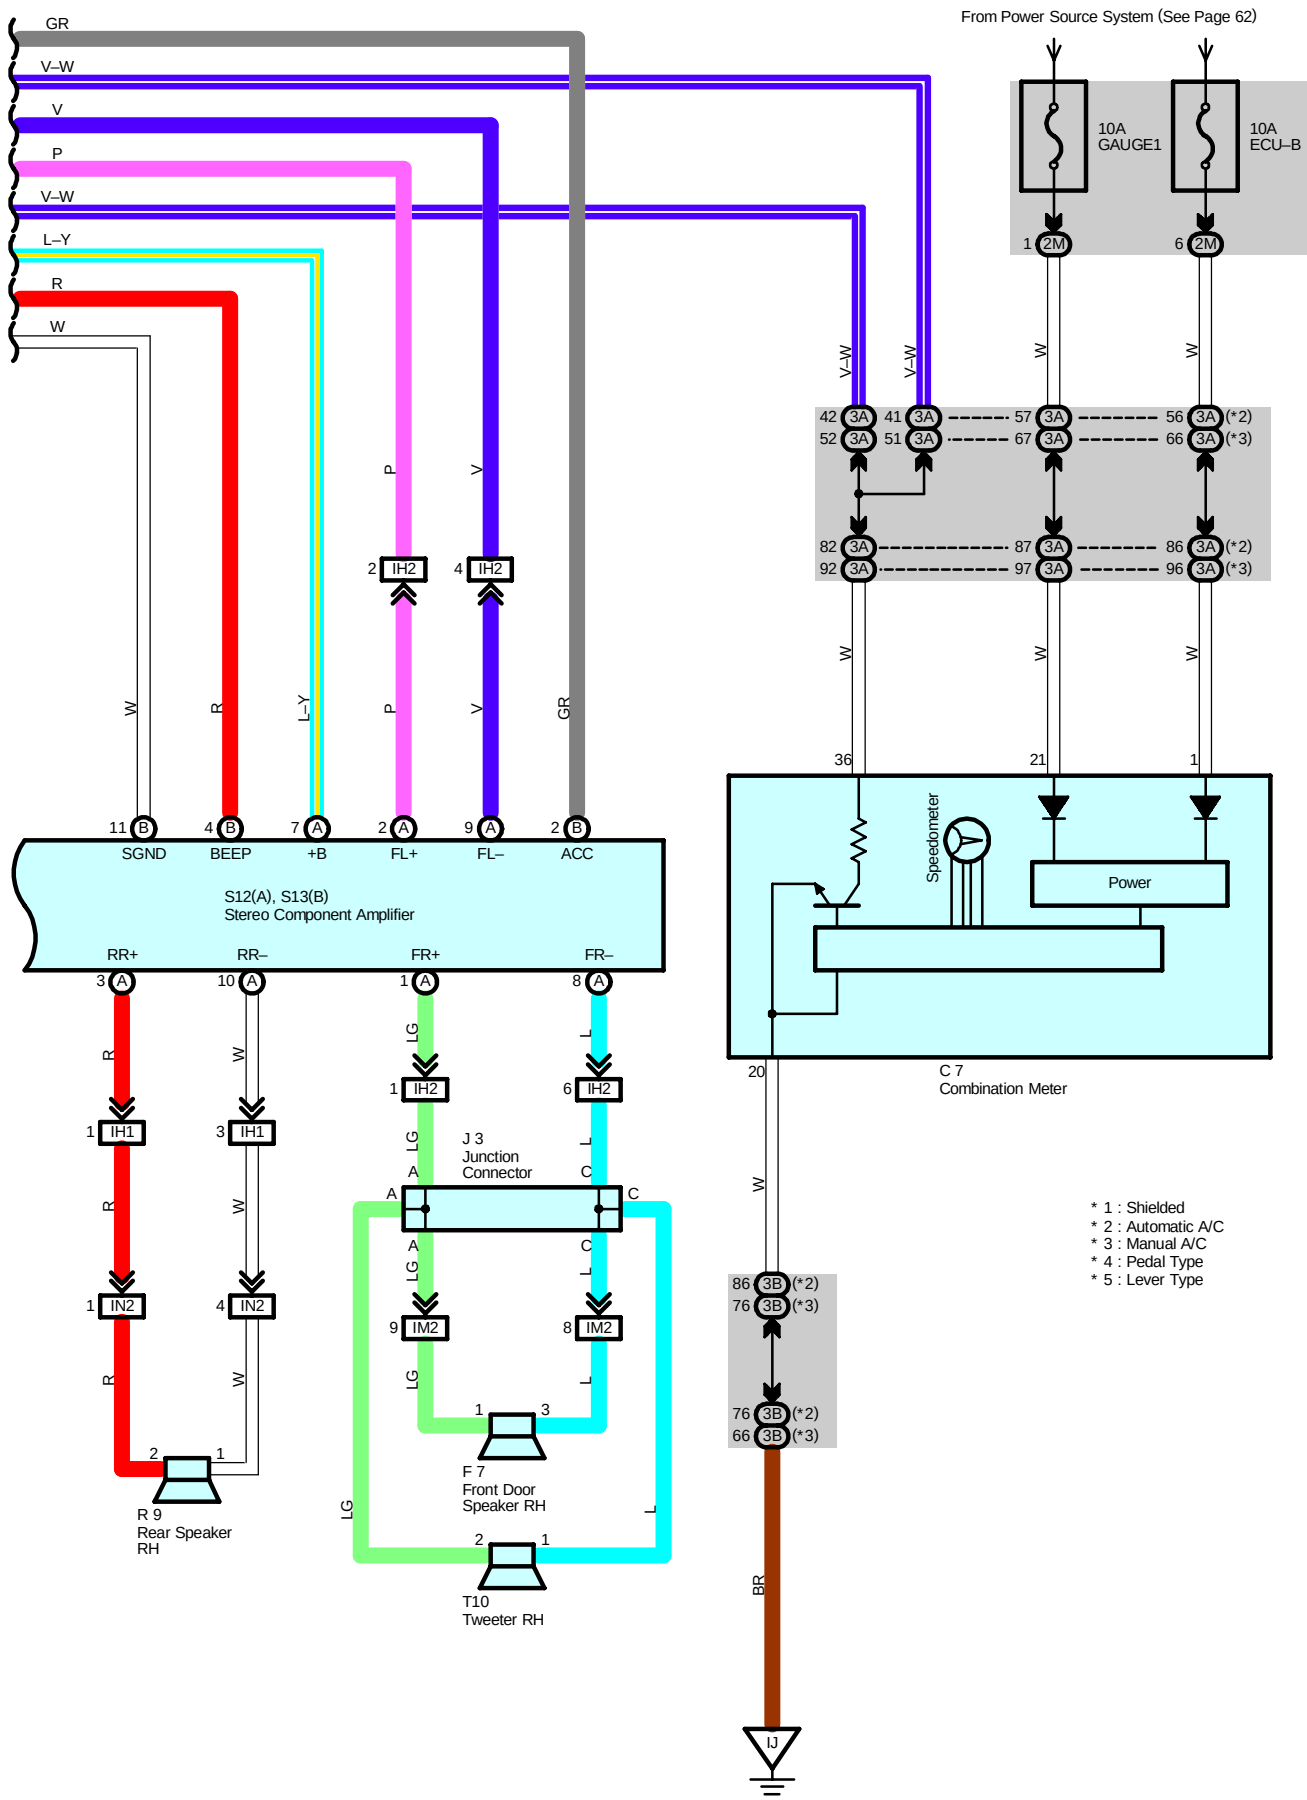

TOYOTA Navigation System, Radio and Player

System Outline

The TOYOTA navigation system displays the operating status and instructions for the radio and player. Additionally, the navigation system precisely measures the current vehicle position, displays the map obtained from the map database on the screen, and informs the route to the destination shown on the map using voice guidance.

Service Hints

N2 (A) Navigation ECU

(A)18–Ground : Approx. 12 volts with ignition SW at ON or ACC position

(A) 9–Ground : Always approx. 12 volts

(A)17–Ground : Always continuity

○ : Parts Location

Code		See Page		Code		See Page		Code		See Page	
C7		42		J8	B	43		R11	A	42	
F6		44		J11		44		R12	B	42	
F7		44		N2	A	45		R13	C	42	
J3		43		N3	B	45		S12	A	43	
J5	A	43		P3		43		S13	B	43	
J6	B	43		R8		45		T9		43	
J7	A	43		R9		45		T10		43	

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2A	28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2G	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
2M	29	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2S		
3A	34 (*1)	Instrument Panel Wire and Passenger Side J/B (Instrument Panel Brace RH)
	35 (*3)	
	36 (*2)	
	37 (*4)	
3B	34 (*1)	
	35 (*3)	
	36 (*2)	
	37 (*4)	

* 1 : TMC Made Automatic A/C * 2 : TMC Made Manual A/C * 3 : TMMK Made Automatic A/C * 4 : TMMK Made Manual A/C

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IB2	52	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IC1	52	Instrument Panel Wire and Floor Wire (Left Kick Panel)
IH1	52	Instrument Panel Wire and Instrument Panel No.2 Wire (Instrument Panel Brace RH)
IH2		
IH3		
IM2	54	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IN1	54	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)
IN2		
BC1	56	Floor No.4 Wire and Floor No.2 Wire (Behind the Rear Passenger's Seat RH)



: Ground Points

Code	See Page	Ground Points Location
IJ	52	Instrument Panel Brace LH
IL	52	Instrument Panel Brace RH
BQ	56	Front Side of Rear Quarter Wheel House LH
BS	56	Lower Back Panel Center



: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
I3	54	Instrument Panel No.2 Wire	B12	56	Floor No.2 Wire
I9	54	Instrument Panel Wire	B14		
B7	56	Floor No.4 Wire			