



Service Hints

T7 Turn Signal Flasher Relay

- 1-Ground : Approx. 12 volts with ignition SW at ON or ST position
- 4-Ground : Always approx. 12 volts
- 7-Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A13	42	F4	38 (1MZ-FE)	J6	B 43
C7	42		40 (2AZ-FE)	R6	45
C11	42	H10	43	R7	45
F3	38 (1MZ-FE)	J2	43	T7	43
	40 (2AZ-FE)	J5	A 43		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
1B	25	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)
2G	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
2K	28	Floor Wire and Driver Side J/B (Lower Finish Panel)
2M	29	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2N		
2R		
3A	34 (*1)	Instrument Panel Wire and Passenger Side J/B (Instrument Panel Brace RH)
	35 (*3)	
	36 (*2)	
	37 (*4)	

* 1 : TMC Made Automatic A/C * 2 : TMC Made Manual A/C * 3 : TMMK Made Automatic A/C * 4 : TMMK Made Manual A/C

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF3	52	Engine Room Main Wire and Instrument Panel Wire (Right Side of Steering Column Tube)

▽ : Ground Points

Code	See Page	Ground Points Location
EB	48 (1MZ-FE)	Right Fender
	50 (2AZ-FE)	
EC	48 (1MZ-FE)	Left Fender
	50 (2AZ-FE)	
II	52	Cowl Side Panel LH
BQ	56	Front Side of Rear Quarter Wheel House LH
BS	56	Lower Back Panel Center

○ : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B11	56	Floor Wire			