


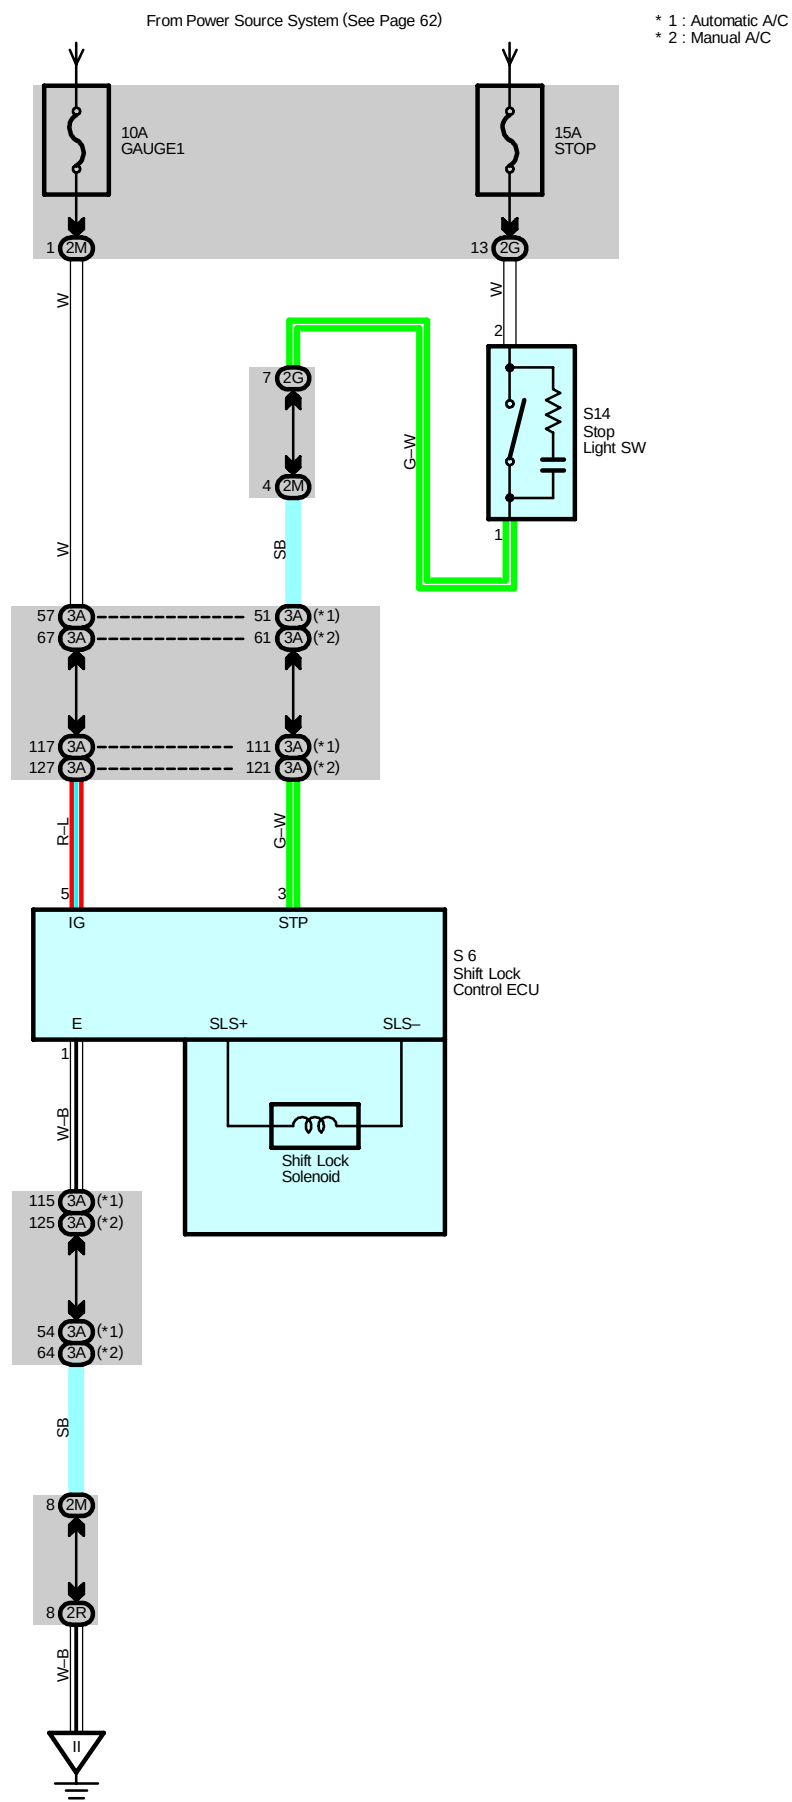

System Outline

Shift Lock Mechanism

If the brake pedal is depressed with the ignition SW set at ON (The stop light SW is on), the shift lock control ECU is activated, allowing the driver to change the shift lever to a position other than the P position.

Service Hints

S6 Shift Lock Control ECU

5-Ground : Approx. 12 volts with ignition SW at ON or ST position

1-Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
S6	43	S14	43		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
2G	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)
2M	29	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)
2R		
3A	34 (*1)	Instrument Panel Wire and Passenger Side J/B (Instrument Panel Brace RH)
	35 (*3)	
	36 (*2)	
	37 (*4)	

* 1 : TMC Made Automatic A/C * 2 : TMC Made Manual A/C * 3 : TMMK Made Automatic A/C * 4 : TMMK Made Manual A/C

▽ : Ground Points

Code	See Page	Ground Points Location
II	52	Cowl Side Panel LH