




\* 1 : Automatic A/C \* 2 : Manual A/C

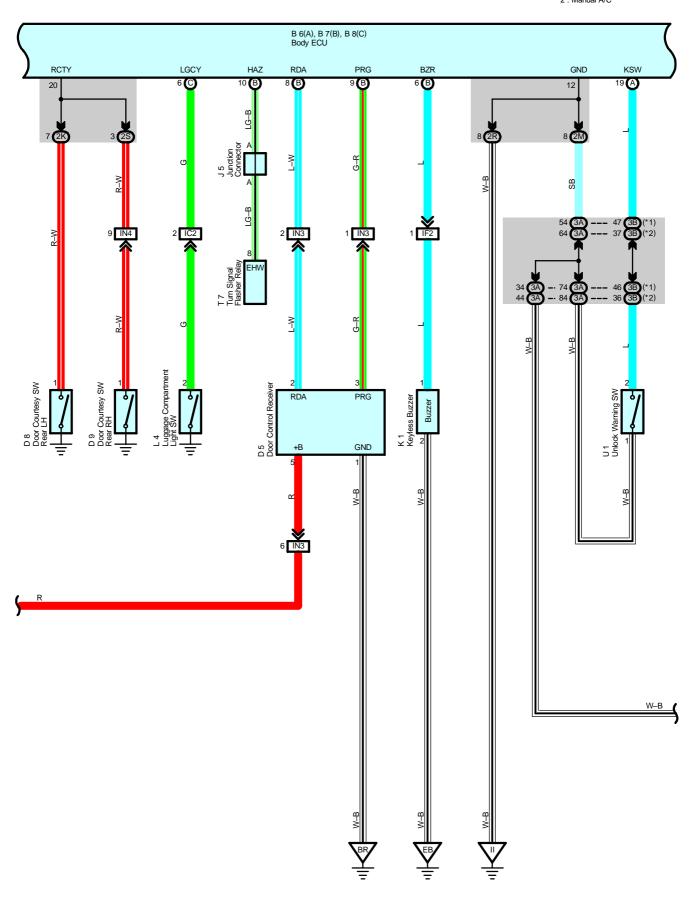

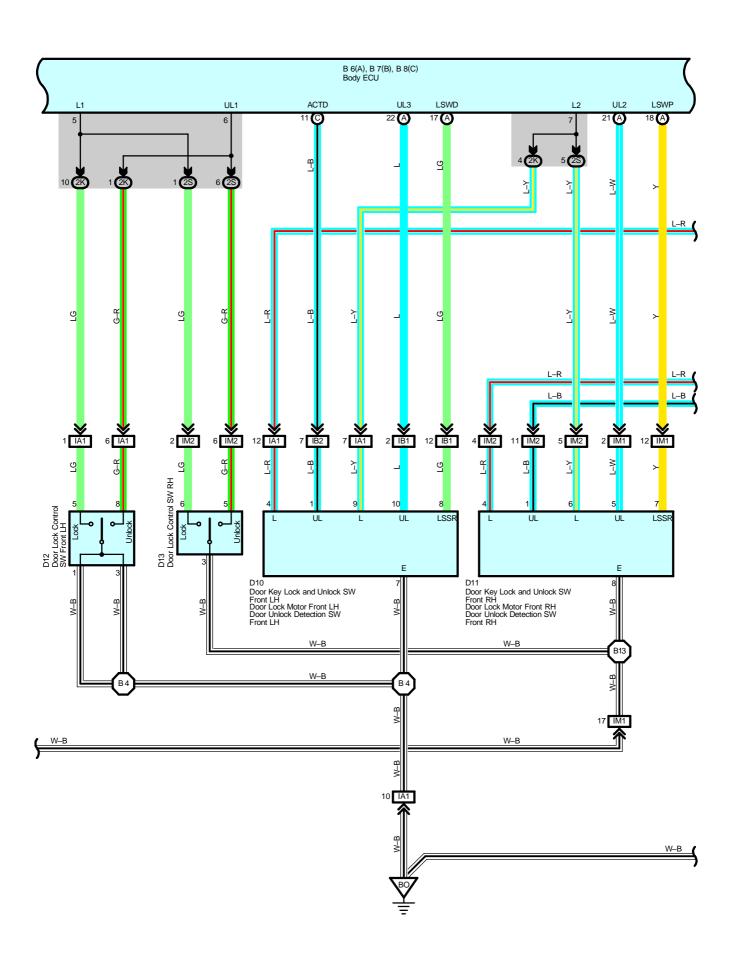

\* 3 : TMMK Made \* 4 : TMC Made



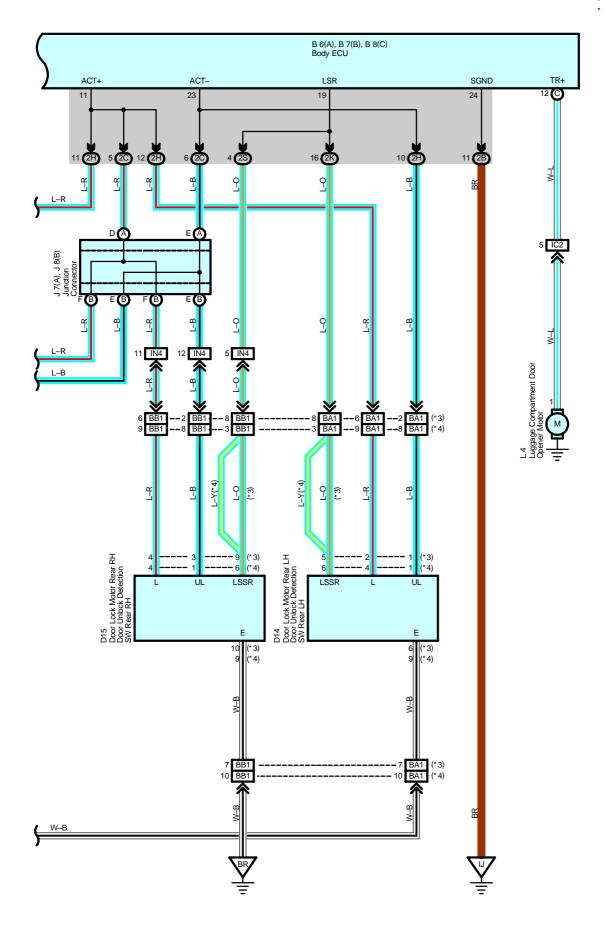

# Wireless Door Lock Control

#### **System Outline**

Door lock control (Lock and unlock) and panic control (Theft alarm and flash) is performed by remote control, without the ignition key inserted in the door key cylinder, using low–power electrical waves emitted by a transmitter.

#### 1. Wireless Door Lock or Unlock Normal Operation

With the ignition key not inserted into the ignition key cylinder (Unlock warning SW off) and all the doors completely closed, when the lock or unlock button (Transmitter) is pushed, the door control receiver receives the electrical waves from the transmitter, and sends a signal to the body ECU, causing it to operate.

As a result, the body ECU judges whether the door is locked or unlocked based on the signal from the door lock motor and door unlock detection SW, and sends a signal to switch the condition from lock to unlock or vice versa, causing the door lock motor to operate.

#### 2. Visual Confirmation of Lock or Unlock

If all doors indicate that they are locked after the lock command, turn signal light will flash once. If any door indicates that it is open after the unlock command, turn signal light will flash twice.

#### 3. Buzzer Sound Function

If all doors indicate that they are locked after the lock command, the keyless buzzer goes on once. If any door indicates that it is open after the unlock command, the keyless buzzer goes on twice.

#### 4. Illuminated Entry Function

When the body ECU detects the unlock state after the unlock operation has been made, it turns on the lights, such as the ignition key cylinder light and interior light for approx. 15 sec. If all the doors are locked during this operation, lighting is cancelled and the lights immediately fade out.

#### 5. Wireless Door Unlock Operation

Pushing the unlock button (Transmitter) once, driver's door is unlocked. Furthermore, pushing the button again within 3 seconds, the other doors are unlocked.

#### 6. Automatic Lock Operation

With the ignition key not inserted into the ignition key cylinder (Unlock warning SW off) and all the doors completely closed, after pushing the button (Transmitter) to unlock all the doors, if a door is not opened within 30 seconds, all the doors will be automatically relocked.

#### 7. Wireless Control Stop Function

If a door is open (Door courtesy SW on), a signal is input from the door courtesy SW to the body ECU stopping wireless door lock or unlock.

If the ignition key is in the ignition key cylinder (Unlock warning SW on), the unlock warning SW inputs a signal to the body ECU stopping wireless door lock or unlock.

### 8. Repeat Function

If the door lock or unlock condition does not change after wireless door lock or unlock operation, 2 seconds later, the body ECU sends current again to the door lock motor.

#### 9. Remote Panic Operation

Panic will function when doors are locked or unlocked, open or closed. When the panic button (Transmitter) is pushed once, theft alarm and horn sounds and turn signal light, headlights and taillight flash. Then, the panic or the unlock button (Transmitter) is pushed once more, sounding and flashing will stop. Panic will not function when ignition key is in ignition key cylinder.

#### **Service Hints**

#### D6, D7, D8, D9 Door Courtesy SW Front LH, RH, Rear LH, RH

1-Ground: Continuity with the door open

### **U1 Unlock Warning SW**

2-1: Continuity with the ignition key in the cylinder

#### **D5 Door Control Receiver**

5–Ground : Always approx. 12 volts 1–Ground : Always continuity

## : Parts Location

Co	ode	See Page	Co	de	See Page	Code		See Page
В6	Α	42	D1	10	44	J8	В	43
B7	В	42	D′	11	44	K1		39 (1MZ-FE)
B8	С	42	D1	12	44			41 (2AZ–FE)
D	5	44	D1	13	44	L4	4	45
D	06	44	D1	14	44	T7 43		43
D	)7	44	D15		44	U1		43
D	8	44	J5		43		•	
D	9	44	J7	Α	43			

## : Junction Block and Wire Harness Connector

0 1	0 0					
Code	See Page	Junction Block and Wire Harness (Connector Location)				
1B	25	Engine Room Main Wire and Engine Room J/B (Engine Compartment Left)				
2B	- 28	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)				
2C	20					
2G	28	Engine Room Main Wire and Driver Side J/B (Lower Finish Panel)				
2H	- 28	Floor Wire and Driver Side J/B (Lower Finish Panel)				
2K	20					
2M						
2R	29	Instrument Panel Wire and Driver Side J/B (Lower Finish Panel)				
2S	]					
	34 (*1)					
3A	35 (*3)					
SA	36 (*2)					
	37 (*4)	Instrument Denel Wire and December Cide I/D (Instrument Denel Bress DII)				
	34 (*1)	Instrument Panel Wire and Passenger Side J/B (Instrument Panel Brace RH)				
3B	35 (*3)					
	36 (*2)					
	37 (*4)					

\* 1 : TMC Made Automatic A/C \* 2 : TMC Made Manual A/C \* 3 : TMMK Made Automatic A/C \* 4 : TMMK Made Manual A/C

# : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)				
IA1	52	Front Door LH Wire and Floor Wire (Left Kick Panel)				
IB1	- 52	Front Door I I I Wire and Instrument Donal Wire (Left Viels Donal)				
IB2		Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)				
IC2	52	Instrument Panel Wire and Floor Wire (Left Kick Panel)				
IF2	52	Engine Room Main Wire and Instrument Panel Wire (Right Side of Steering Column Tube)				
IM1	E4	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)				
IM2	54					
IN3	E4	Instrument Denel Wire and Floor No 2 Wire (Dight Kiek Denel)				
IN4	54	Instrument Panel Wire and Floor No.2 Wire (Right Kick Panel)				
BA1	56	Rear Door LH Wire and Floor Wire (Left Center Pillar)				
BB1	56	Rear Door RH Wire and Floor No.2 Wire (Right Center Pillar)				

# : Ground Points

Code	See Page	Ground Points Location		
EB	48 (1MZ-FE)	Dight Fondor		
	50 (2AZ-FE)	Right Fender		
II	52	Cowl Side Panel LH		
IJ	52	Instrument Panel Brace LH		
ВО	56	Under the Driver's Seat		
BR	56	Front Side of Rear Quarter Wheel House RH		

# **Wireless Door Lock Control**

# $\bigcirc$

# : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B4	56	Front Door LH Wire	B13	56	Front Door RH Wire