

A H. W. Sams

PHOTOFACT PUBLICATION • CB-1

USE ONLY
IN THE LIBRARY
NOT TO BE LOANED

H. W. Sams

CITIZENS BAND
RADIO
MANUAL

VOLUME 1

Complete PHOTOFACT®
service data for 46 pop-
ular models . . . plus a
special text section on
CB servicing.

REFERENCE AND INTEREST ONLY
RADIO COOPERATIVE PARTS DIVISION
505 1ST AVE. NEW YORK, N.Y. 10013

\$3.50

\$4.40 IN CANADA

Cat. No. CB-1

FOR USE ONLY
IN THIS LIBRARY
NOT TO BE LOANED

Howard W. Sams

CITIZENS BAND RADIO MANUAL

VOLUME I

by

The Howard W. Sams Engineering Staff

REFERENCE AND INTERLIBRARY LOAN
SUFFOLK COOPERATIVE LIBRARY SYSTEM
BOX 187, BELLPORT, N.Y. 11713



HOWARD W. SAMS & CO., INC.
THE BOBBS-MERRILL COMPANY, INC.

Indianapolis • New York

FIRST EDITION**FIRST PRINTING — NOVEMBER, 1961****SECOND PRINTING — APRIL, 1962****THIRD PRINTING — JUNE, 1964****FOURTH PRINTING — MARCH, 1965****FIFTH PRINTING—NOVEMBER, 1966****SIXTH PRINTING—AUGUST, 1968****SEVENTH PRINTING—FEBRUARY, 1971****EIGHTH PRINTING—APRIL, 1972****NINTH PRINTING—JULY, 1973****TENTH PRINTING—JUNE, 1974****ELEVENTH PRINTING—APRIL, 1975****TWELFTH PRINTING—SEPTEMBER, 1975****THIRTEENTH PRINTING—APRIL, 1976****FOURTEENTH PRINTING—DECEMBER, 1976****CITIZENS BAND
RADIO MANUAL, VOL. 1**

Copyright © 1961 by Howard W. Sams & Co., Inc., Indianapolis 6,
Indiana. Printed in the United States of America.

Reproduction or use without express permission, of editorial or pictorial content, in any manner, is prohibited. No patent liability is assumed with respect to the use of the information contained herein.

Library of Congress Catalog Card Number: 61-18464



FOR USE ONLY
IN THIS LIBRARY
NOT TO BE LOANED


PREFACE

Citizens-band radio is a rapidly growing field, not only in sales but also from the servicing standpoint. Close to 110,000 new CB licenses were issued by the FCC last year, and all indications point to an even greater number for 1961. Many of these licensees (and for that matter, those formerly licensed as well) are buying not just one or two pieces of equipment, but enough to equip an entire fleet of cars or trucks. It doesn't take much imagination to understand why additional servicing facilities for this type of equipment are in demand and the potential opportunity awaiting the enterprising service technician.

Before the technician can service CB radio, however, he must thoroughly understand the type of equipment he will be called on to service. Further, there are certain conditions of installation and repair which must satisfy not only the customer, but the FCC as well.

The purpose of this book, the first of a series, is to provide the needed service information for several of the most popular CB units. A text section at the beginning introduces the technician to Citizens-band radio. It describes the type of equipment used, the test equipment needed, the license qualifications required of the technician by the FCC, and finally, some of the problems encountered with CB equipment. Complete PHOTOFACT schematics covering widely used CB transceivers are included to make your servicing of CB equipment faster, easier, and more profitable.

October, 1961

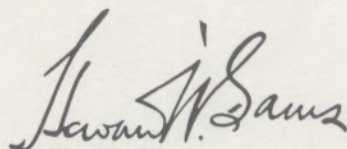

REFERENCE AND INTERLIBRARY LOAN
SUFFOLK COOPERATIVE LIBRARY SYSTEM
BOX 187, BELLPORT, N.Y. 11713

FOR USE ONLY
BY THIS LIBRARY
NOT TO BE LOANED

PREFACE

Citizen-band radio is a rapidly growing field, not only in sales but also from the viewpoint of service. Over 100,000 new CB licenses were issued by the FCC in 1967, and all subsequent years to an even greater number. The popularity of these licenses and the fact that they are becoming more and more a part of the life of the citizen, has led to a demand for a book which will not only give the citizen a basic knowledge of the equipment and its operation, but also provide him with the information necessary to make his choice of equipment wisely. This book is intended to provide the citizen with the information necessary to make his choice of equipment wisely. It is not intended to be a technical manual, but rather a guide to the selection of equipment and its operation.

Before the citizen can make a wise choice of equipment, he must first understand the type of equipment he will be called on to use. Further, there are certain conditions of installation and operation which must be understood by the citizen, and the FCC will not issue a license unless these conditions are met.

The purpose of this book is to provide the reader with the information necessary to make his choice of equipment wisely. It is not intended to be a technical manual, but rather a guide to the selection of equipment and its operation. The book is divided into two parts. The first part is a guide to the selection of equipment, and the second part is a guide to the operation of the equipment. The first part is divided into two sections. The first section is a guide to the selection of equipment, and the second section is a guide to the operation of the equipment. The second part is a guide to the operation of the equipment, and is divided into two sections. The first section is a guide to the operation of the equipment, and the second section is a guide to the maintenance of the equipment.

October, 1967

James W. Brown

REFERENCE AND INFORMATION CO. INC.
BUTLER COUNTY LIBRARY SYSTEM
BOX 187, BELLEVILLE, MO. 63713

TABLE OF CONTENTS

Introduction To Citizens Band Radio

7

Photofact Service Literature

13

- PHOTOFACT *Standard Notation Schematics*
- *Cabinet and Chassis Photographs*
- CIRCUITRACE
- *Alignment Instructions*
- *Equipment Specifications*
- *Parts Lists and Replacement Data*

• COVERING THESE UNITS •

Apelco AR-9	13	Radson RT-70A -75A, RP-115, -612	89
Citi-Fone CD-5/6, CD-5/12	21	Raytheon Ray-Tel TWR-1	97
Globe CB-100	29	RCA CRM-P2B-5 (M1-555528, M1-555529)	105
Globe X-90 (Pocketphone)	37	RCA CRM-P3A-5	113
Gonset G-11-3303, -3304, -3305	43	Realistic TRC-27 (94L595)	121
Gonset G-12 (3316) (3329)	51	Regency CB-27, CBM-27-6, CBM-27-12	129
Hallicrafters CB-1	59	U.S.L. TR-800	137
Heath CB-1, W-CB-1	67	Viking 242-126, -127, -128, -129	145
Lafayette HE-15, -16, -18	73	Vocaline ED-27-6, ED-27-12, ED-27M-6, ED-27M-12	153
Morrow CB-1, -2, -3, 5W1-6, -12, -117, 5W3-6, -12, -117	81		

INTRODUCTION TO CITIZENS BAND RADIO

Two-way radio servicing is one of the fastest-growing and most profitable fields in electronics today, and looking ahead one can see indications of even further expansions.

ABOUT THE EQUIPMENT

A large percentage of the low-powered two-way equipment on the market is the direct result of the Citizens radio service. Introduced to the public back in 1949, this service for the first time permitted short-range radiotelephone communications in connection with either business or personal activities. At that time, all operation was confined by law to frequencies in the UHF region between 460 and 470 mc. Only two classes of licenses—A and B—were available, and any citizen of the United States 18 years of age or older was eligible.

Class-A equipment was permitted to operate with a maximum input power of 60 watts to the final stage of the transmitter, as opposed to only 5 watts for Class-B units. This of course meant that, all things being equal, a Class-A station could provide more reliable communications over a greater area. Moreover, a number of frequencies were available for Class-A operation (see Table 1), whereas Class-B units were permitted only one (465 mc).

464.75	465.25	465.70	466.15
464.80	465.30	465.75	466.20
464.85	465.35	465.80	466.25
464.90	465.40	465.85	466.30
464.95	465.45	465.90	466.35
465.05	465.50	465.95	466.40
465.10	465.55	466.00	466.45
465.15	465.60	466.05	
465.20	465.65	466.10	

Table 1. Class-A frequencies (mc).

During the early days of CB radio, equipment for either class was expensive. This was especially true for Class-A units, which had to meet much more rigid FCC requirements in connection with frequency tolerance, etc. Production of CB equipment was more or less on an experimental basis anyway, because it was hampered by the many problems associated with equipment operating at ultrahigh (UHF) frequencies.

Eventually, some reasonably priced Class-B equipment began appearing on the market. This of course boosted the popularity of Class-B units, especially among those who could not afford the more expensive Class-A units.

Still, CB radio was not too popular—and cost was not the only reason. For one thing, the operating frequencies assigned to both classes limited their usefulness. Unlike lower-frequency radio waves, which tend to bend and be reflected from objects enroute to the receiving antenna, UHF waves act like a beam of light. That is, they travel in more or less a straight line between the transmitting and receiving antennas, and are attenuated (or even blocked completely) by intervening objects such as trees, buildings, or terrain. Because of these line-of-sight characteristics and the relatively low-power limitations of CB equipment, reliable communication was limited to a short distance—sometimes only half a mile or so.

Not until the new Class-D service was introduced in the fall of 1958 did CB radio get off to a real start. At that time, the FCC reallocated a space in what formerly was the 11-meter amateur band for use by the Class-D service. Twenty-two channels ranging from 26.965 to 27.225 mc were assigned exclusively

26.965	27.035	27.115	27.185
26.975	27.055	27.125	27.205
26.985	27.065	27.135	27.215
27.005	27.075	27.155	27.225
27.015	27.085	27.165	*27.255
27.025	27.105	27.175	

* SHARED WITH STATIONS IN OTHER SERVICES

Table 2. Class-D frequencies (mc).

for Class-D operation, and shortly thereafter a twenty-third channel (27.255 mc) was made available on a shared basis with stations in other services. Table 2 lists the Class-D frequencies. Notice that most are separated by only 10 kc, whereas those for Class-A operation are separated by 50 kc. This means Class-D equipment must be quite selective; also, the bandwidth occupied by the transmitted signal must be held within specified limits. Some Class-D channels are separated by more than 10 kc, where the Class-C frequencies are interspersed. The Class-C service is used solely for remote control of

model airplanes or boats, garage doors, etc.; radiotelephone communication is not permitted.

Through the Class-D service, Citizens-band radio now provides the public with a practical means of communication. The lower frequencies used in Class-D operation overcome, to some degree, the line-of-sight characteristics experienced at UHF. Thus, not only is a somewhat greater range provided, but also better coverage within a given area.

CITIZENS-BAND RADIO AND THE TECHNICIAN

Many persons had never even heard of Citizens-band radio until the Class-D service was announced. Since then, however, its popularity has swept the country and it now represents big business. As an example, the FCC issued close to 110,000 new CB licenses in 1960, and it expects to greatly exceed even this number by the end of 1961. Some licensees purchase only a minimum number of units; on the other hand, many businesses buy enough to equip a fleet of cars or trucks. What does all this mean to the service technician? Simply that tremendous opportunities await those who are equipped to install and maintain two-way equipment. The service technician who gets in on the ground floor can build up a profitable business.

At present, CB radio can be found almost everywhere—on boats, trains, tractors, planes, and in cars, homes, and offices. It serves business, industry, state and local governments, civil defense, or simply provides a means of personal communications between individuals.

The business of servicing CB radio is almost unlimited. Many technicians specialize in two-way radio equipment exclusively; others include it in with their regular radio and television repair work.

WHO CAN SERVICE CB GEAR?

Not just anyone can service CB equipment—or, for that matter, any other type of two-way radio gear. The FCC states that any repairs, modifications, or adjustments which can affect proper (legal) operation must be performed by, or under the direct supervision of, a person holding a second-class or higher commercial radiotelephone license. When such repairs or adjustments are made by an unlicensed person, however, the responsibility for proper operation afterward rests with the holder of the commercial license. Regardless of how much a person may know about two-way radio, he must not attempt to service two-way equipment unless either requirement is met.

These restrictions would seem to present somewhat of a problem to manufacturers of CB radio kits. However, there is a simple solution whereby persons with little or no technical knowledge can assemble and put such equipment into operation legally. Critical circuits such as the oscillator—which might cause illegal operation if not assembled and adjusted properly—are wired, pretuned, and sealed at the factory. This is necessary to conform with FCC regulations and thus make it possible for a person with no commercial radiotelephone license to assemble a kit. Naturally the manufacturer is no longer responsible for proper operation of the equipment after a seal is broken or the adjustment tampered with.

Some minor repairs—such as replacing tubes, repairing or installing antenna connectors, or replacing defective components in the receiver section—can be made by unlicensed persons. However, some tubes should not even be replaced except by a qualified person. For example, replacing a tube in a fixed (but not crystal-controlled) oscillator stage of a Class-B transceiver operating in the UHF range often requires readjustment of this circuit to put the unit on frequency. The best policy for an unqualified person to follow is this—if not sure about what can or cannot cause illegal operation, he should not attempt any maintenance!

The FCC is concerned only with the operation of the transmitter—not the receiver. There is one exception, however, and that is the transceiver. Most Citizens-band equipment is of this type, in which certain stages function not only as part of the receiver, but also become part of the transmitter when the push-to-talk button is depressed. Hence, it is possible that repairs or modifications in the receiver circuits of some transceivers could cause illegal operation when the unit is transmitting.

It's best, then, for a technician who plans on servicing and installing CB radio equipment to obtain at least a second-class radiotelephone license. There are a number of books that will help in preparing for the examination.

The test itself is not too difficult. The average service technician has a rather wide technical background anyway, and with some additional study along the proper channels he should have little trouble making the grade.

TEST EQUIPMENT NEEDED

Most service shops already have the basic test instruments needed for servicing CB equipment. A VOM with a sensitivity of at least 20,000 ohms per volt will be very helpful, along with a VTVM.

When circuit alignment becomes necessary, an accurate and stable signal generator (preferably crystal-controlled) will be needed. It should be capable of covering frequencies from 150 kc to 30 mc and have provision for modulating the output signal. Also, it should be capable of delivering a signal of less than one microvolt, for the purpose of checking receiver sensitivity. Such a generator is also quite useful in tracking down defects within the circuitry.

The best method of checking tubes is by substitution; however, a general-purpose tube checker will prove useful for confirming shorts, leakage, low emission, and other types of tube defects—some of which are not always readily apparent.

Some type of DC power supply will be needed for the bench, since most CB units operate from DC as well as AC. A DC bench supply can be made by

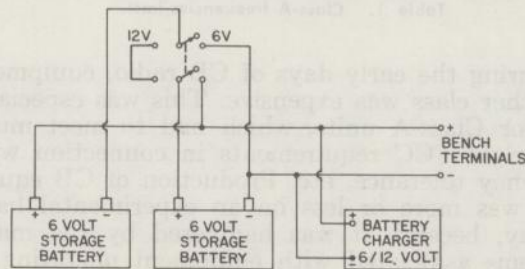


Fig. 1. A 6/12 volt DC bench power supply.

connecting storage batteries together, as shown in Fig. 1. This arrangement will suffice; however, it does require somewhat more space than the battery-eliminator type. The filtered power supply used for servicing transistor and hybrid radios is preferred. It should deliver both 6 and 12 volts DC and be capable of being varied above and below these values to simulate the DC voltage variations encountered during normal operation. It should also deliver sufficient current; one designed to provide 10 amperes continuously or 20 intermittently is adequate.

Several other items will be needed before two-way equipment can be serviced effectively. Some are absolutely necessary; others are merely refinements that will make the job that much easier.

First is some type of dummy load, to be used during transmitter adjustments. It can be either a commercial dummy antenna, or strictly "home-brew." Fig. 2 shows an easily-built dummy load.

If Class-A or -B Citizens-band equipment is to be serviced, another signal generator is required. It must provide signals up to 470 mc and be extremely accurate. If the signal attenuator is calibrated in microvolts, this will also be helpful.

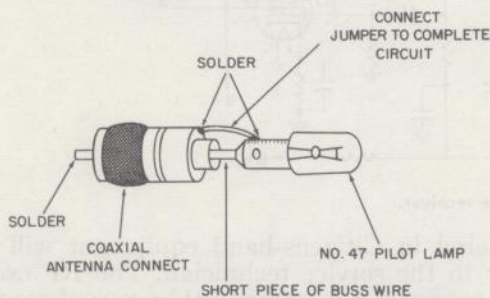


Fig. 2. A simple dummy load.

Because of the relatively small plate input power permitted for Class-B, -C, and -D operation, it is important that the transmitter provide the maximum output power (without exceeding the legal input, of course). A valuable instrument for measuring the output of a transmitter is the RF wattmeter. Two types are in use—the terminating and the in-the-line meter. The former terminates the transmitter with the proper load impedance and, at the same time, provides an indication of the RF power output in watts. The in-the-line type reads the wattage (when connected in series with the antenna lead) but does not act as a terminating load. Therefore, the transmitter must be terminated by some other means. There are instruments available which, although not providing an actual measure in wattage, give an indication of relative RF output and indicate when the maximum is attained. These devices usually cost much less than a wattmeter and will suffice in many cases. If an RF wattmeter is already on hand, so much the better.

Checking the operating frequency of transmitters is a routine procedure around the shop; in fact, it should be part of every service job. For this, some type of frequency meter is required. It also is available in several forms and most are fairly expensive. One of the most popular types is the heterodyne frequency meter. With this instrument, the signal from a built-in oscillator is heterodyned with the transmitter signal. The meter is adjusted for a zero

beat, and the frequency of the signal in question is then determined directly from the dial indicator or from a scale.

Another type of meter has a crystal-controlled reference frequency generated within it, and reads the difference between this frequency and the one being measured.

Regardless of the meter used, its accuracy is very important. Class-D transmitters, for example, must operate within a frequency tolerance of .005%. At a frequency of 27.005 mc, this means the signal cannot deviate more than $\pm 1,350$ cycles per second. The frequency meter should be accurate within at least .0025%. If Class-A equipment is to be serviced, the meter will have to be even more accurate, since the frequency tolerance here is only .001%. The frequency tolerance of CB equipment varies not only between the different classes, but also with the type of operation (base or mobile) and the power input.

Another instrument that can be used to advantage is the SWR (standing-wave ratio) meter, which will be discussed shortly.

SERVICING ASPECTS

Those who have had no experience with two-way radio equipment will find it quite different from radio and television. Although the basic principles for servicing are essentially the same, the procedures differ somewhat. Now the service technician will be confronted with squelch circuits, RF power amplifiers, power oscillators, and other unfamiliar circuits that have not yet found a place in broadcast-type radio and television sets.

Antennas

The average technician, even though he has had considerable experience in selecting and installing receiving antennas, will now be concerned with the transmitting aspects of antennas, such as standing-wave ratio (SWR), RF loss in the feed line, and effective elevation.

Obtaining an impedance match between a transmitter and its antenna is necessary for maximum signal transfer in any transmitter, but is even more so in CB equipment. Here the power is relatively small; hence, a good match will permit all the available signal from the transmitter to reach the radiating element of the antenna. When the impedance of the antenna does not match that of the transmitter output, a portion of the signal sent to the antenna is reflected back down the transmission line. The amount of reflected power or standing waves on the line depends on the extent of the mismatch. Reflected power represents a signal loss, since it serves no useful purpose. (There will always be a certain amount of loss, but it should be kept to a minimum.)

An SWR meter is a valuable instrument for two-way radio servicing, and its cost is low considering its purpose. Placed in series with a transmission line, it will show the amount of power being reflected. This is expressed as a standing-wave ratio; typical readings are 1:1, 2:1, or 3:1. The lower the ratio, the better. A ratio of 1:1 or 1.5:1 is pretty good; 2:1 isn't bad, but could be improved. High SWR readings can usually be traced to improper length of one or more antenna elements for the frequency of oper-

ation, improper antenna, etc. Antenna height and surrounding objects will also influence the SWR. When operation is planned over several CB channels, the SWR readings will vary somewhat with the operating frequency.

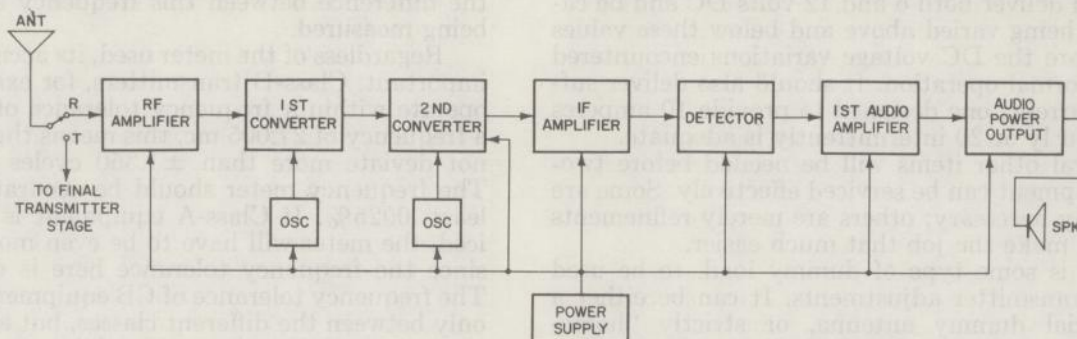


Fig. 3. Block diagram of a dual-conversion superheterodyne receiver.

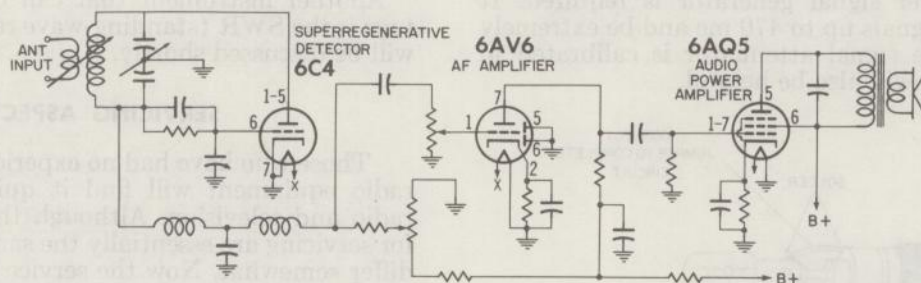


Fig. 4. A basic superregenerative receiver.

One of the most important things to remember about CB antennas—or any other type of two-way radio antenna for that matter—is to install it as high as possible. Even with a mere 5-watt input, effective communications can be provided over a considerable area as long as the antenna location is selected wisely. FCC restrictions limit the height of CB antennas to 20 feet above the man-made or natural structure on which they are mounted. This presents somewhat of a problem as far as height is concerned. If the antenna is mounted on the ground it must not exceed 20 feet. This same antenna, however, can be mounted up to 20 feet above the roof of a 200-foot building and still be legal. The idea is to install it at a point of maximum effective elevation and thereby take full advantage of available RF power.

Receivers

Another point should be remembered in connection with the servicing of CB equipment: low-powered radio signals call for extremely sensitive receivers. Moreover, since the channels are separated by only 10 kc in the Class-D service, the receivers must also be extra selective if adjacent-channel interference is to be avoided. For these reasons, most receivers are of the dual-conversion type shown in Fig. 3. The only basic difference between it and a conventional superhet circuit is the addition of a second converter stage. Its purpose is to convert the high IF output of the first converter to an even lower value, thereby increasing both the sensitivity and the selectivity. Some manufacturers use a superregenerative circuit rather than a superheterodyne circuit. Although not as efficient as the superhet,

it does provide a fair degree of sensitivity and selectivity with a minimum of components. A basic superregenerative circuit is shown in Fig. 4.

Except for crystal-controlled oscillators, squelch circuits, and RF power amplifiers, most circuits en-

countered in Citizens-band equipment will be familiar to the service technician. The RF oscillator in CB receivers may or may not be crystal-controlled, but those in the transmitter almost always are. Some receivers have an oscillator circuit that can be changed back and forth from crystal-controlled to tunable by means of a switch. Such a circuit is shown in Fig. 5. When switch SW1 is in position 1, the frequency of oscillation is determined by crystal M1, and in position 2 by crystal M2. In position 3 the receiver is continuously tunable over the band by means of tuning capacitor C1. Except for the crystals and the switching arrangement, this is a conventional oscillator circuit.

Other stages such as the RF and IF amplifiers or the audio and power amplifiers and detectors are usually of conventional design and may vary only in component values, methods of coupling, etc. In most CB transceivers the conventional first audio stage of the receiver acts as a speech amplifier during the transmitting function, and the audio-output stage doubles as a modulator to give the carrier its voice. The servicing procedures are the same for

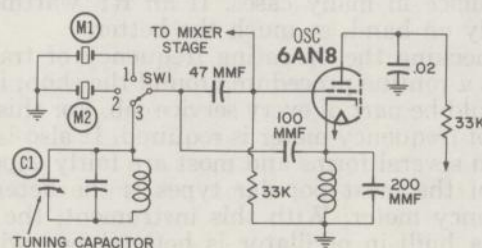


Fig. 5. A combination fixed-frequency and tunable oscillator.

these circuits as for any other types of radio equipment, and the usual precautions about unnecessary disturbing of adjustment and lead dress when replacing components in RF and IF circuits should be followed.

Recently a number of transistorized CB transceivers ranging in size from coat-pocket units to hand-carried jobs have appeared on the market. Often these units contain printed-circuit boards, which require special attention. For example, be sure a suspected component is defective before removing it from the circuit because other components, usually spaced very close together on the board, are easily damaged. Also be sure to use a low-wattage soldering iron when removing components, to prevent damaging the board.

In addition, be cautious when checking transistor circuits with an ohmmeter. The voltage from some ohmmeters is high enough to damage components.

Most tests in transistor circuits can be performed with a good VOM; special equipment need not be purchased for this purpose. Numerous books are available showing how transistors themselves can be tested with an ohmmeter. Of course, those who intend to specialize in transistor equipment servicing will find special test equipment a time saver.

Transmitters

The transmitter circuits in CB equipment are very simple. Some have nothing more than a crystal-controlled power-oscillator stage that feeds directly into the antenna system. However, most have a final RF amplifier following the oscillator. The most important consideration in servicing CB transmitters is to make sure the unit is operating on the correct frequency. The fact that crystals are guaranteed to operate within a specified tolerance does not mean they cannot operate off-frequency. (In fact, they often do.) Off-frequency operation can be caused by using the wrong type of crystal or tampering with the correct one, improper tuning (tuning up on the wrong harmonic, for example), replacement of parts with those having the incorrect value or tolerance, and failure to retune after replacement of the oscillator must be replaced with those having the same value. By the way, don't make the mistake of installing a standard fixed-value component for one that is temperature-compensated. The results may be satisfactory for fifteen or twenty minutes, and then off-frequency operation may result due to drift. The two biggest reasons for violation notices issued by the FCC to CB'ers are improper and off-frequency operation. A large majority of the latter are caused by unqualified persons tampering with equipment. Retuning the transmitter RF stages for maximum efficiency, checking the plate power input to the final stage, and checking the operating frequency should be part of every service job—even though only a tube has been replaced. The plate input power is computed by multiplying the plate voltage and the plate current in the final RF stage.

In multichannel transmitters, all adjustments should be made with the selector set on the center frequency. For example, if Class-D Channels 1, 2, and 3 are to be used, the selector should be in the

Channel-2 position. This will provide compromise operation over the other channels. In checking transmitter operation, the amount of RF power output will vary somewhat on different frequencies.

After completing transmitter repairs, checking operation on all available channels, and making the necessary adjustments, make a final check of the frequency under varying voltage conditions. For units operating from AC, a Variac or similar device capable of producing a variable-AC source voltage will have to be used. An adjustable 6/12VDC supply will be needed for DC equipment. When the frequency of a unit designed to operate on 115 volts AC is being checked, it is wise to vary the source voltage from, say, 95 to 130 volts. The operating frequency should remain within the legal limits while this is being done. Battery-operated sets can likewise be checked by varying the 6-volt DC source from 5 to 7.5 volts, and the 12-volt source from 10 to 14 volts.

Power Supplies

Most CB equipment is designed to operate from more than one source voltage. Some operate strictly from AC; others use a universal power supply, permitting operation from AC as well as one or more DC voltages. The universal supply not only makes


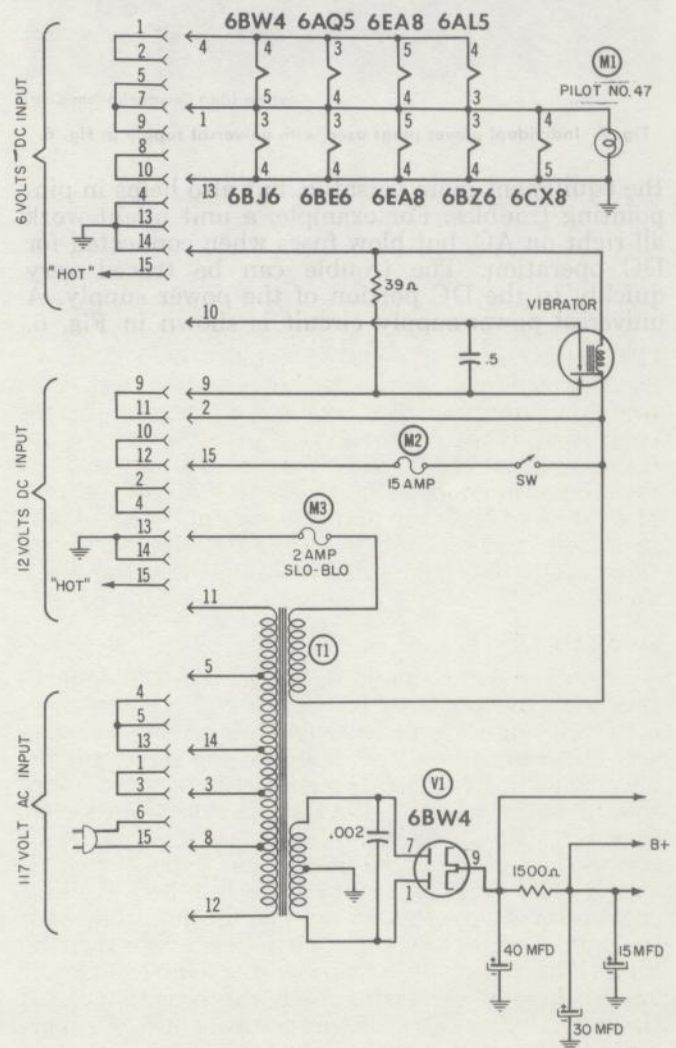


Fig. 6. A universal power-supply circuit.

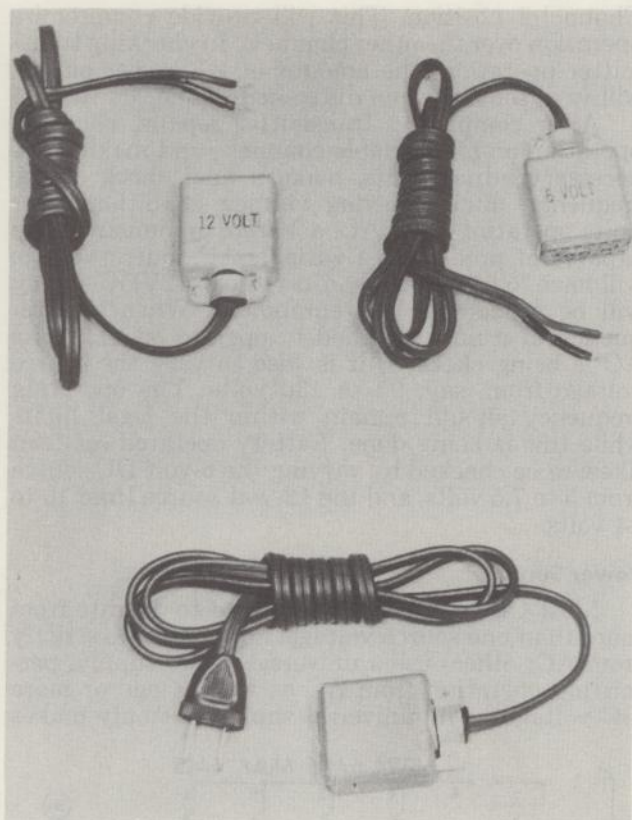

Courtesy Utica Communications Corp.

Fig. 7. Individual power plugs used with universal supply in Fig. 6.

the equipment more versatile, but also helps in pin-pointing troubles. For example, a unit might work all right on AC, but blow fuses when connected for DC operation. The trouble can be traced very quickly to the DC portion of the power supply. A universal power-supply circuit is shown in Fig. 6.

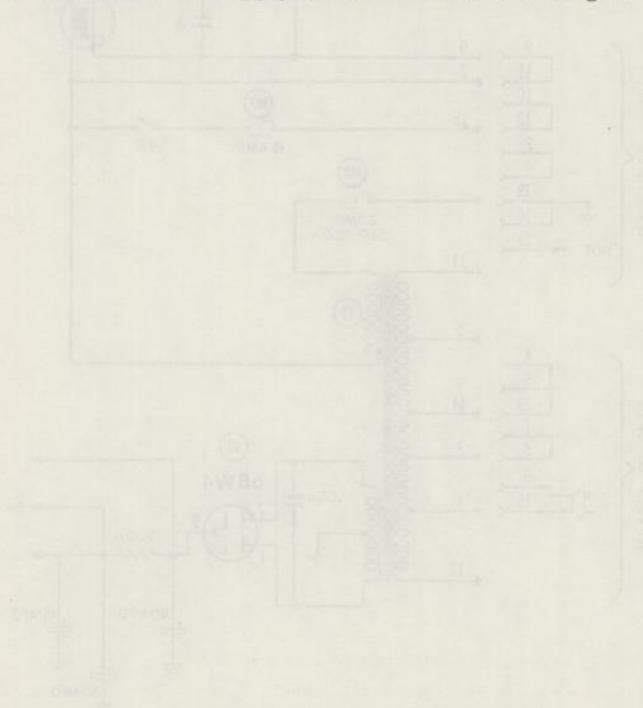


Fig. 6. A universal power-supply circuit.


Those who have serviced some of the older auto radios should be familiar with vibrator power supplies. Notice the conventional full-wave AC power supply at the bottom. Directly above is a vibrator type designed for either a 6- or 12-volt DC input. A single multielement socket on the transceiver accommodates all the inputs, with individual plugs (Fig. 7) between the different voltage sources and this connector. Each plug is labeled with its function so that, when connected to the transceiver, it will provide the proper connections.

Noise

Noise is a big problem in CB equipment, particularly at Class-D frequencies. The chief complaints will be generator whine, ignition noise, and static. Although most Class-D units incorporate noise-limiting circuits, they are not always adequate and additional noise-limiting devices must be used. It is true that the conventional bypass capacitors installed on the generator, voltage regulator, coil, and distributor will eliminate noise in the standard auto broadcast receiver. However, they are quite ineffective at 27 mc, because of the inductance introduced by the foil windings. Where noise is a problem, such capacitors should be replaced with noninductive coaxial types.

A HELPING HAND

To effectively service any type of radio equipment you will need a schematic diagram. This is especially true when working with unfamiliar circuitry. Replacing defective components in CB equipment with the exact value is important, and sometimes even mandatory. The following material contains schematics of current Citizens-band equipment, together with complete servicing data, including parts lists, tube and component layout and identification, and alignment instructions.

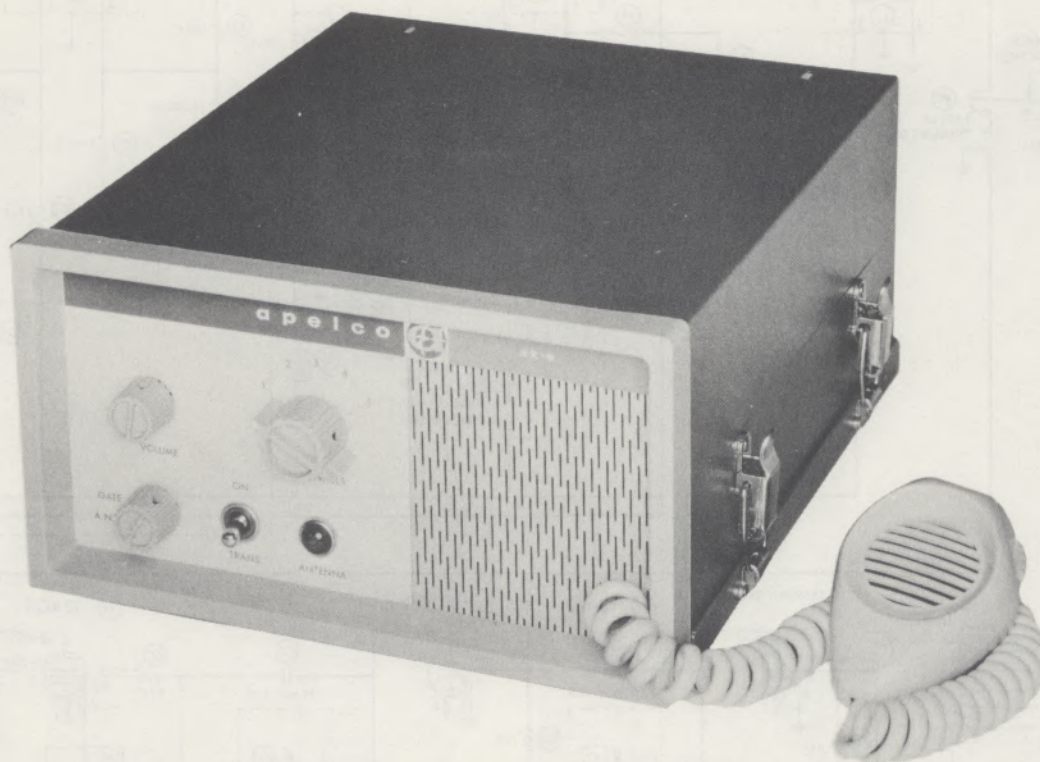

**APELCO
MODEL AR-9**

TRADE NAME	Apelco Model AR-9	
MANUFACTURER	Apelco Co., 213 E. Grand Ave., South San Francisco, California	
TYPE SET	Battery Operated 9 Tube Crystal Controlled Citizens Band Transmitter-Receiver (Some versions operate on AC)	
POWER SUPPLY	12 Volt Storage Battery	RATING 4.5 Amp @ 12.6 Volts DC
TUNING RANGE	Any 5 of Citizens Band Channels 1 thru 22	

NOTICE







ONLY THOSE PERSONS PROPERLY LICENSED BY FCC ARE PERMITTED TO MAKE CRYSTAL SUBSTITUTION OR EFFECT REPAIRS ON THE TRANSMITTER PORTION OF THIS UNIT.

HOWARD W. SAMS & CO., INC. Indianapolis 6, Indiana



The listing of any available replacement part herein does not constitute in any case a recommendation, warranty or guaranty by Howard W. Sams & Co., Inc., as to the quality and suitability of such replacement part. The numbers of these parts have been compiled from information furnished to Howard W. Sams & Co., Inc., by the manufacturers of KZ430

the particular type of replacement part listed. Reproduction or use, without express permission, of editorial or pictorial content, in any manner, is prohibited. No patent liability is assumed with respect to the use of the information contained herein. © 1961 Howard W. Sams & Co., Inc., Indianapolis 6, Indiana. Printed in U.S. of America

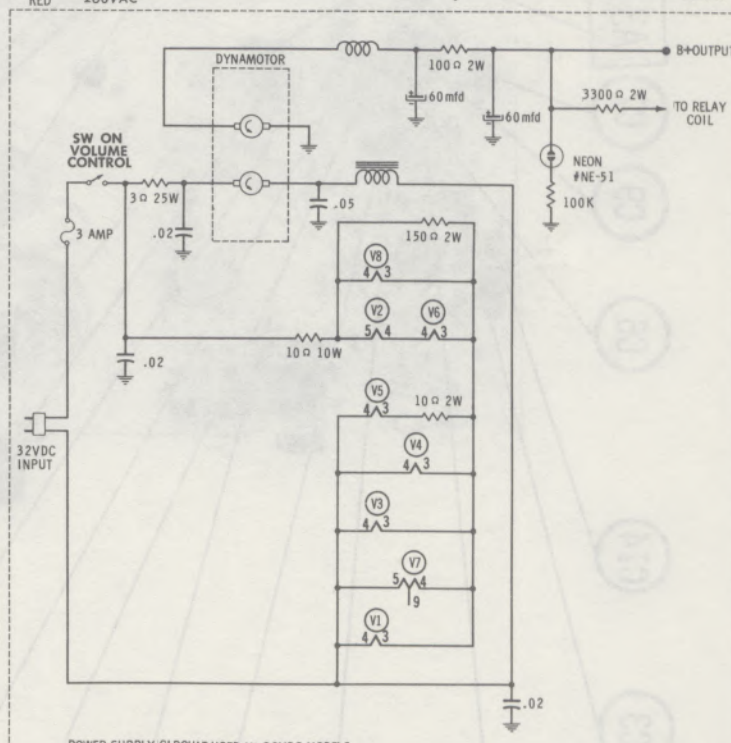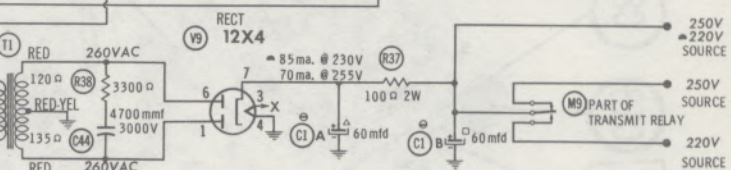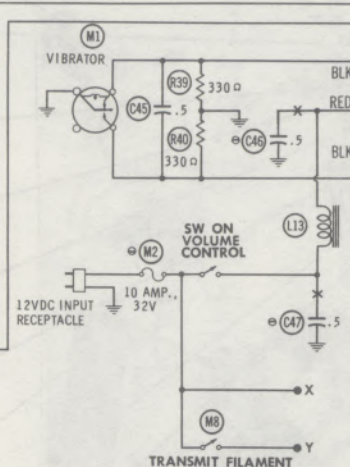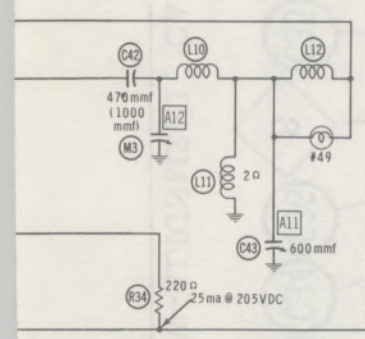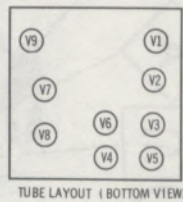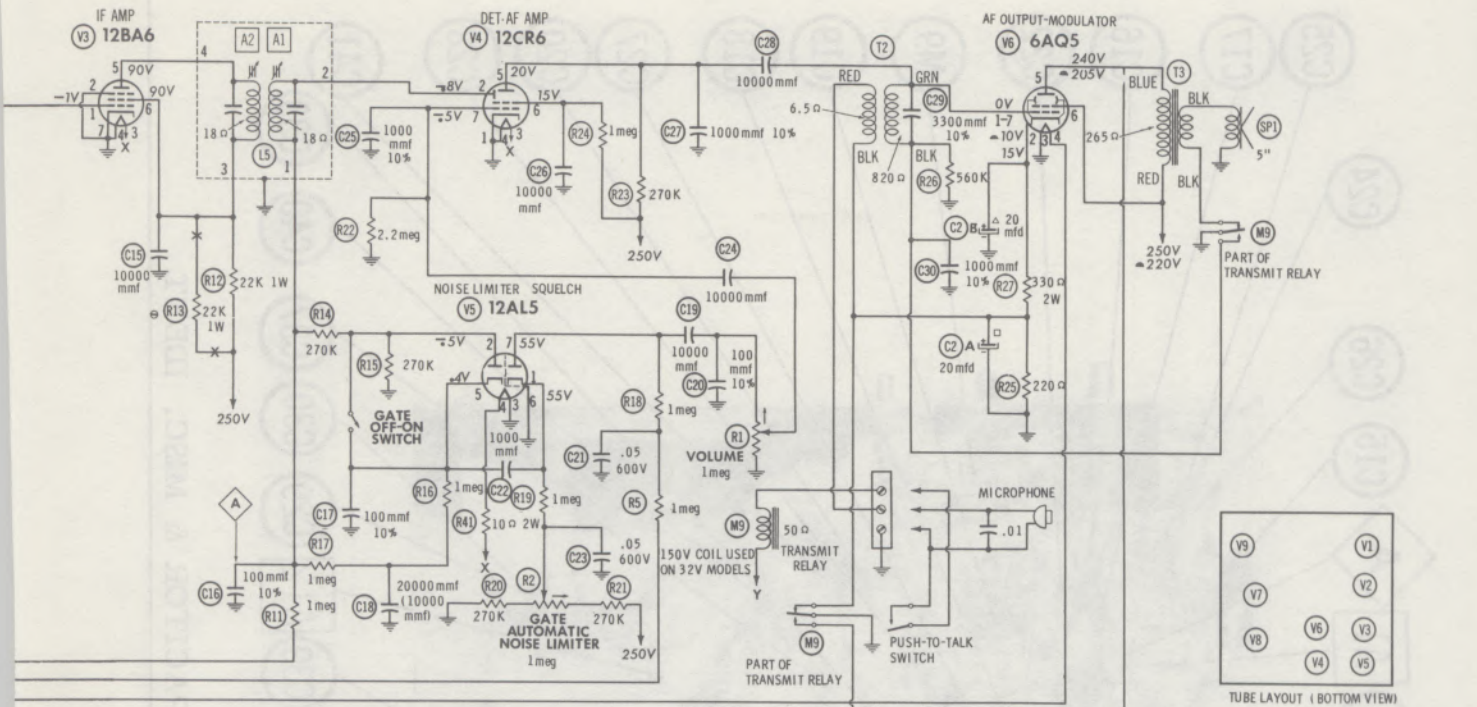


RESISTANCE READINGS


ITEM	TUBE	Pin 1	Pin 2	Pin 3	Pin 4	Pin 5	Pin 6	Pin 7	Pin 8	Pin 9
V1	12AU6	2 meg	0 Ω	0 Ω	2 Ω	†100 Ω	†100K	0 Ω		
V2	6U8A	†10K	0 Ω	†100K	2 Ω	3 Ω	†3400 Ω	2200 Ω	0 Ω	100K
V3	12BA6	1.8 meg	0 Ω	0 Ω	2 Ω	†11K	†11K	0 Ω		
V4	12CR6	0 Ω	520K	2 Ω	0 Ω	†270K	†1 meg	2.2 meg		
V5	12AL5	†1.2 meg	270K	0 Ω	4 Ω	2.5 meg	0 Ω	†2.1 meg		
V6	6AQ5	560K -820 Ω	330 Ω -550 Ω	0 Ω	3 Ω	†365 Ω	†100 Ω	560K -820 Ω		
V7	12AU7	†430 Ω	22K	0 Ω	0 Ω	2 Ω	†10K	10K	0 Ω	NC
V8	12AQ5	NC	40 Ω	2 Ω	0 Ω	†585 Ω	†10K	10K		
V9	12X4	135 Ω	TP	0 Ω	2 Ω	NC	120 Ω	†		

ALL MEASUREMENTS MADE IN "RECEIVE" POSITION UNLESS OTHERWISE DESIGNATED.
 † MEASURED IN "TRANSMIT" POSITION.
 NC NO CONNECTION
 † THIS READING WILL VARY DEPENDING UPON THE CONDITION OF THE ELECTROLYTIC IN THE CIRCUIT.
 † MEASURED FROM PIN 7 OF V9.
 TP TIE POINT

**APELCO
MODEL AR-9**

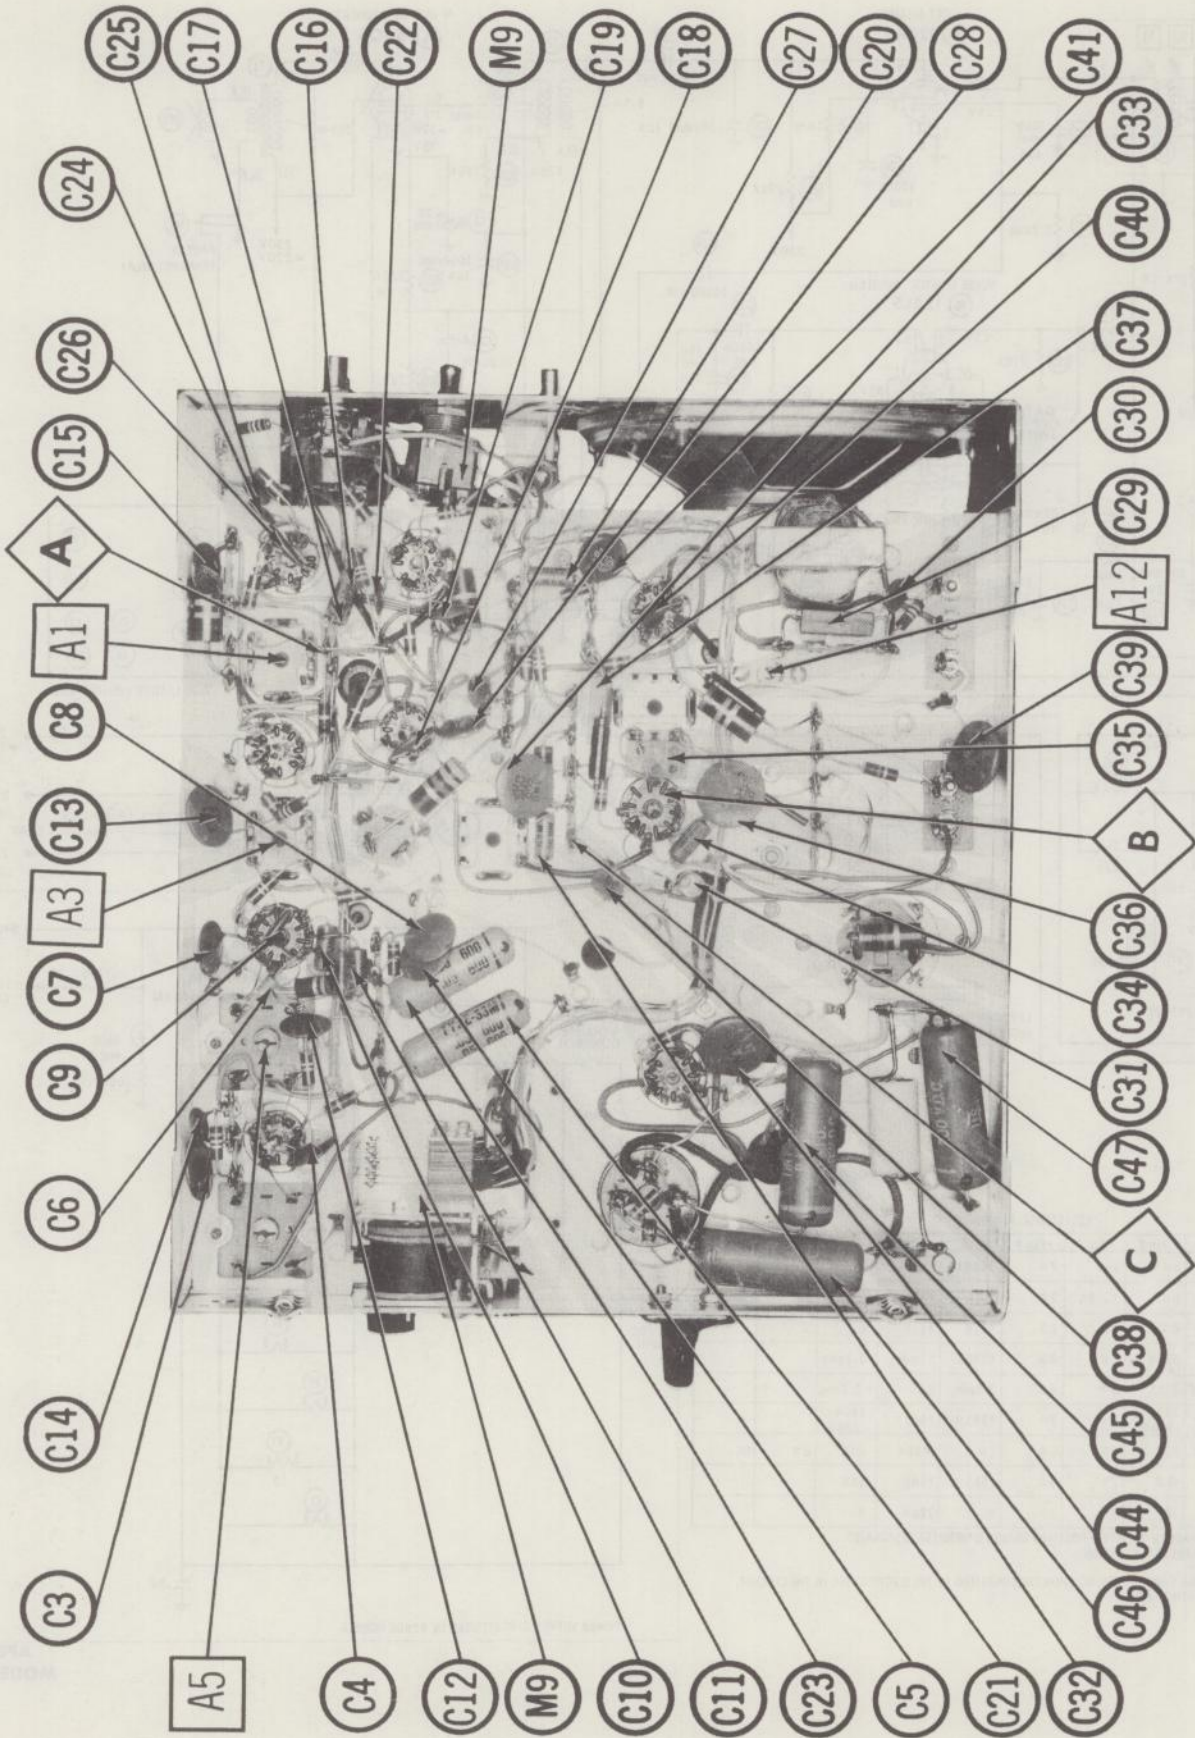

CHASSIS BOTTOM VIEW-ALIGNMENT, CAPACITOR & MISC. IDENT.

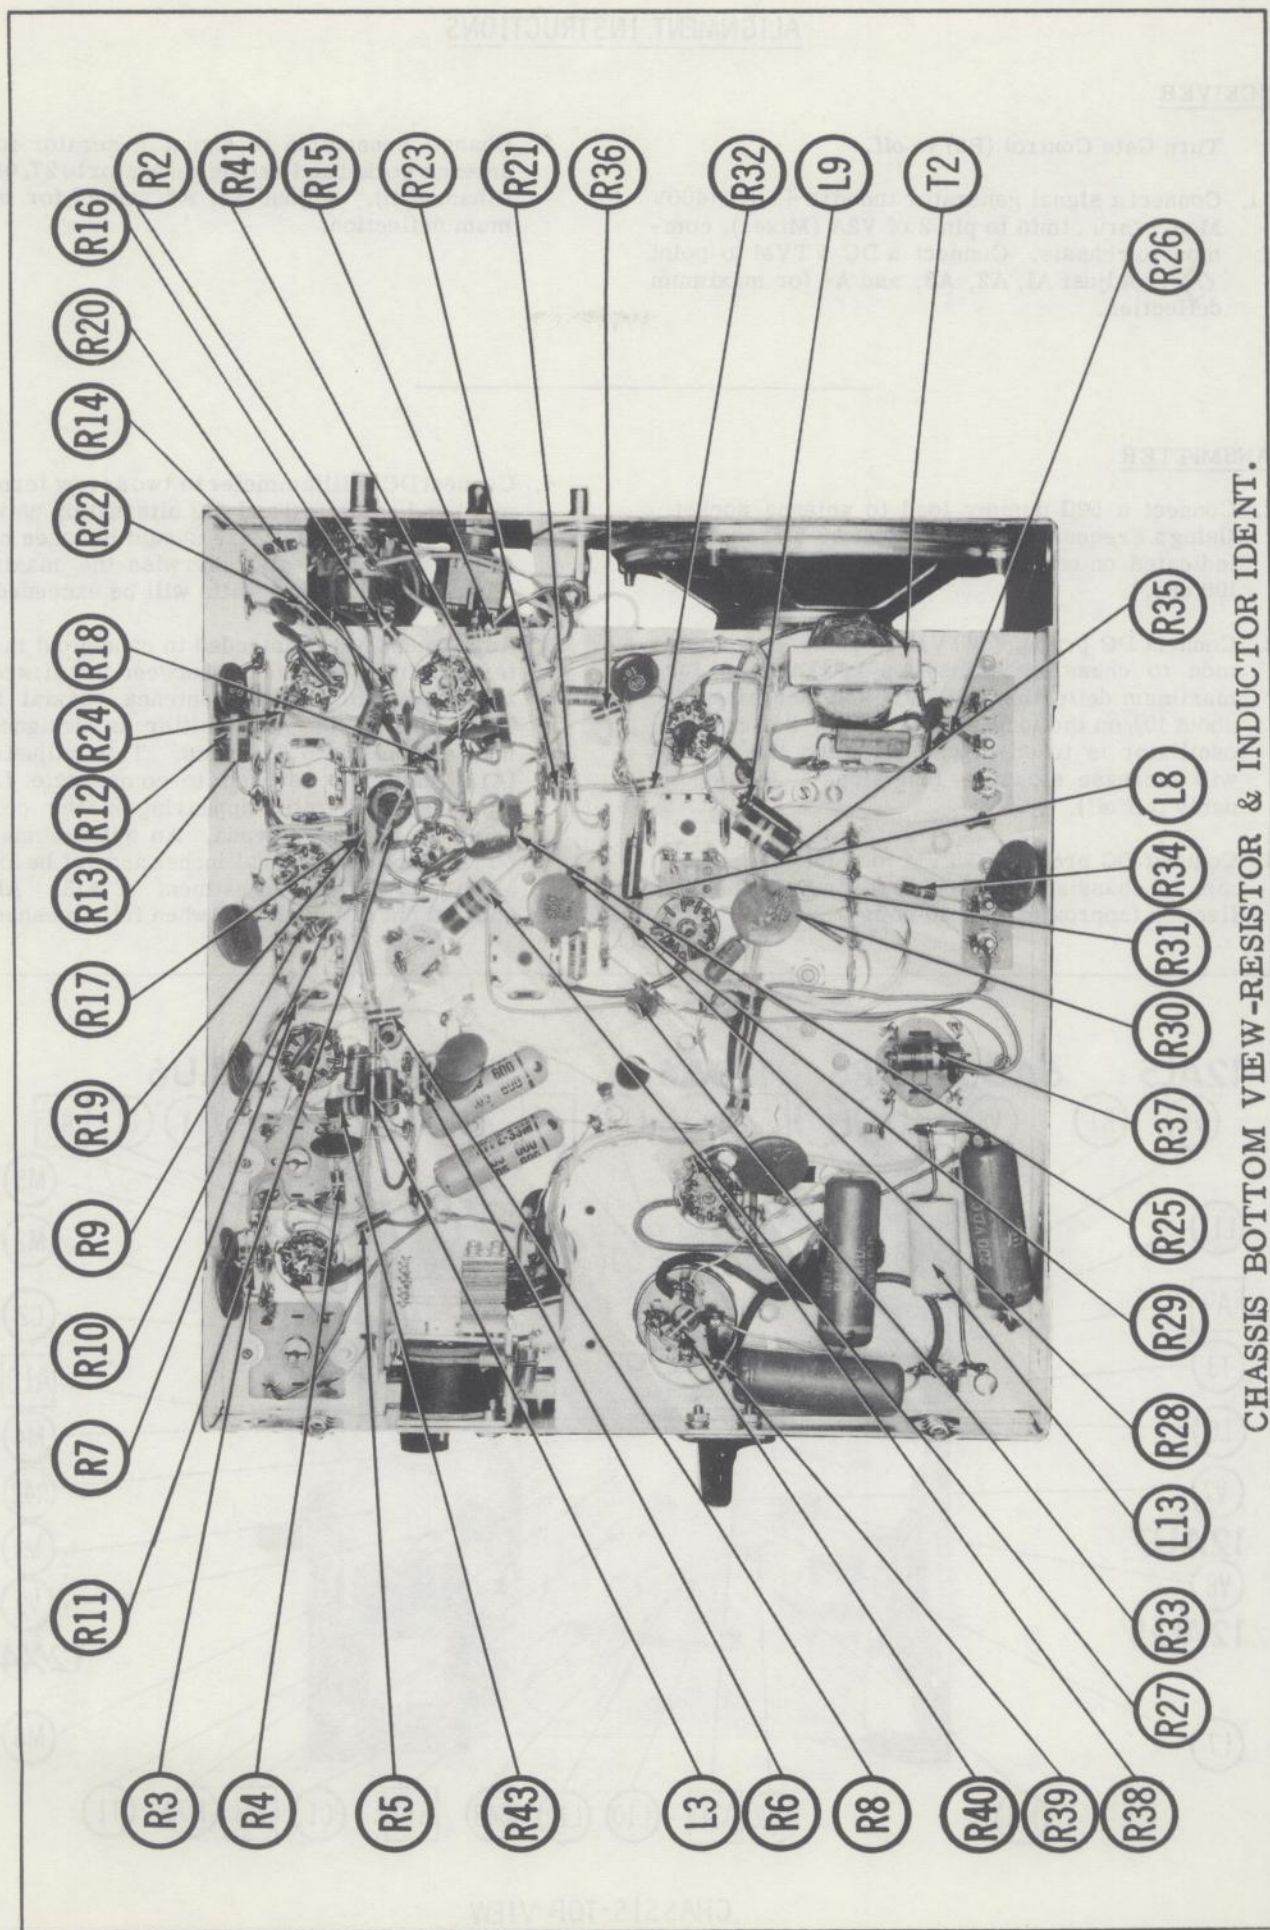

CHASSIS BOTTOM VIEW-RESISTOR & INDUCTOR IDENT.

ALIGNMENT INSTRUCTIONS


RECEIVER

Turn Gate Control (R2) to off.

1. Connect a signal generator tuned to 455KC (400 μ Mod.) thru .1mfd to pin 2 of V2A (Mixer), common to chassis. Connect a DC VTVM to point $\diamond A$. Adjust A1, A2, A3, and A4 for maximum deflection.
2. Change connection of signal generator to the antenna socket and retune generator to 27.085KC (Channel 11). Adjust A5, A6 and A7 for maximum deflection.

TRANSMITTER

1. Connect a 52 Ω dummy load to antenna socket. Using a Frequency Meter, adjust A8 to frequency indicated on osc. crystal for zero beat, (within 100 cps.)
2. Connect DC probe of VTVM to point $\diamond B$, common to chassis. Adjust A9 on channel 11 for maximum deflection of VTVM and then back off about 10% on the long slope. (When the crystal oscillator is tuned in one direction the output will increase slowly -- long slope -- then suddenly fall off).
3. Connect DC probe of VTVM to point $\diamond C$, common to chassis. Adjust A10 for maximum deflection (approximately 30 volts).
4. Connect DC milliammeter to two screw terminal strip and adjust A11 and A12 alternately until the meter reads 25ma. Care should be taken not to exceed this current, otherwise the maximum legal plate input of 5 watts will be exceeded.
5. Adjustment A13 is intended to cancel out the internal wiring inductance between the pi section load capacitor and the antenna coaxial feed. The output of the transmitter is designed to match from 25 to 75 ohms. This adjustment (A13) may also be used to compensate for a standing wave ratio appearing on the coaxial cable feed to the antenna. An antenna may be off frequency by several inches and yet be loaded efficiently by the adjustment of A13. A12 is shorted out of the circuit when fully meshed.

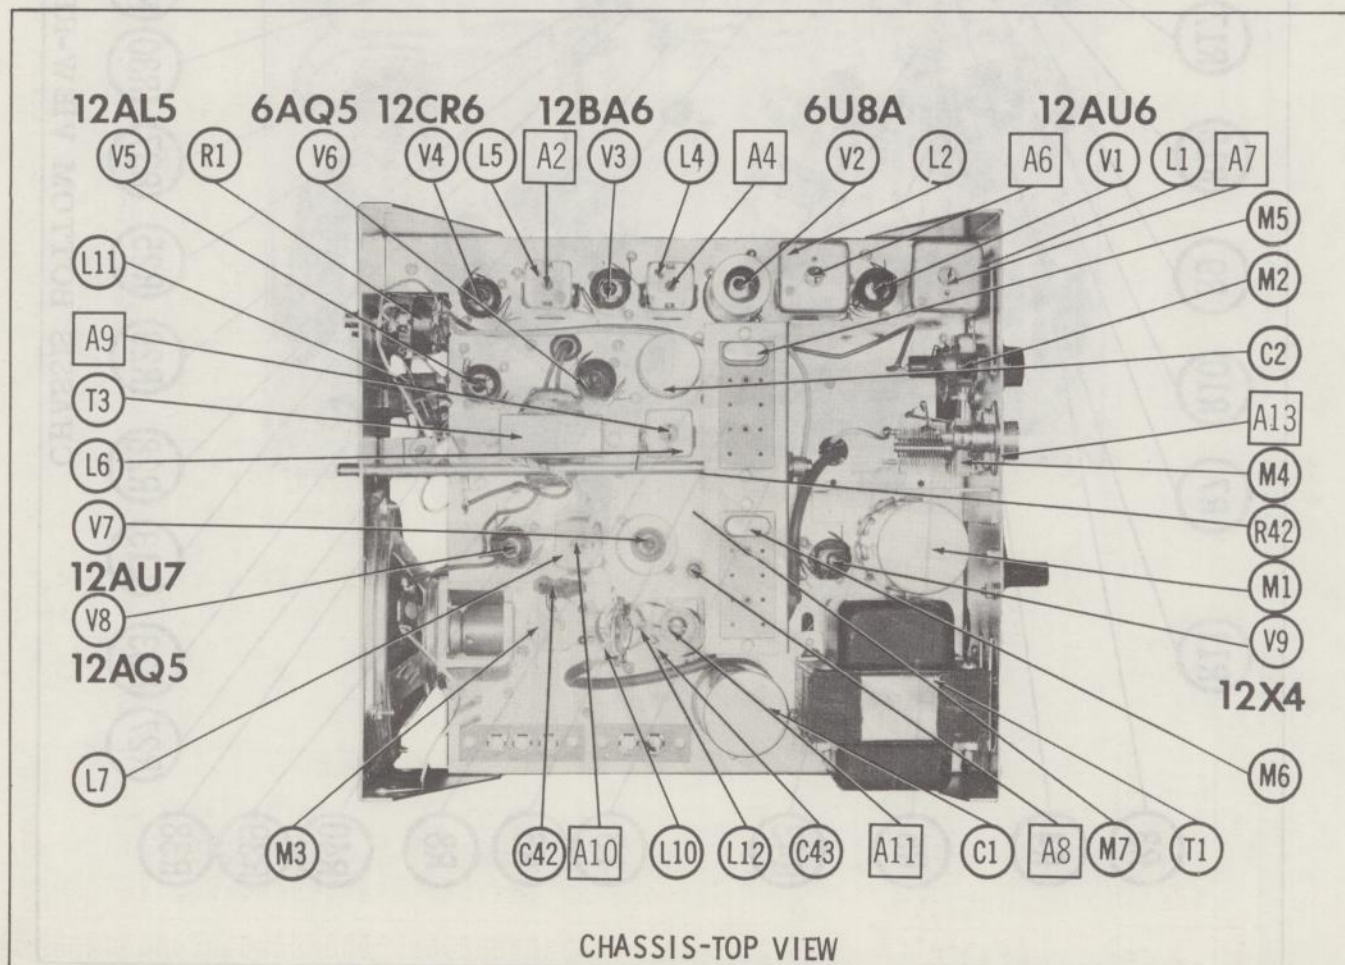

PARTS LIST AND DESCRIPTIONS

TUBES

• GENERAL ELECTRIC • RAYTHEON • SYLVANIA •			
ITEM No.	USE	TYPE	TYPE
V1	RF Amplifier	12A106	6AQ5
V2	Mixer-Osc.	6U8A	12AU7
V3	IF Amplifier	12BA6	12AQ5
V4	Det. -AF Amp.	12CB6	12X4
V5	Noise Limiter-Squelch	12AL5	

ELECTROLYTIC CAPACITORS

REPLACEMENT DATA			
ITEM No.	RATING	REMARKS	SPRAGUE PART No.
C1A	450	AFH2-59	FP148
C1B	450	AFH2-59	TC795
C2A	20	AFH2-08	FP208
C2B	100		FP208
C2C	100		FP208

Note 1. AC versions use 20-20mfd in this application.

FIXED CAPACITORS

Capacity values given in the rating column are in mfd. for Paper Capacitors, and in mmfd. for Mica and Ceramic Capacitors.

REPLACEMENT DATA			
ITEM No.	RATING	REMARKS	SPRAGUE PART No.
C3	5000		5HK-D50
C4	20000		5HK-S20
C5	20000		5HK-S20
C6	68 10%		5HK-S20
C7	20000		5HK-S20
C8	20000		5HK-S20
C9	10000		5HK-S20
C10	10 10%		5HK-S20
C11	51 10%		5HK-S20
C12	10000		5HK-S20
C13	5000		5HK-S20
C14	10000		5HK-S20
C15	10000		5HK-S20
C16	100 10%		5HK-S20
C17	100 10%		5HK-S20
C18	20000		5HK-S20
C19	10000		5HK-S20
C20	100 10%		5HK-S20
C21	100 10%		5HK-S20
C22	100 10%		5HK-S20
C23	100 10%		5HK-S20
C24	10000		5HK-S20
C25	10000 10%		5HK-S20
C26	10000		5HK-S20
C27	10000 10%		5HK-S20
C28	10000		5HK-S20
C29	3300 10%		5HK-S20
C30	10000 10%		5HK-S20
C31	10 max.		5HK-S20
C32	56 10%		5HK-S20
C33	5000		5HK-S20
C34	100 10%		5HK-S20
C35	24 10%		5HK-S20
C36	10000 1000V		5HK-S20
C37	24 10%		5HK-S20
C38	1000 10%		5HK-S20
C39	4700 3000V		5HK-S20
C40	1000 1500V		5HK-S20
C41	10000		5HK-S20
C42	470		5HK-S20
C43	600 max.		5HK-S20
C44	4700 3000V		5HK-S20
C45	5 200V		5HK-S20

FIXED CAPACITORS (cont)

REPLACEMENT DATA			
ITEM No.	RATING	REMARKS	SPRAGUE PART No.
C46	.5 200V	Note 1	2DM-P50
C47	.5 200V	Note 1	2DM-P50

Note 1. Not used in some versions.
† Alternate Value.

CONTROLS

REPLACEMENT DATA			
ITEM No.	RATING	REMARKS	INSTALLATION NOTES
R1A	Imeg	CM-16666	Volume
R1B	Imeg	CM-16666	Volume
R1C	Imeg	CM-16666	Volume
R2A	Imeg	CM-18888	Volume
R2B	Imeg	CM-18888	Volume
R2C	Imeg	CM-18888	Volume

RESISTORS

All wattages 1/2 watt, or less, unless otherwise listed.

REPLACEMENT DATA			
ITEM No.	RATING	REMARKS	REMARKS
R3	560K		
R4	100K		
R5	100K		
R6	3300K		
R7	100K		
R8	2200K		
R9	100K		
R10	100K		
R11	100K		
R12	22K 1W		
R13	22K 1W		
R14	270K		
R15	270K		
R16	100K		
R17	100K		
R18	100K		
R19	100K		
R20	270K		
R21	270K		
R22	2.2meg		
R23	270K		

Note 1. Not used in some versions.

COILS (RF-IF)

REPLACEMENT DATA			
ITEM No.	USE	REMARKS	REMARKS
L1	Ant.		
L2	RF Choke (1.5uh)		
L3	RF Choke (1.5uh)		
L4	Input IF		
L5	Output IF		
L6	Osc. Plate		
L7	Doublet Plate		
L8	RF Choke (2uh)		
L9	RF Choke (15uh)		
L10	Final Plate		
L11	RF Choke (15uh)		
L12	Hash Choke (10uh)		
L13	Hash Choke (10uh)		

20 PARTS LIST AND DESCRIPTIONS (Continued)

TRANSFORMER (POWER)

ITEM No.	RATING		REPLACEMENT DATA					NOTES
	PRI.	SEC. 1	SEC. 2	APELCO PART No.	Triad			
					Merit PART No.	Stancor PART No.	Thordarson PART No.	
T1	12VCT ② 2.7A	50VCT ③ .085A		ST-86 ①				① Part #ST-89 used for AC Operation.

TRANSFORMER MIC

ITEM No.	TURNS RATIO		REPLACEMENT DATA				NOTES
	PRI.	SEC.	APELCO PART No.	Merit PART No.	Stancor PART No.	Triad PART No.	
T2	1	14	ST-88				

TRANSFORMER (AUDIO OUTPUT)

ITEM No.	IMPEDANCE		REPLACEMENT DATA					NOTES
	PRI.	SEC.	APELCO PART No.	Merit			Triad PART No.	
				Stancor PART No.	Thordarson PART No.			
T3	59002	3-4Ω	ST-19					

SPEAKER

ITEM No.	TYPE		REPLACEMENT DATA		NOTES
	SIZE	FIELD	APELCO PART No.	QUAM PART No.	
SP1	5"	PM	220006	5A07	

VIBRATOR

ITEM No.	TYPE	INPUT VOLTS	FRE-QUENCY	REPLACEMENT DATA				NOTES
				APELCO PART No.	CORNELL-DUBILIER PART No.	MALLOY PART No.	RADIART PART No.	
M1	Interrupter	12.6	115v	G-8301	6301	G1601	6301	

FUSES

ITEM No.	TYPE	RATING	REPLACEMENT DATA			NOTES
			APELCO PART No.	LITTELFUSE PART No.	BUSS PART No.	
M2	3AG	10A ① 32V	FUSE	313010 (3AG 10A 32V)	FUSE	HOLDER
					AGC 10	HKP

① AC versions use 1A in this application.

MISCELLANEOUS

ITEM No.	PART NAME	APELCO PART No.	NOTES
M3	Trimmer Cap		
M4	Trimmer Cap		
M5	Crystal		Final Amp. Tank
M6	Crystal		110mmf Max. Antenna Series
M7	Switch		Receiver (Order Freq. Desired)
M8	Switch		Transmit (Order Freq. Desired)
M9	Relay	579	Channel Selector (Rotary Type) Transmitter Filaments (Toggle Type) Transmit

WIRING DATA

General-use Unshielded Hook-up Wire Use BELDEN No. 8530 (Solid) Available in Ten Colors
Shielded Hook-up Wire Use BELDEN No. 8524 (Stranded) Available in Ten Colors
Bonding Strap Use BELDEN No. 8885
..... Use BELDEN No. 8661



NOTICE

ONLY THOSE PERSONS PROPERLY LICENSED BY FCC ARE PERMITTED TO EFFECT REPAIRS OR MAKE CRYSTAL SUBSTITUTION ON THE TRANSMITTER PORTION OF THIS UNIT.

MODEL CD-5 12

TRADE NAME	Citi-Fone Models CD 5/6, CD 5/12
MANUFACTURER	Multi-Products Co., 21470 Coolidge Highway, Oak Park 37, Michigan
TYPE SET	AC-Battery Operated 9 Tube Citizens Band Transmitter-Receiver
POWER SUPPLY	110-120 Volts AC (or) 6 Volt Storage Battery (or) 12 Volt Storage Battery
RATING	35 Watts, .36 Amp. @117 Volts AC (or) 3 Amp. @12.6Volts DC (or) 6 Amp. @6.3Volts DC (Receive)
TUNING RANGE	Any 5 of Citizens Band Channels 1 Thru 22

ALIGNMENT INSTRUCTIONS

ALIGNMENT INSTRUCTIONS—READ CAREFULLY BEFORE ATTEMPTING ALIGNMENT				
Set Squeech Control fully counterclockwise. Set Gain Control fully clockwise. Suggested Alignment Tools: A1 Thru A8... GENERAL CEMENT #8282, 8606, 8606-L, 9295, 9440 WALSCO #2526, 2543, 2544, 2545 A9, A10..... GENERAL CEMENT #8721, 8722 WALSCO #2519				
SIGNAL GENERATOR COUPLING	SIGNAL GENERATOR FREQUENCY	OUTPUT METER	ADJUST	REMARKS
1. High side to ungrounded tube shield floating over Mixer. Low side to chassis.	455KC (400v Mod.)	Across voice coil.	A1, A2, A3, A4, A5, A6	Adjust for maximum deflection.
2. High side to antenna jack. Low side to chassis.	Frequency of channel in use.	"	A7, A8	"
3.		USE VTVM AC probe to point  . Common to chassis.	A9	Press "Talk" button. Adjust for maximum deflection.
4.		Use Field strength meter or RF Output Indicator.	A10	Connect 27MC antenna (or 50-75Ω load) to antenna terminals and press "Talk" button. Adjust A10 for maximum deflection.


HOWARD W. SAMS & CO., INC. Indianapolis 6, Indiana



The listing of any available replacement part herein does not constitute in any case a recommendation, warranty or guaranty by Howard W. Sams & Co., Inc., as to the quality and suitability of such replacement part. The numbers of these parts have been compiled from information furnished to Howard W. Sams & Co., Inc., by the manufacturers of KZ353

the particular type of replacement part listed. Reproduction or use, without express permission, of editorial or pictorial content, in any manner, is prohibited. No patent liability is assumed with respect to the use of the information contained herein. © 1961 Howard W. Sams & Co., Inc., Indianapolis 6, Indiana. Printed in U.S. of America


CITI-FONE MODELS
CD-5/6, CD-5/12

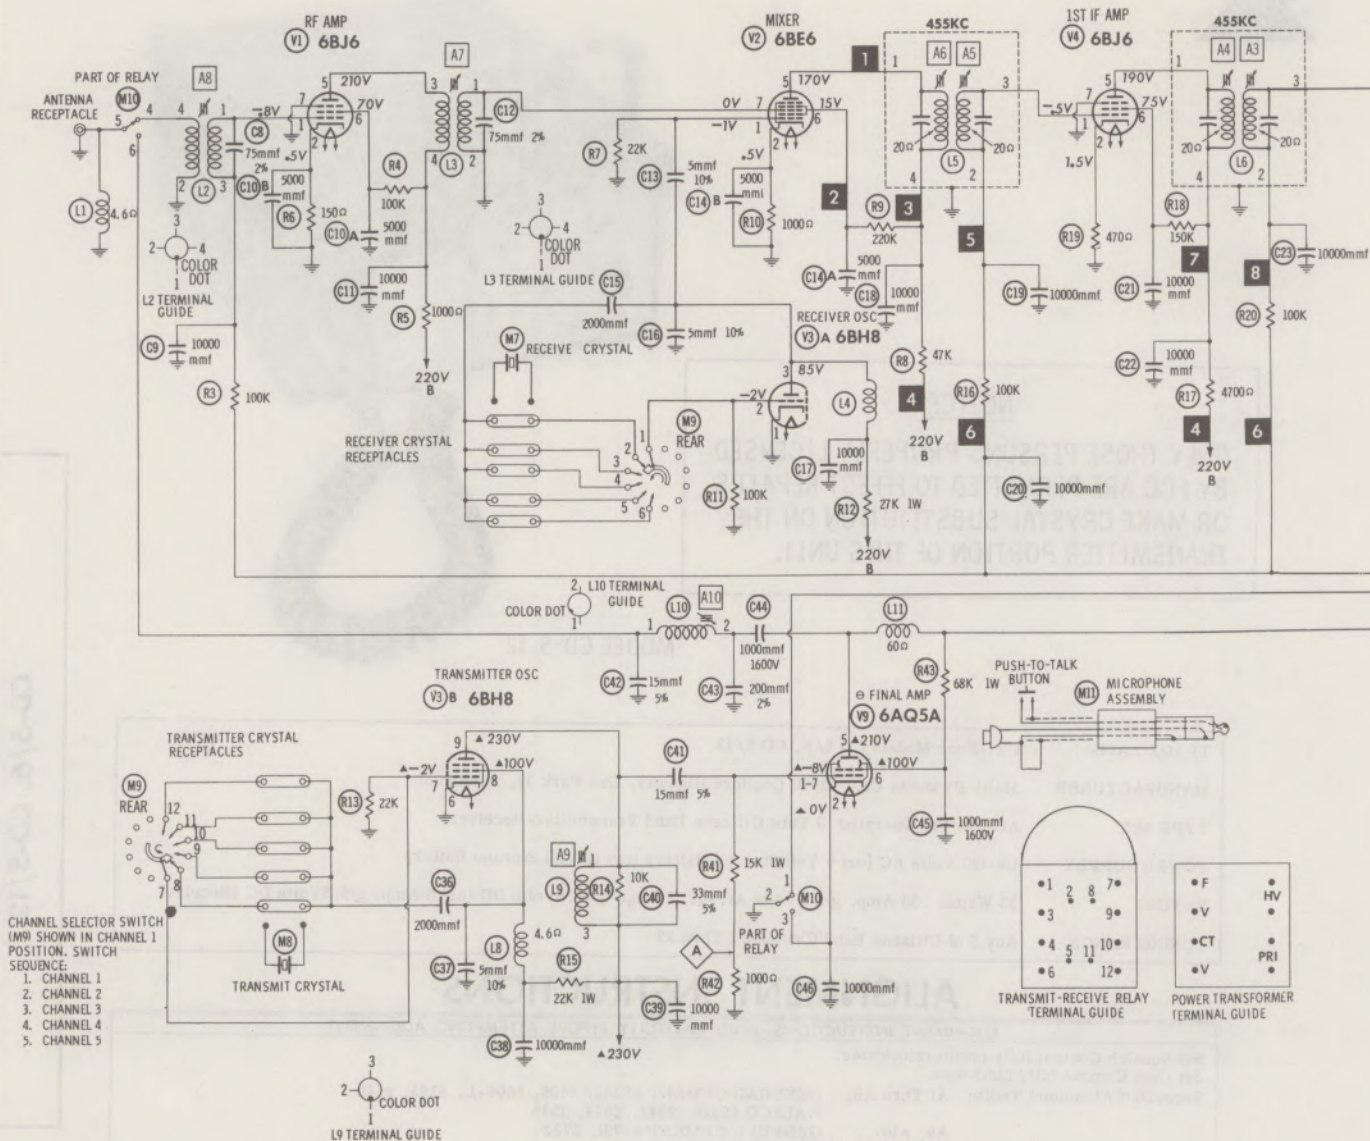


A PHOTOFAC STANDARD NOTATION SCHEMATIC

with **CIRCUITRACE**



© Howard W. Sams & Co., Inc. 1961

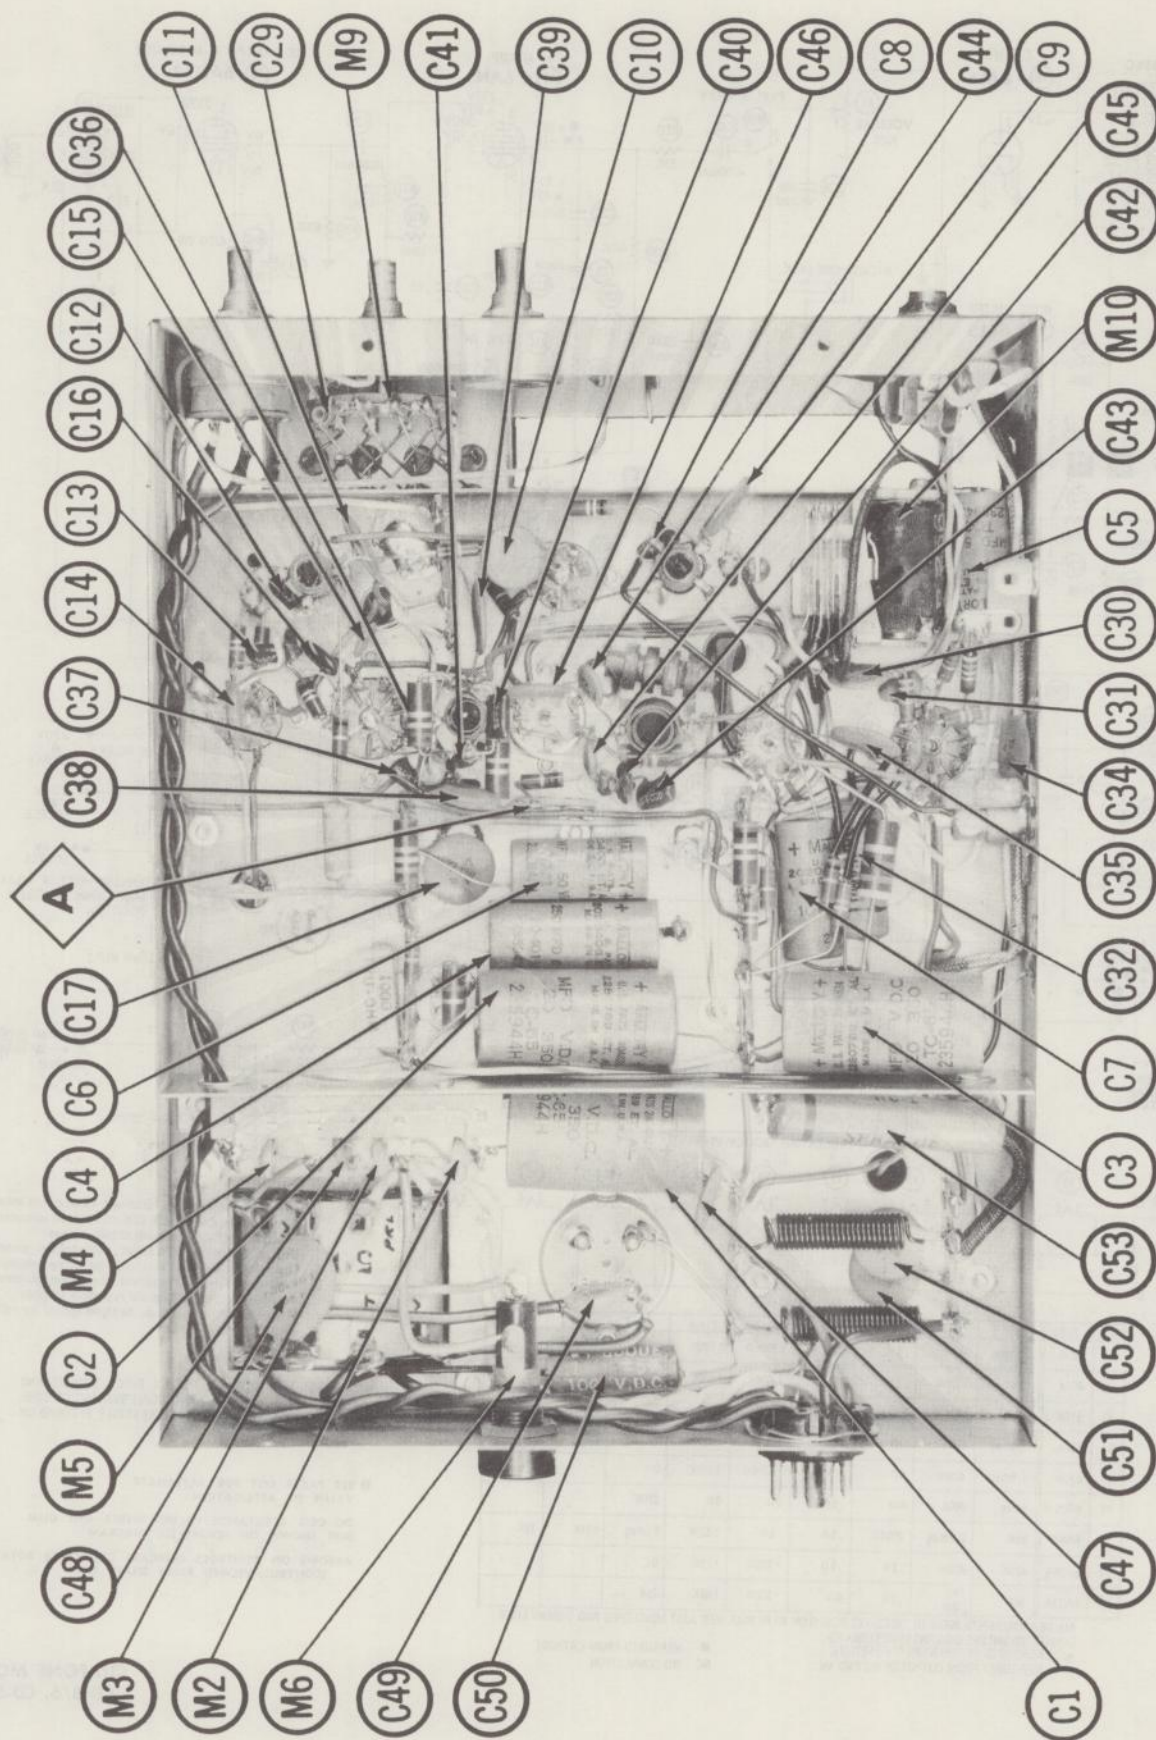

CHASSIS BOTTOM VIEW-CAPACITOR & MISC. IDENT.

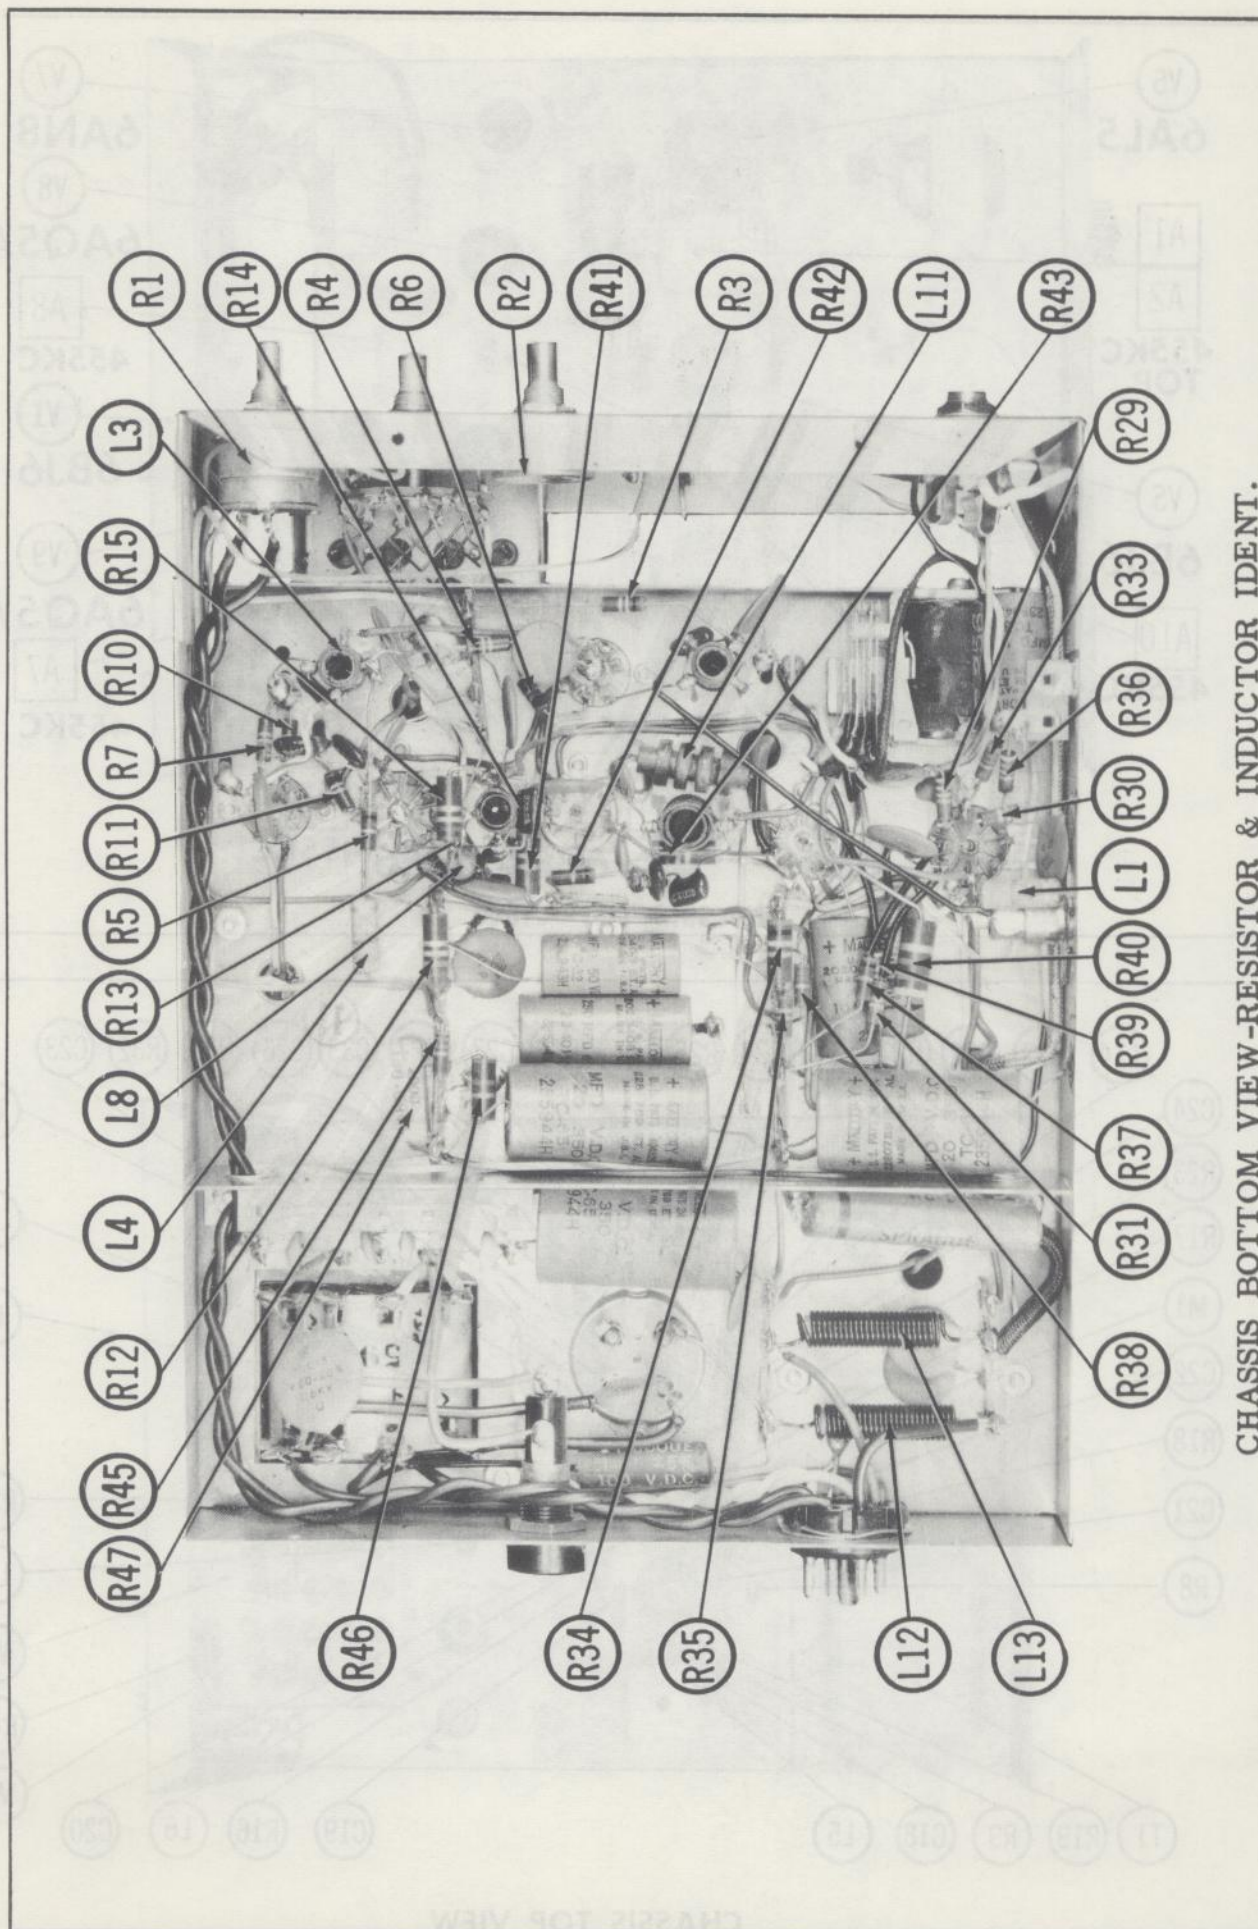

CHASSIS BOTTOM VIEW-RESISTOR & INDUCTOR IDENT.

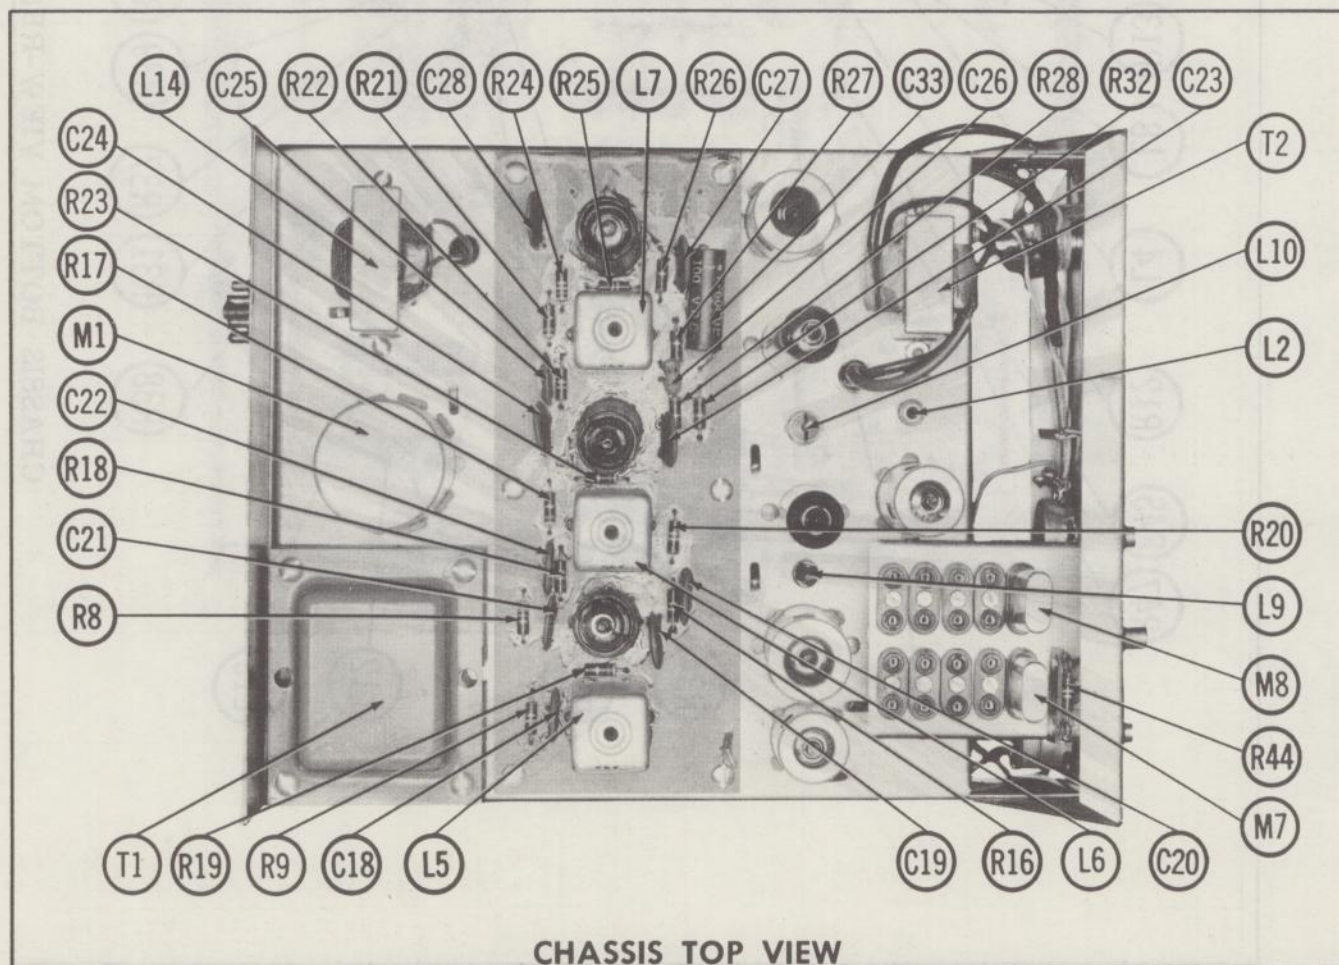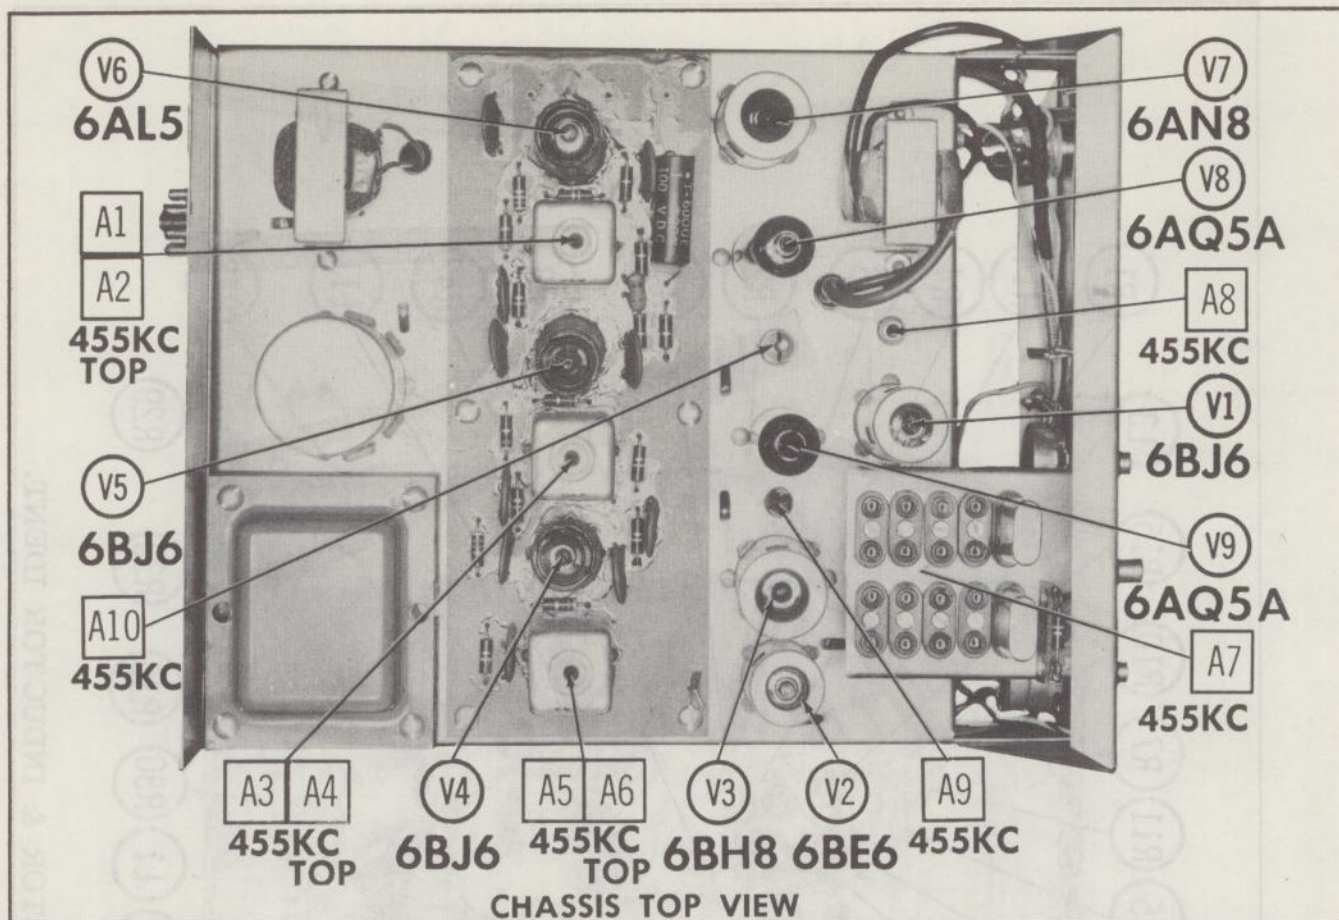

PARTS LIST AND DESCRIPTIONS

TUBES

GENERAL ELECTRIC • RAYTHEON • SYLVANIA •			
ITEM No.	USE	TYPE	TYPE
V1	RF Amplifier	6B36	6AL5
V2	Mixer	6BE6	6AN8
V3	Rec. Osc. -Treas. Osc.	6BH8	6AQ5A
V4	1st IF Amplifier	6B36	6AQ5A *
V5	2nd IF Amplifier	6B36	

* Manufacturer Recommends Replacing with Original Brand Only (Tung Sol)

ELECTROLYTIC CAPACITORS

REPLACEMENT DATA			
ITEM No.	RATING	CITTI-FONE PART No.	NOTES
C1	20 350	BR2035	TD-30-350 TVA-1608
C2	20 350	TC65	TD-30-350 TVA-1608
C3	20 350	TC65	TD-30-350 TVA-1608
C4	250 6	BR250-6	TD-350-6 TVA-102
C5	10 50	BR10-50	TD-10-50 TVA-1304
C6	10 50	BR10-50	TD-10-50 TVA-1304
C7	10 50	TC32	TD-10-50 TVA-1304

FIXED CAPACITORS

Capacity values given in the rating column are in mfd. for Paper Capacitors, and in mmfd. for Mica and Ceramic Capacitors.

REPLACEMENT DATA			
ITEM No.	RATING	REMARKS	SPRAGUE PART No.
C8	75 2%		5HK-S10
C9	10000		5HK-2D50
C10A	5000		5HK-S10
C10B	5000		M5-55
C11	10000		5HK-2D50
C12	75 2%		5HK-S10
C13	5 10%		M5-55
C14A	5000		5HK-2D50
C15	5000		5HK-S10
C16	5 10%		M5-55
C17	10000		5HK-2D50
C18	10000		5HK-S10
C19	10000		M5-55
C20	10000		5HK-2D50
C21	10000		5HK-S10
C22	10000		M5-55
C23	10000		5HK-2D50
C24	10000		5HK-S10
C25	10000		M5-55
C26	250		5HK-2D50
C27	10000		5HK-S10
C28	10000		M5-55
C29	500		5HK-2D50
C30	4700		5HK-S10
C31	250		M5-55
C32	103 4000V		5HK-2D50
C33	1.1 100V		5HK-S10
C34	10000		M5-55
C35	10000		5HK-2D50
C36	2000		5HK-S10
C37	5 10%		M5-55
C38	10000		5HK-2D50
C39	10000		5HK-S10
C40	33 5%		M5-433
C41	15 5%		M5-415
C42	15 5%		M5-415

FIXED CAPACITORS (cont)

REPLACEMENT DATA			
ITEM No.	RATING	REMARKS	SPRAGUE PART No.
C43	200 2%		BL-D10
C44	1000 1600V		BL-D10
C45	1000 1600V		5HK-S10
C46	10000		5HK-S10
C47	10000		MB-S15
C48	15000 1600V		5HK-2D50
C49A	5000		5HK-S10
C50	1 100V 5%		5HK-S10
C51	10000		5HK-S10
C52	10000		5HK-S10
C53	5 120V		5HK-S10

CONTROLS

REPLACEMENT DATA			
ITEM No.	RATING	REMARKS	INSTALLATION NOTES
R1A	500K		Volume
R1B	500K		Power Off-On
R2A	5000Ω		Squelch
R2B	5000Ω		

RESISTORS

All wattages 1/2 watt, or less, unless otherwise listed.

REPLACEMENT DATA			
ITEM No.	RATING	REMARKS	REMARKS
R3	100K		
R4	100K		
R5	1000Ω		
R6	150Ω		
R7	22K		
R8	47K		
R9	220K		
R10	1000Ω		
R11	1000Ω		
R12	27K 1W		
R13	22K		
R14	10K		
R15	22K 1W		
R16	100K		
R17	4700Ω		
R18	150K		
R19	470Ω		
R20	100K		
R21	4700Ω		
R22	150K		
R23	470K		
R24	470K		
R25	220K		

* Alternate Value.

PARTS LIST AND DESCRIPTIONS (Continued)

COILS (RF-IF)

ITEM No.	USE	REPLACEMENT DATA				NOTES
		CITI-FONE PART No.	Merit PART No.	Miller PART No.	Stencor PART No.	
L1	RF Choke (7.5uh)	① 603	BC-565	4611	RTC-8521	① IRC Part #CLA
L2	Ant.	602				
L3	RF Choke (7.5uh)	① 525	BC-565	4611	RTC-8521	
L4	1st IF	525				
L5	2nd IF	525				
L6	3rd IF	① 604	BC-565	4611	RTC-8521	
L7	RF Choke (7.5uh)	604	TV-118	6171-A	RTC-8609	
L8	Trans. Osc. Plate	G-15	TV-118	6171-A	RTC-8609	
L9	Transmitter Output		BC-549	4537	RTC-9166	
L10	RF Choke (2.5ME)			5220	RTC-9182	
L11	Flash Choke (10uh)			5220	RTC-9182	
L12	Flash Choke (10uh)					
L13	Flt. Choke (10uh)					

FILTER CHOKE

ITEM No.	CURRENT (Measured)	DC RES.	REPLACEMENT DATA				NOTES
			INDUCTANCE (1000 μ H)	CITI-FONE PART No.	Merit PART No.	Stencor PART No.	
L14	.080A	250	.5 HY	M88-628			

TRANSFORMER (POWER)

ITEM No.	RATING	REPLACEMENT DATA				NOTES
		INPUT	SEC. 1	SEC. 2	Triad PART No.	
T1	117VAC @ 210V @ 18V Tap @ 46A or .15A DC 12.6V 12.6VDC 6V * ③ 1.5A	592 ①				① For 12 VDC operation, Part #591 used for 6 VDC operation. * Secondary 2 not used in DC operation.

TRANSFORMER (AUDIO OUTPUT)

ITEM No.	IMPEDANCE	REPLACEMENT DATA				NOTES
		CITI-FONE PART No.	Merit PART No.	Stencor PART No.	Thordarson PART No.	
T2	67000 3-40	121-A6	A-3028	A-3850 ①	8-49X ①	① Drill New Mounting Hole (s).

SPEAKER

ITEM No.	TYPE	REPLACEMENT DATA			NOTES
		SIZE	FIELD	QUAM PART No.	
SP1	3 1/2" PM	3-40		3A07	

VIBRATOR

ITEM No.	TYPE	INPUT VOLTS/SEC.	REPLACEMENT DATA			NOTES
			CITI-FONE PART No.	Merit PART No.	Stencor PART No.	
M1	Interrupter Interrupter	12V 115V 115V	G-1601 1601	G-1601 1601	6301 5300	

POWER RECTIFIERS

ITEM No.	EATING CURRENT (Measured)	REPLACEMENT DATA			NOTES
		CITI-FONE PART No.	RCA PART No.	SARKIS TARTZIAN PART No.	
M2	.080A		IN1763 *	SR200 *	* Silicon
M3	.080A		IN1763 *	SR200 *	
M4	.080A		IN1763 *	SR200 *	
M5	.080A		IN1763 *	SR200 *	

FUSES

ITEM No.	TYPE	RATING	REPLACEMENT DATA		
			CITI-FONE PART No.	UTTELFUSE PART No.	BUSS PART No.
M6	3AG	15/100A 250V S/B		313.150 (.15A 250V S/B)	MDL 15/100 HKP

MISCELLANEOUS

ITEM No.	PART NAME	CITI-FONE PART No.	NOTES
M7	Crystal		
M8	Crystal Switch		Receive
M9	Relay		Transmit
M10	Relay		Channel Selector (Rotary Wafer Type)
M11	Microphone Assy.		Transmit-Receive
			Includes Push-To-Talk Switch


WIRING DATA

General-use Unshielded Hook-up Wire Use BELDEN No. 8530 (Solid) Available in Ten Colors
 Power Cord Use BELDEN No. 8534 (Stranded) Available in Ten Colors
 Use BELDEN No. 1785-B (6 Ft. Length)
 Use BELDEN No. 1725-K (7 1/2 Ft. Length)

PHOTOFACT® Folder



GLOBE MODEL CB-100

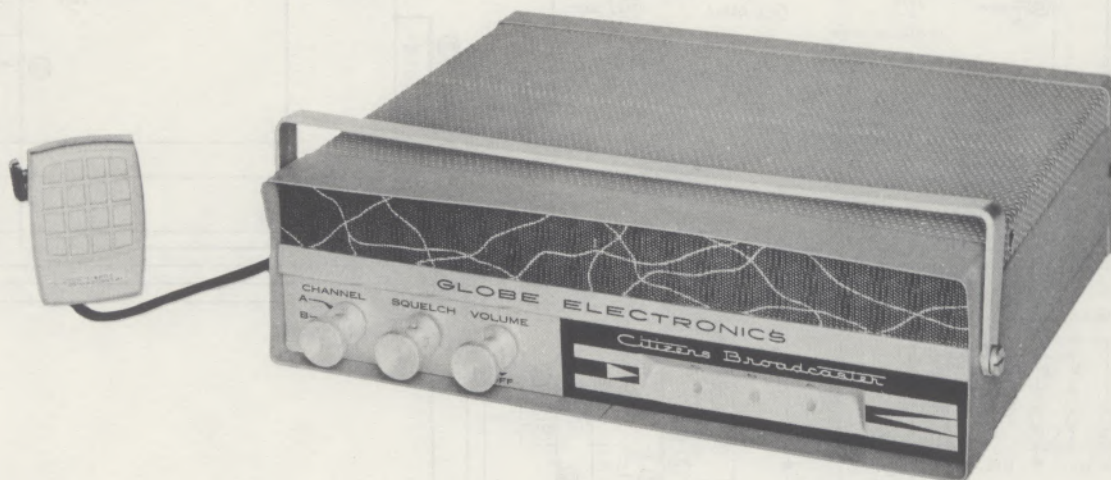

GLOBE
MODEL CB-100

TRADE NAME	Globe Model CB-100
MANUFACTURER	Globe Electronics, A Div. of Textron Electronics, Inc., 22-30 S. 34th St., Council Bluffs, Iowa
TYPE SET	AC (or) Battery Operated 10 Tube Crystal Controlled Citizens Band Transmitter-Receiver
POWER SUPPLY	110 - 120 Volts AC, 60 Cycles (or) 12 Volt Storage Battery (Versions for 6 volt Storage Battery Operation are also available.)
RATING	72 Watts, .8 Amp. @ 117 Volts AC (or) 5 Amp. @ 12.6 Volts DC (or) 10 Amp. @ 6.3 Volts DC
TUNING RANGE	Any 3 of Citizens Band Channels 1 thru 22

NOTICE




ONLY THOSE PERSONS PROPERLY LICENSED BY FCC ARE PERMITTED TO MAKE CRYSTAL SUBSTITUTION OR EFFECT REPAIRS ON THE TRANSMITTER PORTION OF THIS UNIT.

HOWARD W. SAMS & CO., INC. Indianapolis 6, Indiana




The listing of any available replacement part herein does not constitute in any case a recommendation, warranty or guaranty by Howard W. Sams & Co., Inc., as to the quality and suitability of such replacement part. The numbers of these parts have been compiled from information furnished to Howard W. Sams & Co., Inc., by the manufacturers of KZ406

the particular type of replacement part listed. Reproduction or use, without express permission, of editorial or pictorial content, in any manner, is prohibited. No patent liability is assumed with respect to the use of the information contained herein. © 1961 Howard W. Sams & Co., Inc., Indianapolis 6, Indiana. Printed in U.S. of America


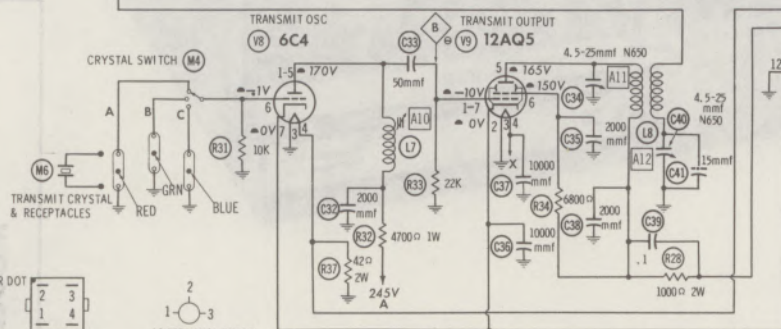
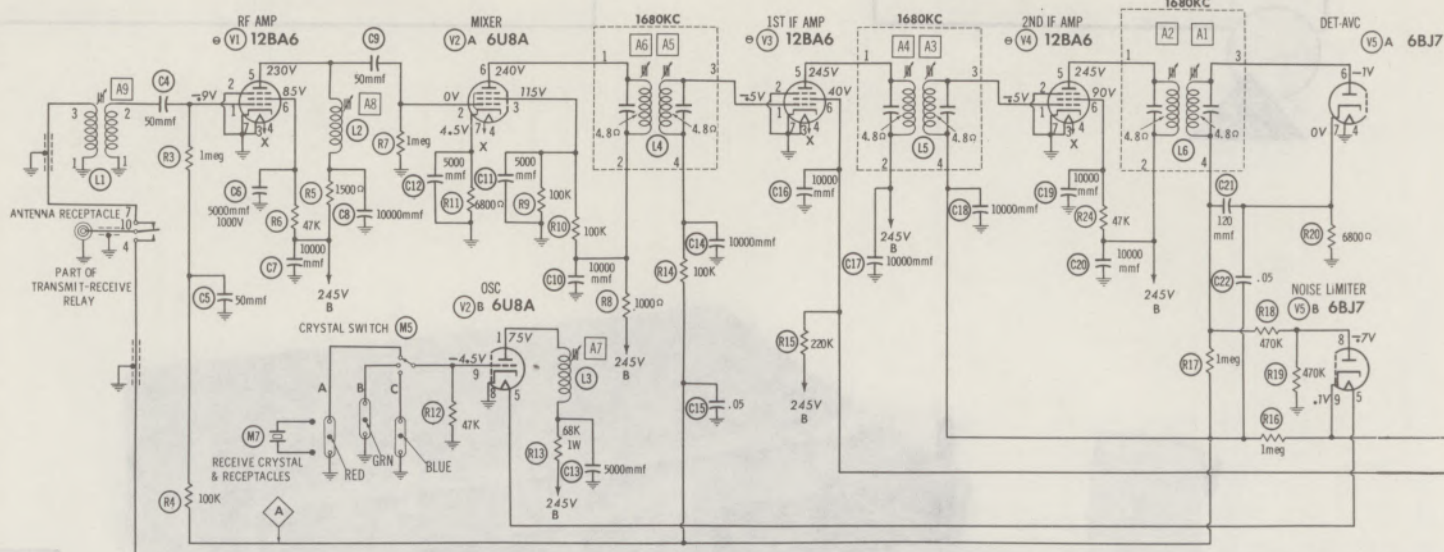


RESISTANCE READINGS									
ITEM	TUBE	Pin 1	Pin 2	Pin 3	Pin 4	Pin 5	Pin 6	Pin 7	Pin 8
V1	12BA6	3.1 meg	0 Ω	0 Ω	†1700 Ω	†47K	0 Ω		
V2	6U8A	†68K	1 meg	†90K	.1 Ω	1 Ω	†1200 Ω	6800 Ω	47K
V3	12BA6	2.1 meg	0 Ω	.1 Ω	0 Ω	†250 Ω	†220K	0 Ω	
V4	12BA6	2 meg	0 Ω	.1 Ω	0 Ω	†250 Ω	†47K	0 Ω	
V5	6BJ7	†1.8 meg	†1.2 meg	0 Ω	0 Ω	1 Ω	1 meg	6800 Ω	470K
V6	12AU7A	1500K	500K	2200 Ω	.1 Ω	.1 Ω	†520K	450K	2200 Ω
V7	12AQ5	250K	220 Ω	.1 Ω	0 Ω	†1880 Ω	†47K	NC	
V8	6C4	†5000 Ω	NC	0 Ω	1 Ω	NC	10K	†0 Ω	
V9	12AQ5	22K	†0 Ω	0 Ω	.1 Ω	†1900 Ω	†18700 Ω	22K	
V10	12BW4	85 Ω	NC	NC	.1 Ω	0 Ω	NC	80 Ω	†

† THIS READING WILL VARY DEPENDING UPON THE CONDITION OF THE ELECTROLYTIC IN THE CIRCUIT.
 ALL MEASUREMENTS MADE IN "RECEIVE" POSITION UNLESS OTHERWISE DESIGNATED.
 † MEASURED FROM PIN 9 OF V10.
 † MEASURED IN "TRANSMIT" POSITION.
 NC NO CONNECTION

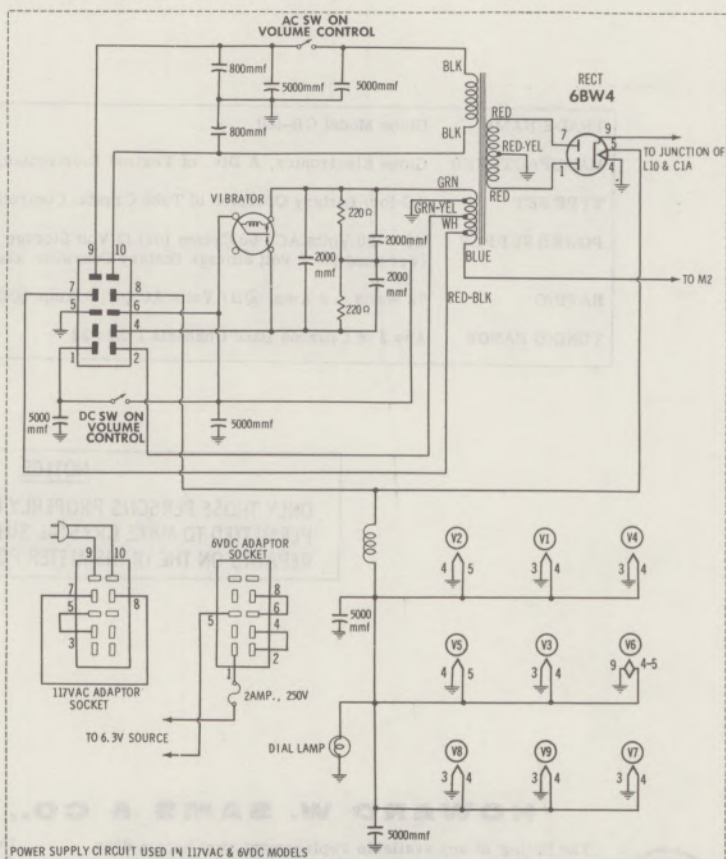


POWER SUPPLY CIRCUIT USED IN 117VAC & 6VDC MODELS

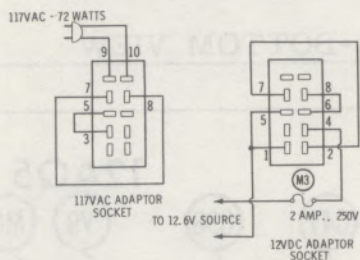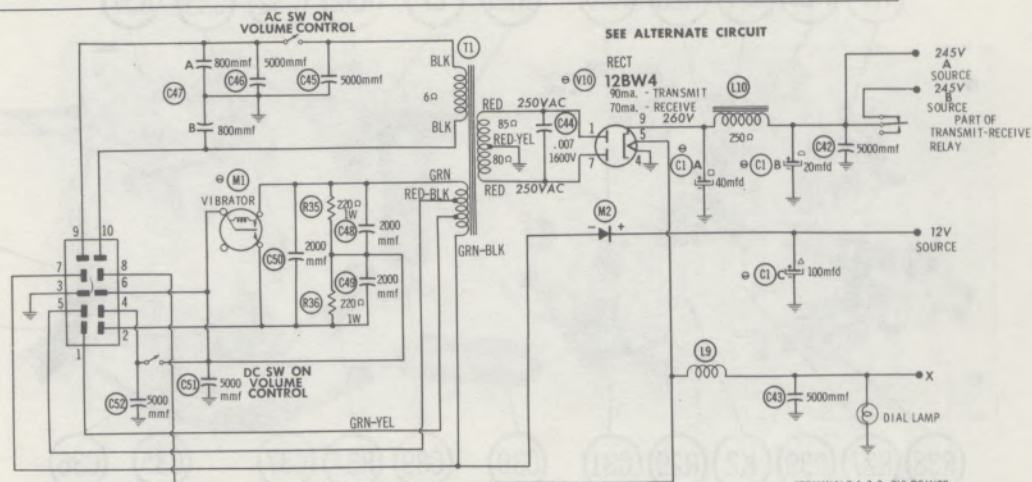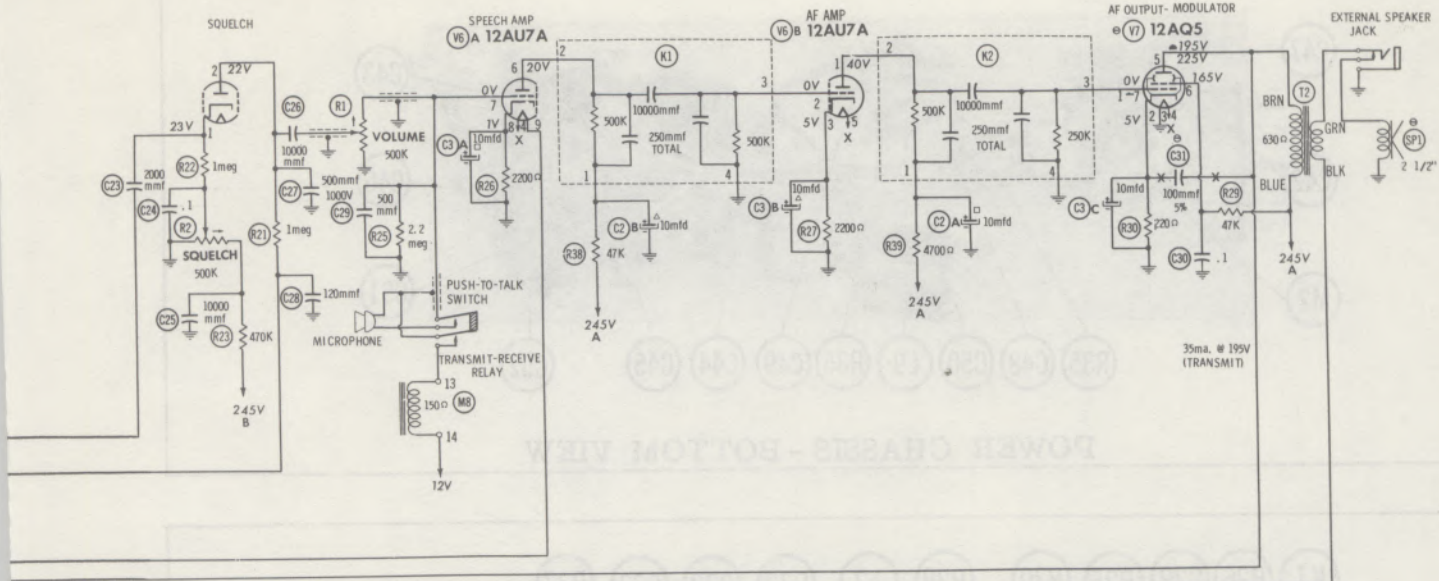

NUMBERS ASSIGNED TO COILS, SWITCHES, PLUGS, SOCKETS, AND TRANSFORMERS ARE TO FACILITATE CIRCUIT TRACING OR COMPONENT REPLACEMENT AND MAY NOT NECESSARILY BE FOUND ON THE UNIT.

TERMINALS 1 & 3: TIE POINTS
TERMINALS 2 & 5: NO CONNECTION

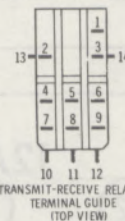


1. DC voltage measurements taken with vacuum tube voltmeter; AC voltages measured with 1000 ohm per volt voltmeter.
2. Socket connections are shown as bottom views.
3. Measured values are from socket pin to common ground.
4. Line voltage maintained at 117 volts for voltage readings.
5. Nominal tolerance on component values makes possible a variation of $\pm 15\%$ in voltage and resistance readings.
6. Volume control at maximum, no signal applied for voltage measurements.

SEE PARTS LIST FOR ALTERNATE VALUE OR APPLICATION


DC COIL RESISTANCE VALUES UNDER ONE OHM NOT SHOWN ON SCHEMATIC DIAGRAM

ARROWS ON CONTROLS INDICATE CLOCKWISE ROTATION (CONTROL VIEWED FROM SHAFT END)


GLOBE
MODEL CB-100

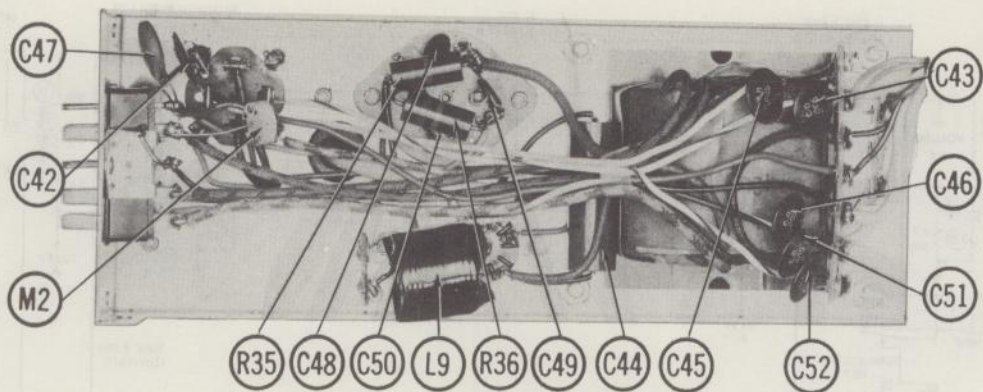

POWER CHASSIS - BOTTOM VIEW

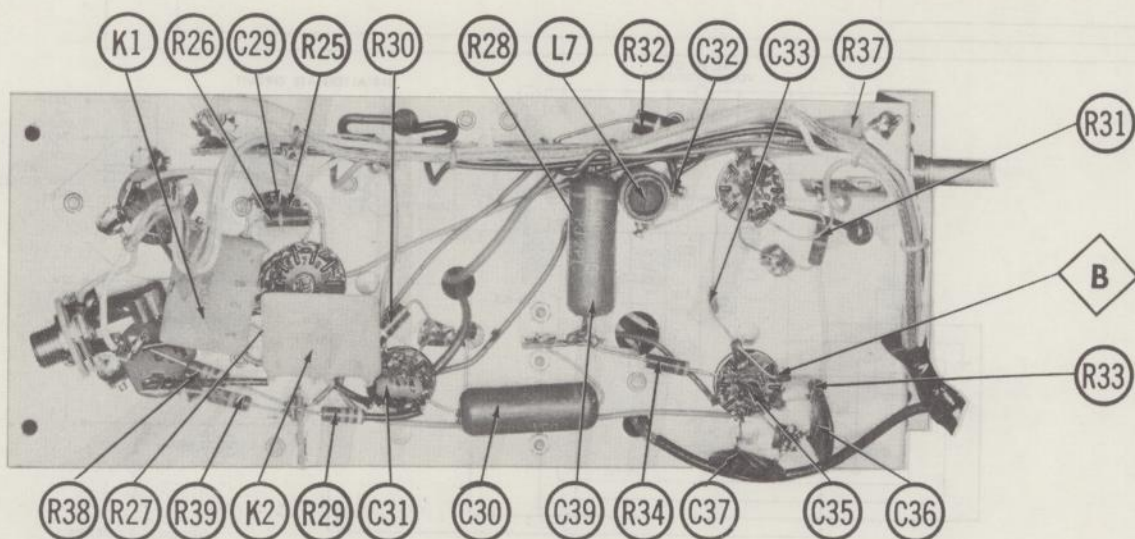

TRANSMITTER CHASSIS-BOTTOM VIEW

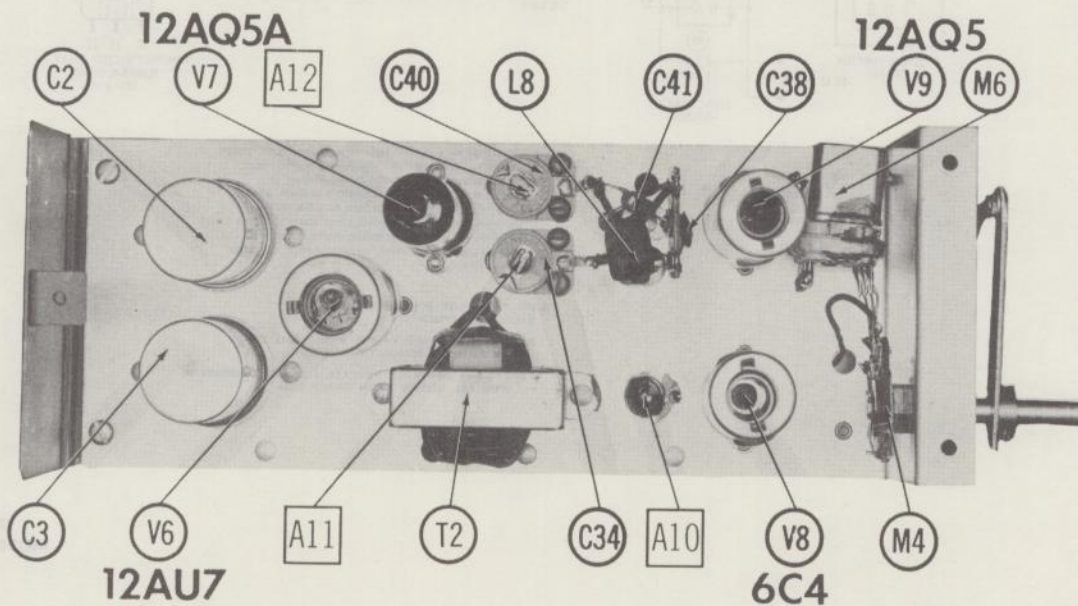

TRANSMITTER CHASSIS-TOP VIEW

ALIGNMENT INSTRUCTIONS

ALIGNMENT INSTRUCTIONS—READ CAREFULLY BEFORE ATTEMPTING ALIGNMENT

Suggested Alignment Tools: A1 thru A6.....GENERAL CEMENT #8282, 8606, 8606-L, 9295, 9440
WALSCO #2526, 2543, 2544, 2545
A7, A8, A9, A10.....GENERAL CEMENT #8721, 8722
WALSCO #2519
A11, A12.....GENERAL CEMENT #5000, 5003, 5066, 8276, 8290, 9087, 9089
WALSCO #2512, 2525, 2528

RECEIVER ALIGNMENT


Set Squelch Control (R2) to maximum counterclockwise.


	SIGNAL GENERATOR COUPLING	SIGNAL GENERATOR FREQUENCY	RADIO DIAL SETTING	CONNECT VTVM	ADJUST	REMARKS
1.	High side thru .001mfd to pin 2 (grid) of V2 (mixer). Low side to chassis.	1680KC (400v Mod.)		DC probe to point Δ . Common to chassis.	A1, A2, A3, A4, A5, A6, A7	Adjust for maximum deflection. Adjust A7 from maximum inductance toward minimum inductance for abrupt meter rise.
Disconnect VTVM and tune oscillator signal on an accurately calibrated receiver. (Signal will be 1680KC above the Channel Frequency in use.) If more than one channel is to be used, it may be necessary to "average" the oscillator adjustment (A7) to keep crystals within operating frequency limits (+ 1000v).						
2.	High side to antenna jack, common to chassis.	Channel Desired		DC probe to point Δ . Common to chassis.	A8, A9	Adjust for maximum deflection . If signal injected is excessive, disconnect generator and couple loosely to jack.

TRANSMITTER ALIGNMENT


Connect DC probe of VTVM to point Δ , common to chassis. Adjust A10 for maximum deflection.

Remove VTVM and connect a 50 Ω dummy load to antenna jack. Adjust A11 and A12 for maximum output. After antenna is connected, retouch A11 and A12 for maximum output.

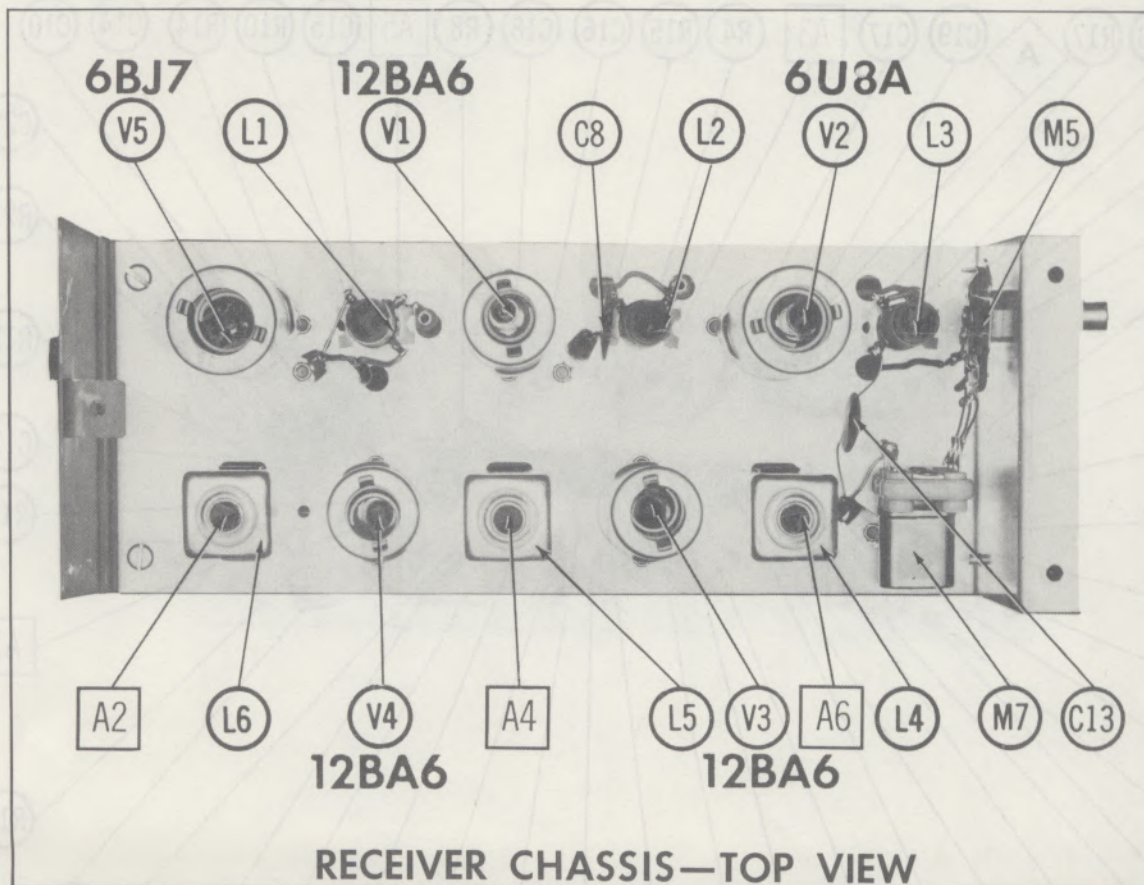

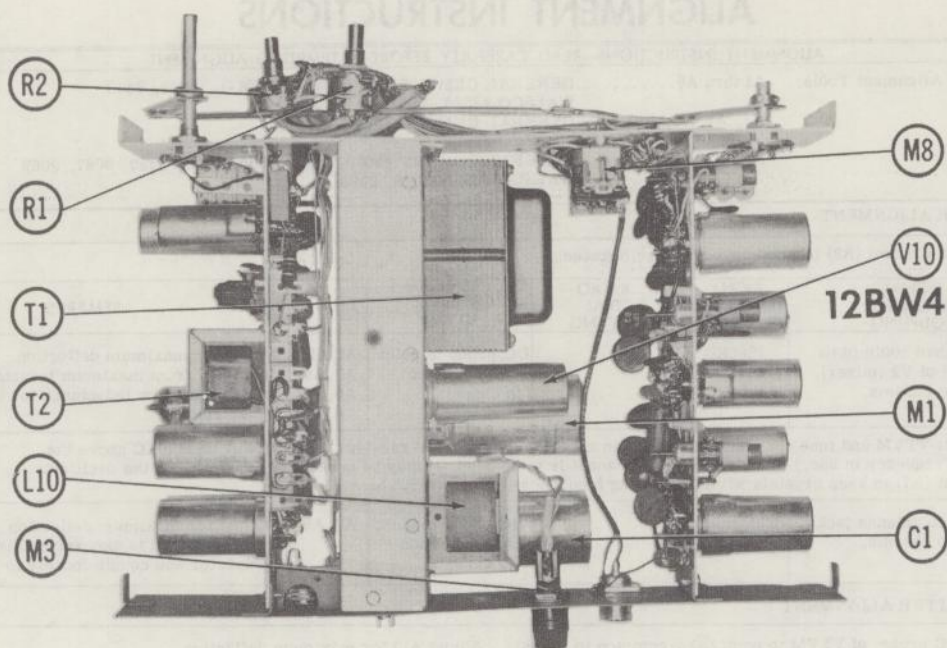

COMPLETE ASSEMBLY-TOP VIEW

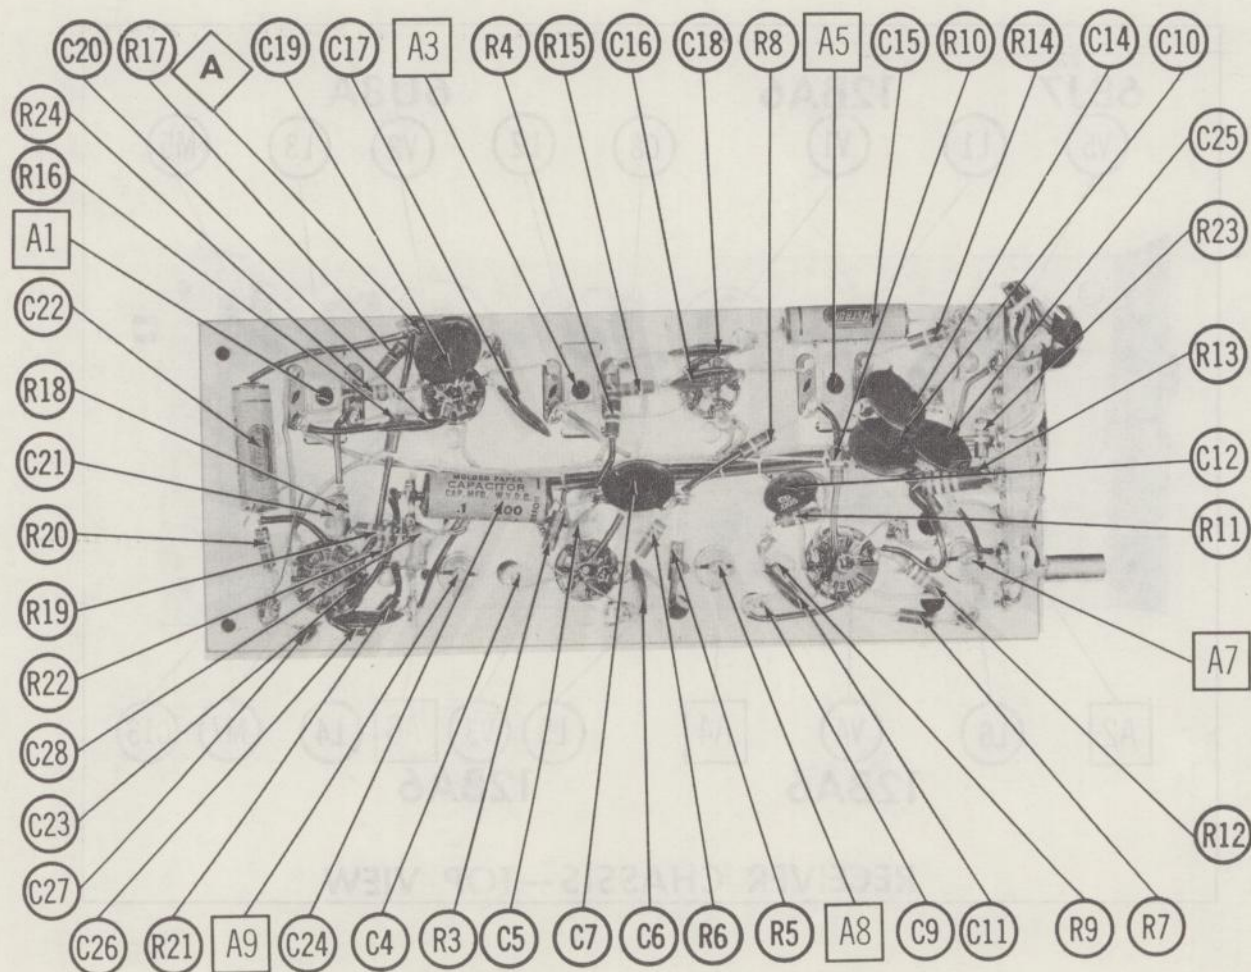

RECEIVER CHASSIS-TOP VIEW

PARTS LIST AND DESCRIPTIONS

TUBES

GENERAL ELECTRIC				RAYTHEON				SYLVANIA			
ITEM No.	USE	TYPE	ITEM No.	USE	TYPE	ITEM No.	USE	TYPE	ITEM No.	USE	TYPE
V1	RF Amplifier	12BA6 *	V6	AF Amp. -Speech Amp.	12AU7A	V7	AF Output-Modulator	12AQ5 *	V8	Trans. Osc.	6C4
V2	Mixer-Osc.	6U8A	V8	Trans. Osc.	12AQ5 *	V9	Trans. Output	12AQ5 *	V10	Rectifier	12BW4 *
V3	1st IF Amplifier	12BA6 *									
V4	2nd IF Amplifier	12BA6 *									
V5	Det.-AVC-Noise Lim-Squelch	6BJ7									

* Equivalent 6V Filament Tubes used in 6 Volt Versions.

ELECTROLYTIC CAPACITORS

REPLACEMENT DATA				REPLACEMENT DATA			
ITEM No.	RATING	GLOBAL PART No.	AEROVOX PART No.	CORNEILL DUBILIER PART No.	MAILLORY PART No.	PYRAMID PART No.	SPRAGUE PART No.
C1A	450	1106-023	AFH3-139-50C1090	F P367	TMT-3685	TMD-2610	TVL-3755
B	250						
C	100						
C2A	350	1106-022	AFH2-47	F P231			
B	100						
C3A	25	1106-021	AFH3-22	F P330, 5	TMT-3292		
B	10						
C	10						

* Note 1. In some versions CIA and CIB may be one unit (Part #1106-020) and C1C may be a separate unit (Part #1106-019).

FIXED CAPACITORS

Capacity values given in the rating column are in mfd. for Paper Capacitors, and in mmfd. for Mica and Ceramic Capacitors.

REPLACEMENT DATA				REPLACEMENT DATA			
ITEM No.	RATING	REMARKS	AEROVOX PART No.	CORNEILL DUBILIER PART No.	ELMENDO PART No.	MAILLORY PART No.	SPRAGUE PART No.
C4	50		D1-50	LI005	CCD-500	GP450	10TS-Q50
C5	50		D1-50	LI005	CCD-500	GP450	10TS-Q50
C6	5000 1000V		BPD-005	BYA10D5	CCD-502	B-250	5HK-D50
C7	10000		BPD-01	BYA10S1	CCD-103	B-110	5HK-S10
C8	10000		BPD-01	LI005	CCD-103	B-110	5HK-S10
C9	50		SI 50	BYA10S1	CCD-500	GP450	10TS-Q50
C10	10000		BPD-01	BYA10S1	CCD-103	B-110	5HK-S10
C11	5000		BPD-005	BYA10D5	CCD-502	B-250	5HK-D50
C12	5000		BPD-005	BYA10D5	CCD-502	B-250	5HK-D50
C13	5000		BPD-005	BYA10D5	CCD-502	B-250	5HK-D50
C14	5000		BPD-005	BYA10D5	CCD-502	B-250	5HK-D50
C15	.05 200V		P288N-05	CUH255	4DP-3-503	GEM-415	2TM-P10
C16	10000		BPD-01	BYA10S1	CCD-103	B-110	5HK-S10
C17	10000		BPD-01	BYA10S1	CCD-103	B-110	5HK-S10
C18	10000		BPD-01	BYA10S1	CCD-103	B-110	5HK-S10
C19	10000		BPD-01	BYA10S1	CCD-103	B-110	5HK-S10
C20	10000		BPD-01	LI0712	CCD-121	GP312	10TS-T12
C21	120		SI 120	BYA10S1	CCD-103	GEM-415	2TM-S50
C22	.05 200V		P288N-05	CUH255	4DP-3-503	GEM-415	2TM-S50
C23	2000		BPD-002	BYA10D2	CCD-202	B-220	5HK-D20
C24	.1 200V		P288N-1	CUH255	2DP-3-104	GEM-201	2TM-P10
C25	10000		BPD-01	BYA10S1	CCD-103	B-110	5HK-S10
C26	10000		BPD-01	BYA10S1	CCD-103	B-110	5HK-S10
C27	5000 1000V		BPD-005	BYA10D5	CCD-502	B-250	5HK-D50
C28	120		SI 120	BYA10S1	CCD-103	B-110	5HK-S10
C29	500		BPD-0005	BYA10T5	CCD-501	B-350	10TS-T50
C30	.1 200V		BPD-005	BYA10T5	CCD-501	B-350	10TS-T50
C31	100 5%		BPD-002	BYA10D2	CCD-202	B-220	5HK-D20
C32	50		D1-50	LI005	CCD-500	GP450	10TS-Q50
C33	50		D1-50	LI005	CCD-500	GP450	10TS-Q50
C34	4.5-25 N650		BPD-002	BYA10D2	CCD-202	B-220	5HK-D20
C35	10000		BPD-01	BYA10S1	CCD-103	B-110	5HK-S10
C36	10000		BPD-01	BYA10S1	CCD-103	B-110	5HK-S10
C37	10000		BPD-01	BYA10S1	CCD-103	B-110	5HK-S10
C38	2000		BPD-002	BYA10D2	CCD-202	B-220	5HK-D20
C39	.1 200V		P288N-1	CUH255	2DP-3-104	GEM-201	2TM-P10
C40	4.5-25 N650		BPD-002	BYA10D2	CCD-202	B-220	5HK-D20

FIXED CAPACITORS (cont)

REPLACEMENT DATA				REPLACEMENT DATA			
ITEM No.	RATING	REMARKS	AEROVOX PART No.	CORNEILL DUBILIER PART No.	ELMENDO PART No.	MAILLORY PART No.	SPRAGUE PART No.
C41	15		SI 15	LI0015	CCD-150	GP415	10TS-Q15
C42	5000		BPD-005	BYA10D5	CCD-502	B-250	5HK-D50
C43	5000		BPD-005	BYA10D5	CCD-502	B-250	5HK-D50
C44	.007 1600V		P1684CM-007	CUH16D7	16DP-3-702	GEM-1627	MB-D7
C45	5000		BPD-005	BYA10D5	CCD-502	B-250	5HK-D50
C46	5000		BPD-005	BYA10D5	CCD-502	B-250	5HK-D50
C47A	800		BPD-0008	BYA10T82	CCD-801	B-382	10TS-T80
B	800		BPD-0008	BYA10T82	CCD-801	B-382	10TS-T80
C48	2000		BPD-002	BYA10D2	CCD-202	B-220	5HK-D20
C49	2000		BPD-002	BYA10D2	CCD-202	B-220	5HK-D20
C50	2000		BPD-002	BYA10D2	CCD-202	B-220	5HK-D20
C51	5000		BPD-005	BYA10D5	CCD-502	B-250	5HK-D50
C52	5000		BPD-005	BYA10D5	CCD-502	B-250	5HK-D50

Note 1. Not used in some versions.
Globe Part Number.

CONTROLS

REPLACEMENT DATA				REPLACEMENT DATA			
ITEM No.	RATING	REMARKS	AEROVOX PART No.	CORNEILL DUBILIER PART No.	ELMENDO PART No.	MAILLORY PART No.	SPRAGUE PART No.
RIA	500K		B-60-S	Q13-133	U48	Volume	
B	Switch		RS-2	Not Req.	US-27	Power Off-On	
C	Switch		SWE-20	76-2	Squelch		
B2	500K		2300-016				

RESISTORS

All wattages 1/2 watt, or less, unless otherwise listed.

REPLACEMENT DATA				REPLACEMENT DATA			
ITEM No.	RATING	REMARKS	AEROVOX PART No.	CORNEILL DUBILIER PART No.	ELMENDO PART No.	MAILLORY PART No.	SPRAGUE PART No.
R3	1meg		R22	1meg			
R4	100K		R23	470K			
R5	1500K		R24	47K			
R6	47K		R25	2.2meg			
R7	1meg		R26	2200K			
R8	1000K		R27	2200K			
R9	100K		R28	1000K 2W			
R10	100K		R29	47K			
R11	6800K		R30	220K			
R12	47K		R31	10K			
R13	68K 1W		R32	4700K 1W			
R14	100K		R33	22K			
R15	220K		R34	6800K			
R16	1meg		R35	220K 1W			
R17	1meg		R36	220K 1W			
R18	470K		R37	42K 2W			
R19	470K		R38	47K			
R20	6800K		R39	4700K			
R21	1meg						

COMPONENT COMBINATIONS

ITEM No.	USE	DESCRIPTION	GLOBE PART No.	REPLACEMENT DATA
K1	Audio Coupling	250mmf, 10000mmf, 500K	1109-005	Aerovox Centralab Sprague
K2	Audio Coupling	250mmf, 10000mmf, 250K	1109-001	Aerovox Centralab Sprague

PARTS LIST AND DESCRIPTIONS (Continued)

COILS (RF-IF)

ITEM No.	USE	REPLACEMENT DATA				NOTES
		GLOBE PART No.	Meritt PART No.	Miller PART No.	Stancor PART No.	Workman TV PART No.
L1	Ant.	1400-104	TV-116	6250	RTC-8568	T232A
L2	RF	1400-105	TV-118	6171-A	RTC-8609	T216
L3	Osc. Plate	1400-103	TV-118	6171-A	RTC-8609	T216
L4	1st IF	1205-001				
L5	2nd IF	1205-001				
L6	3rd IF	1205-001				
L7	Osc. Plate	1400-106	TV-118	6171-A	RTC-8609	T216
L8	Output Final	1400-107				
L9	FIL. Choke	1300-018	BC-537	5219	RTC-9181	

FILTER CHOKE

ITEM No.	RATINGS	REPLACEMENT DATA				NOTES
		GLOBE PART No.	Meritt PART No.	Stancor PART No.	Thordarson PART No.	Triad PART No.
L10	CURRENT (Measured) DC RES. 250Ω 5.4 HY	1300-017				

TRANSFORMER (POWER)

ITEM No.	RATING	REPLACEMENT DATA				NOTES
		GLOBE PART No.	Meritt PART No.	Stancor PART No.	Thordarson PART No.	Triad PART No.
T1	PRI. 1 117V @ 500VCT .8A SEC. 1 12.6V @ 2A (AC Operation) PRI. 2 12.6VCT ③ 3A	1200-018				

TRANSFORMER (AUDIO OUTPUT)

ITEM No.	IMPEDANCE	REPLACEMENT DATA				NOTES
		GLOBE PART No.	Meritt PART No.	Stancor PART No.	Thordarson PART No.	Triad PART No.
T2	PRI. 17K SEC. 3-4Ω	1203-011				

SPEAKER

ITEM No.	TYPE	REPLACEMENT DATA		NOTES
		GLOBE PART No.	QUAM PART No.	
SP1	SIZE 2½" PM V. C. IMP. 3-4Ω	4002-001A *	25A07	* Alternate Part #4002-001

VIBRATOR

ITEM No.	TYPE	INPUT VOLTS/FREQUENCY	REPLACEMENT DATA			NOTES
			GLOBE PART No.	CORNELL-DUBILIER PART No.	MALLOY PART No.	
M1	Interrupter 6	12 115V 115V	4001-001	G8801	G1601	12 Volt versions 6 Volt versions

* 6 Volt Versions.

POWER RECTIFIERS

ITEM No.	RATING	REPLACEMENT DATA			NOTES
		GLOBE PART No.	RCA PART No.	SARKIS TAZIAN PART No.	
M2	CURRENT (Measured) 3700-014 *	1N1763 *	2F4 *	SR200 *	* Silicon

FUSES

ITEM No.	TYPE	RATING	REPLACEMENT DATA			
			FUSE	GLOBE PART No.	LITTELFUSE PART No.	BUSS PART No.
M3	3AG	2A 250V	1500-011			
				HOLDER	342001	FUSE AGC 2
					312002 (3AG 2A 250V)	HOLDER HKP

MISCELLANEOUS

ITEM No.	PART NAME	GLOBE PART No.	NOTES
M4	Switch	2100-027	Transmitter Crystal (Rotary, Wafer Type)
M5	Crystal	2100-028	Receiver Crystal (Rotary, Wafer Type)
M6	Crystal		Transmitter
M7	Relay	3500-015	Receiver
M8	Microphone	4000-003	

WIRING DATA

General-use Unshielded Hook-up Wire	Use BELDEN No. 8530 (Solid) Available in Ten Colors 8524 (Stranded) Available in Ten Colors
Shielded Hook-up Wire	Use BELDEN No. 8885
Bonding Strap	Use BELDEN No. 8661
Power Cord	Use BELDEN No. 1765-B (6 Ft. Length) 1725-K (7½ Ft. Length)



NOTICE

ONLY THOSE PERSONS PROPERLY LICENSED BY FCC ARE PERMITTED TO MAKE CRYSTAL SUBSTITUTION OR EFFECT REPAIRS ON THE TRANSMITTER PORTION OF THIS UNIT.

TRADE NAME	Globe Model X-90 (Pocketphone)		
MANUFACTURER	Globe Electronics, A Div. of Textron Electronics, Inc., Council Bluffs, Iowa		
TYPE SET	Battery Operated Transistorized Portable Citizens Band Transmitter-Receiver		
POWER SUPPLY	9 Volts DC	RATING	15MA @ 9 Volts DC (No Signal, Minimum Volume)
FREQ. RANGE	Any One of Citizens Band Channels		18MA @ 9 Volts DC (No Signal, Maximum Volume)
			25MA @ 9 Volts DC (Transmit)

ALIGNMENT INSTRUCTIONS

ALIGNMENT INSTRUCTIONS—READ CAREFULLY BEFORE ATTEMPTING ALIGNMENT

Volume control should be at maximum position. Output of signal generator should be no higher than necessary to obtain an output reading.

Suggested Alignment Tools: A1 thru A5 GENERAL CEMENT #9440
A6 GENERAL CEMENT #8282, 8606, 8606L, 9295, 9440
WALSCO #2526, 2543, 2544, 2545

RECEIVER ALIGNMENT

	SIGNAL GENERATOR COUPLING	SIGNAL GENERATOR FREQUENCY	RADIO DIAL SETTING	OUTPUT METER	ADJUST	REMARKS
1.	High side thru .01mfd to base of Receiver Mixer. Low side to foil along board edge.	Frequency of desired operating channel.		Across Voice Coil	A1	Adjust for maximum output, then turn slug clockwise one half turn. Press the push-to-talk switch several times to make sure oscillator starts each time. If it fails to start, turn the adjust further and recheck.
2.	"	"		"	A2, A3, A4	Adjust for maximum output.

TRANSMITTER ALIGNMENT

- Using an RF Output meter, press push-to-talk switch and adjust A5 for maximum RF output, then turn one half turn clockwise. Press the switch several times to make sure the Oscillator operates. If it fails to start, turn the slug further and recheck. Adjust A6 and A7 for maximum output as indicated on meter. A7 (slug in antenna coil) may not be used.



HOWARD W. SAMS & CO., INC. Indianapolis 6, Indiana

The listing of any available replacement part herein does not constitute in any case a recommendation, warranty or guaranty by Howard W. Sams & Co., Inc., as to the quality and suitability of such replacement part. The numbers of these parts have been compiled from information furnished to Howard W. Sams & Co., Inc., by the manufacturers of KZ616

the particular type of replacement part listed. Reproduction or use, without express permission, of editorial or pictorial content, in any manner, is prohibited. No patent liability is assumed with respect to the use of the information contained herein. © 1961 Howard W. Sams & Co., Inc., Indianapolis 6, Indiana. Printed in U.S. of America

GLOBE MODEL X-90
(Pocketphone)



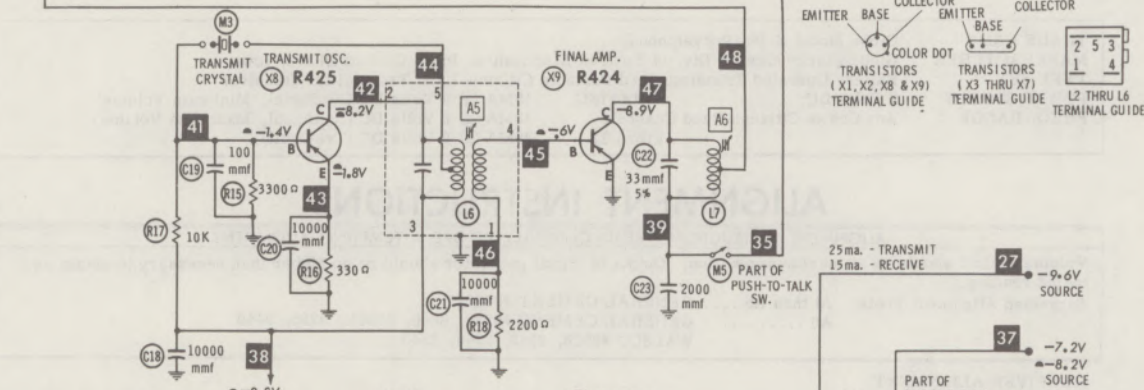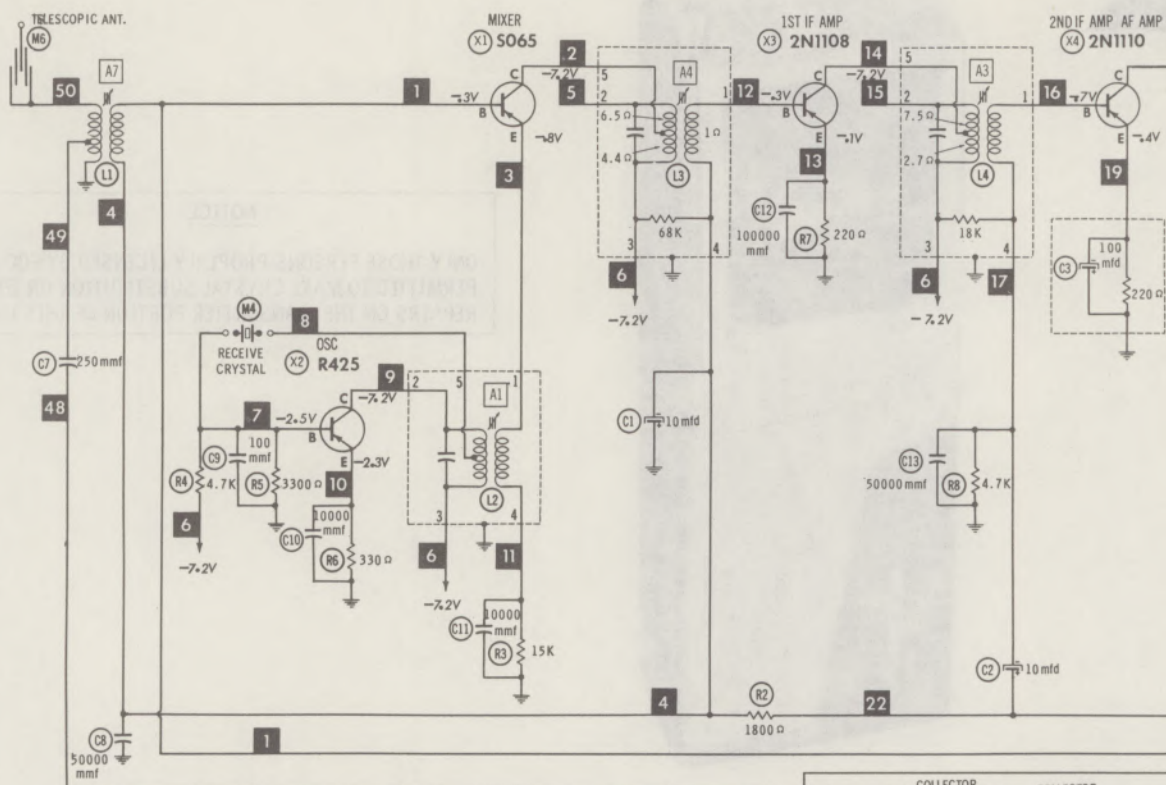

RESISTANCE MEASUREMENTS NOT GIVEN BECAUSE OF THE WIDE VARIATION IN INTERNAL TRANSISTOR RESISTANCE.
 * MEASURED IN "TRANSMIT" POSITION


1. DC voltage measurements taken with vacuum tube voltmeter.
2. Socket connections or transistor terminals are shown as bottom views.
3. Measured values are from socket pin or terminal to common ground.
4. Nominal tolerance on component values makes possible a variation of $\pm 15\%$ in voltage and resistance readings.
5. Volume control at maximum, no signal applied for voltage measurements.

NUMBERS ASSIGNED TO COILS, SWITCHES, PLUGS, SOCKETS, AND TRANSFORMERS ARE TO FACILITATE CIRCUIT TRACING OR COMPONENT REPLACEMENT AND MAY NOT NECESSARILY BE FOUND ON THE UNIT.

DC COIL RESISTANCE VALUES UNDER ONE OHM NOT SHOWN ON SCHEMATIC DIAGRAM

A PHOTOFACIT STANDARD NOTATION SCHEMATIC with CIRCUITRACE

© Howard W. Sams & Co., Inc. 1961

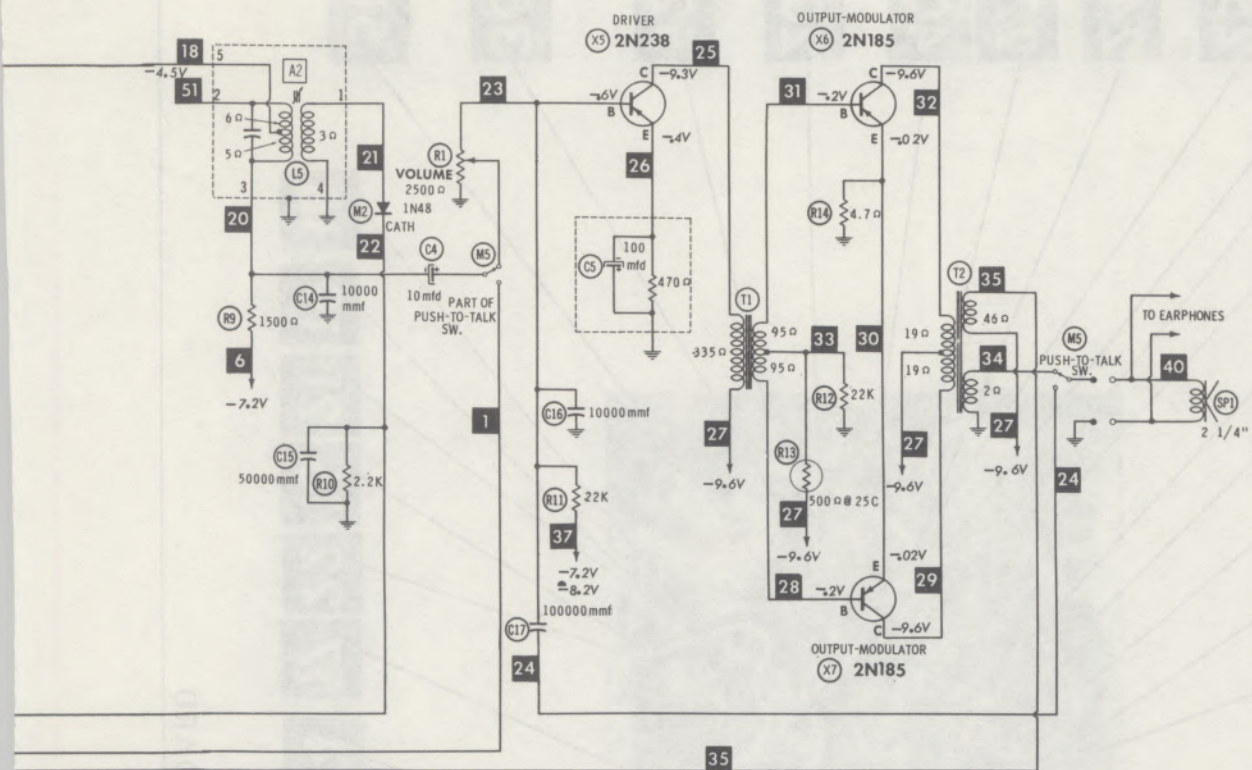

GLOBE MODEL X-90
(Pocketphone)



A Howard W. Sams CIRCUITRACE[®] Photo

PRINTED BOARD

PARTS LIST AND DESCRIPTIONS

TRANSISTORS

ITEM No.	ORIG. TYPE	USE	REPLACEMENT DATA			NOTES
			RCA PART No.	RAYTHEON PART No.	SYLVANIA PART No.	
X1	S065	Mixer		2N486	2N412	PNP
X2	R425	Oscillator		2N483	2N409	PNP
X3	2N1108	1st IF Amplifier		2N362	2N407	PNP
X4	2N1110	2nd IF Amp. - AF Amp.		2N633	2N270	PNP
X5	2N238 *	Driver	2N407			PNP
X6	2N185 *	Output - Modulator	2N407			PNP
X7	2N185 *	Output - Modulator	2N407			PNP
X8	R425	Trans. Oscillator		2N633	2N270	PNP
X9	R424	Final Amplifier				PNP

* Supplied as matched kit.

ELECTROLYTIC CAPACITORS

ITEM No.	RATING CAP.	VOLT.	GLOBE PART No.	REPLACEMENT DATA				NOTES
				AEROVOX PART No.	CORNELL-DUBIER PART No.	MALLORY PART No.	PYRAMID PART No.	
C1	10	10	1106-026A	BCD10010	ECBP408	PET1340	MLV10-10	VL-1127
C2	10	10	1106-026A	BCD10010	ECBP408	PET1340	MLV10-10	VL-1127
C3	100	6	1109-006	BCD10010	ECBP117	PET1340	MLV100-6†	VL-1100 †
C4	10	10	1106-026A	BCD10010	ECBP408	PET1340	MLV10-10	VL-1127
C5	100	6	1109-007	BCD10010	ECBP117	PET1340	MLV100-6 *	VL-1100 *
C6	100	10	1106-027	BCD10010	ECBP417	PET1400	MLV100-10	VL-1140

† Connect 220Ω Resistor across Electrolytic.

* Connect 470Ω Resistor across Electrolytic.

FIXED CAPACITORS

Capacity values given in the rating column are in mfd. for Paper Capacitors, and in mmfd. for Mica and Ceramic Capacitors.

ITEM No.	RATING	REMARKS	REPLACEMENT DATA				SPRAGUE PART No.
			AEROVOX PART No.	CORNELL-DUBIER PART No.	MALLORY PART No.	ELMENDO PART No.	
C7	250		SI 250	D8-251	L10T25	CCD-251	10TS-T25
C8	50000 10V		C80V503AM	UK10-503	H-05SI	CCD-101	TG-S50
C9	100		DI-100	DD-101	L10T1		10TS-T10
C10	10000		C80V103AM	DM-103	H-05SI		TG-S10
C11	10000		C80V103AM	DM-103	H-05SI		TG-S10
C12	100000 10V		C80V104AM	UK10-104	H-05PI		TG-P10
C13	50000 10V		C80V503AM	UK10-503	H-05SI		TG-S50
C14	10000		C80V103AM	DM-103	H-05SI		TG-S10
C15	50000 10V		C80V503AM	UK10-503	H-05SI		TG-S50

FIXED CAPACITORS (cont)

ITEM No.	RATING	REMARKS	REPLACEMENT DATA				SPRAGUE PART No.
			AEROVOX PART No.	CORNELL-DUBIER PART No.	ELMENDO PART No.	MALLORY PART No.	
C16	10000		C80V103AM	DM-103	H-05SI	TA-110	TG-S10
C17	100000 10V		C80V104AM	UK10-104	H-05PI	TA-110	TG-S10
C18	10000		C80V103AM	DM-103	H-05SI	GP310	10TS-T10
C19	100		DI-100	DD-101	L10T1	TA-110	TG-S10
C20	10000		C80V103AM	DM-103	H-05SI	TA-110	TG-S10
C21	10000		C80V103AM	DM-103	H-05SI	CNO-433	MS-433
C22	33	5%	1469-000033	TCZ-33	22R3-Q33	GP220	5HK-D20
C23	2000		DI-2000	UK10-200	BYA100D2	TA-150	TG-S50
C24	50000		C80V503AM	UK10-503	H-05SI	TA-110	TG-S10
C25	10000		C80V103AM	DM-103	H-05SI	TA-110	TG-S10

CONTROLS

ITEM No.	RATING RESIST-ANCE	WATTS	REPLACEMENT DATA				INSTALLATION NOTES
			GLOBE PART No.	CENTRALAB PART No.	CLAROSTAT PART No.	CTS-IRC PART No.	
R1	2500Ω	1/10	2300-018	B16-212			Volume and Switch

RESISTORS

All wattages 1/2 watt, or less, unless otherwise listed.

ITEM No.	RATING	REMARKS	REPLACEMENT DATA				REMARKS	REMARKS
			IRC PART No.	WORKMAN PART No.	ITEM No.	RATING		
R2	1800Ω				R11	22K		
R3	15K				R12	22K		
R4	4700Ω				R13	5000Ω @ 25°C.		
R5	3300Ω				R14	4.7Ω		
R6	330Ω				R15	3300Ω		
R7	220Ω				R16	330Ω		
R8	2200Ω				R17	10K		
R9	1500Ω				R18	2200Ω		
R10	4700Ω				R19	220Ω		

PARTS LIST AND DESCRIPTIONS (Continued)

COILS (RF-IF)

ITEM No.	USE	REPLACEMENT DATA				NOTES
		GLOBE PART No.	Meritt PART No.	Miller PART No.	Stancor PART No.	
L1	Antenna	1400-113				
L2	Oscillator	1205-008				
L3	1st IF	1205-002				
L4	2nd IF	1205-003				
L5	3rd IF	1205-004				
L6	Trans. Oscillator	1205-005				
L7	Final Amp. Plate	1400-114				

TRANSFORMER (DRIVER)

ITEM No.	TURNS RATIO	REPLACEMENT DATA				NOTES
		GLOBE PART No.	Meritt PART No.	Stancor PART No.	Triad PART No.	
T1	1.7 1	1203-012		TA-28		

TRANSFORMER (AUDIO OUTPUT)

ITEM No.	IMPEDANCE	REPLACEMENT DATA				NOTES
		GLOBE PART No.	Meritt PART No.	Stancor PART No.	Triad PART No.	
T2	7000 CT 6-80 SEC. 2 550Ω	1203-013				

SPEAKER

ITEM No.	TYPE	REPLACEMENT DATA		NOTES
		GLOBE PART No.	QUAM PART No.	
SP1	3 1/4" PM 6-80	4002-004	22A0828	

BATTERIES

ITEM No.	VOLTAGE	GLOBE PART No.	REPLACEMENT DATA			NOTES
			BURGESS	EVEREADY	MALLORY	
M1	9.6V	1802-025 *	"A"	"B"	"A"	* 8 Required (Nickel Cadmium)

SIGNAL DIODES

ITEM No.	ORIG. TYPE	REPLACEMENT DATA				NOTES
		GLOBE PART No.	GENERAL ELECTRIC PART No.	RAYTHEON PART No.	SYLVANIA PART No.	
M2	1N48	3700-058		1N295	1N295	Detector (Pigtail)


MISCELLANEOUS

ITEM No.	PART NAME	GLOBE PART No.	NOTES
M3	Crystal		Transmit (Specify Channel & Frequency Desired)
M4	Crystal		Receive (Specify Channel & Frequency Desired)
M5	Switch	2102-004	Push to talk (Spring Return, Pushbutton Type)
M6	Antenna Whip	4003-001	
	Earphone	4000-009	(150)

WIRING DATA

General-use Unshielded Hook-up Wire Use BELDEN No. 9530 (Solid) Available in Ten Colors
8524 (Stranded) Available in Ten Colors

CHASSIS—TOP VIEW

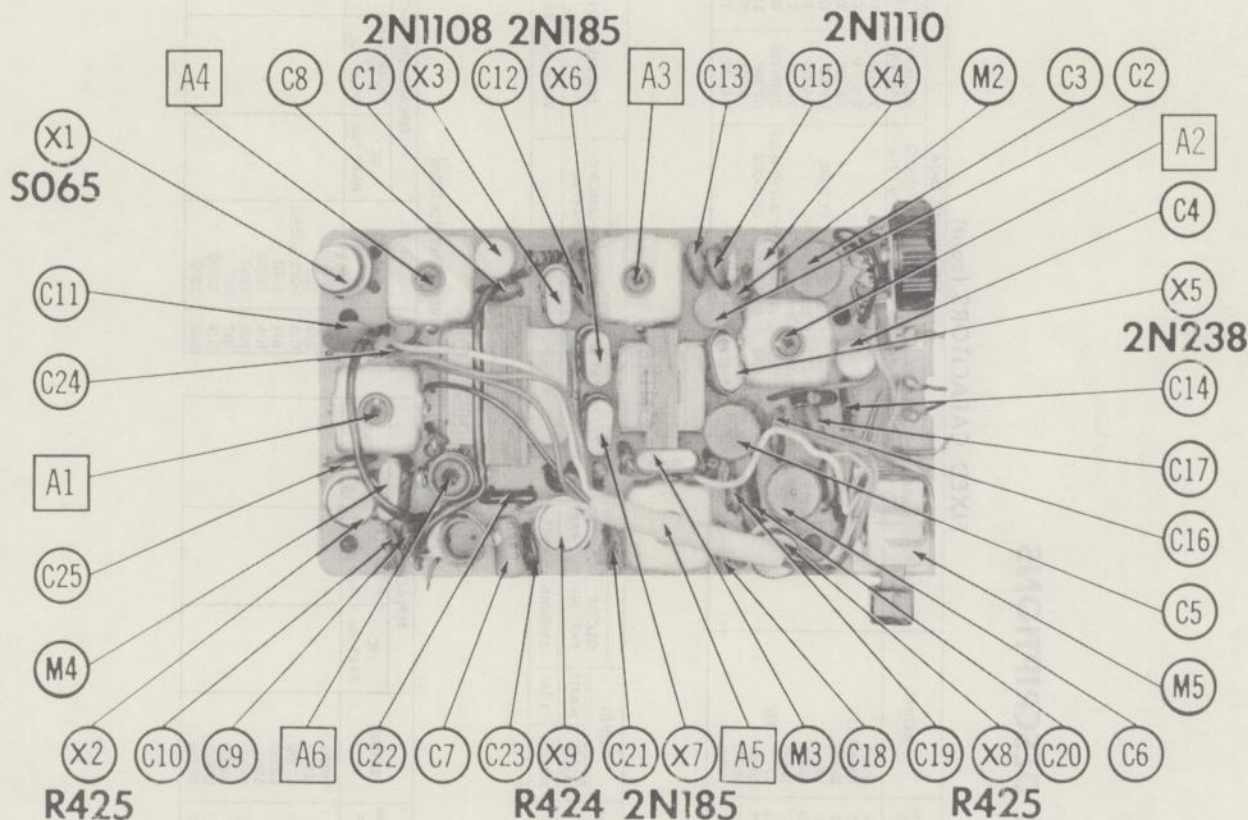



MODEL G-11-3304

TRADE NAME	Gonset Models G-11-3303, G-11-3304, G-11-3305
MANUFACTURER	Gonset, Div. of Young Spring & Wire Corp., 801 S. Main Street, Burbank, California
TYPE SET	Crystal Controlled Single Channel 9 Tube Citizens Band Transmitter-Receiver
POWER SUPPLY	Model G-11-3303: 110-120 Volts AC, 60 Cycles Model G-11-3304: 12 Volt Storage Battery Model G-11-3305: 6 Volt Storage Battery
RATING	4.6 Amp. @12.6 Volts DC (or) 9.2 Amp. @6.3 Volts DC
TUNING RANGE	Any one of Citizens Band Channels 1 thru 22

NOTICE

ONLY THOSE PERSONS PROPERLY LICENSED BY FCC ARE PERMITTED TO MAKE CRYSTAL SUBSTITUTION OR EFFECT REPAIRS ON THE TRANSMITTER PORTION OF THIS UNIT.

ALIGNMENT INSTRUCTIONS

RECEIVER

Connect DC probe of VTVM to point **A**, Common to chassis. Turn Squelch Control R2 to maximum clockwise direction.

Use a test transmitter on the proper channel, align A1, A2, A3, A4, A5 and A6 for maximum deflection on VTVM. (If signal is too strong, remove antenna to reduce signal strength sufficiently to keep AVC voltage only slightly above no signal level).

Adjust A7 for maximum receiver noise.

TRANSMITTER

Using a Frequency Meter, adjust A8 to frequency indicated on oscillator crystal, (within 100 cps).

Connect DC probe of VTVM to point **B**, Common to chassis. Adjust A9 for maximum deflection.

Adjust A10 and A11 alternately for maximum tuning indicator lamp brightness, adjusting A11 last.



HOWARD W. SAMS & CO., INC. Indianapolis 6, Indiana




The listing of any available replacement part herein does not constitute in any case a recommendation, warranty or guaranty by Howard W. Sams & Co., Inc., as to the quality and suitability of such replacement part. The numbers of these parts have been compiled from information furnished to Howard W. Sams & Co., Inc., by the manufacturers of KZ405

the particular type of replacement part listed. Reproduction or use, without express permission, of editorial or pictorial content, in any manner, is prohibited. No patent liability is assumed with respect to the use of the information contained herein. © 1961 Howard W. Sams & Co., Inc., Indianapolis 6, Indiana. Printed in U.S. of America

GONSET MODELS
G-11-3303, G-11-3304, G-11-3305



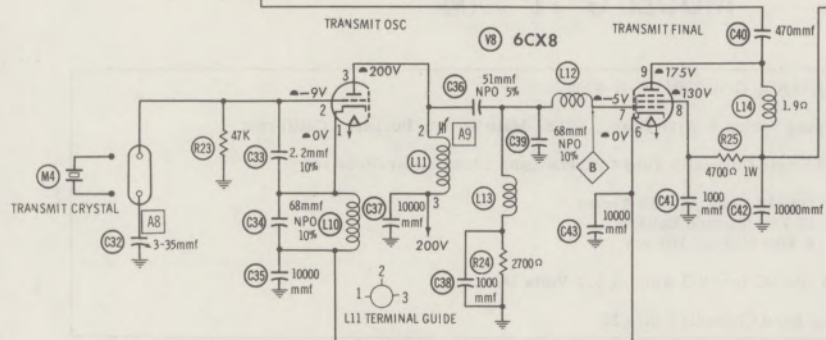
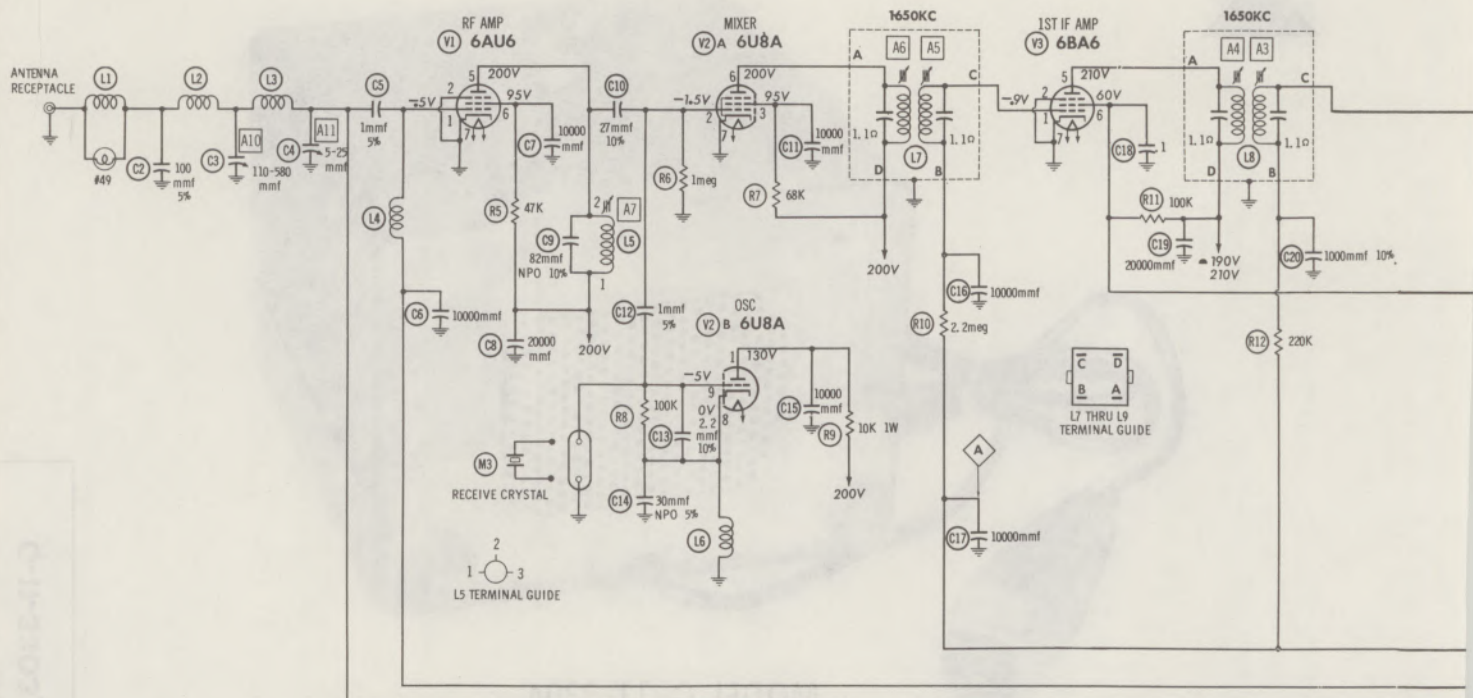


1. DC voltage measurements taken with vacuum tube voltmeter; AC voltages measured with 1000 ohm per volt voltmeter.
2. Socket connections are shown as bottom views.
3. Measured values are from socket pin to common ground.
4. Line voltage maintained at 117 volts for voltage readings.
5. Nominal tolerance of component values makes possible a variation of $\pm 15\%$ in voltage and resistance readings.
6. All controls at minimum, proper output load connected.

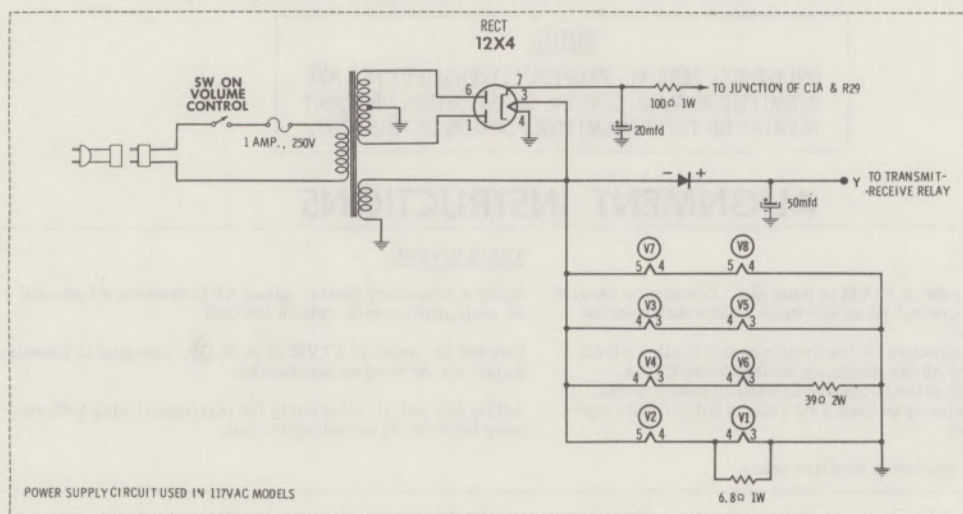

A PHOTOFACT STANDARD NOTATION SCHEMATIC
©Howard W. Sams & Co., Inc. 1961

NUMBERS ASSIGNED TO COILS, SWITCHES, PLUGS, SOCKETS, AND TRANSFORMERS ARE TO FACILITATE CIRCUIT TRACING OR COMPONENT REPLACEMENT AND MAY NOT NECESSARILY BE FOUND ON THE UNIT.

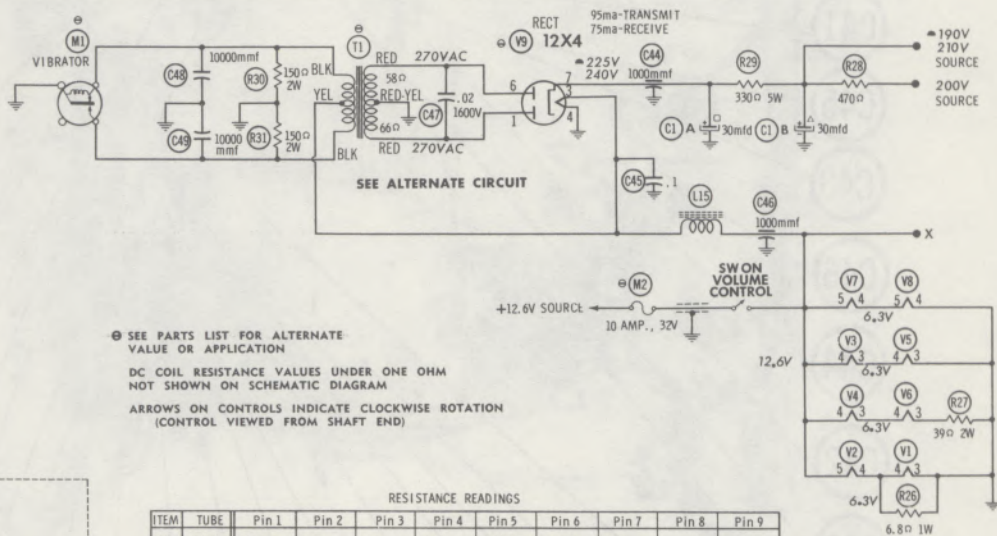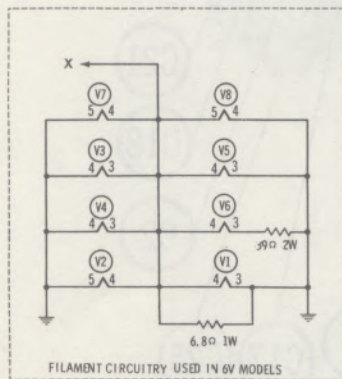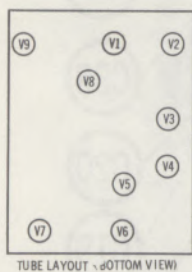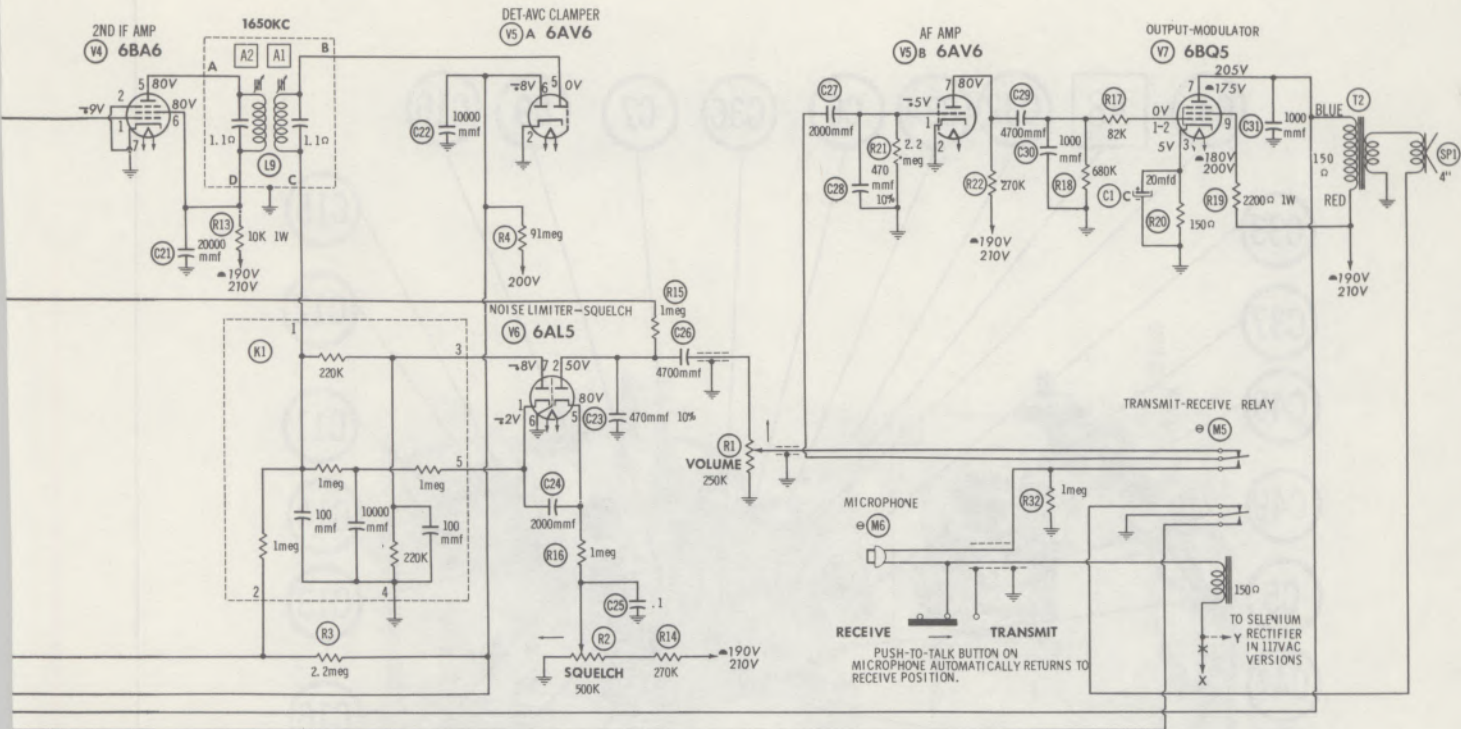


SEE PARTS LIST FOR ALTERNATE VALUE OR APPLICATION
DC COIL RESISTANCE VALUES UNDER ONE OHM NOT SHOWN ON SCHEMATIC DIAGRAM
ARROWS ON CONTROLS INDICATE CLOCKWISE ROTATION (CONTROL VIEWED FROM SHAFT END)


RESISTANCE READINGS									
ITEM	TUBE	Pin 1	Pin 2	Pin 3	Pin 4	Pin 5	Pin 6	Pin 7	Pin 8
V1	6AU6	3.5meg	0 ohm	0 ohm	1 ohm	1800 ohm	147K	0 ohm	
V2	6U8A	110K	1meg	168K	1 ohm	2 ohm	1800 ohm	0 ohm	100K
V3	6BA6	3.5meg	0 ohm	1 ohm	2 ohm	930 ohm	1100K	0 ohm	
V4	6BA6	1.6meg	0 ohm	.1 ohm	2 ohm	110K	110K	0 ohm	
V5	6AV6	2.2meg	0 ohm	0 ohm	1 ohm	440K	3.5meg	1270K	
V6	6AL5	2.4meg	11.1meg	3 ohm	1 ohm	1.3meg	0 ohm	220K	
V7	6BQ5	NC	760K	150 ohm	1 ohm	2 ohm	NC	1480 ohm	12500 ohm
V8	6CX8	0 ohm	47K	1800 ohm	0 ohm	1 ohm	0 ohm	2700 ohm	15200 ohm
V9	12X4	66 ohm	NC	2 ohm	0 ohm	NC	58 ohm	1	

ALL MEASUREMENTS MADE IN "RECEIVE" POSITION UNLESS OTHERWISE DESIGNATED.
MEASURED IN "TRANSMIT" POSITION.
MEASURED FROM PIN 7 OF V9.
THIS READING WILL VARY DEPENDING UPON THE CONDITION OF THE ELECTROLYTIC IN THE CIRCUIT.
NC NO CONNECTION


GONSET MODELS
G-11-3303, G-11-3304, G-11-3305

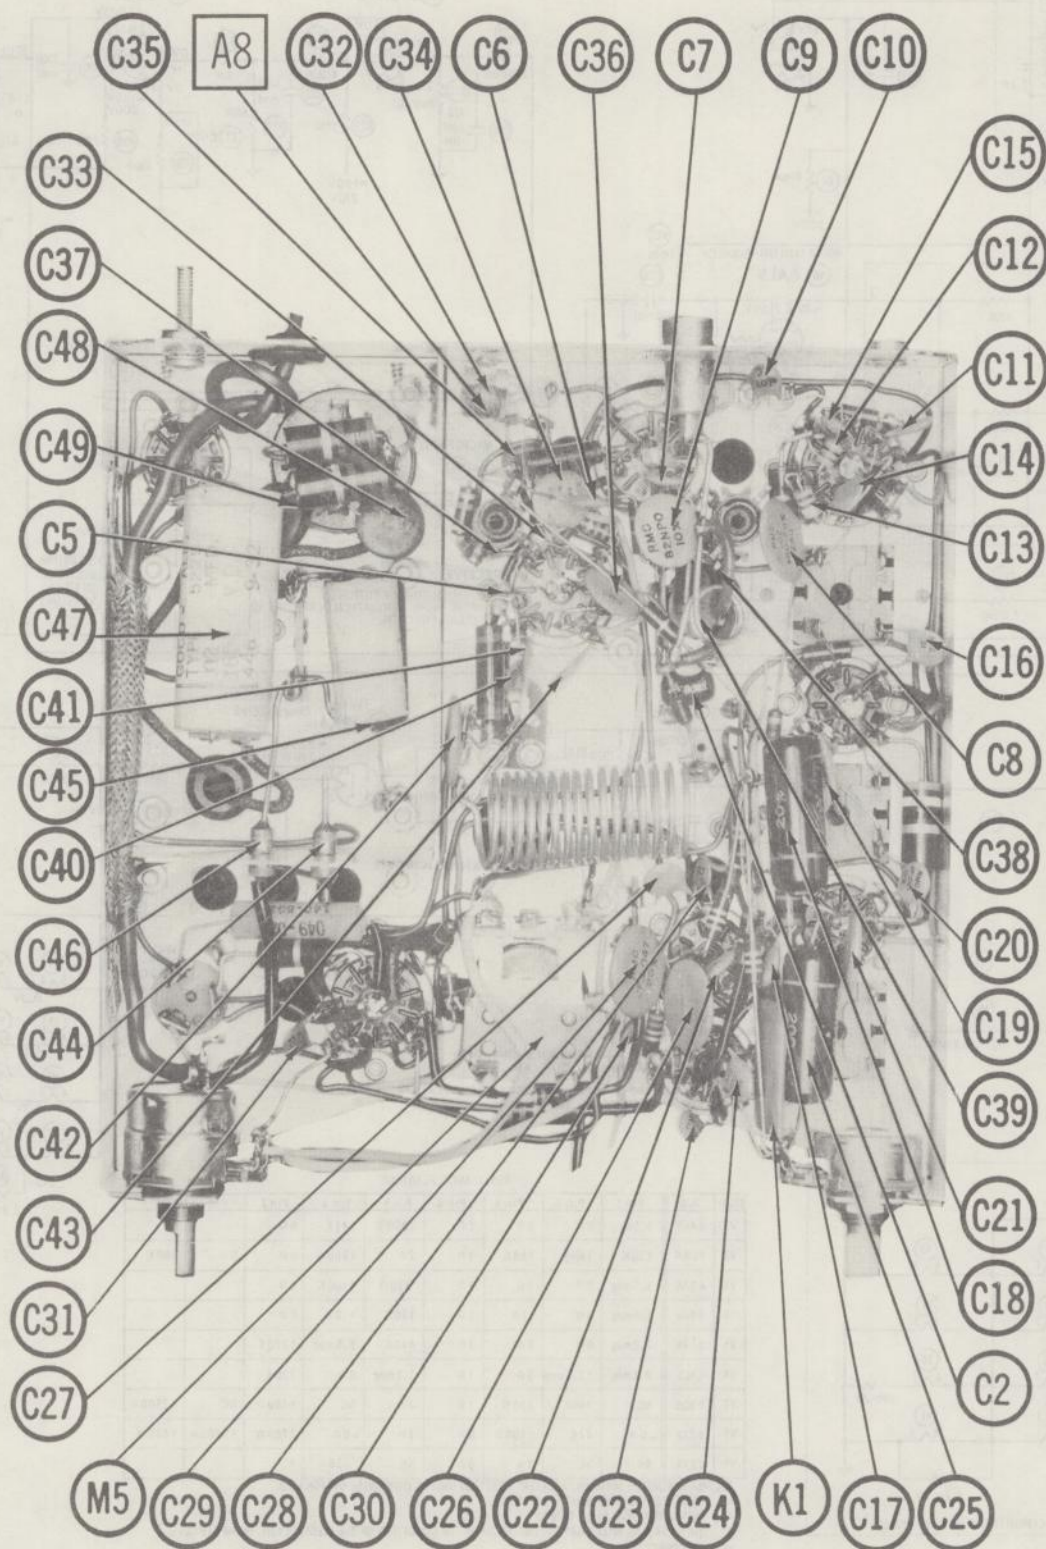

CHASSIS BOTTOM VIEW-ALIGNMENT, CAPACITOR & MISC. IDENT.

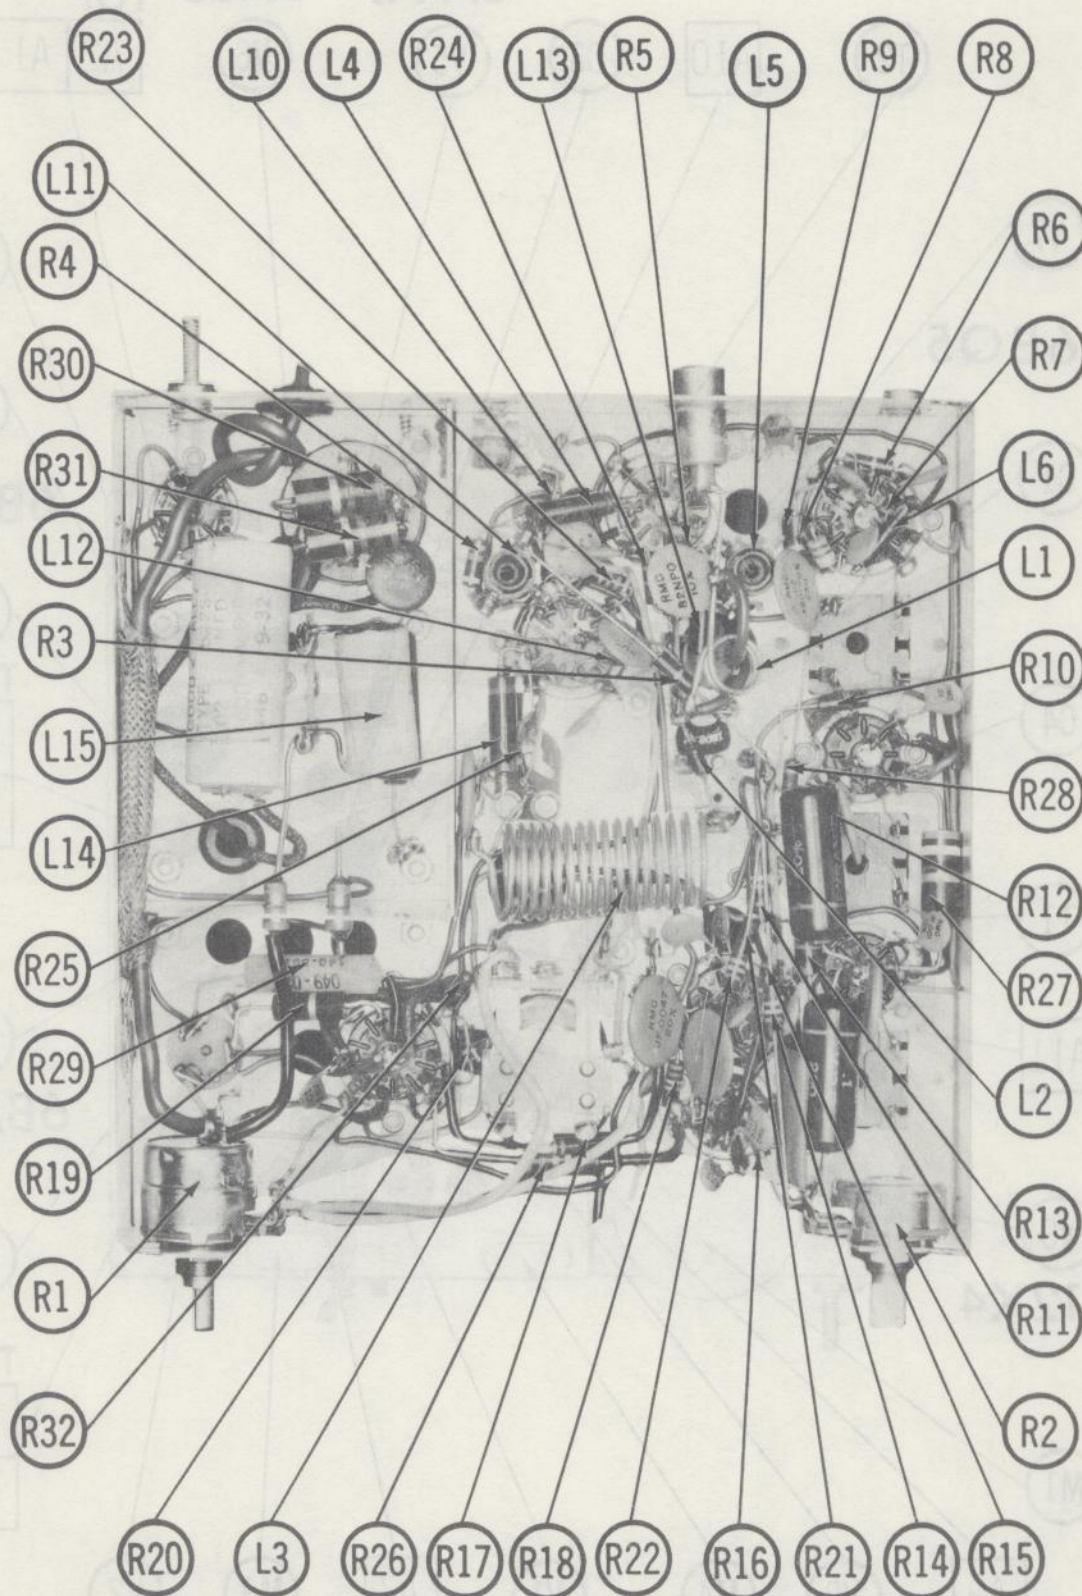

CHASSIS BOTTOM VIEW-RESISTOR & INDUCTOR IDENT.

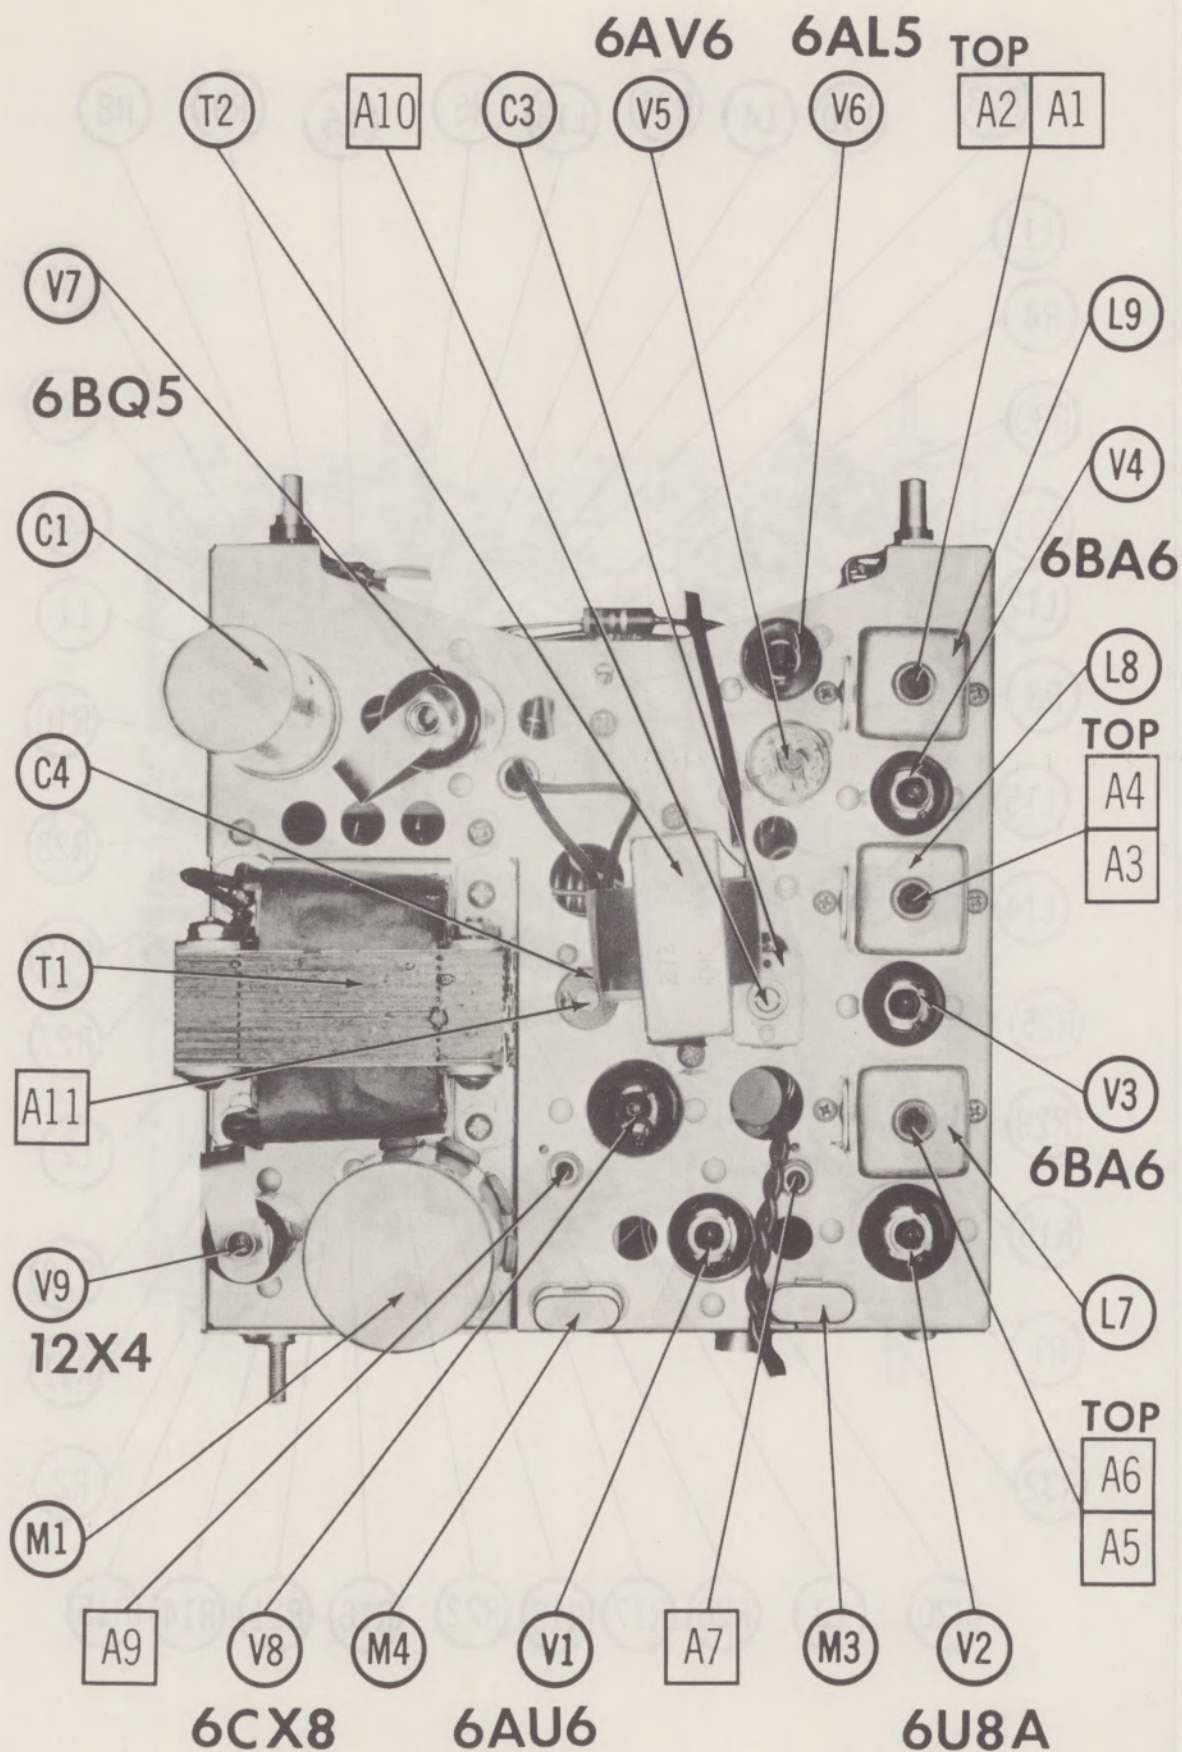

CHASSIS - TOP VIEW

PARTS LIST AND DESCRIPTIONS

TUBES

GENERAL ELECTRIC				RAYTHEON		SYLVANIA	
ITEM No.	USE	TYPE	ITEM No.	USE	TYPE	ITEM No.	TYPE
V1	RF Amplifier	6AU6	V6	Noise Lim. -Squelch	6AL5		
V2	Mixer-Osc.	6BD6	V7	Output-Modulator	6BD5		
V3	1st IF Amp.	6BA6	V8	Trans. Osc. -Trans. Final	6CX8		
V4	2nd IF Amp.	6BA6	V9	Rectifier	12X4 *		
V5	Det.-AVC Clamper-AF Amp.	6AV6					

* Model 3305 uses 6X4 in this application.

ELECTROLYTIC CAPACITORS

REPLACEMENT DATA				REPLACEMENT DATA		REPLACEMENT DATA	
ITEM No.	RATING	REMARKS	AEROVOX PART No.	CORNELL-DUBILIER PART No.	MALLORY PART No.	SPRAGUE PART No.	NOTES
C1A	30 CAP.		AFH3-169	C0830	FP331	TMT-3334	TVL-3620
B	30						
C	20						

FIXED CAPACITORS

Capacity values given in the rating column are in mfd. for Paper Capacitors, and in mmfd. for Mica and Ceramic Capacitors.

REPLACEMENT DATA				REPLACEMENT DATA		REPLACEMENT DATA	
ITEM No.	RATING	REMARKS	AEROVOX PART No.	CORNELL-DUBILIER PART No.	MALLORY PART No.	SPRAGUE PART No.	NOTES
C2	100 5%		1469-0001	TCZ-100	CM-19B-101K	MCB235	MS-31
C3	110-580						
C4	5-25						
C5	1 5%						
C6	10000						
C7	10000						
C8	20000						
C9	82 NPO 10%						
C10	22 10%						
C11	10000						
C12	1 5%						
C13	2.2 10%						
C14	30 NPO 5%						
C15	10000						
C16	10000						
C17	10000						
C18	1 200V						
C19	20000						
C20	1000 10%						
C21	20000						
C22	10000						
C23	470 10%						
C24	2000						
C25	1 200V						
C26	4700						
C27	2000						
C28	470 10%						
C29	4700						
C30	10000						
C31	10000						
C32	3-35						
C33	2.2 10%						
C34	68 NPO 10%						
C35	10000						
C36	51 NPO 5%						
C37	10000						
C38	10000						
C39	68 NPO 10%						
C40	470						
C41	1000						
C42	10000						
C43	10000						

FIXED CAPACITORS (cont)

REPLACEMENT DATA				REPLACEMENT DATA			
ITEM No.	RATING	REMARKS	AEROVOX PART No.	CORNELL-DUBILIER PART No.	ELMCO PART No.	MALLORY PART No.	SPRAGUE PART No.
C44	1000		EF-001	MFT-1000	CCF-102	CT280A	2TM-P10
C45	.1 200V		P288N-1	DF-104	2DP-3-104	GEM-201	
C46	100		EF-001	MFT-1000	CCF-102	CT280A	
C47	.02 .1600V		P1684CM-02		16DP-4-203	GEM-1612	MB-52
C48	10000		BPD-01	DD-103	CCD-103	B-110	5HK-S10
C49	10000		BPD-01	DD-103	CCD-103	B-110	5HK-S10

Gonset Part Number.

CONTROLS

REPLACEMENT DATA				REPLACEMENT DATA			
ITEM No.	RATING	REMARKS	AEROVOX PART No.	CORNELL-DUBILIER PART No.	ELMCO PART No.	MALLORY PART No.	SPRAGUE PART No.
R1A	250K	Shaft	B-51	A47-250K-Z	Q13-130	U44	
B	Switch		Not Req.	FS-3	Not Req.	Not Req.	
C	300K		KR-1	SWE-12	76-1	US-26	
R2A	500K	Shaft	B-59	A47-500K-S	Q11-133	U50	
B	Switch		Not Req.	FS-3	Not Req.	Not Req.	

RESISTORS

All wattages 1/2 watt, or less, unless otherwise listed.

REPLACEMENT DATA				REPLACEMENT DATA			
ITEM No.	RATING	REMARKS	AEROVOX PART No.	CORNELL-DUBILIER PART No.	ELMCO PART No.	MALLORY PART No.	SPRAGUE PART No.
R3	2.2meg						
R4	9meg						
R5	47K						
R6	1meg						
R7	68K						
R8	100K						
R9	10K 1W						
R10	2.2meg						
R11	100K						
R12	220K						
R13	10K 1W						
R14	270K						
R15	1meg						
R16	1meg						
R17	82K						

COILS (RF-IF)

REPLACEMENT DATA				REPLACEMENT DATA			
ITEM No.	USE	GONSET PART No.	Merit PART No.	Miller PART No.	Stancor PART No.	Workman TV PART No.	NOTES
L1	Output Indicator	027-077	BC-560	4588	RTC-8513	T958	
L2	RF Choke (.56uh)	011-119	BC-565	4609	RTC-8519	T959	
L3	Ant.	012-028	TV-118	6171-A	RTC-8609	T216	
L4	RF Choke (5.6uh)	012-068	BC-562	4604	RTC-8516	T956	
L5	RF Choke (1.5uh)	014-030	BC-565	4609	RTC-8519	T959	
L6	1st IF	014-030	BC-565	4609	RTC-8519	T959	
L7	2nd IF	014-030	BC-565	4609	RTC-8519	T959	
L8	3rd IF	014-030	BC-565	4609	RTC-8519	T959	
L9	RF Choke (5.6uh)	012-028	BC-565	4609	RTC-8519	T959	
L10	Osc. Plate	012-169	TV-118	6171-A	RTC-8513	T958	
L11	RF Choke (.47uh)	027-073	BC-565	4609	RTC-8519	T959	
L12	RF Choke (5.6uh)	027-028	BC-565	4609	RTC-8519	T959	
L13	RF Choke (15uh)	027-032	BC-565	4609	RTC-8519	T959	
L14	Hash Choke (65uh)	027-027	BC-565	4609	RTC-8519	T959	
L15							

PARTS LIST AND DESCRIPTIONS (Continued)

TRANSFORMER (POWER)

ITEM No.	RATING		REPLACEMENT DATA			NOTES
	PRI.	SEC. 1	GONSET PART No.	Merit PART No.	Stancor PART No.	Triad PART No.
T1	12.6VCT ② 2.8A ③ .095A	SFC. 2	271-022 ①			

① Part #271-025 used in Model G11-3303 (117V)
Part #271-026 used in Model G11-3305 (6V).

TRANSFORMER (AUDIO OUTPUT)

ITEM No.	IMPEDANCE		REPLACEMENT DATA			NOTES
	PRI.	SEC.	GONSET PART No.	Merit PART No.	Stancor PART No.	Triad PART No.
T2	2700Ω	3-4Ω	272-004		A-3876	

SPEAKER

ITEM No.	TYPE		REPLACEMENT DATA		NOTES
	SIZE	FIELD	GONSET PART No.	QUAM PART No.	
SP1	4"	PM	152-015 *	4A10T *	* Weatherproof Cone

COMPONENT COMBINATIONS

ITEM No.	USE	DESCRIPTION	GONSET PART No.	REPLACEMENT DATA
K1	Noise Clipper Network	(2) 100mmf, 10000mmf, (2) 220K (3) 1meg	069-003	

VIBRATOR

ITEM No.	TYPE	INPUT VOLTS/FREQUENCY	REPLACEMENT DATA				NOTES
			GONSET PART No.	CORNELL-DUBILIER PART No.	MALLORY PART No.	RADIART PART No.	
41	Interrupter	12. 3V	115%	6301	GI601	6301	Model 3304
	Interrupter	6. 3V	115%	5301	I601	5301	Model 3305

FUSES

ITEM No.	TYPE	RATING	REPLACEMENT DATA			
			GONSET PART No.	FUSE	HOLDER	LITTELFUSE PART No.
M2	SFE	10A *		307010 *		
		32V		(SFE 10A 32V)		
	SFE	20A *		311020 *		
		32V		(SFE 20A 32V)		
	3AG	1A †		313001 †		
		250V		(3AG 1A 250V)		

* Model 3304
† Model 3305
‡ Model 3303

MISCELLANEOUS

ITEM No.	PART NAME	GONSET PART No.	NOTES
M3	Crystal		
M4	Crystal		
M5	Relay	111-019 111-082 113-014 (or)	Receive (order by desired Channel Freq.) Transmit (order by desired Channel Freq.) Models 3303 & 3304 Model 3305
M6	Microphone	113-015	

CABINETS & CABINET PARTS

(When Ordering Cabinets & Cabinet Parts, Specify Model, Chassis & Color)

NAME	PART NO.	DESCRIPTION
Front Panel	505-203	
Cabinet	465-056	

WIRING DATA

General-use Unshielded Hook-up Wire	Use BELDEN No. 8530 (Solid) Available in Ten Colors 8534 (Stranded) Available in Ten Colors
Shielded Hook-up Wire	Use BELDEN No. 8885
Bonding Strap	Use BELDEN No. 8861
Power Cord	Use BELDEN No. 1765-B (6 Ft. Length) 1725-K (7½ Ft. Length)

PHOTOFACT® Folder



GONSET MODEL G-12 (3316) (3329)



NOTICE

ONLY THOSE PERSONS PROPERLY LICENSED BY FCC ARE PERMITTED TO MAKE CRYSTAL SUBSTITUTION OR EFFECT REPAIRS ON THE TRANSMITTER PORTION OF THIS UNIT.

MODEL G-12(3316)

TRADE NAME	Gonset Models G-12 (3316), G-12 (3329)
MANUFACTURER	Gonset Div., Young Spring & Wire Corp., 801 S. Main Street, Burbank, Calif.
TYPE SET	AC (or) Battery Operated Crystal Controlled 8 Tube Citizens Band Transmitter-Receiver
POWER SUPPLY	3316: 110-120 Volts AC, 60 Cycles (or) 12 Volt Storage Battery 3329: 110-120 Volts AC, 60 Cycles (or) 6 Volt Storage Battery
RATING	AC: 50 Watts, .5 Amp. @117 Volts AC 12VDC: 3.8 Amp. @12.6 Volts DC 6VDC: 7.6 Amp. @6.3 Volts DC
FREQUENCY RANGE	Any 4 of Citizens Band Channels 1 thru 22

ALIGNMENT INSTRUCTIONS

ALIGNMENT INSTRUCTIONS—READ CAREFULLY BEFORE ATTEMPTING ALIGNMENT

Suggested Alignment Tools:	A1 thru A7, A9...GENERAL CEMENT #9296, 9297 WALSCO #2546, 2547
	A8, A10.....GENERAL CEMENT #5000, 5003, 5066, 8276, 8290, 9087, 9089 WALSCO #2512, 2525, 2528
	A11.....GENERAL CEMENT #5004, 5009, 8195, 8274, 8275, 8607, 8728, 8987, 8988, 8989, 9291 WALSCO #2515, 2520, 2522, 2523, 2531, 2532, 2534, 2537, 2538

RECEIVER ALIGNMENT

	SIGNAL GENERATOR COUPLING	SIGNAL GENERATOR FREQUENCY	RADIO DIAL SETTING	CONNECT VTVM	ADJUST	REMARKS
1.	High side thru .001mfd to pin 2 (grid) of Mixer. Low side to chassis.	1650KC		DC probe to point A. Common to chassis.	A1, A2, A3, A4, A5, A6	Adjust for maximum deflection on first peak as slug enters coil. (Attenuate generator for -3V max.)
2.	Adjust A7 for maximum receiver background noise.					

TRANSMITTER ALIGNMENT

1.	Connect a 52Ω dummy load to the antenna jack.
2.	Using a frequency measuring instrument, adjust A8 to frequency indicated on crystal (within 100v).
3.	Adjust A9 for maximum voltage at point B (pin 7 of V8).
4.	Adjust A10 and A11 for maximum indicator lamp brightness. Start with A10 at maximum capacity.


HOWARD W. SAMS & CO., INC. Indianapolis 6, Indiana



The listing of any available replacement part herein does not constitute in any case a recommendation, warranty or guaranty by Howard W. Sams & Co., Inc., as to the quality and suitability of such replacement part. The numbers of these parts have been compiled from information furnished to Howard W. Sams & Co., Inc., by the manufacturers of KZ429

the particular type of replacement part listed. Reproduction or use, without express permission, of editorial or pictorial content, in any manner, is prohibited. No patent liability is assumed with respect to the use of the information contained herein. © 1961 Howard W. Sams & Co., Inc., Indianapolis 6, Indiana. Printed in U.S. of America

GONSET MODEL
G-12 (3316) (3329)

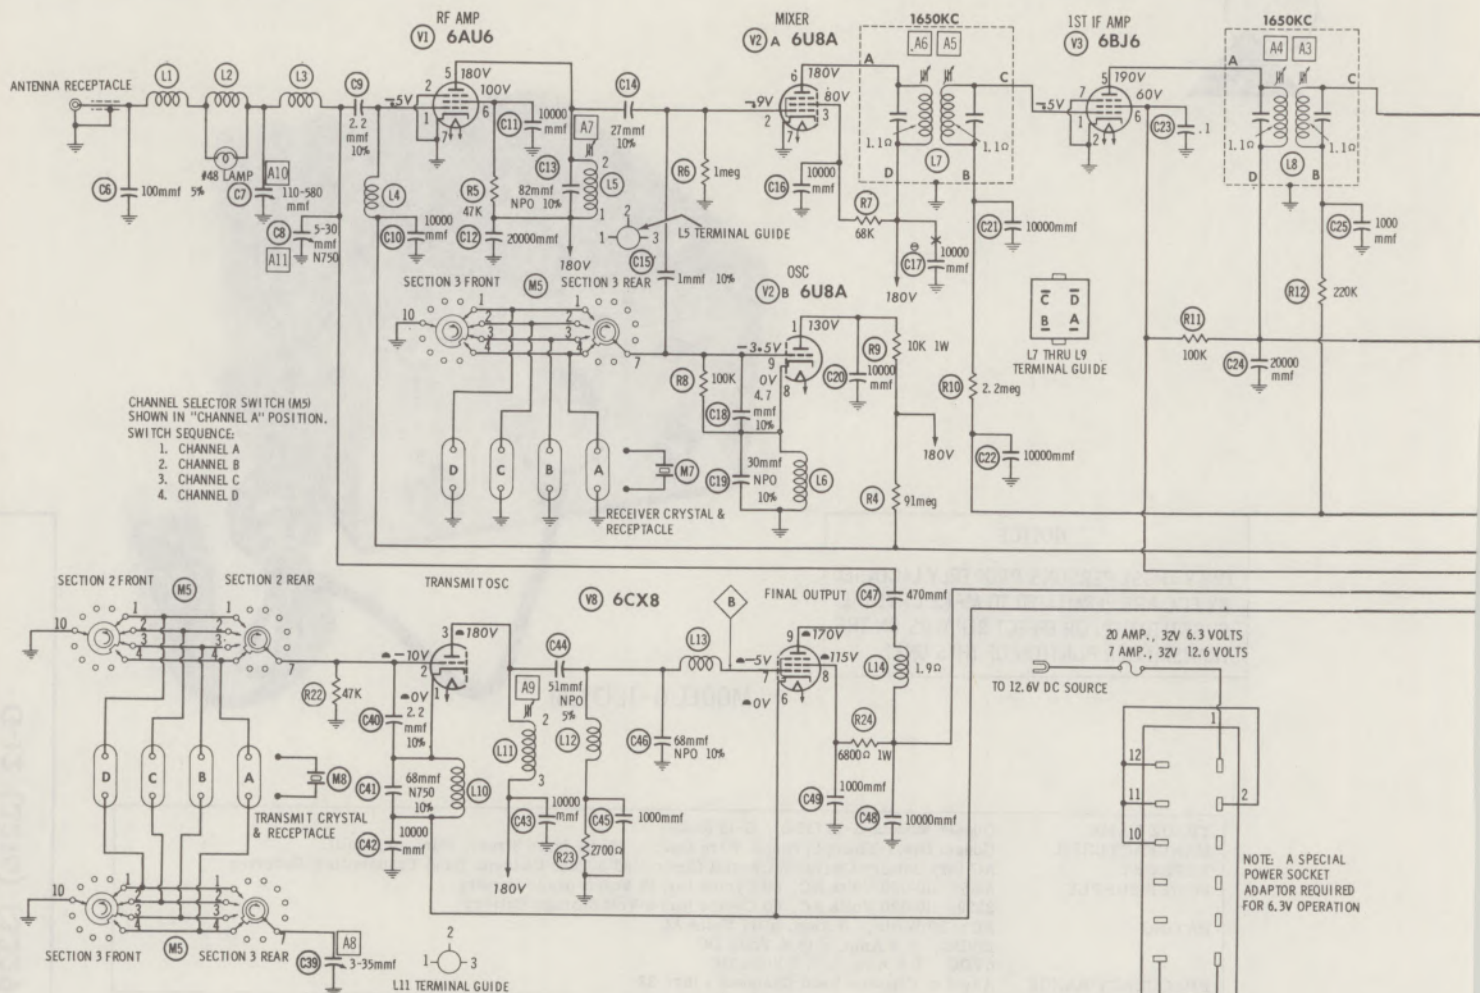

RESISTANCE READINGS





ITEM	TUBE	Pin 1	Pin 2	Pin 3	Pin 4	Pin 5	Pin 6	Pin 7	Pin 8	Pin 9
V1	6AU6	3.6meg	0Ω	.2Ω	0Ω	†900Ω	†48K	0Ω		
V2	6U8A	†11K	1meg	†68K	.5Ω	.2Ω	†900Ω	0Ω	0Ω	100K
V3	6BJ6	3.6meg	0Ω	.2Ω	.5Ω	†430Ω	†100K	0Ω		
V4	6BA6	1.6meg	0Ω	.2Ω	.5Ω	†10K	†10K	0Ω		
V5	6AL5	2.4meg	†1.1meg	3Ω	.2Ω	1.1meg	0Ω	220K		
V6	6AV6	2.2meg	0Ω	0Ω	.2Ω	440K	3.6meg	†270K		
V7	6BQ5	NC	760K	150Ω	.5Ω	.2Ω	NC	†580Ω	NC	†2600Ω
V8	6CX8	.5Ω	47K	†900Ω	0Ω	.2Ω	40Ω	2700Ω	†7300Ω	†600Ω

ALL MEASUREMENTS MADE IN "RECEIVE" POSITION UNLESS OTHERWISE DESIGNATED.

▲ MEASURED IN "TRANSMIT" POSITION.

† MEASURED FROM OUTPUT OF M1.

NC NO CONNECTION

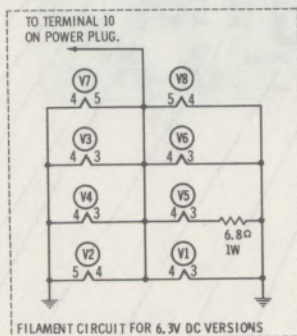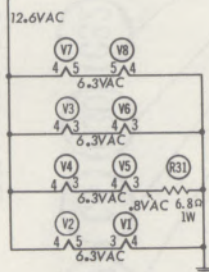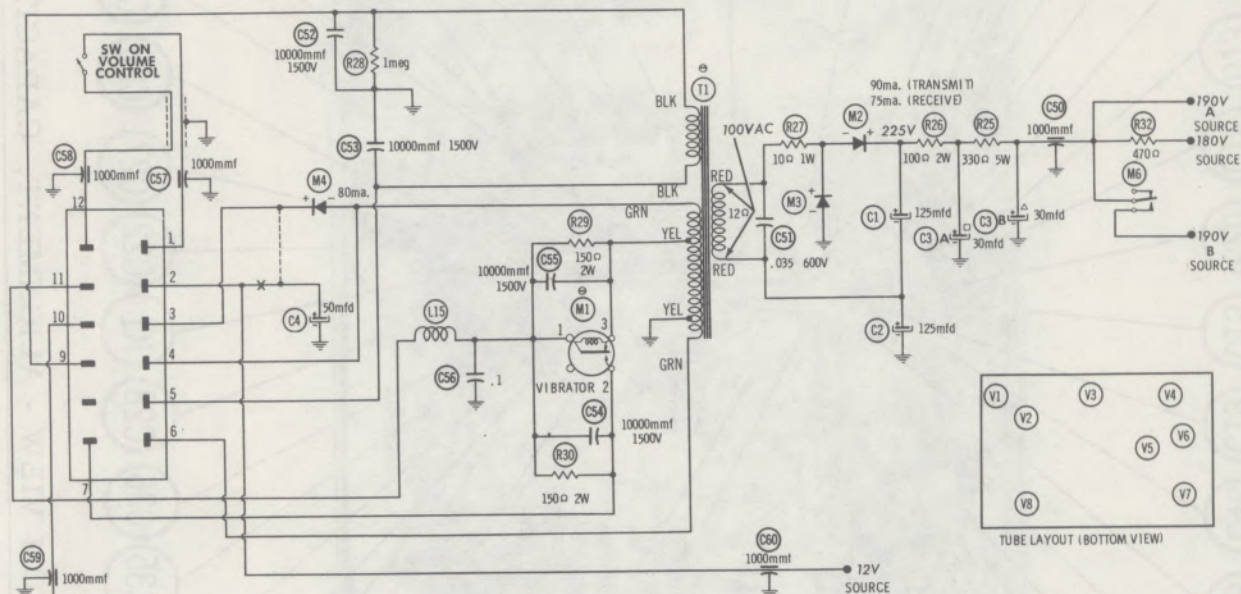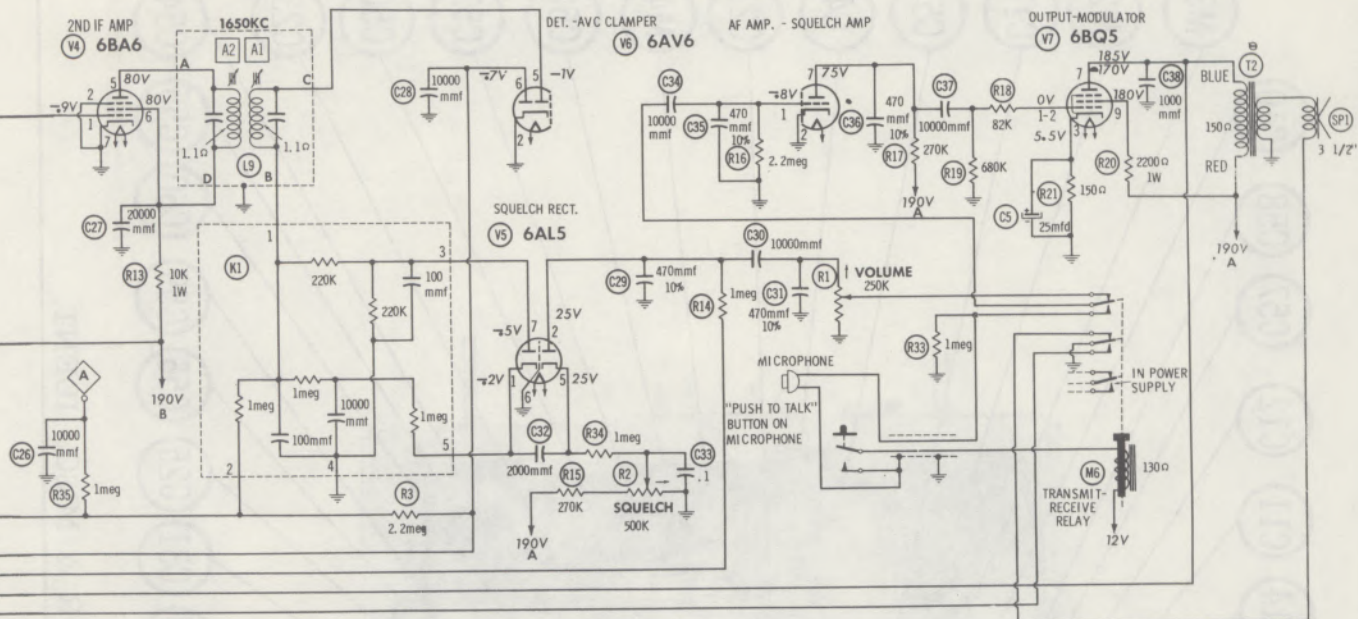

SEE PARTS LIST FOR ALTERNATE VALUE OR APPLICATION


DC COIL RESISTANCE VALUES UNDER ONE OHM NOT SHOWN ON SCHEMATIC DIAGRAM

ARROWS ON CONTROLS INDICATE CLOCKWISE ROTATION (CONTROL VIEWED FROM SHAFT END)



NUMBERS ASSIGNED TO COILS, SWITCHES, PLUGS, SOCKETS, AND TRANSFORMERS ARE TO FACILITATE CIRCUIT TRACING OR COMPONENT REPLACEMENT AND MAY NOT NECESSARILY BE FOUND ON THE UNIT.

1. DC voltage measurements taken with vacuum tube voltmeter; AC voltages measured with 1000 ohm per volt voltmeter.
2. Socket connections are shown as bottom views.
3. Measured values are from socket pin to common ground.
4. Line voltage maintained at 117 volts for voltage readings.
5. Nominal tolerance of component values makes possible a variation of $\pm 15\%$ in voltage and resistance readings.
6. All controls at minimum, proper output load connected.

GONSET MODEL
G-12 (3316) (3329)

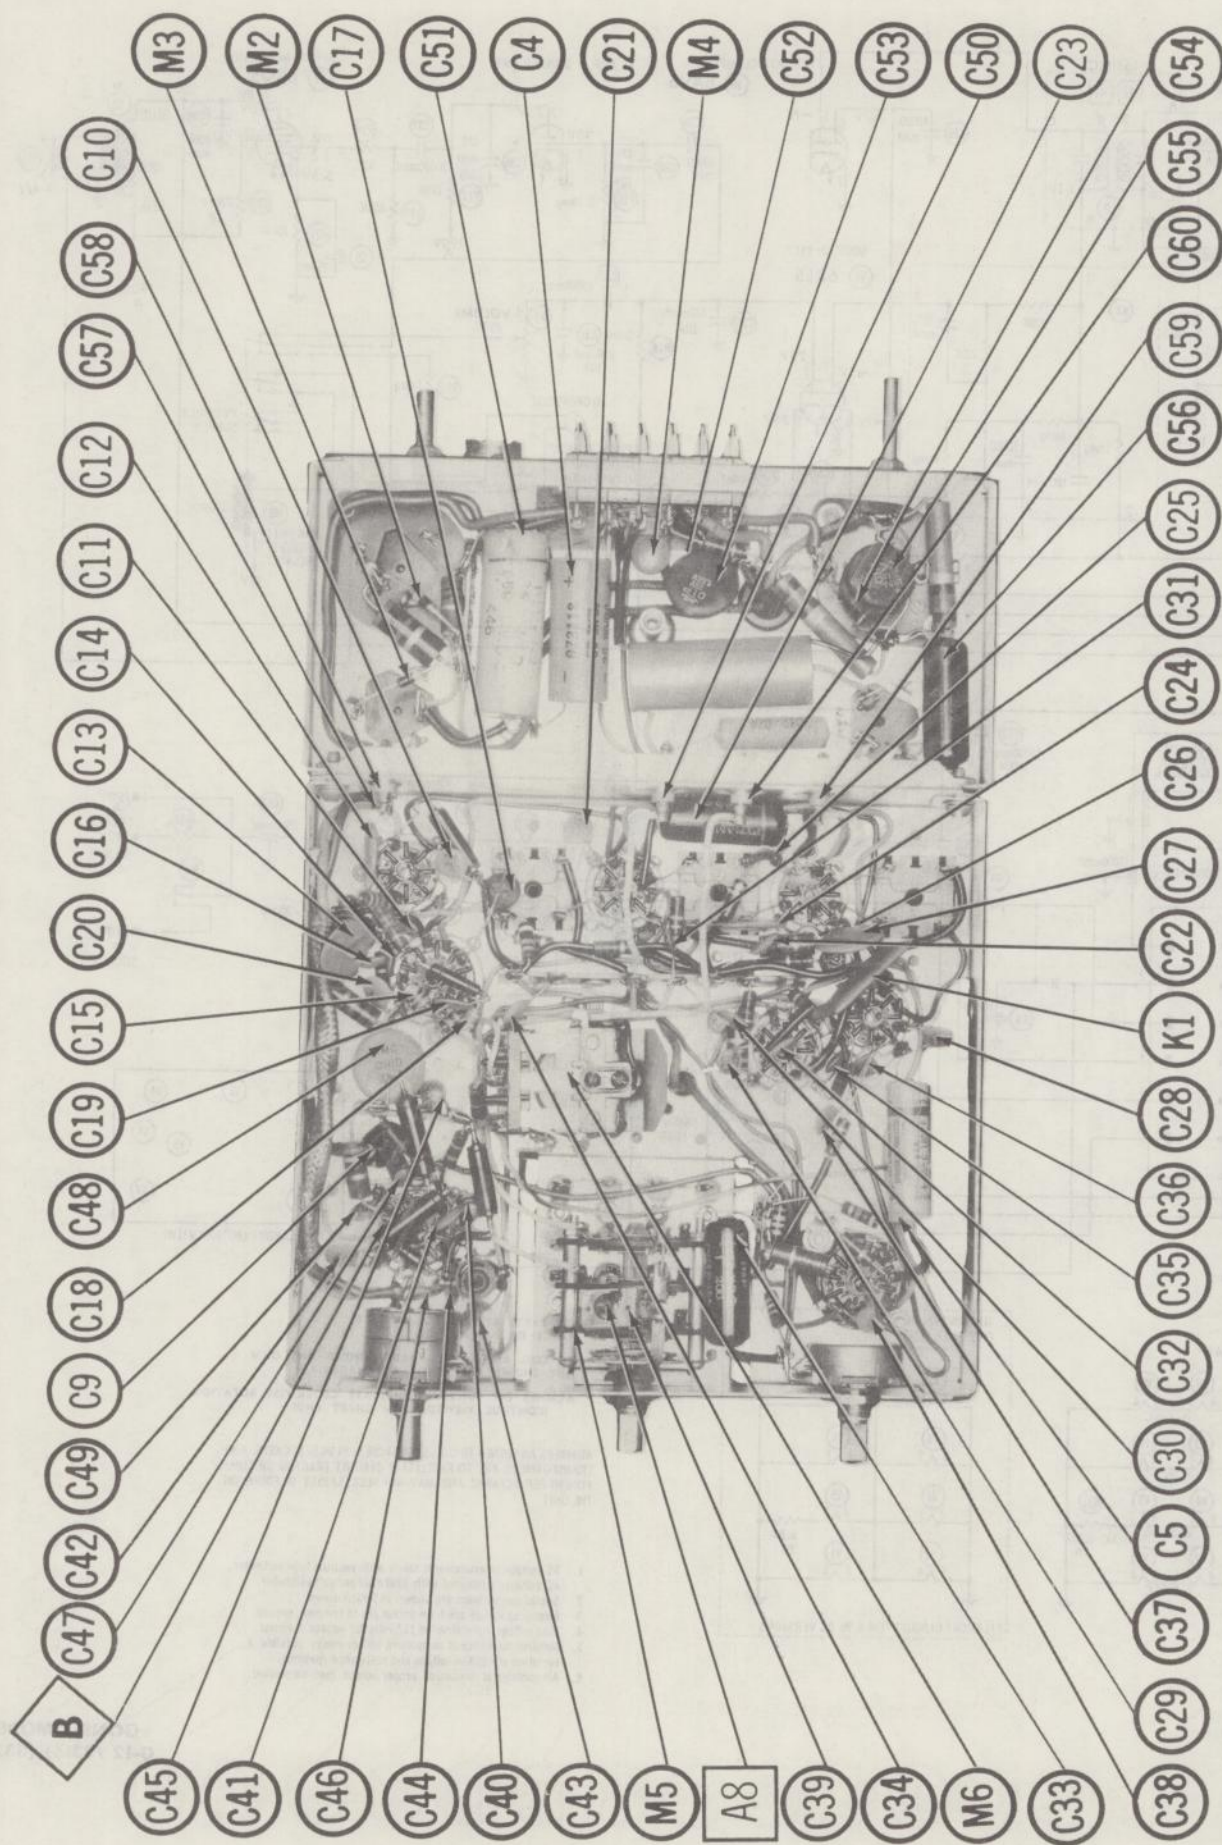

CHASSIS BOTTOM VIEW - ALIGNMENT, CAPACITOR & MISC. IDENT.

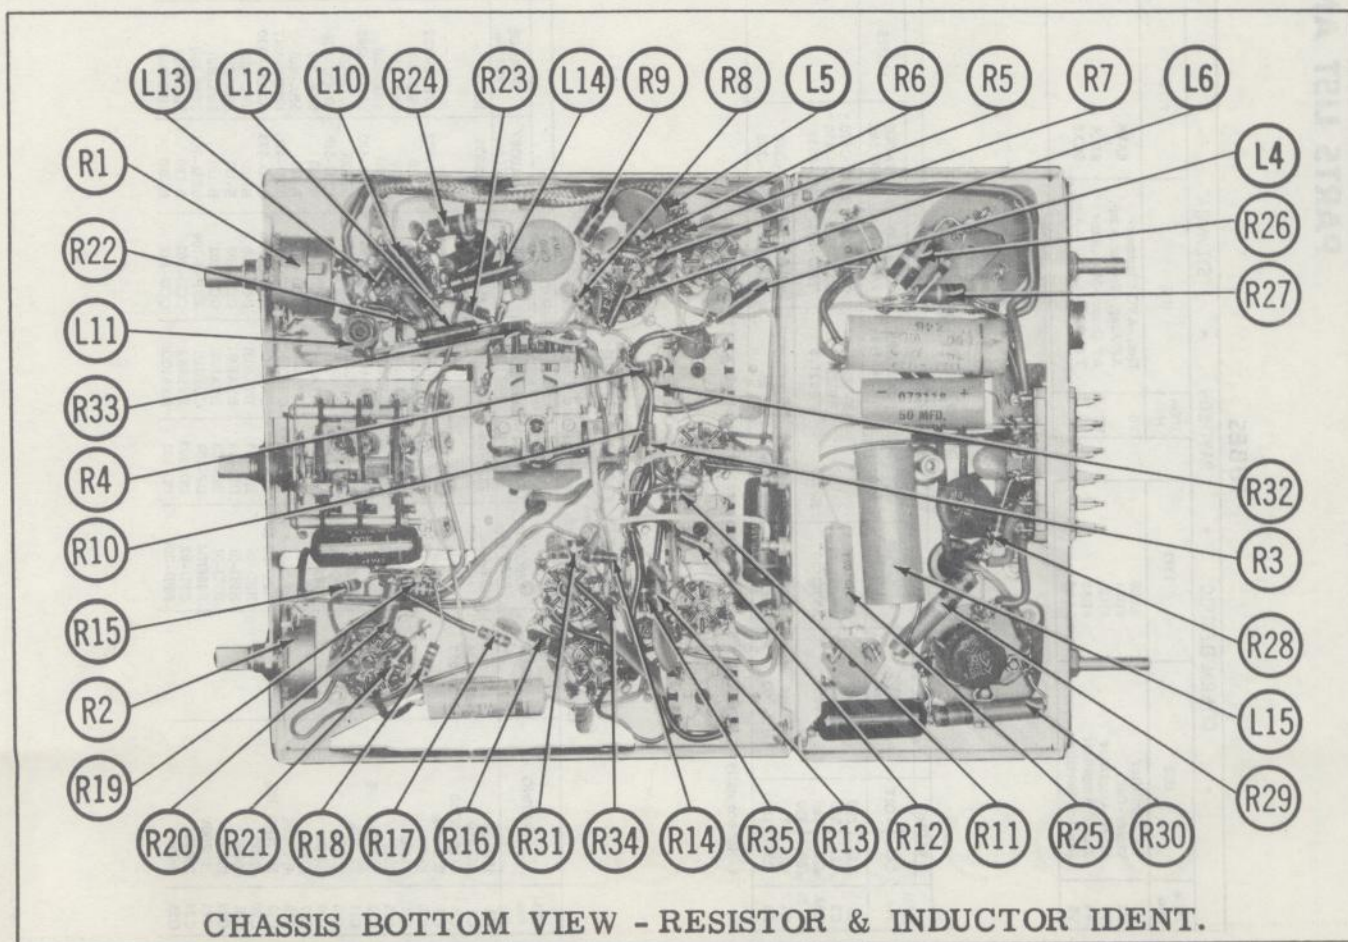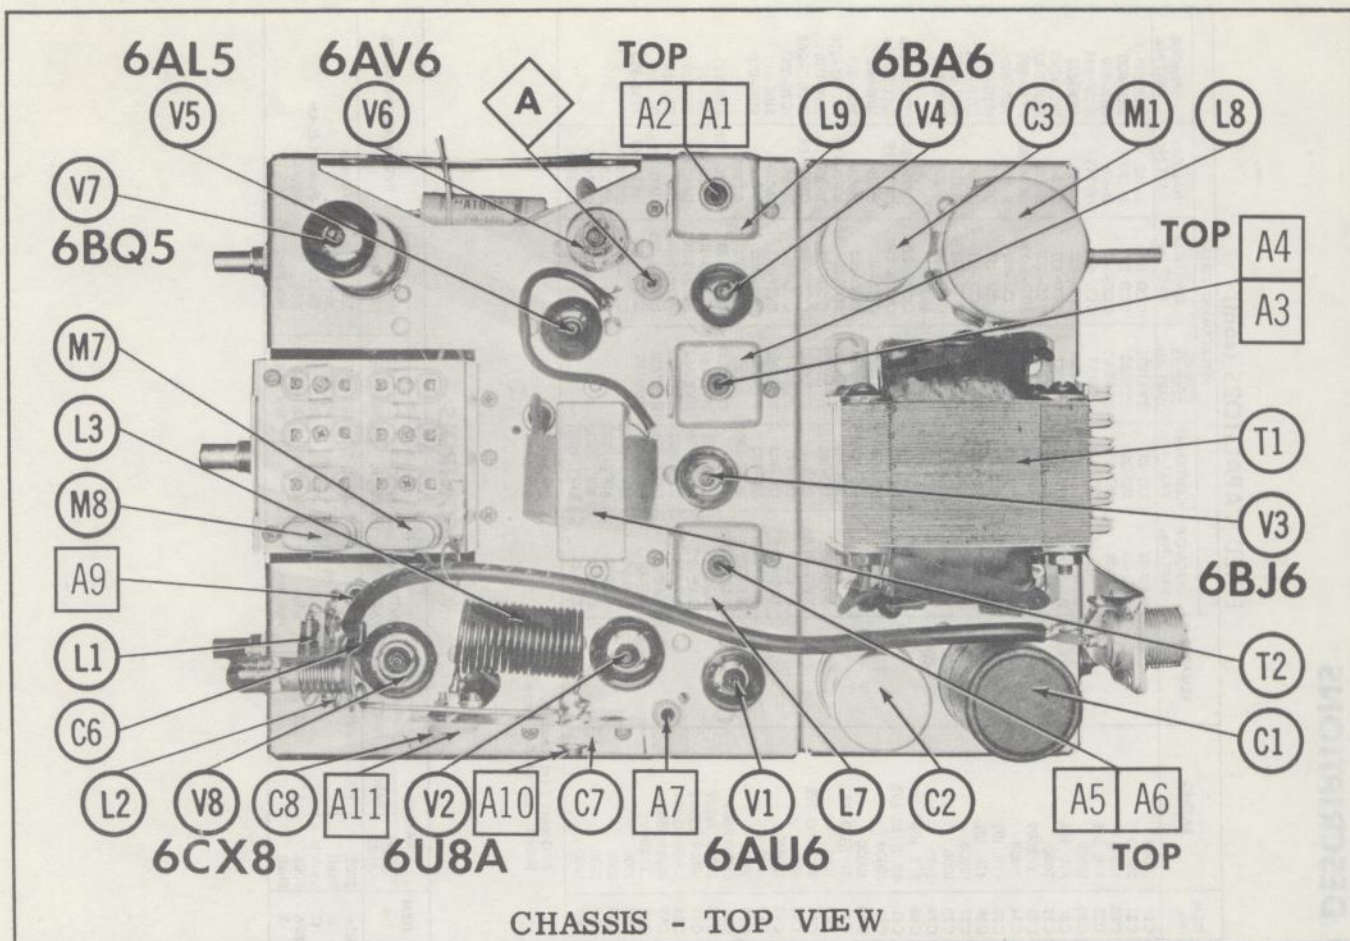

PARTS LIST AND DESCRIPTIONS

TUBES

GENERAL ELECTRIC			RAYTHEON			SYLVANIA		
ITEM No.	USE	TYPE	ITEM No.	USE	TYPE	ITEM No.	USE	TYPE
V1	RF Amplifier	6AL5	V6	Dct.-A VC Clamper-AF Amp. -Speech Amp.	6AV6			
V2	Mixer-Osc.	6B8A	V7	AF Output-Modulator	6BQ5			
V3	1st IF Amplifier	6BQ6	V8	Trans. Osc. -Final Amp.	6CX8			
V4	2nd IF Amplifier	6BA6						
V5	Squelch Rectifier	6AL5						

ELECTROLYTIC CAPACITORS

RATING			REPLACEMENT DATA		
ITEM No.	CAP.	VOLT.	CORNELL-DUBIER PART No.	MALLORY PART No.	SPRAGUE PART No.
C1	125	200	FPI22	TMS-1250	TVLS-1470 *
C2	125	200	FPI22	TMS-1250	TVLS-1470 *
C3A	30	350	B0310	FPI227.3	TMD-2385
C4	30	350	PRSL265	TC29	TD-50-25
C5	25	25	PRSL260	TC26	TD-25-25

* Not normally in distributor's stock. Available thru distributor on order to manufacturer

FIXED CAPACITORS

Capacity values given in the rating column are in mfd. for Paper Capacitors, and in mmfd. for Mica and Ceramic Capacitors.

RATING			REPLACEMENT DATA		
ITEM No.	CAP.	VOLT.	CORNELL-DUBIER PART No.	MALLORY PART No.	SPRAGUE PART No.
C6	100 5%		1469-0001	22R5T1	MCE235
C7	110-580				
C8	5-30	NT50			
C9	2.2 10%				
C10	10000				
C11	20000				
C12	82	NPO 10%			
C13	27 10%				
C14	1 10%				
C15	10000				
C16	10000				
C17	10000				
C18	4.7 10%				
C19	30	NPO 10%			
C20	10000				
C21	10000				
C22	10000				
C23	1 200V				
C24	20000				
C25	1000				

FIXED CAPACITORS (cont)

RATING			REPLACEMENT DATA		
ITEM No.	CAP.	VOLT.	AEROVOX PART No.	CORNELL-DUBIER PART No.	MALLORY PART No.
C26	10000		BPD-01	DD-103	B-110
C27	20000		BPD-02	DD-203	B-120
C28	10000		BPD-01	DD-103	B-110
C29	470 10%		DI-470	DD-103	GF347
C30	10000		BPD-01	DD-103	B-110
C31	470 10%		DI-470	DD-103	GF347
C32	2000		BPD-002	DD-202	B-220
C33	1 200V		P288N-1	DD-104	2TM-P10
C34	10000		BPD-01	DD-103	B-110
C35	470 10%		DI-470	DD-103	GF347
C36	470 10%		DI-470	DD-103	GF347
C37	10000		BPD-01	DD-103	B-110
C38	1000		BPD-001	DD-102	B-210
C39	3-35				
C40	2.2 10%		NPO-SI 2.2	TCZ-2R2	CNO-522
C41	68	NT50 10%	N750-D1 68	TCN-68	10TCU-Q88
C42	10000		BPD-01	DD-103	B-110
C43	10000		BPD-01	DD-103	B-110
C44	51	NPO 5%	BPD-001	DD-103	B-110
C45	1000		SI 470	DD-103	B-110
C46	68	NPO 10%	SI 470	DD-103	B-110
C47	470		BPD-01	DD-103	B-110
C48	10000		BPD-001	DD-102	B-210
C49	1000		EF-001	MFT-1000	CT280A
C50	1000		EF-001	MFT-1000	CT280A
C51	.035	600V	P688N-033	DD16-103	GEM-6133
C52	10000	1500V	DAC-27	DD16-103	UAC-110
C53	10000	1500V	DAC-27	DD16-103	UAC-110
C54	10000	1500V	DAC-27	DD16-103	UAC-110
C55	10000	1500V	DAC-27	DD16-103	UAC-110
C56	1 200V		P288N-1	DD-104	2TM-P10
C57	1000		EF-001	MFT-1000	CT280A
C58	1000		EF-001	MFT-1000	CT280A
C59	1000		EF-001	MFT-1000	CT280A
C60	1000		EF-001	MFT-1000	CT280A

Gonsset Part Number.

Note 1. Not used in some versions.

CONTROLS

RATING			REPLACEMENT DATA		
ITEM No.	RESISTANCE	WATTS	CORNELL-DUBIER PART No.	MALLORY PART No.	SPRAGUE PART No.
RIA	250K	1/2	052-081	Q13-130	U44
B	Switch		Not Req.	Not Req.	Not Req.
C	500K	1/2	052-082	Q13-130	U44
R2A	500K	1/2	052-082	Q13-130	U44
B	Shift		Not Req.	Not Req.	Not Req.

REPLACEMENT DATA

CENTRALAB

CLAROSTAT

PART No.

CTS-IRC

PART No.

MALLORY

PART No.

INSTALLATION NOTES

Volume

Power Off-On

Squelch

PARTS LIST AND DESCRIPTIONS (Continued)

RESISTORS

All wattages 1/2 watt, or less, unless otherwise listed.

ITEM No.	RATING	REPLACEMENT DATA		ITEM No.	RATING	REPLACEMENT DATA		REMARKS
		IRC PART No.	WORKMAN TV PART No.			IRC PART No.	WORKMAN TV PART No.	
R3	2.2meg			R20	22000 1W			
R4	91meg			R21	1500			
R5	47K			R22	47K			
R6	1meg			R23	27000			
R7	68K			R24	68000 1W			
R8	100K			R25	3300 5W	PW 5-330	5W-SQ-330	
R9	10K 1W			R26	1000 2W			
R10	2.2meg			R27	100 1W			
R11	100K			R28	1meg			
R12	220K			R29	1500 2W			
R13	10K 1W			R30	1500 2W			
R14	1meg			R31	4700			
R15	270K			R32	1meg			
R16	2.2meg			R33	1meg			
R17	270K			R34	1meg			
R18	82K			R35	1meg			
R19	680K							

COMPONENT COMBINATIONS

ITEM No.	USE	DESCRIPTION	GONSET PART No.	REPLACEMENT DATA
K1	Noise Clipper Network	(2) 100mmf, 100000mmf, (2) 220K (3) 1 meg	089-003	

COILS (RF-IF)

ITEM No.	USE	REPLACEMENT DATA		NOTES
		GONSET PART No.	Miller Part No.	
L1	RF Choke(5.6uh)	027-077	BC-560	
L2	Output Indicator	011-118	4588	
L3	RF Choke	011-120	RTC-8513	
L4	RF Choke(5.6uh)	027-028	RTC-565	
L5	RF Choke(5.6uh)	012-414	6171-A	
L6	RF Choke(5.4uh)	027-004	6171-A	
L7	1st IF	014-030	RTC-8519	
L8	2nd IF	014-030	RTC-8519	
L9	3rd IF	027-028	RTC-8519	
L10	RF Choke(5.6uh)	012-414	6171-A	
L11	Osc. Plate	027-028	RTC-8519	
L12	RF Choke(5.6uh)	027-028	RTC-8519	
L13	RF Choke (.47uh)	027-073	RTC-8519	
L14	RF Choke(15uh)	027-052	RTC-8524	
L15	Hash Choke(4uh)	027-010	RTC-9181	

TRANSFORMER (POWER)

ITEM No.	RATING	REPLACEMENT DATA		NOTES
		GONSET PART No.	Miller Part No.	
T1	117V @ 100V @ 12.6V @ 5A (AC Only)	271-088①	Stancor Part No.	① Part #271-071 used in 6-volt DC versions. * AC operation filament supply. Part of primary when used for DC operation.

TRANSFORMER (AUDIO OUTPUT)

ITEM No.	IMPEDANCE	REPLACEMENT DATA		NOTES
		GONSET PART No.	Miller Part No.	
T2	27000	272-004 ①	Stancor Part No.	① Alternate Part #272-034.

SPEAKER

ITEM No.	TYPE	REPLACEMENT DATA		NOTES
		GONSET PART No.	QUAM PART No.	
SP1	3 1/2" PM	152-016	3A070T	

VIBRATOR

ITEM No.	TYPE	INPUT VOLTS/FREQUENCY	REPLACEMENT DATA		NOTES
			GONSET PART No.	MALLOY PART No.	
M1	Interrupter	12V 115%	117-003	GI601	12 Volt Versions
	Interrupter	6V 115%	117-008	1601	6 Volt Versions

POWER RECTIFIERS

ITEM No.	RATING CURRENT (Measured)	GONSET PART No.	REPLACEMENT DATA		NOTES
			RCA PART No.	SYLVANIA PART No.	
M2	.090A	474-012	INI763 *	SR500 *	* Silicon Type
M3	.090A	474-012	INI763 *	SR500 *	
M4	.070A	474-004	INI763 *	SR500 *	

MISCELLANEOUS

ITEM No.	PART NAME	GONSET PART No.	NOTES
M5	Switch	171-096	Channel Selector (Rotary Wafer Type) AC-12VDC Versions AC-6VDC Versions
M6	Relay	111-091	
M7	Relay	111-090	
M8	Microphone	113-015A	Receive Crystal Transmitt

FUSES

ITEM No.	TYPE	RATING	REPLACEMENT DATA		BUSS PART No.
			GONSET PART No.	UTTELFUSE PART No.	
	3AG	1A ①			
		250V			
	3AG	1A ①			
		250V			
	7A	32V ②			
		32V ③			
		20A			
		32V ③			

① 117 VAC Operation. ② 12VDC Operation. ③ 6VDC Operation.

CABINETS & CABINET PARTS

(When Ordering Cabinets & Cabinet Parts, Specify Model, Chassis & Color)

NAME	PART NO.	DESCRIPTION
Knob	211-017	Channel Selector Volume, Squeech
Knob	211-016	
Cabinet	465-066	

WIRING DATA

General-use Unshielded Hook-up Wire		Use BELDEN No. 8530 (Solid) Available in Ten Colors
Power Cord		Use BELDEN No. 8524 (Stranded) Available in Ten Colors
		Use BELDEN No. 1765-B (6 Ft. Length)
		1725-K (7 1/2 Ft. Length)

PHOTOFACT® Folder



HALLICRAFTERS MODEL CB-1



**HALLICRAFTERS
MODEL CB-1**

TRADE NAME	Hallicrafters Model CB-1
MANUFACTURER	The Hallicrafters Co., 4400W, 45th Street, Chicago 32, Illinois
TYPE SET	AC Operated Crystal Controlled 11 Tube Citizens Band Transmitter-Receiver
POWER SUPPLY	105 - 125 Volts AC, 60 Cycles
TUNING RANGE	Any one of Citizens Band Channels 1 thru 22
	RATING 60 Watts, .56 Amp. @117 Volts AC

NOTICE


ONLY THOSE PERSONS PROPERLY LICENSED BY FCC ARE PERMITTED TO EFFECT REPAIRS OR MAKE CRYSTAL SUBSTITUTIONS ON THIS TYPE EQUIPMENT.

HOWARD W. SAMS & CO., INC. Indianapolis 6, Indiana



The listing of any available replacement part herein does not constitute in any case a recommendation, warranty or guaranty by Howard W. Sams & Co., Inc., as to the quality and suitability of such replacement part. The numbers of these parts have been compiled from information furnished to Howard W. Sams & Co., Inc., by the manufacturers of KZ384

the particular type of replacement part listed. Reproduction or use, without express permission, of editorial or pictorial content, in any manner, is prohibited. No patent liability is assumed with respect to the use of the information contained herein. © 1961 Howard W. Sams & Co., Inc., Indianapolis 6, Indiana. Printed in U.S. of America

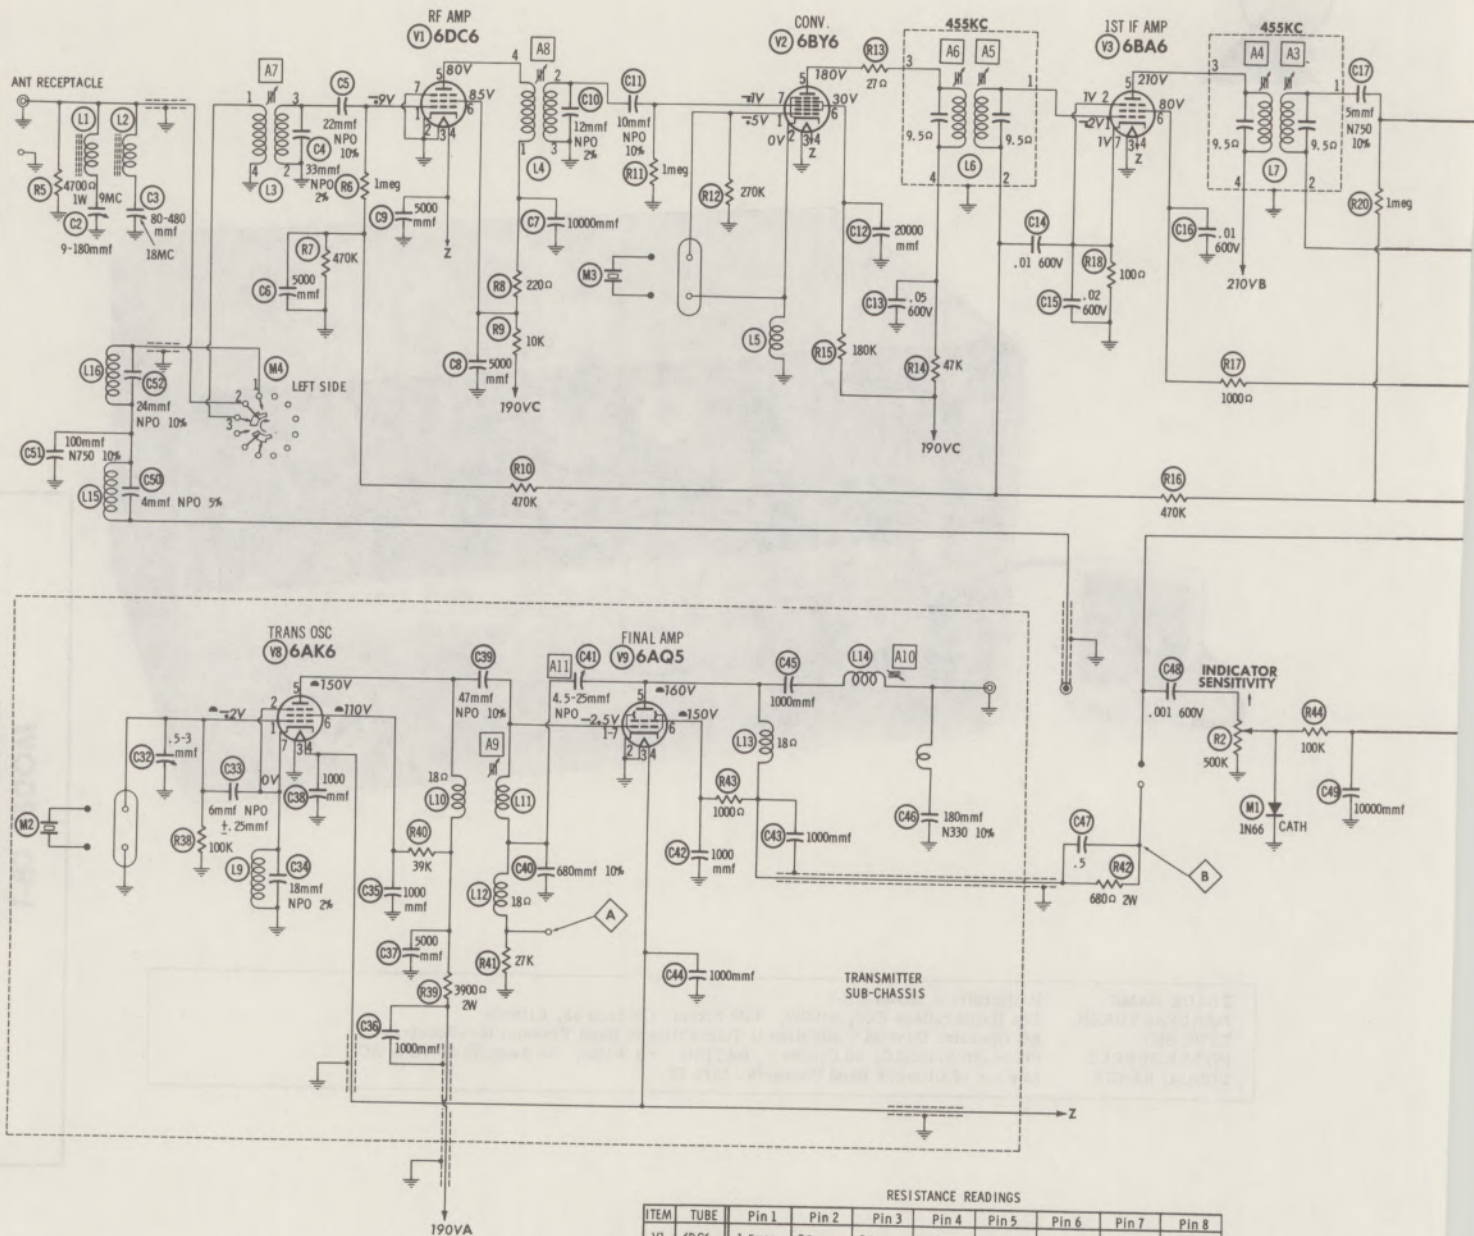


RESISTANCE READINGS


ITEM	TUBE	Pin 1	Pin 2	Pin 3	Pin 4	Pin 5	Pin 6	Pin 7	Pin 8
V1	6DC6	1.5meg	0Ω	0Ω	.1Ω	†11K	†11K	0Ω	
V2	6BY6	270K	0Ω	0Ω	.1Ω	†48K	†180K	1meg	
V3	6BA6	1meg	100Ω	0Ω	.1Ω	†330Ω	†24K	100Ω	
V4	6BA6	2meg	100Ω	0Ω	.1Ω	†1300Ω	†23K	100Ω	
V5	6AL5	800K	420K	.8Ω	0Ω	†75Ω	0Ω	270K	
V6	6SC7	TP	†220K	15meg	2.2meg	†28K	0Ω	0Ω	.1Ω
V7	6K6GT	TP	0Ω	†680Ω	†330Ω	470K	TP	.1Ω	980Ω
V8	6AK6	100K	0Ω	0Ω	.1Ω	†5200Ω	†44K	0Ω	
V9	6AQ5A	27K	0Ω	0Ω	.1Ω	†1375Ω	†2350Ω	27K	
V10	6E5	.1Ω	†1meg	100K	†330Ω	0Ω	0Ω		
V11	5Y3GT	TP	†	TP	105Ω	TP	115Ω	TP	†

ALL MEASUREMENTS MADE IN "RECEIVE" POSITION UNLESS OTHERWISE DESIGNATED.
 † THIS READING WILL VARY DEPENDING UPON THE CONDITION OF THE ELECTROLYTIC IN THE CIRCUIT.
 ● THIS READING WILL VARY. CONTROL SET FOR NORMAL OPERATION.
 ▲ MEASURED IN "TRANSMIT" POSITION.
 † MEASURED FROM PIN 8 OF V11.

NC NO CONNECTION
 TP TIE POINT

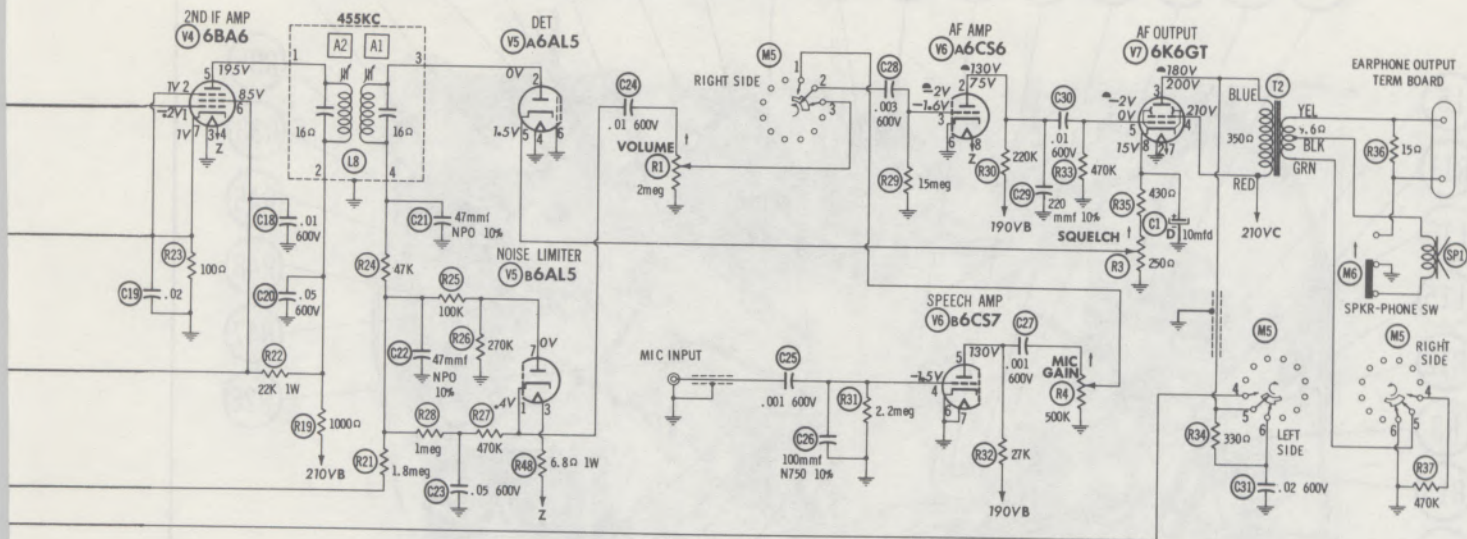

TRANSMIT-RECEIVE
SW M4 & M5 SHOWN
IN "RECEIVE" POSITION.
SWITCHES ARE
OPERATED
SIMULTANEOUSLY
BY ONE PUSH-BUTTON






SEE PARTS LIST FOR ALTERNATE
VALUE OR APPLICATION

DC COIL RESISTANCE VALUES UNDER ONE OHM
NOT SHOWN ON SCHEMATIC DIAGRAM


ARROWS ON CONTROLS INDICATE CLOCKWISE ROTATION
(CONTROL VIEWED FROM SHAFT END)

NUMBERS ASSIGNED TO COILS, SWITCHES, PLUGS, SOCKETS, AND
TRANSFORMERS ARE TO FACILITATE CIRCUIT TRACING OR COM-
PONENT REPLACEMENT AND MAY NOT NECESSARILY BE FOUND ON
THE UNIT.

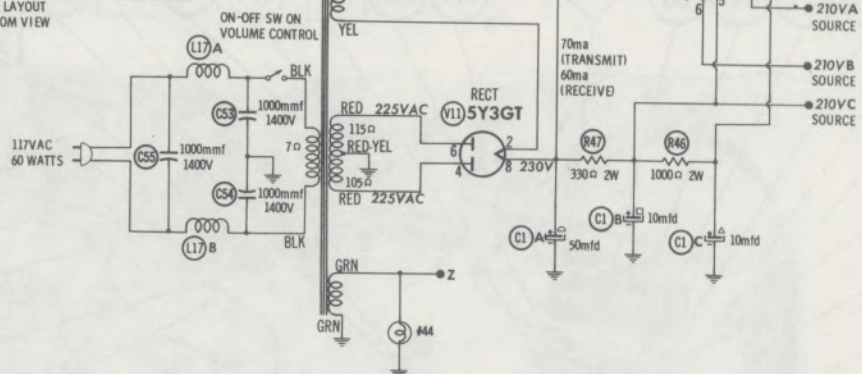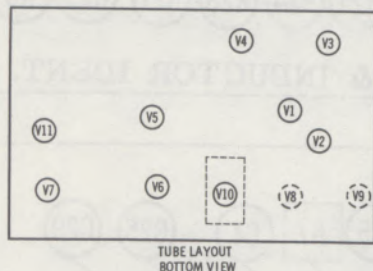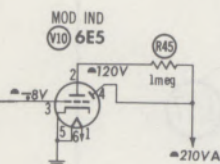


1. DC voltage measurements taken with vacuum tube voltmeter; AC voltages measured with 1000 ohm per volt voltmeter.
2. Socket connections are shown as bottom views.
3. Measured values are from socket pin to common ground.
4. Line voltage maintained at 117 volts for voltage readings.
5. Nominal tolerance on component values makes possible a variation of $\pm 15\%$ in voltage and resistance readings.
6. Volume control at maximum, no signal applied for voltage measurements.

**HALICRAFTERS
MODEL CB-1**

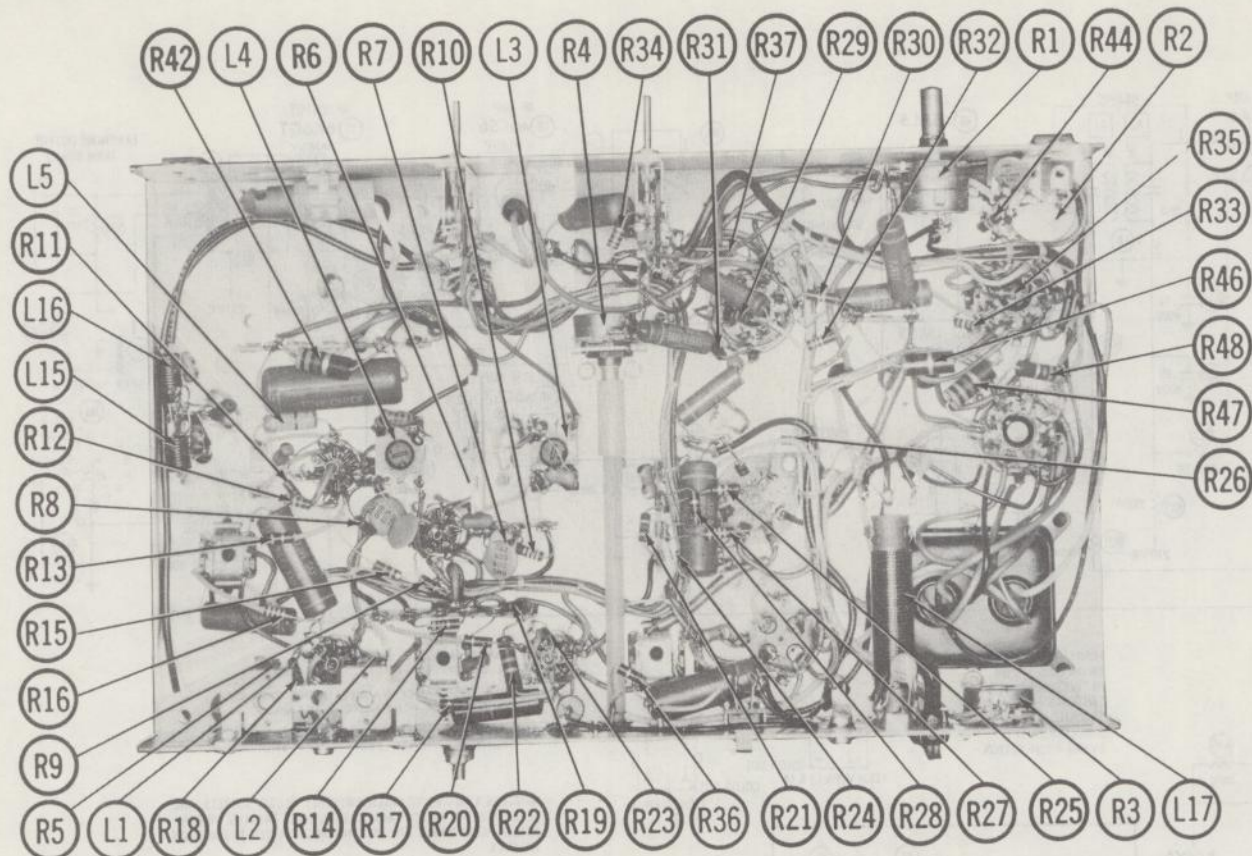

CHASSIS BOTTOM VIEW-RESISTOR & INDUCTOR IDENT.

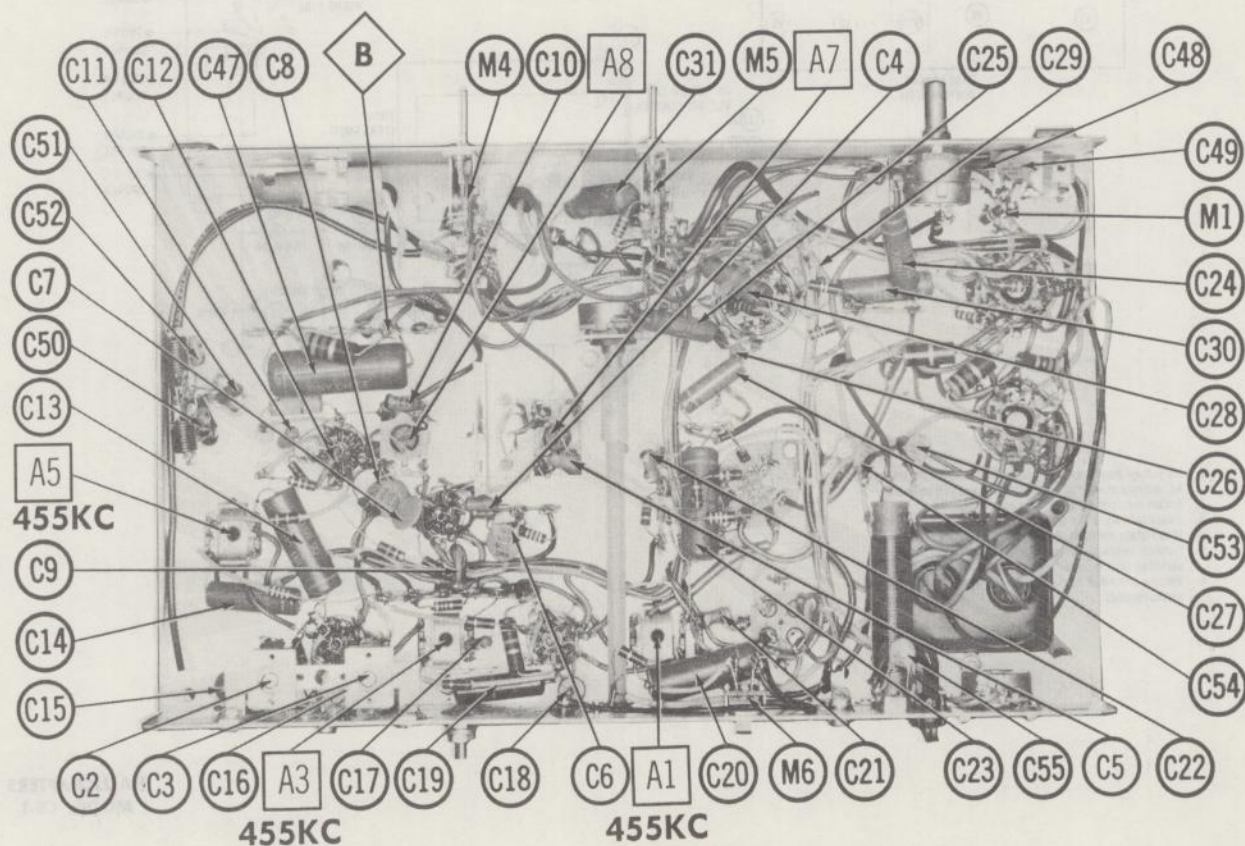

CHASSIS BOTTOM VIEW-ALIGNMENT, CAPACITOR & MISC. IDENT.

PARTS LIST AND DESCRIPTIONS WIRING DATA

General-use Unshielded Hook-up Wire Use BELDEN No. 8530 (Solid) Available in Ten Colors
Power Cord Use BELDEN No. 8524 (Stranded) Available in Ten Colors
..... Use BELDEN No. 1765-B (6 Ft. Length)
..... Use BELDEN No. 1725-K (7½ Ft. Length)

TUBES

GENERAL ELECTRIC				RAYTHEON				SYLVANIA			
ITEM No.	USE	TYPE	ITEM No.	USE	TYPE	ITEM No.	USE	TYPE	ITEM No.	USE	TYPE
V1	RF Amplifier	6DC6	V7	AF Output-Modulator	6K5GT						
V2	Converter	6BY6	V8	Trans. Oscillator	6AK6						
V3	1st IF Amplifier	6BA6	V9	Final Amplifier	6AQ5A						
V4	2nd IF Amplifier	6BA6	V10	Mod. Indicator	6E5						
V5	Det.-Noise Limiter	6AL5	V11	Rectifier	5Y3GT						
V6	AF Amp.-Speech Amp.	6SC7									

ELECTROLYTIC CAPACITORS


REPLACEMENT DATA			
ITEM No.	RATING	REMARKS	REPLACEMENT DATA
C1A	50 350		CORNEILL DUBIER PART No. D0160
B	10 350		AEROVOX PART No. AFPH4-17
C	10 350		Hallcrafters PART No. 045-200122
D	10 25		

FIXED CAPACITORS

Capacity values given in the rating column are in mfd. for Paper Capacitors, and in mmfd. for Mica and Ceramic Capacitors.

ITEM No.	RATING	REMARKS	REPLACEMENT DATA
C2	9-180		CORNEILL DUBIER PART No. 483
C3	80-480		486
C4	33 NPO 2%		CM-20C-330G
C5	22 NPO 10%		CCTO-220
C6	5000		CCD-502
C7	10000		CCD-103
C8	5000		CCD-502
C9	5000		CCD-502
C10	12 NPO 2%		CCD-502
C11	10 NPO 10%		CCD-502
C12	20000		CCTO-100K
C13	.05 600V		CCD-203
C14	.01 600V		BYB6S2
C15	.02 600V		CUB6S1
C16	.01 600V		CUB6S1
C17	5 N750 10%		CUB6S1
C18	.01 600V		CUB6S1
C19	.02 200V		CUB6S1
C20	.05 600V		CUB6S1
C21	47 NPO 10%		CUB6S1
C22	47 NPO 10%		CUB6S1
C23	.05 600V		CUB6S1
C24	.01 600V		CUB6S1
C25	.001 600V		CUB6S1
C26	100 N750 10%		CUB6S1
C27	.001 600V		CUB6S1
C28	.003 600V		CUB6S1
C29	220 10%		CUB6S1
C30	.01 600V		CUB6S1
C31	.02 600V		CUB6S1
C32	5-3		CUB6S1

TRANSMITTER SUB CHASSIS

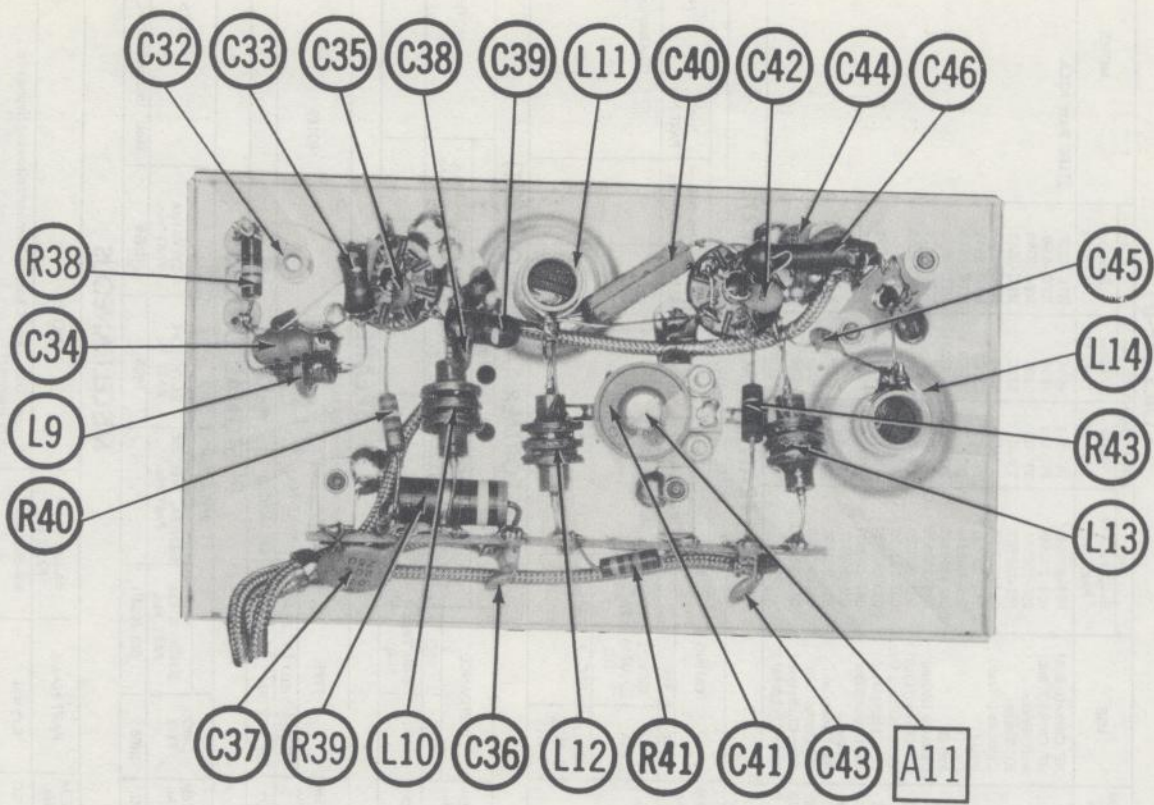

PARTS LIST AND DESCRIPTIONS (Continued)

FIXED CAPACITORS (cont)

ITEM No.	RATING	REMARKS	AEROVOX PART No.	CENTRALAB PART No.	CONV. DUBBIE PART No.	ELMOCO PART No.	MALLORY PART No.	SPRAGUE PART No.
C33	6 NPO ± 25mmf	#491-101080-23			C10V8C			
C34	18 NPO 2%	#491-104180-22						
C35	1000		BPD-001	TCZ-18	BYA10D1	CCD-102	B-210	SHK-D10
C36	1000		BPD-001	DD-102	BYA10D1	CCD-102	B-210	SHK-D10
C37	5000		BPD-005	DD-102	BYA10D5	CCD-502	B-250	SHK-D50
C38	1000		BPD-001	DD-102	BYA10D1	CCD-102	B-210	SHK-D10
C39	47 NPO 10%		NPO-SI 47	TCZ-47	C10V47C	CCTO-470	CNO-447	10TCC-Q47
C40	680 10%		1469-00068		SH5768	C10V47C	MCJ249	MS-368
C41	4.5-25 NPO	#044-100516		822-A2				
C42	1000		BPD-001	DD-102	BYA10D1	CCD-102	B-210	SHK-D10
C43	1000		BPD-001	DD-102	BYA10D1	CCD-102	B-210	SHK-D10
C44	1000		BPD-001	DD-102	BYA10D1	CCD-102	B-210	SHK-D10
C45	1000		BPD-001	DD-102	BYA10D1	CCD-102	B-210	SHK-D10
C46	180 N330 10%							
C47	.5 200V		P288N-5	D6-102	CUBED1	2DP-5-504	GEM-205	2TM-P50
C48	.001 600V		P688N-001	DD-102	BYA10D1	6DP-1-102	GEM-621	6TM-D10
C49	10000		BPD-01	DD-103	BYA10D1	CCD-103	B-110	SHK-S10
C50	4 NPO 5%				C10V4C			10TCC-V39
C51	100 N750 10%		N750-SI 100	TCN-100	C10V1U	CCTN-101	CN7-310	10TCC-U10
C52	24 NPO 10%		DAC-2	DD30-102	HVBI6D1	3CCD-102	CNO-425	10TCC-Q25
C53	1000 1400V		DAC-2	DD30-102	HVBI6D1	3CCD-102	UAC-210	BL-D10
C54	1000 1400V		DAC-2	DD30-102	HVBI6D1	3CCD-102	UAC-210	BL-D10
C55	1000 1400V		DAC-2	DD30-102	HVBI6D1	3CCD-102	UAC-210	BL-D10

Hallcrafters Part Number.

* Not normally in distributor's stock. Available thru distributor on order to manufacturer.

CONTROLS

ITEM No.	RATING	REMARKS	HALLCRAFTERS PART No.	CENTRALAB PART No.	CLAROSTAT PART No.	CTS-IRC PART No.	MALLORY PART No.	INSTALLATION NOTES
R1A	2meg		025-201742	B-76	A47-2meg-Z	Q13-139	U55	Volume
B	Shift			Not Req.	FS-3	Not Req.	US-26	Power Off-On
C	Switch			Not Req.	SWF-12	76-1	US-26	Indicator Sensitivity
R2A	500K		025-201719	B-59	A47-500K-S	Q11-133	U50	Squelch
B	Shift			Not Req.	FKS-1/4	Not Req.	Not Req.	Mic. Gain
R3A	250Ω		025-101752	TT-2		BLI-201	U50	
B	Shift			Not Req.		TM4	U50	
R4A	500K		025-201728	B-59	A47-500K-S	Q11-133	U50	
B	Shift			Not Req.	FS-3	Not Req.	Not Req.	

RESISTORS

All wattages 1/2 watt, or less, unless otherwise listed.

ITEM No.	BATING	REMARKS	IRC PART No.	WORKMAN PART No.	REMARKS	ITEM No.	RATING	IRC PART No.	WORKMAN PART No.	REMARKS
R5	4700Ω 1W					R27	470K			
R6	1meg					R28	1meg			
R7	470K					R29	15meg			
R8	220Ω					R30	220K			
R9	10K					R31	2.2meg			
R10	470K					R32	27K			
R11	1meg					R33	470K			
R12	270K					R34	330Ω			
R13	27Ω					R35	430Ω			
R14	47K					R36	15Ω			
R15	180K					R37	470K			
R16	470K					R38	100K			
R17	1000Ω					R39	3900Ω 2W			
R18	100Ω					R40	39K			
R19	1000Ω					R41	27K			
R20	1meg					R42	680Ω 2W			
R21	4.8meg					R43	1000Ω			
R22	22K 1W					R44	100K			
R23	100Ω					R45	1meg			
R24	47K					R46	1000Ω 2W			
R25	100K					R47	330Ω 2W			
R26	270K					R48	6.8Ω 1W			

COILS (RF-IF)

ITEM No.	USE	HALLCRAFTERS PART No.	REPLACEMENT DATA	STONCOR PART No.	NOTES
L1	RF Choke(1.8uh)	053-200546	BC-562	RTC-8516	① IRC Part #CLA
L2	RF Choke(1.8uh)	053-200546	BC-562	RTC-8516	
L3	Ant. Trans.	051-202568	TV-116	RTC-8568	
L4	RF Trans.	051-202567	TV-116	RTC-8568	
L5	Cathode (.82uh)	053-100552	TV-189	RTC-8610	
L6	1st IF	050-300241	BC-352	RTC-8632	
L7	2nd IF	050-300241	BC-352	RTC-8632	
L8	3rd IF	050-300242	BC-353	RTC-8633	
L9	Cathode(100uh)	053-200538	TV-198	RTC-8574	
L10	RF Choke(5.5uh)	053-202570	TV-188	RTC-8592	
L11	Transmitting Osc.	051-202570	TV-188	RTC-8592	
L12	RF Choke(5.5uh)	053-200537	TV-188	RTC-8515	
L13	RF Choke(5.5uh)	053-200537	TV-188	RTC-8515	
L14	Output	051-202571	BC-561	RTC-8518	
L15	RF Choke(1uh)	051-202598	BC-561	RTC-8518	
L16	RF Choke(1uh)	051-202598	BC-564	RTC-8518	
L17A	Line Choke(4uh)	053-200540	BC-564	RTC-8518	
B	Line Choke(4uh)				

TRANSFORMER (POWER)

ITEM No.	RATING	HALLCRAFTERS PART No.	REPLACEMENT DATA	STONCOR PART No.	NOTES
T1	SEC. 1 5V @ .56A SEC. 2 450VCT @ .070A 2A SEC. 3 6.3V @ 3.5A SEC. 4 SEC. 5	052-300680-A①			① Alternate Part # 052-300680

TRANSFORMER (AUDIO OUTPUT)

ITEM No.	IMPEDANCE	HALLCRAFTERS PART No.	REPLACEMENT DATA	STONCOR PART No.	NOTES
T2	2500Ω PRI. SEC. 100Ω Triod 3-4Ω	055-200406			

SPEAKER

ITEM No.	TYPE	REPLACEMENT DATA	NOTES
SP1	SIZE 4"x 6" PM FIELD V. C. IMP. 3-4Ω	HALLCRAFTERS PART No. 085-400203 QUAM PART No. 46A07	

SIGNAL DIODES

ITEM No.	ORIG. TYPE	HALLCRAFTERS PART No.	REPLACEMENT DATA	NOTES
M1	1N66	019-102311	GENERAL ELECTRIC PART No. 1N66	SYLVANIA PART No. 1N66 Mod. Indicator Rect. (Pigtail)

MISCELLANEOUS

ITEM No.	PART NAME	HALLCRAFTERS PART No.	NOTES
M2	Crystal	019-302309	Trans. Osc. (Add Channel Number following hyphen in part Number)
M3	Crystal	019-302308	Receiver Osc. (Add Channel Number following hyphen in part Number)
M4	Switch	060-202079	Push To Talk (Spring Return, Wafer Type)
M5	Switch	060-202079	Push To Talk (Spring Return, Wafer Type)
M6	Microphone	060-200477	Speaker-Phone (SPDT Slide Type)
		081-100101	

ALIGNMENT INSTRUCTIONS

ALIGNMENT INSTRUCTIONS—READ CAREFULLY BEFORE ATTEMPTING ALIGNMENT

Volume control should be at maximum position. Output of signal generator should be no higher than necessary to obtain an output reading. Set Squelch, Microphone Gain and Indicator sensitivity controls fully counterclockwise. Use Signal Generator with accuracy within .005%.

Suggested Alignment Tools: A1 Thru A6... GENERAL CEMENT #5097, 8727

WALSCO #2515


A7, A8, GENERAL CEMENT #5004, 5009, 8195, 8274, 8275, 8607, 8728, 8987, 8988, 8989, 9291

WALSCO #2515, 2520, 2522, 2523, 2531, 2532, 2534, 2537, 2538

A9, A10, A11... GENERAL CEMENT #8721, 8722

WALSCO #2519

	SIGNAL GENERATOR COUPLING	SIGNAL GENERATOR FREQUENCY	OUTPUT METER	ADJUST	REMARKS
1.	High side thru .01mfd to pin 7 (grid) of Converter. Low side to chassis.	455KC (400% Mod.)	Across voice coil.	A1, A2, A3, A4, A5, A6	Adjust for maximum output.
2.	High side thru 50Ω to antenna jack. Low side to chassis.	Crystal frequency plus 455KC	"	A7, A8	"
3.			USE VTVM DC probe to point A. Common to chassis. Connect Wattmeter across antenna jack.	A9, A10	Press "Talk" bar. Adjust A9 for maximum deflection on VTVM. Adjust A10 for maximum output on Wattmeter.
4.			"	A11	Press "Talk" bar. Remove jumper at point B. Connect vertical amp. of scope across Wattmeter. Adjust A11 for MINIMUM deflection on scope. Reconnect plug at point B.
5.	High side of Audio Signal generator thru 100K to the Microphone input jack. Low side to chassis.	500% at .03 volts output.	USE SCOPE Vert. amp. to antenna jack. Low side to chassis.	R4	Adjust for 85% modulation as seen on scope.
6.	"	"	"	R2	Adjust for complete closure of indicator eye at 85% modulation with no foldover or bright area.
7.	Connect a 9MC signal into antenna and adjust C2 for minimum output.				
8.	Connect an 18MC signal into antenna and adjust C3 for minimum output.				

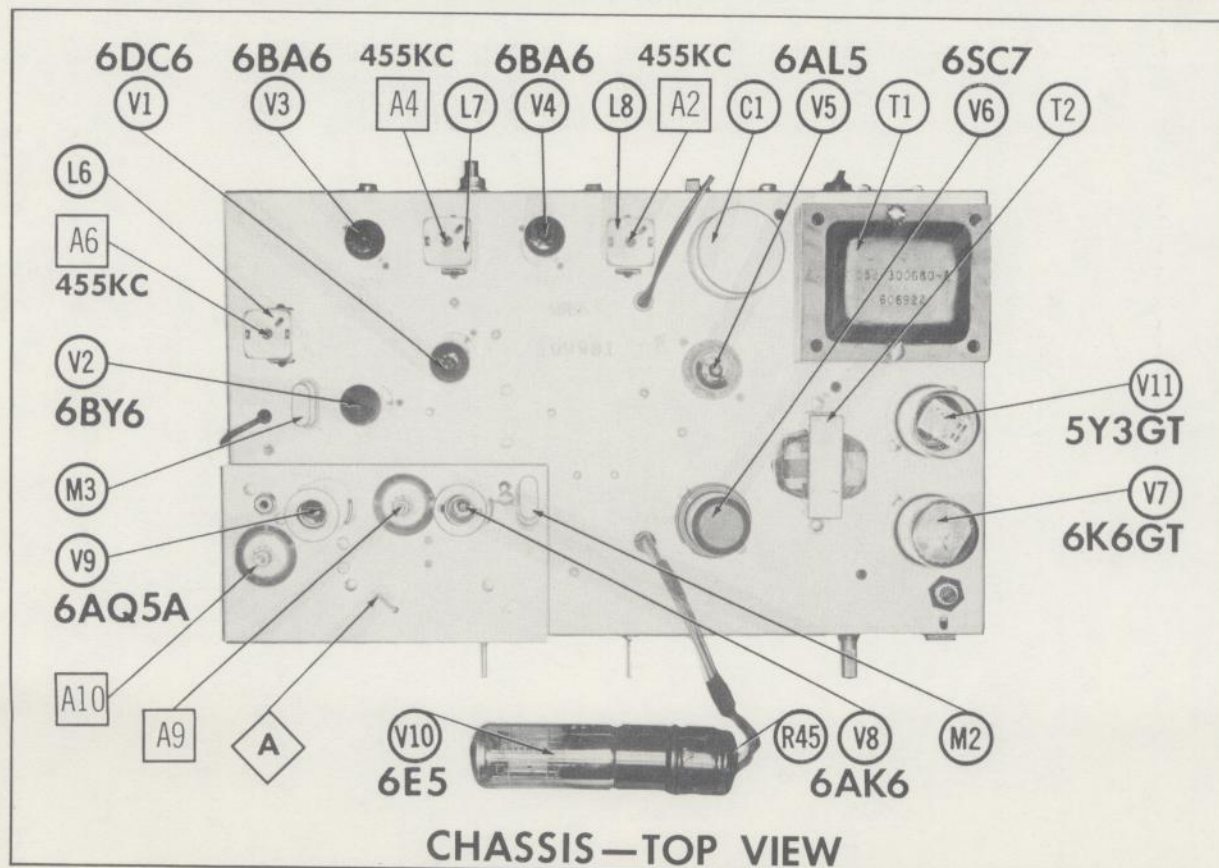

CHASSIS—TOP VIEW



TRADE NAME	Heath Models CB-1 (Kit), W-CB-1 (Wired)
MANUFACTURER	Heath Co., A Subsidiary of Daystrom Inc., Benton Harbor, Michigan
TYPE SET	AC-Battery Operated 4 Tube Citizens Band Transmitter-Receiver
POWER SUPPLY	105 - 125 Volts AC, 50-60 Cycles (or) 6 Volt Storage Battery (or) 12 Volt Storage Battery
RATING	26 Watts, .28 Amp. @117 Volts AC (Receiver); 32 Watts, .34 Amp. @117 Volts AC (Transmit) 1.8 Amp. @6.3 Volts DC .9 Amp. @12.6 Volts DC
TUNING RANGE	Any One of Citizens Band Channels 1 thru 23 (Transmitter is Crystal Controlled, Receiver is Continuously Tuneable)

ALIGNMENT PROCEDURE

If the Tuning Capacitor fails to cover the proper tuning range, adjust A1.
Connect the DC probe of the VTVM to pin 7 (grid) of the Final, Common to chassis. Switch on Transmitter and adjust A2 for maximum deflection. Using a field strength meter, adjust A3 for maximum output from the transmitter.

If the transmitter interferes with TV reception, adjust trap A4 for MINIMUM interference.

NOTICE

ONLY THOSE PERSONS PROPERLY LICENSED BY FCC ARE PERMITTED TO MAKE CRYSTAL SUBSTITUTION OR EFFECT REPAIRS ON THE TRANSMITTER PORTION OF THIS UNIT.


HOWARD W. SAMS & CO., INC. Indianapolis 6, Indiana




The listing of any available replacement part herein does not constitute in any case a recommendation, warranty or guaranty by Howard W. Sams & Co., Inc., as to the quality and suitability of such replacement part. The numbers of these parts have been compiled from information furnished to Howard W. Sams & Co., Inc., by the manufacturers of KZ617

the particular type of replacement part listed. Reproduction or use, without express permission, of editorial or pictorial content, in any manner, is prohibited. No patent liability is assumed with respect to the use of the information contained herein. © 1961 Howard W. Sams & Co., Inc., Indianapolis 6, Indiana. Printed in U.S. of America

HEATH MODELS
CB-1, W-CB-1

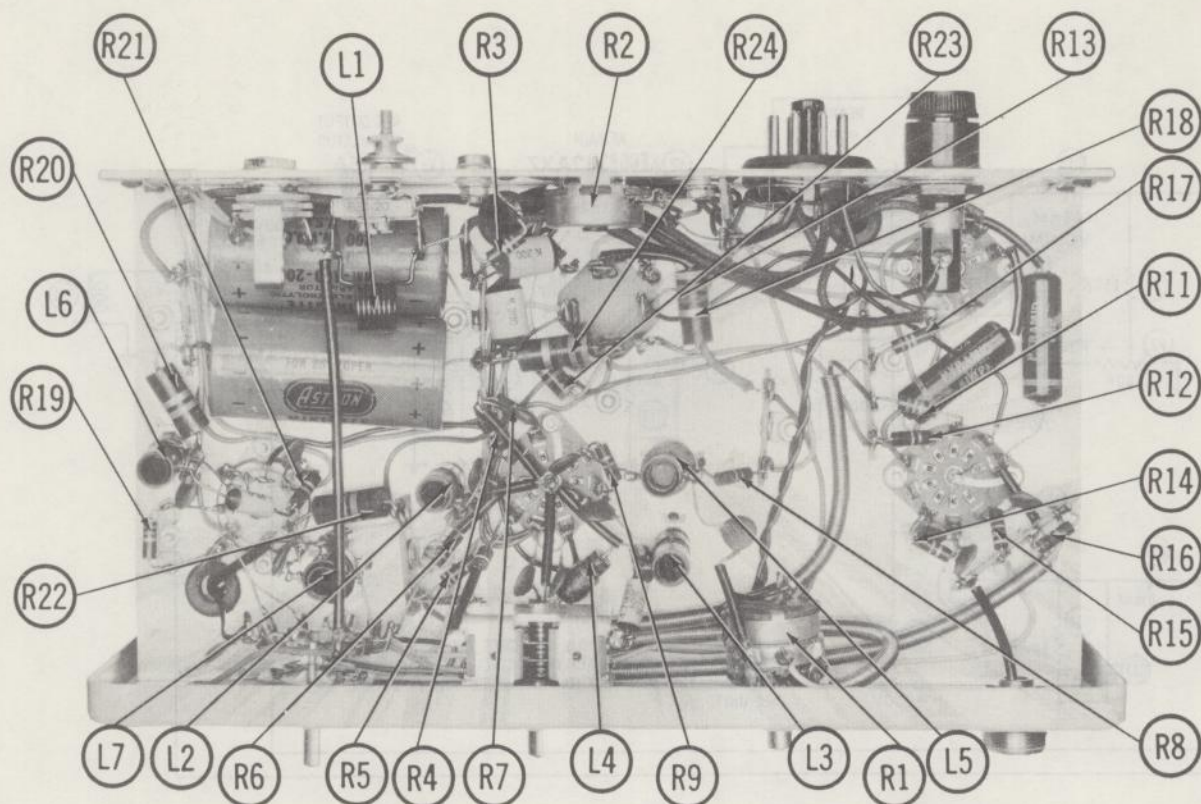

CHASSIS BOTTOM VIEW - RESISTOR & INDUCTOR IDENT.

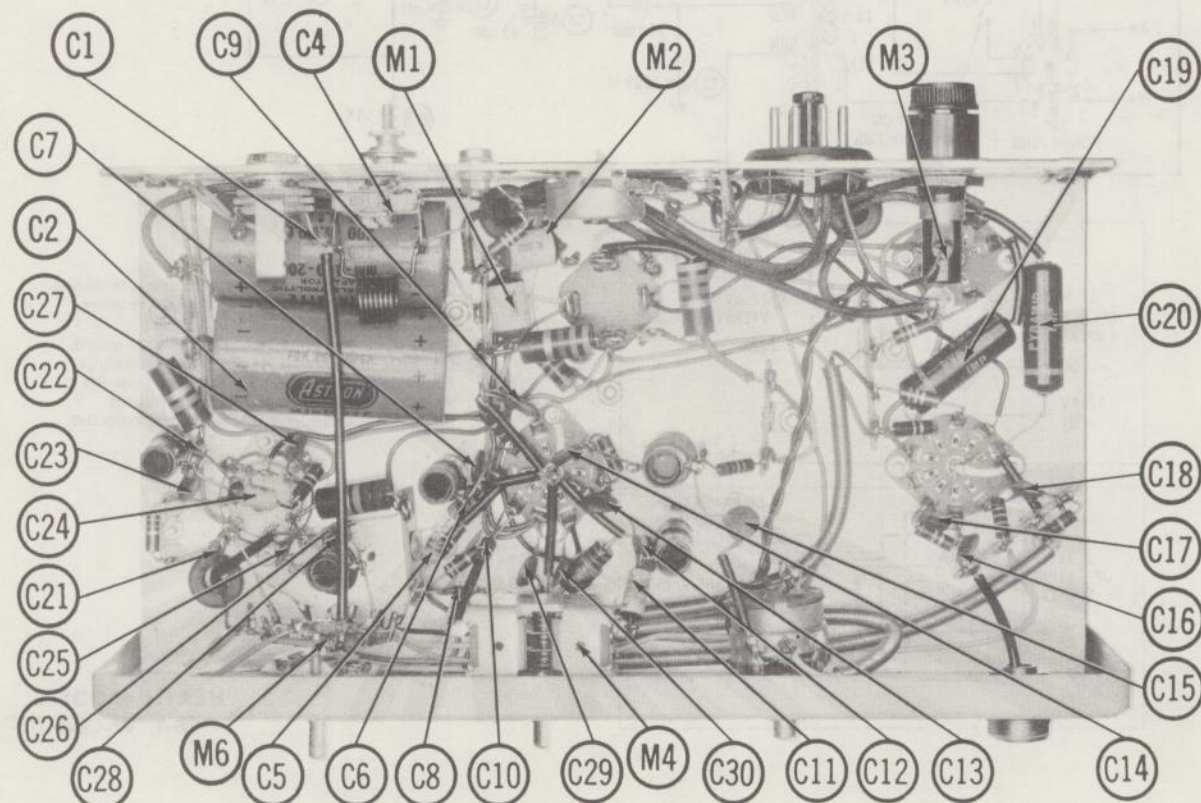

CHASSIS BOTTOM VIEW - CAPACITOR & MISC. IDENT.

PARTS LIST AND DESCRIPTIONS TUBES

♦ GENERAL ELECTRIC ♦		♦ RAYTHEON ♦		♦ SYLVANIA ♦	
ITEM No.	USE	TYPE	ITEM No.	USE	TYPE
V1	RF Amp. -Det.	6AN8	V3	Rec. Output - Modulator	6AQ5A (6AQ5) *
V2	AF Amp. -Speech Amp.	ECC83/12AX7	V4	Trans. Osc. -Final Amp.	6AU8A (6AU8) *

* Alternate

ELECTROLYTIC CAPACITORS

ITEM No.	RATING		REPLACEMENT DATA		NOTES
	CAP.	VOLT.	CORNEILL-DUBILIER PART No.	PYRAMID PART No.	
C1	100	200	TC1985	TD-100-200	TVAS-1445 *
C2	100	200	TC1985	TD-100-200	TVAS-1445 *
C3A	40	450	BR10035	TMQ-4550	TVL-4737
C	25	25	D0663		
D	25	25			


* Not normally in distributor's stock. Available thru distributor on order to manufacturer.

FIXED CAPACITORS

Capacity values given in the rating column are in mfd. for Paper Capacitors, and in mmfd. for Mica and Ceramic Capacitors.

ITEM No.	RATING	REMARKS	REPLACEMENT DATA				
			AEROVOX PART No.	CENTRALAB PART No.	CORNEILL-DUBILIER PART No.	ELEMCO PART No.	MALLORY PART No.
C4	9-80	#B-31-20	NPO-SI 2.2	TCZ-2R2	C10V22C	462	CNO-522
C5	2.2 10%		1469-000012	TCZ-12	22R5Q12	CM-19B-120K	CNO-412
C6	12 10%		BPD-001	DD-102	BYA10D1	CCD-102	B-210
C7	1000		BPD-001	DD-102	BYA10D1	CCD-102	B-210
C8	1000		BPD-001	DD-102	BYA10D1	CCD-102	B-210
C9	1000		NPO-SI 2.2	TCZ-2R2	C10V22C	CCCTQ-2R2	CNO-522
C10	2.2 10%		1469-000012	TCN-5	C10V8C	CCCTN-050	CNT-547
C11	4.7 N750 10%		N750-D1 100	DTN-100	C10T1U	CCCTN-101	CNT-101
C12	12 10%		BPD-001	DD-102	BYA10D1	CCD-102	B-210
C13	100 N750 10%		BPD-001	DD-102	BYA10D1	CCD-102	B-210
C14	1000		BPD-001	DD-102	BYA10D1	CCD-102	B-210
C15	1000		BPD-001	DD-102	BYA10D1	CCD-102	B-210
C16	1000		BPD-001	DD-102	BYA10D1	CCD-102	B-210
C17	1000		BPD-001	DD-102	BYA10D1	CCD-102	B-210
C18	1000		BPD-001	DD-102	BYA10D1	CCD-102	B-210
C19	.01 600V 10%		V84C8S1-10%		PM6S1	GEM-1611	GEM-1611
C20	.01 600V 10%		BPD-001	DD-102	BYA10D1	CCD-102	B-210
C21	1000		1469-000012	TCZ-12	22R5Q12	CM-19B-120K	CNO-412
C22	12 10%		BPD-001	DD-102	BYA10D1	CCD-102	B-210
C23	1000		BPD-001	DD-102	BYA10D1	CCD-102	B-210
C24	4.7 N750 10%		BPD-001	DD-102	BYA10D1	CCD-102	B-210
C25	1000		BPD-001	DD-102	BYA10D1	CCD-102	B-210
C26	1000		BPD-001	DD-102	BYA10D1	CCD-102	B-210

CHASSIS—TOP VIEW

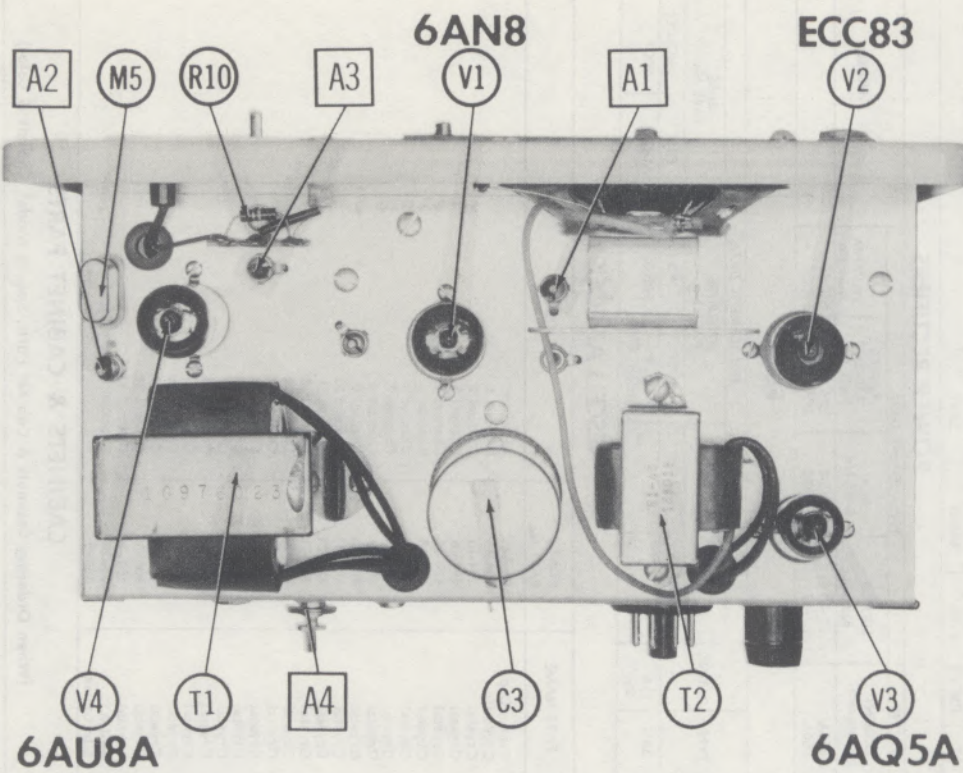

PARTS LIST AND DESCRIPTIONS (Continued)

FIXED CAPACITORS (cont)

ITEM No.	RATING	REMARKS	REPLACEMENT DATA			
			AEROVOX PART No.	CENTRALAB PART No.	CORNELL-DUBILIER PART No.	ELMOCO PART No.
C27	1000		BPD-001	DD-102	BYA10D1	CCD-102
C28	12 10%		1469-000012	TCZ-12	22R5Q12	CM-19B-120K
C29	1000		BPD-001	DD-102	BYA10D1	CCD-102
C30	1000		BPD-001	DD-102	BYA10D1	CCD-102

Heath Part Number.

CONTROLS

ITEM No.	RATING	REMARKS	REPLACEMENT DATA			
			CENTRALAB PART No.	CLAROSTAT PART No.	CTS-IRC PART No.	MALLORY PART No.
R1A	1meg		B-70-S	A47-1meg-Z	Q13-137	U53
R1B	100K		Not Req.	RS-3	Not Req.	Not Req.
R1C	500K		Not Req.	SWE-12	70-1	US-26
R2A	500K		Not Req.	B47-500K-S	BL-133	TA55L
R2B	500K		Not Req.	Not Req.	TM4	Not Req.

RESISTORS

All wattages 1/2 watt, or less, unless otherwise listed.

ITEM No.	RATING	REMARKS	REPLACEMENT DATA			
			IRC PART No.	WORKMAN TV PART No.	ITEM No.	RATING
R3	270K				R14	10meg
R4	2700K				R15	470K
R5	4700K				R16	1meg
R6	220K				R17	270K
R7	470K				R18	470K 2W
R8	150K				R19	47K
R9	10meg				R20	22K 2W
R10	150K				R21	22K 2W
R11	270K				R22	22K 2W
R12	270K				R23	10K 1W
R13	3300K				R24	330K 2W

COILS (RF-IF)

ITEM No.	USE	REMARKS	REPLACEMENT DATA			
			HEATH PART No.	Merit PART No.	Miller PART No.	Stancor PART No.
L1	RF Trap		D-45-49 *			
L2	Ant.		V-40-188 *			
L3	Sec.		V-40-188 *			
L4	RF Choke		45-28 *			
L5	RF Choke (75MH)		45-28 *			
L6	Osc. Plate		V-40-188 *			
L7	Final Plate		V-40-187 *			

TRANSFORMER (POWER)

ITEM No.	RATING	REMARKS	REPLACEMENT DATA			
			HEATH PART No.	Merit PART No.	Stancor PART No.	Triod PART No.
T1	117V @ .34A	SEC. 1 100V @ .200A SEC. 2 6.3V @ 1.9A AC	54-87			

TRANSFORMER (AUDIO OUTPUT)

ITEM No.	IMPEDANCE	REMARKS	REPLACEMENT DATA			
			HEATH PART No.	Merit PART No.	Stancor PART No.	Triod PART No.
T2	6700K Tap @ 12%		51-43		A-3817	

SPEAKER

ITEM No.	TYPE	REMARKS	REPLACEMENT DATA		NOTES
			HEATH PART No.	QUAM PART No.	
SP1	3 1/2" PM		401-21	3A07	

POWER RECTIFIERS

ITEM No.	RATING	REMARKS	REPLACEMENT DATA			
			HEATH PART No.	RCA PART No.	SARKIS TAYLOR PART No.	NOTES
M1	.055A		57-23	IN1763	2F4	
M2	.055A		57-23	IN1763	SR200	

FUSES

ITEM No.	TYPE	RATING	REPLACEMENT DATA		BUSS PART No.
			HEATH PART No.	LITTELFUSE PART No.	
M3	3AG	1 1/2A 250V		31201 5 (3AG 1 1/2A 250V)	

MISCELLANEOUS

ITEM No.	PART NAME	HEATH PART No.	NOTES
M4	Tuning Cap.	25-56	Receiver
M5	Crystal	404-14	Channel 1
	Crystal	404-15	Channel 2
	Crystal	404-16	Channel 3
	Crystal	404-17	Channel 4
	Crystal	404-18	Channel 5
	Crystal	404-19	Channel 6
	Crystal	404-20	Channel 7
	Crystal	404-21	Channel 8
	Crystal	404-22	Channel 9
	Crystal	404-23	Channel 10
	Crystal	404-24	Channel 11
	Crystal	404-25	Channel 12
	Crystal	404-26	Channel 13
	Crystal	404-27	Channel 14
	Crystal	404-28	Channel 15
	Crystal	404-29	Channel 16
	Crystal	404-30	Channel 17
	Crystal	404-31	Channel 18
	Crystal	404-32	Channel 19
	Crystal	404-33	Channel 20
	Crystal	404-34	Channel 21
	Crystal	404-35	Channel 22
	Crystal	404-36	Channel 23
M6	Switch	63-210	Function (Rotary Type)
	Microphone	480-8	

CABINETS & CABINET PARTS
(When Ordering Cabinets & Cabinet Parts, Specify Model, Chassis & Color)

NAME	PART NO.	DESCRIPTION
Knob	462-85	Volume, Tuning
Knob	462-86	Function Selector
Handle	211-16	Plastic
Cabinet	90-111	

WIRING DATA

General-use Unshielded Hook-up Wire Use BELDEN No. 8530 (Solid) Available in Ten Colors
8524 (Stranded) Available in Ten Colors
Power Cord Use BELDEN No. 1765-B (6 Ft. Length)
1725-K (7 1/2 Ft. Length)



MODEL HE-16 (12V)
MODEL HE-18 (6V)



MODEL HE-15

LAFAYETTE
MODELS HE-15, HE-16, HE-18

TRADE NAME	LaFayette Models HE-15, HE-16, HE-18 (External DC Power Supply)		
SUPPLIER	LaFayette Radio, 165-08 Liberty Ave., Jamaica 33, N. Y.		
TYPE SET	6 Tube Citizens Band Transmitter-Receiver		
POWER SUPPLY	105 - 125 Volts AC, 60 Cycles 6 Volt Storage Battery 12 Volt Storage Battery	RATING	40 Watts, .4 Amp. @117 Volts AC 5.3 Amp. @6.3 Volts DC 2.6 Amp. @12.6 Volts DC
FREQ. RANGE	TRANSMITTER: Any 5 of Citizens Band Channels 1 thru 22, RECEIVER: Continuous Tuning		

NOTICE


ONLY THOSE PERSONS PROPERLY LICENSED BY FCC ARE PERMITTED TO MAKE CRYSTAL SUBSTITUTION OR EFFECT REPAIRS ON THE TRANSMITTER PORTION OF THIS UNIT.

HOWARD W. SAMS & CO., INC. Indianapolis 6, Indiana




The listing of any available replacement part herein does not constitute in any case a recommendation, warranty or guaranty by Howard W. Sams & Co., Inc., as to the quality and suitability of such replacement part. The numbers of these parts have been compiled from information furnished to Howard W. Sams & Co., Inc., by the manufacturers of KZ511

the particular type of replacement part listed. Reproduction or use, without express permission, of editorial or pictorial content, in any manner, is prohibited. No patent liability is assumed with respect to the use of the information contained herein. © 1961 Howard W. Sams & Co., Inc., Indianapolis 6, Indiana. Printed in U.S. of America

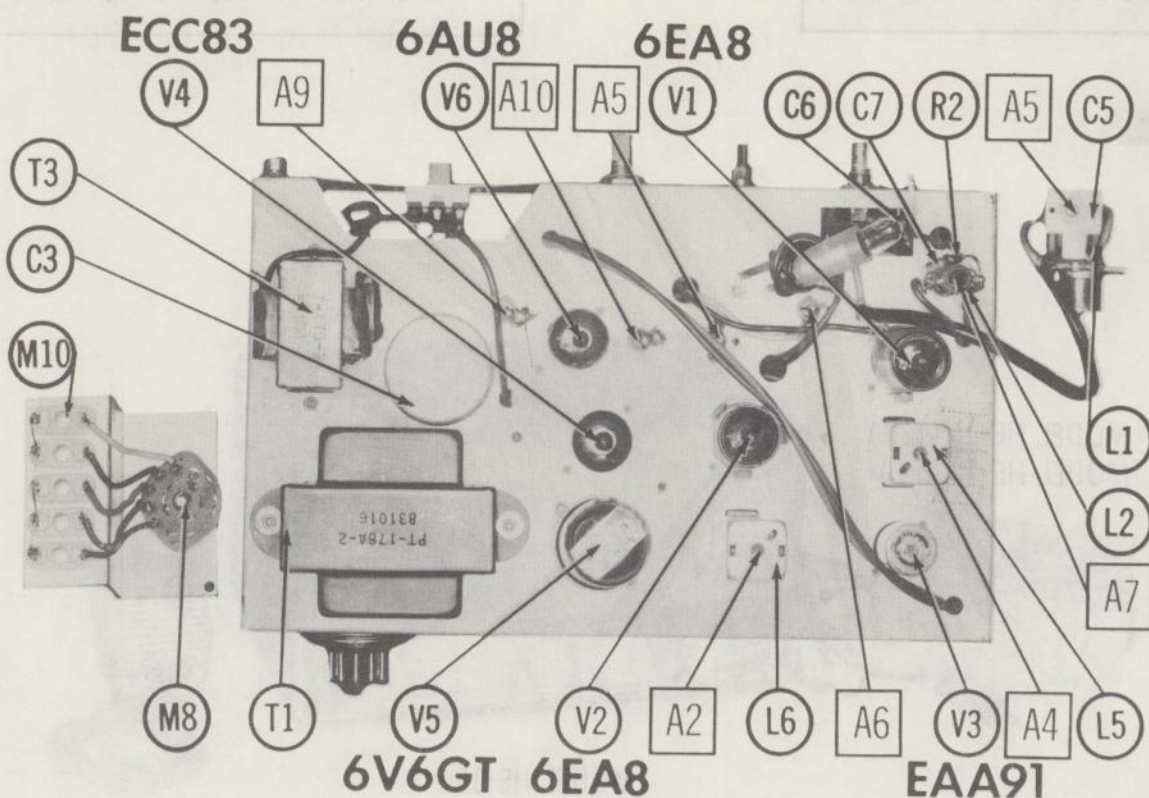

CHASSIS TOP VIEW-ALIGN., MISC., TRANSF. & TUBE IDENT.

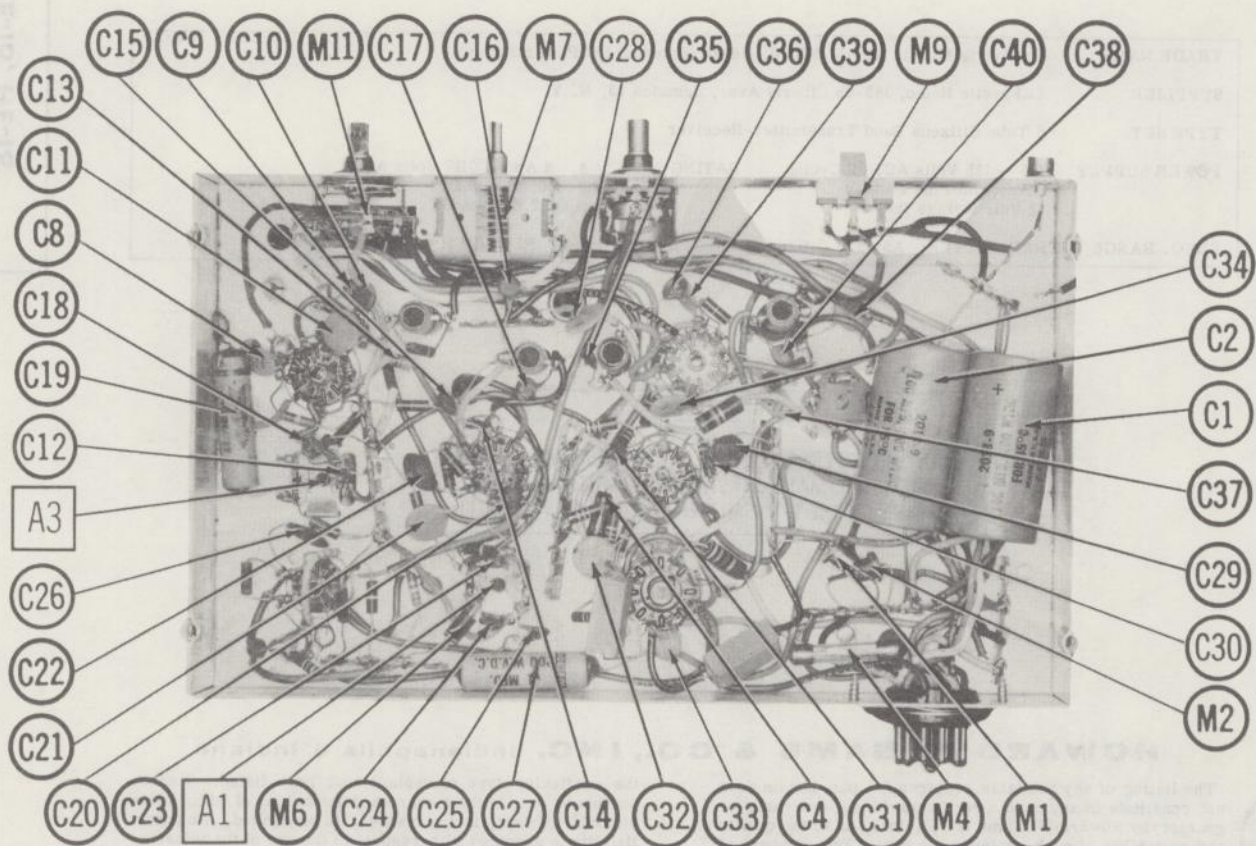

CHASSIS BOTTOM VIEW-ALIGN., CAP. & MISC. IDENT.

ALIGNMENT INSTRUCTIONS

ALIGNMENT INSTRUCTIONS—READ CAREFULLY BEFORE ATTEMPTING ALIGNMENT

Volume control should be at maximum position. Output of signal generator should be no higher than necessary to obtain an output reading.


Suggested Alignment Tools: A1 thru A4.....GENERAL CEMENT #5097, 8727
WALSCO #2515
A8.....GENERAL CEMENT #5000, 5003, 5066, 8276, 8290, 9087, 9089
WALSCO #2512, 2525, 2528

RECEIVER ALIGNMENT


	SIGNAL GENERATOR COUPLING	SIGNAL GENERATOR FREQUENCY	RADIO DIAL SETTING	OUTPUT METER	ADJUST	REMARKS
1.	High side thru .01mfd to pin 9 (grid) of Mixer. Low side to chassis.	1750KC (400% Mod.)	High end stop.	Across voice coil.	A1, A2, A3, A4	Adjust for maximum output.
2.	High side thru 270mmf to antenna receptacle. Low side to chassis.	Channel 11 Freq.	Channel 11	"	A5	Adjust until signal is received.
3.	"	"	"	"	A6, A7	Adjust for maximum output.
4.	If television interference occurs, adjust A8 for MINIMUM interference.					

TRANSMITTER ALIGNMENT

5.	NOT USED			USE VTVM DC probe to pin 7 (grid) of Final. Common to chassis.	A9	Depress transmit button and adjust A9 for maximum deflection.
6.	NOT USED				A10	Depress transmit button and adjust A10 for maximum brightness of Power Output Indicator light.

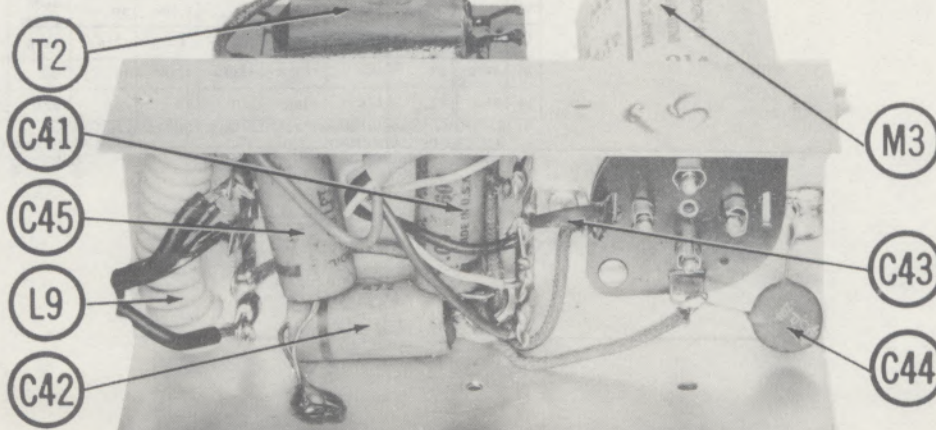

POWER CHASSIS

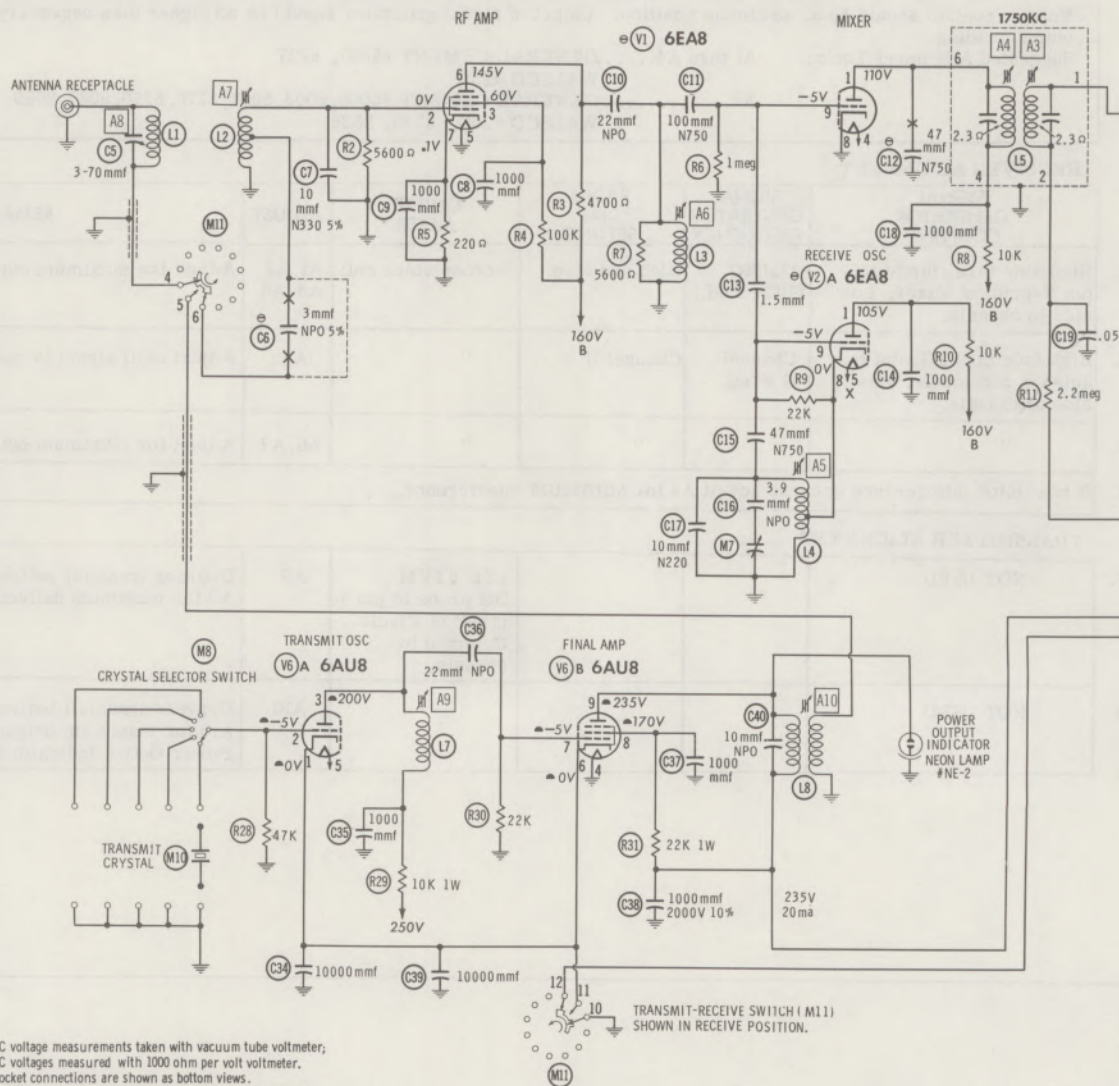

1. DC voltage measurements taken with vacuum tube voltmeter; AC voltages measured with 1000 ohm per volt voltmeter.
2. Socket connections are shown as bottom views.
3. Measured values are from socket pin to common ground.
4. Line voltage maintained at 117 volts for voltage readings.
5. Nominal tolerance on component values makes possible a variation of $\pm 15\%$ in voltage and resistance readings.
6. Volume control at maximum, no signal applied for voltage measurements.

RESISTANCE READINGS

ITEM	TUBE	Pin 1	Pin 2	Pin 3	Pin 4	Pin 5	Pin 6	Pin 7	Pin 8	Pin 9
V1	6EA8	$\dagger 15K$	.1 $\square$	$\dagger 100K$	0 $\square$	.1 $\square$	$\dagger 10K$	220 $\square$	0 $\square$	1 meg
V2	6EA8	$\dagger 15K$	2 meg	$\dagger 15K$	0 $\square$	.1 $\square$	$\dagger 15K$	100 $\square$	0 $\square$	22K
V3	EAA91	1.5 meg	600K	.1 $\square$	0 $\square$	1.5 meg	0 $\square$	600K	FIL	FIL
V4	ECC83 12AX7	$\dagger 470K$	4.7 meg	0 $\square$	.1 $\square$	.1 $\square$	$\dagger 22K$	470K	3300 $\square$	0 $\square$
V5	6V6GT	0 $\square$	1 $\square$	$\dagger 630 \square$	$\dagger 330 \square$	470K	TP	0 $\square$	470 $\square$	FIL
V6	6AU8	$\dagger 0 \square$	47K	$\dagger 10K$	.1 $\square$	0 $\square$	$\dagger 0 \square$	22K	$\dagger 22K$	$\dagger 710 \square$






ALL MEASUREMENTS MADE IN "RECEIVE" POSITION UNLESS OTHERWISE DESIGNATED.

▲ MEASURED IN "TRANSMIT" POSITION.

■ MEASURED WITH NOISE LIMITER IN "OFF" POSITION.

† MEASURED FROM OUTPUT OF M1.

TP TIE POINT

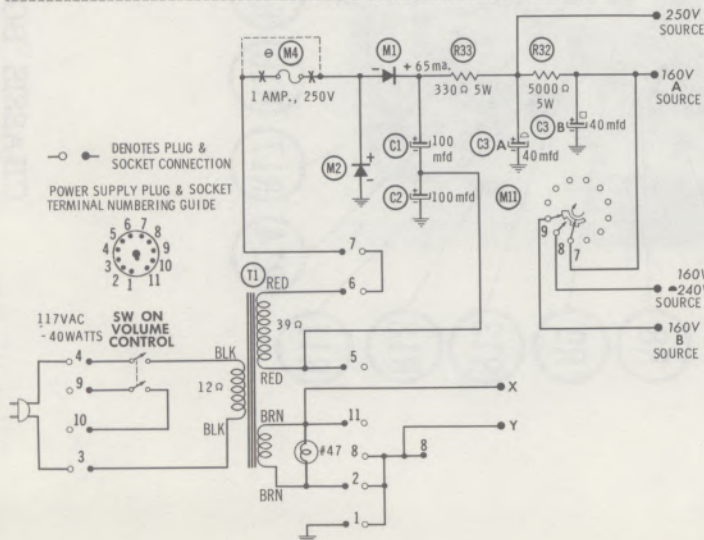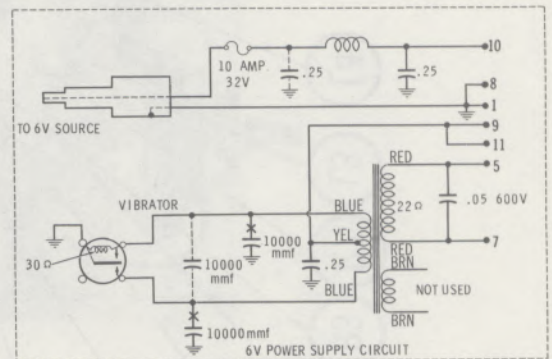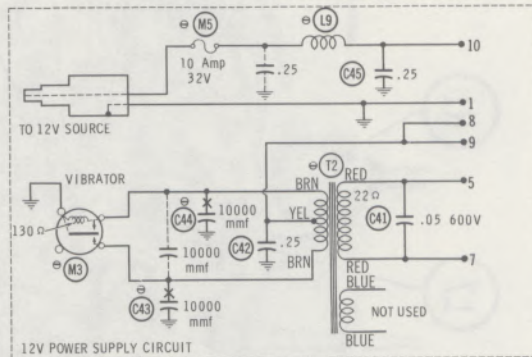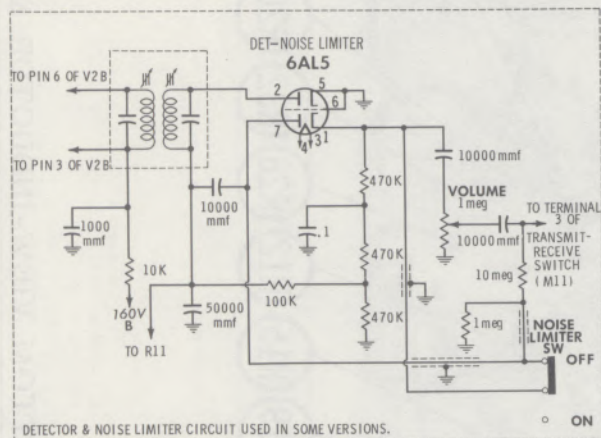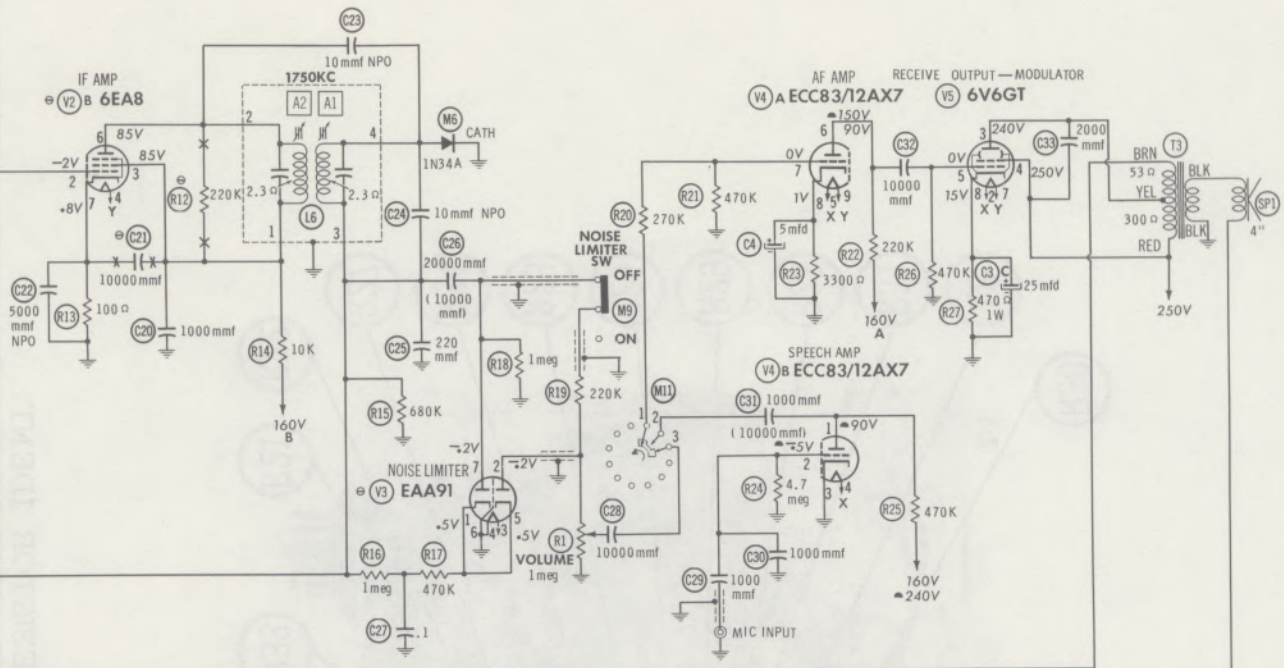


NUMBERS ASSIGNED TO COILS, SWITCHES, PLUGS, SOCKETS, AND TRANSFORMERS ARE TO FACILITATE CIRCUIT TRACING OR COMPONENT REPLACEMENT AND MAY NOT NECESSARILY BE FOUND ON THE UNIT.

SEE PARTS LIST FOR ALTERNATE VALUE OR APPLICATION

DC COIL RESISTANCE VALUES UNDER ONE OHM NOT SHOWN ON SCHEMATIC DIAGRAM

ARROWS ON CONTROLS INDICATE CLOCKWISE ROTATION (CONTROL VIEWED FROM SHAFT END)

LAFAYETTE
MODELS HE-15, HE-16, HE-18

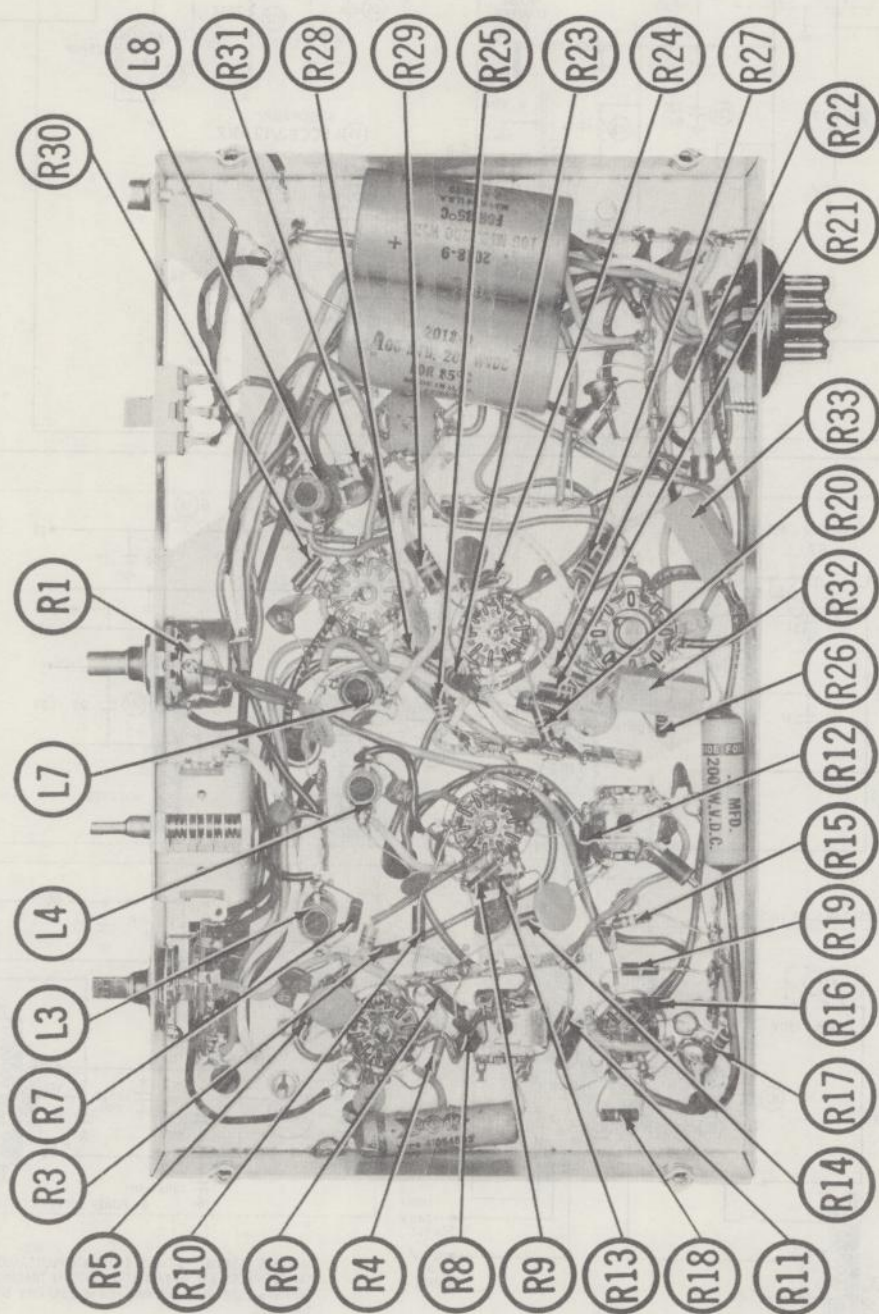

CHASSIS BOTTOM VIEW-INDUCTOR & RESISTOR IDENT.

TUBES

GENERAL ELECTRIC			RAYTHEON		SYLVANIA	
ITEM No.	USE	TYPE	ITEM No.	USE	TYPE	
V1	RF Amp. - Mixer	6EA8 (6UBA) *	V4	AF Amp. -Speech Amp.	ECC83/12AX7	
V2	Rec. Osc. -IF Amp.	6EA8 (6UBA) *	V5	Rec. Output-Modulator	8V6GT	
V3	Det. -Noise Limiter	EAA91 (6AL5) *	V6	T rans. Osc. -F line Amp.	U8	

* Alternate

ELECTROLYTIC CAPACITORS

ITEM No.	RATING		LAFAYETTE PART No.	AEROVOX PART No.	CON-L-DURITE PART No.	REPLACEMENT DATA			NOTES
	CAP.	VOLT.				MALLORY PART No.	PYRAMID PART No.	SPRAGUE PART No.	
C1	100	200		PSR1595	BRU0035	TC1265	TD-100-200	TVA-1718	
C2	100	200		PSR1595	BRU0035	TC1265	TD-100-200	TVA-1718	
C3A	40	350		APF3-140-50	C0870	FP367.5	TMT-3367	TVL-3754.5	
C4	25	25							
C5	5	10		PTT-10005	NLW5-15	TT12X5	MLV5-12	TE-127	

FIXED CAPACITORS

FIXED CAPACITORS
Capacity values given in the rating column are in mfd. for Paper Capacitors, and in mmfd. for Mica and Ceramic Capacitors.

ITEM No.	RATING	REMARKS	REPLACEMENT DATA					MALLORY PART No.	SPRAGUE PART No.	
			AEROVOX PART No.	CENTRALAB PART No.	CORNELL-DUBILIER PART No.	ELIMENCO PART No.				
C5	3-70	Note 1	NPO-SI 3.0	TCZ-3R3	C10V3C	462	CCTO-3R3	CNO-533	10TCC-V33	
C6	10 N330 5%			TCA-10			*		B-210	10TCS-Q10
C7	3 NPO			BPD-001	DD-102	BYA10D1	CCD-102	CCD-102	B-210	5HK-D10
C8	1000			BPD-001	DD-102	BYA10D1	CCD-102	CCD-102	B-210	5HK-D10
C9	22 NPO	Note 1	NPO-DI 22	DTZ-22	C10Q22C	CCTO-220	CCTO-220	CNO-422	10TCC-Q22	
C10	100 N750			N750-DI 100	DTN-100	C10T1U	CCTN-101	CCTN-101	CNT-310	10TCC-T10
C11	47 N750			N750-DI 47	DTN-47	C10Q47U	CCTN-470	CCTN-470	CNT-447	10TCC-Q47
C12	47 N750			N750-SI 1.5	TCZ-1R5	C10V15C			CNO-515	10TCC-V15
C13	1.5	Note 1	BPD-001	DD-102	BYA10D1	CCD-102	CCD-102	B-210	5HK-D10	
C14	47 N750			N750-DI 47	DTN-47	C10Q47U	CCTN-470	CCTN-470	CNO-447	10TCC-Q47
C15	47 N750						*			10TCC-V39
C16	3.9 NPO			BPD-001	DD-102	BYA10D1	CCD-102	CCD-102	B-210	5HK-D10
C17	10 N220	Note 1	P468N-05	DD-503	CUB48S	4DP-3-503	4DP-3-503	GEM-415	4TM-S80	
C18	1000			BPD-001	DD-102	BYA10D1	CCD-102	CCD-102	B-210	5HK-D10
C19	.05 400V			BPD-01	DD-103	BYA10S1	CCD-103	CCD-103	B-110	5HK-S10
C20	1000			BPD-005	DD-502	BYA10D5	CCTO-502	CCTO-502	B-250	5HK D50
C21	10000	(10000) †	NPO-DI 10	DTZ-10	C10Q1C	CCTO-100	CCTO-100	CNO-410	10TCC-Q10	
C22	5000			NPO-DI 10	DTZ-10	C10Q1C	CCTO-100	CCTO-100	CNO-410	10TCC-Q10
C23	10 NPO			D1-220	DD-221	L10T22	CCD-221	CCD-221	B-322	10TS-T22
C24	10 NPO			BPD-02	DD-203	CUB6S2	CCD-203	CCD-203	B-120	5HK-S20
C25	220	(10000) †	P268N-1	DF-104	CUB2P1	2DP-3-104	2DP-3-104	GEM-201	2TM-P10	
C26	20000			BPD-01	DD-103	BYA10S1	CCD-103	CCD-103	B-110	5HK-S10
C27	1.2 200V			BPD-001	DD-102	BYA10D1	CCD-102	CCD-102	B-210	5HK-D10
C28	10000			BPD-001	DD-102	BYA10D1	CCD-102	CCD-102	B-210	5HK-D10
C29	1000	(10000) †	BPD-001	DD-102	BYA10D1	CCD-102	CCD-102	B-210	5HK-D10	
C30	1000			BPD-001	DD-102	BYA10D1	CCD-102	CCD-102	B-210	5HK-D10
C31	1000			BPD-01	DD-103	BYA10S1	CCD-103	CCD-103	B-110	5HK-S10
C32	10000			BPD-01	DD-103	BYA10S1	CCD-103	CCD-103	B-110	5HK-S10
C33	2000	(10000) †	BPD-002	DD-103	BYA10S1	CCD-103	CCD-103	B-110	5HK-S10	
C34	10000			BPD-01	DD-103	BYA10S1	CCD-103	CCD-103	B-110	5HK-S10
C35	1000			NPO-DI 22	DTZ-22	C10Q22C	CCTO-220	CCTO-220	CNO-422	10TCC-Q22
C36	22 NPO			BPD-001	DD-102	BYA10D1	CCD-102	CCD-102	B-210	5HK-D10
C37	1000	10%	BPD-001	DD-102	BYA10D1	CCD-102	CCD-102	B-210	5HK-D10	
C38	1000 2000V			BPD-01	DD-103	BYA10S1	CCD-103	CCD-103	B-110	5HK-S10
C39	10000			NFO-DI 10	DTZ-10	C10Q1C	CCTO-100	CCTO-100	CNO-410	10TCC-Q10
C40	10 NPO			P688N-05	DD-503	CUB6S5	6DP-3-503	6DP-3-503	GEM-615	6TM-S50
C41	.05 600V	25 200V	P268N-25	CUB2P25	CUB2P25	2DP-4-254	2DP-4-254	GEM-2025	2TM-P25	
C42	25 200V			BPD-01	DD-103	BYA10S1	CCD-103	CCD-103	B-110	5HK-S10
C43	10000			BPD-01	DD-103	BYA10S1	CCD-103	CCD-103	B-110	5HK-S10
C44	10000			BPD-01	DD-103	BYA10S1	CCD-103	CCD-103	B-110	5HK-S10
C45	.25 200V		P268N-25		CUB2P25	2DP-4-254	2DP-4-254	GEM-2025	2TM-P25	

Note 1. Not used in some versions.

† Alternate Value.

† Alternate Value.

CONTROLS

ITEM No.	RATING		REPLACEMENT DATA					INSTALLATION NOTES
	RESIST. ANCE	WATTS	LA FAYETTE PART No.	CENTRALAB PART No.	CLAROSTAT PART No.	CTS-IRC PART No.	MALLORY PART No.	
RIA B C	1meg B Shaft Switch	100	V329-3	B-70-S Not Req. Not Req.	A47-1meg-Z FS-3 SWE-20	Q13-137 Not Req. 76-2	US3 Not Req. US-27	Volume Power Off-On

RESISTORS

All wattages 1/2 watt. or less. unless otherwise listed.

[illegible]

Note 1. Not used in some versions.

COILS (RF-IF)

ITEM No.	USE	REPLACEMENT DATA					NOTES
		LAFAYETTE PART No.	Merit PART No.	Miller PART No.	Sincor PART No.	Workman TV PART No.	
L1	Ant. Loading Ant. RF 1st IF 2nd IF Osc. Plate Final Output Hash Choke		TV-118	6171-A	RTC-8809	T216	① Used in Battery operated units only.
L2							
L3							
L4							
L5							
L6							
L7							
L8							
L9							
	①		TV-118	6171-A	RTC-8809	T216	

TRANSFORMER (POWER)

ITEM No.	RATING			REPLACEMENT DATA				NOTES
	PRI.	SEC. 1	SEC. 2	LAFAYETTE		Stancor PART No.	Thordarson PART No.	
					PART No.			
T1	117V @ 4A	110V @ 2A	6.3V @ 2.5A	PT-178A-2				

TRANSFORMER (POWER)

ITEM No.	RATING			REPLACEMENT DATA					NOTES
	PRI.	SEC. 1	SEC. 2	LAFAYETTE PART No.	Merit PART No.	Stancor PART No.	Theodorsen PART No.	Triad PART No.	
T2	5.3V CT ① 3A (or) 12.6VCT ① 1.5A	110V ① .2A	22V (Not Used) ①	VT-181-2 ②					① Secondary 2 is 10 Volts on 12 Volt operation. ② Specify for 6 or 12 volt DC operation

① Secondary 2: 10 Volts on 12 operation.
② Specify for 6 12 volt DC op

PARTS LIST AND DESCRIPTIONS (Continued)TRANSFORMER (AUDIO OUTPUT)

ITEM No.	IMPEDANCE		REPLACEMENT DATA				NOTES
	PRI	SEC.	LAFAYETTE PART No.	Merit PART No.	Stancor PART No.	Triad PART No.	
T3	52000 Tap	3-443	T-179-2	A-3817			
② 5000Ω							

SPEAKER

ITEM No.	TYPE		REPLACEMENT DATA		NOTES
	SIZE	FIELD	LAFAYETTE PART No.	QUAM PART No.	
SP1	4"	PM	S7171 (7896144A)	4A07	

POWER RECTIFIERS

ITEM No.	RATING	REPLACEMENT DATA				NOTES
		LAFAYETTE PART No.	RCA PART No.	SARKES TARTZIAN PART No.	SYLVANIA PART No.	
M1	.065A		1N1763	40H	SR500	
M2	.065A		1N1763	40H	SR500	

VIBRATOR

ITEM No.	TYPE	INPUT VOLTS	FREQUENCY	REPLACEMENT DATA			NOTES
				LAFAYETTE PART No.	CORNEILL DUBILIER PART No.	MALLOY PART No.	
M3	Interrupter	6.3V	115%	5301	5301	1601	
	Interrupter	12.6V	115%	6301	6301	GI601	6 Volt Versions 12 Volt Versions

FUSES

ITEM No.	TYPE	RATING	REPLACEMENT DATA				BUSS PART No.
			LAFAYETTE PART No.	FUSE	HOLDER	LITTELFUSE PART No.	
M4	3AG	1A 250V		318001 (3AG 1A 250V)			
M5	3AG	P/T 10A 32V	Note 1	312010 (3AG 10A 32V)	155020		HDJ

Note 1. For DC Operation Only.

SIGNAL DIODES

ITEM No.	ORIG. TYPE	REPLACEMENT DATA			NOTES
		LAFAYETTE PART No.	GENERAL ELECTRIC PART No.	RAYTHEON PART No.	
M6	1N34A			1N34A	Detector (Pigtail)

MISCELLANEOUS

ITEM No.	PART NAME	LAFAYETTE PART No.	NOTES
M7	Variable Cap.		
M8	Switch		
M9	Crystal		Receiver Oscillator
M10	Crystal		Noise Limiter (SPDT Slide Type)
M11	Antenna		Transmit
			Receive-Transmit
			Model HE-17

WIRING DATA

General-use Unshielded Hook-up Wire Use BELDEN No. 8530 (Solid) Available in Ten Colors
 Shielded Hook-up Wire Use BELDEN No. 8524 (Stranded) Available in Ten Colors
 Bonding Strap Use BELDEN No. 8885
 Use BELDEN No. 8861

PHOTOFACT® Folder



**MORROW MODELS CB-1, -2, -3,
5W1-6, -12, -117, 5W3-6, -12, -117**



MODEL 5W3-117

**MORROW MODELS CB-1, -2, -3,
5W1-6, -12, -117, 5W3-6, -12, -117**

TRADE NAME	Morrow Models CB-1, CB-2, CB-3, 5W1-6, 5W1-12, 5W1-117, 5W3-6, 5W3-12, 5W3-117
MANUFACTURER	Morrow Radio Mfg. Co., 2794 Market Street, N. E., Salem, Oregon
TYPE SET	11 Tube Crystal Controlled 3 Channel Citizens Band Transmitter-Receiver (CB Series are Single Channel)
POWER SUPPLY	Models CB-1, 5W1-6, 5W3-6: 6 Volt Storage Battery Models CB-2, 5W1-12, 5W3-12: 12 Volt Storage Battery Models CB-3, 5W1-117, 5W3-117: 110-120 Volts AC, 60 Cycles
RATING	(Model 5W3-117) 68 Watts, .62 Amp. @117 Volts AC (Transmit), 61 Watts, .56 Amp. @117 Volts AC (Receive) (6 Volt Versions) 8 Amp. @6.3 Volts DC (12 Volt Versions) 4 Amp. @12.6 Volts DC
TUNING RANGE	Any Citizens Band Channel 1 thru 23

NOTICE


ONLY THOSE PERSONS PROPERLY LICENSED BY FCC ARE PERMITTED TO MAKE CRYSTAL SUBSTITUTION OR EFFECT REPAIRS ON THE TRANSMITTER PORTION OF THIS UNIT.

HOWARD W. SAMS & CO., INC. Indianapolis 6, Indiana




The listing of any available replacement part herein does not constitute in any case a recommendation, warranty or guaranty by Howard W. Sams & Co., Inc., as to the quality and suitability of such replacement part. The numbers of these parts have been compiled from information furnished to Howard W. Sams & Co., Inc., by the manufacturers of KZ486


the particular type of replacement part listed. Reproduction or use, without express permission, of editorial or pictorial content, in any manner, is prohibited. No patent liability is assumed with respect to the use of the information contained herein. © 1961 Howard W. Sams & Co., Inc., Indianapolis 6, Indiana. Printed in U.S. of America

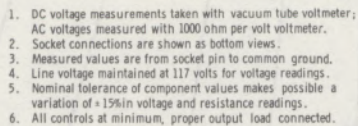


**MORROW MODELS CB-1, -2, -3,
5W1-6, -12, -117, 5W3-6, -12, -117**

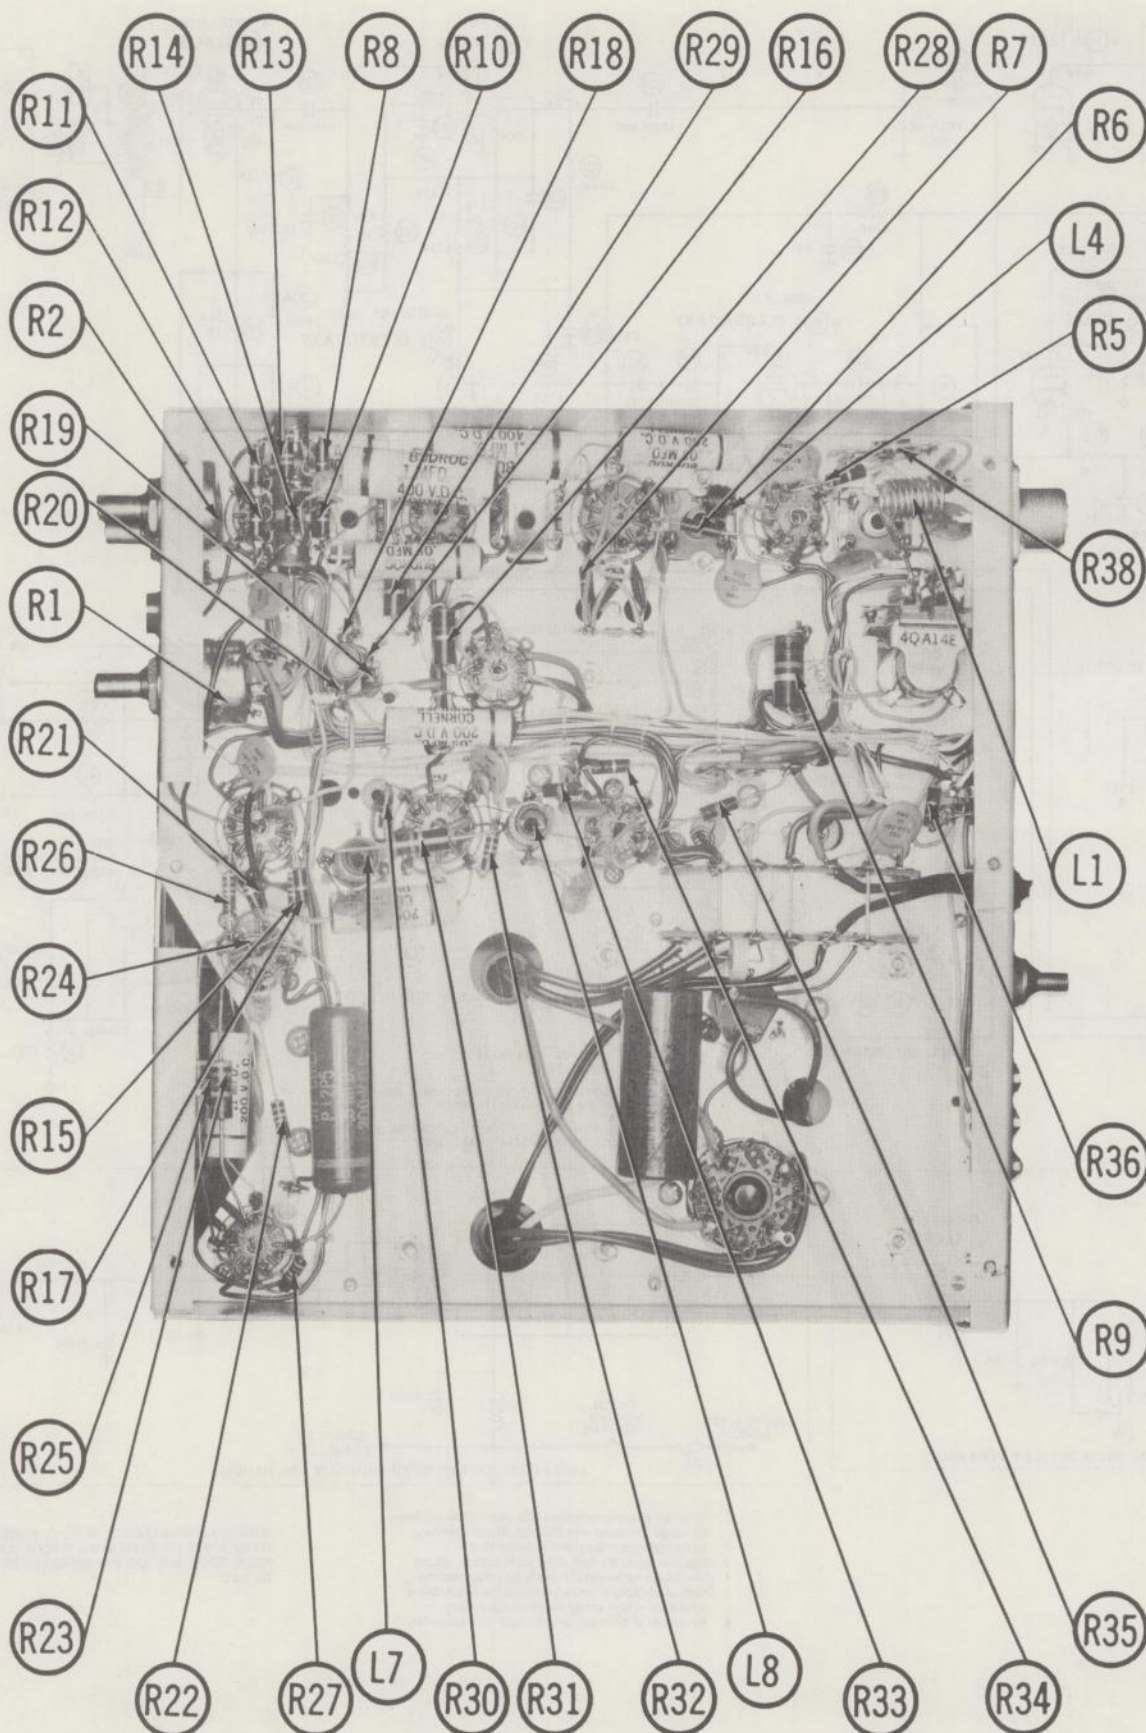

CHASSIS BOTTOM VIEW-RESISTOR & INDUCTOR IDENT.

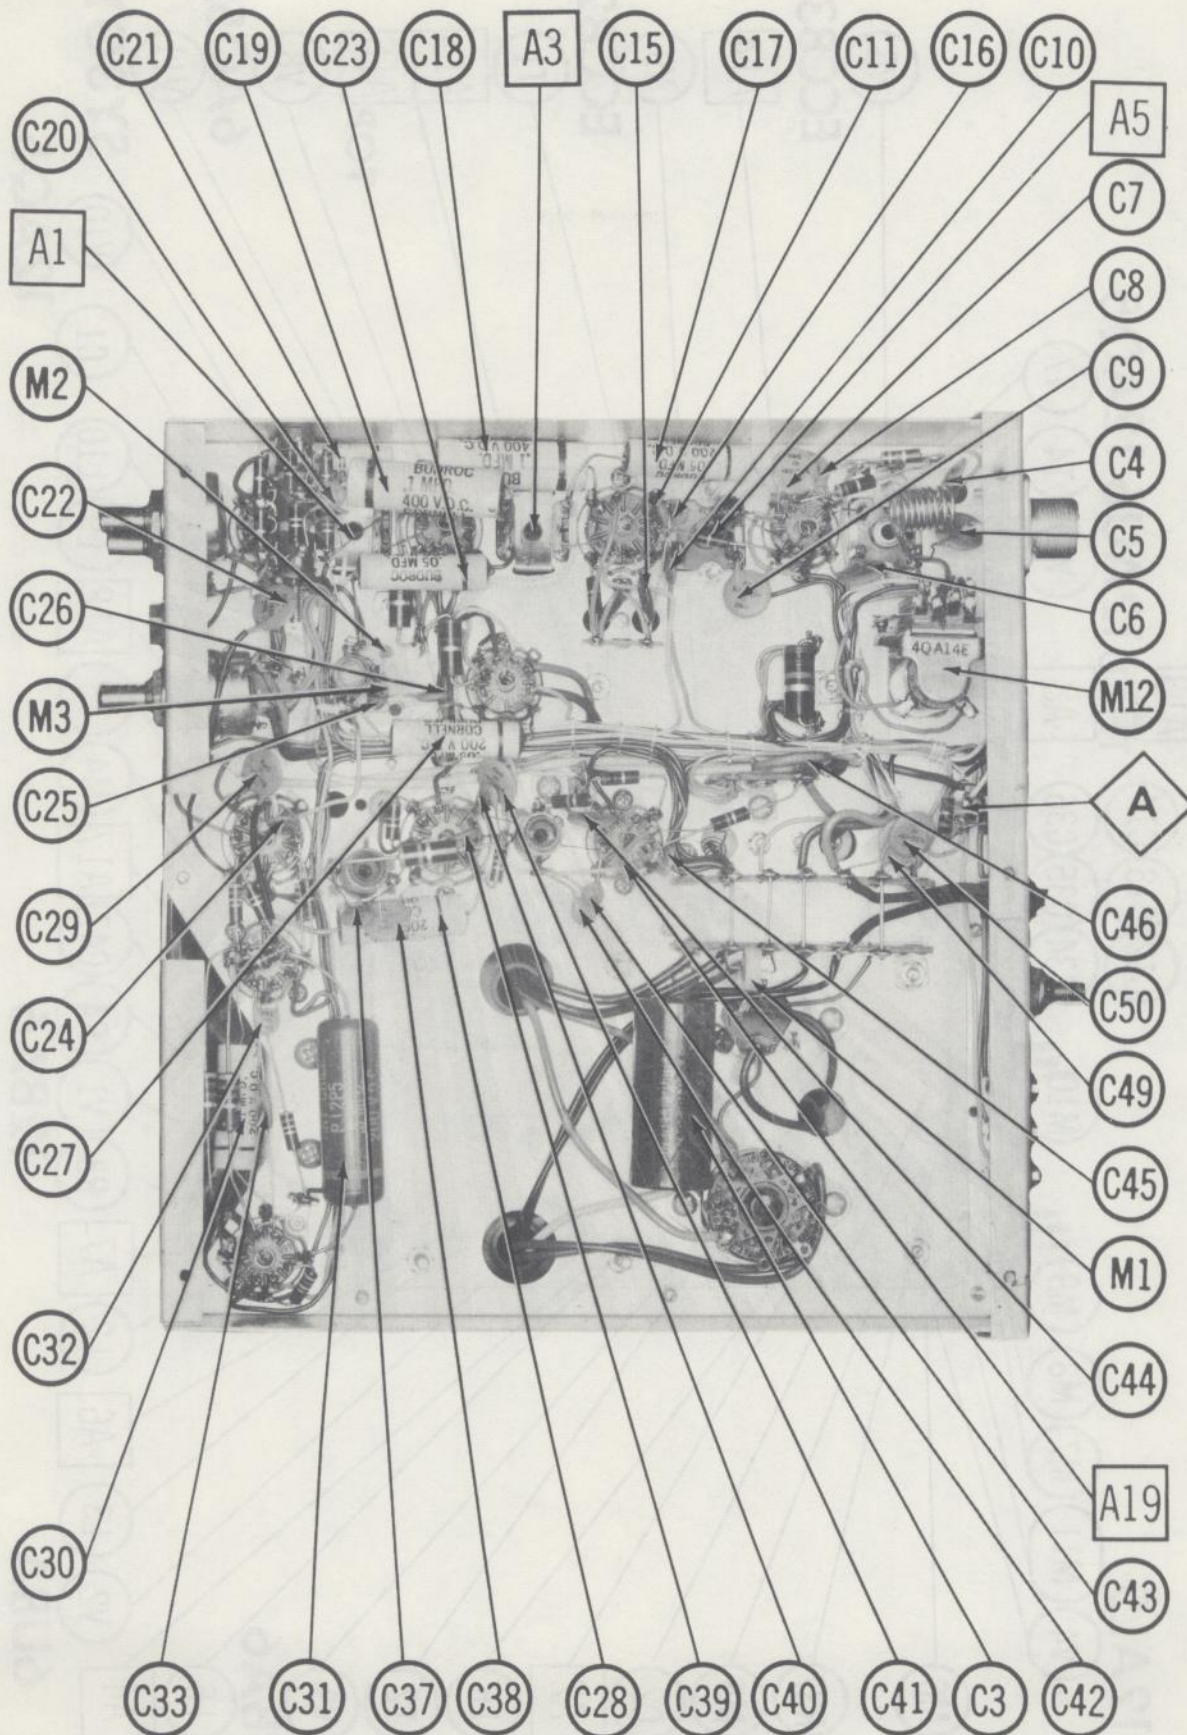

CHASSIS BOTTOM VIEW-ALIGNMENT, CAPACITOR & MISC. IDENT.

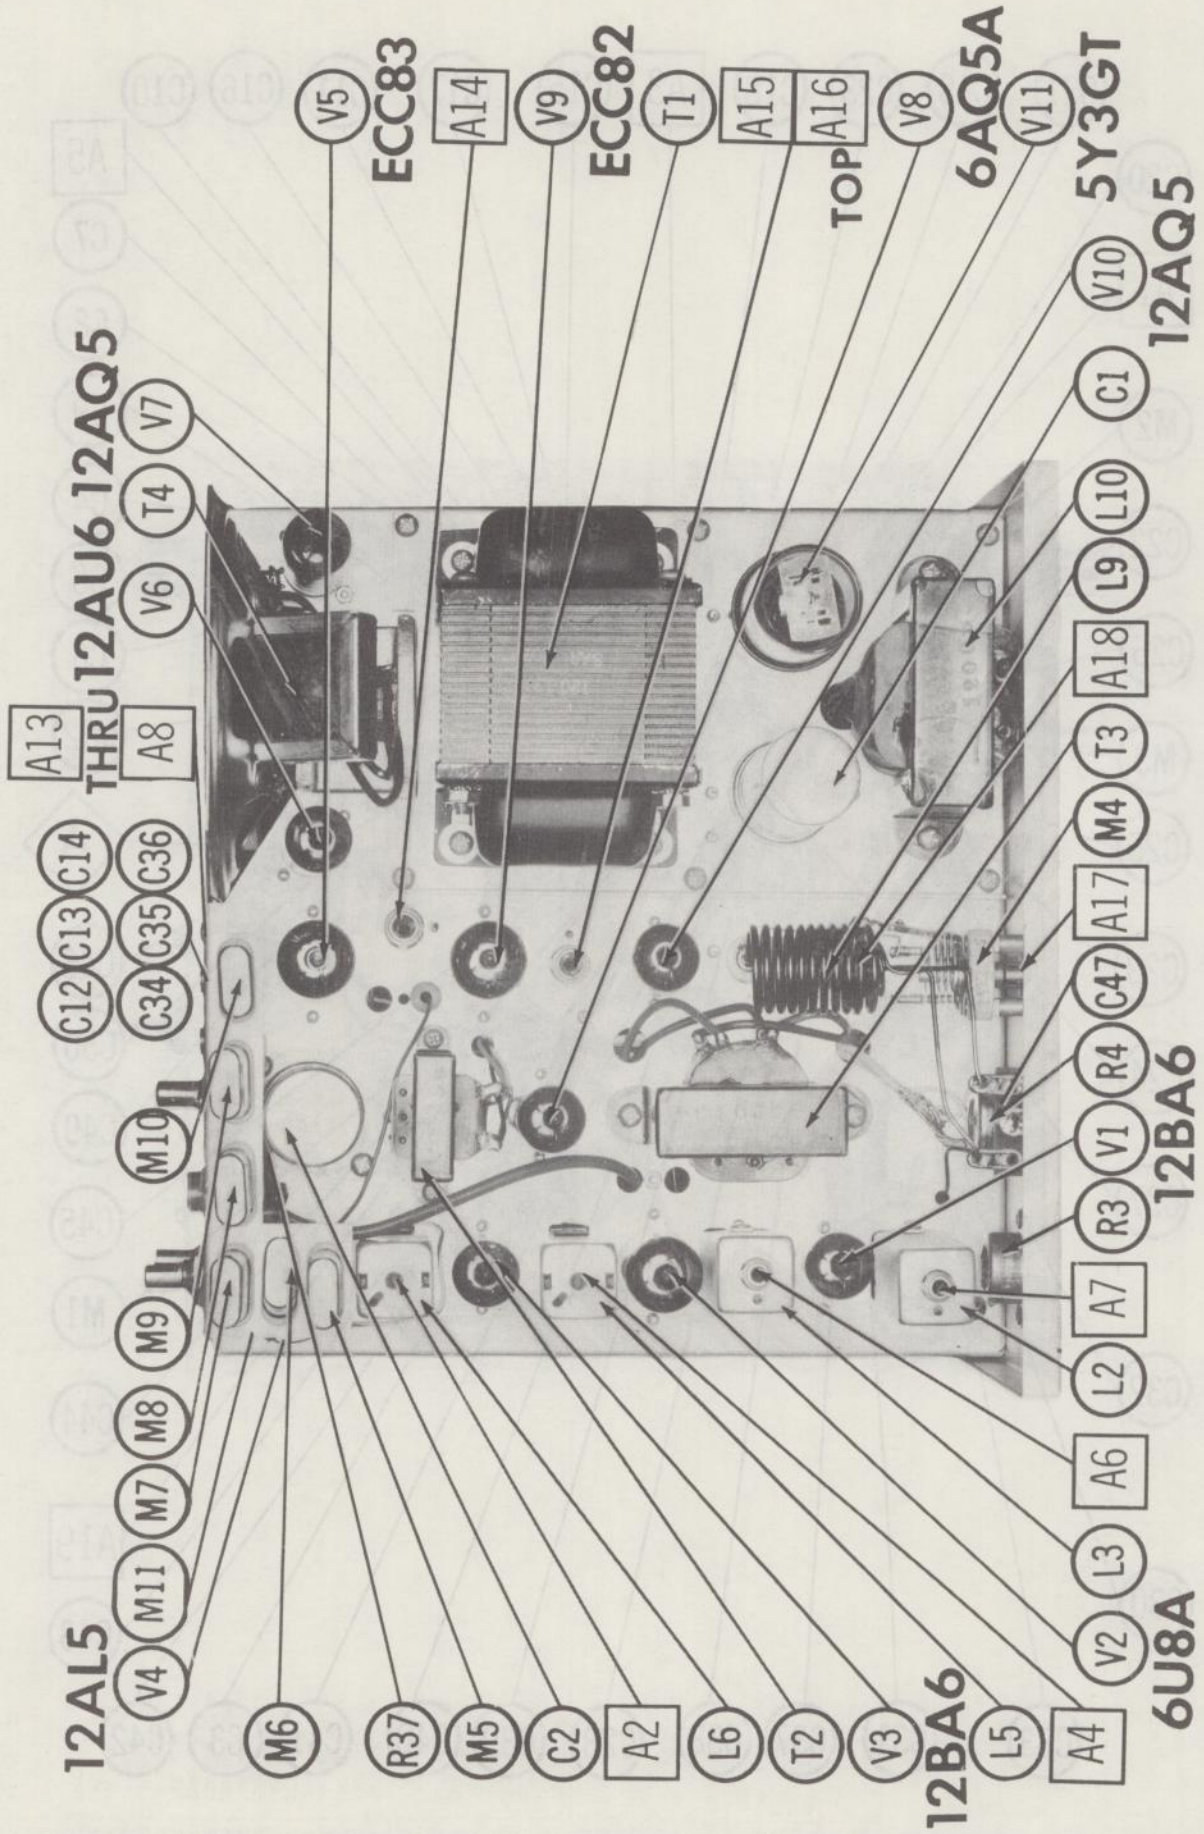

CHASSIS-TOP VIEW

PARTS LIST AND DESCRIPTIONS TUBES

GENERAL ELECTRIC				RAYTHEON				SYLVANIA			
ITEM No.	USE	TYPE	ITEM No.	USE	TYPE	ITEM No.	USE	TYPE	ITEM No.	USE	TYPE
V1	RF Amplifier	12BA6	V6	AF Amplifier	12AU6	V7	Receiver Output	12AQ5	Note 1		
V2	Mixer-Osc.	6UBA	V8	Modulator	6AQ5A	V9	Trans. Osc., Doubler	ECC82/12A07	Note 1		
V3	IF Amplifier	12BA6	V10	Final Amplifier	12AQ5	V11	Rectifier	5Y3GT	Note 2		
V4	Def.-ANL	12AL5									
V5	Squelch Amplifier	ECC83/12AX7									

Note 1. 6 Volt Models use 6V Equivalent.
Note 2. 6-1/2 Volt Models use 0Z4 in this application.

ELECTROLYTIC CAPACITORS

REPLACEMENT DATA									
ITEM No.	RATING	MORROW PART No.	AEROVOX PART No.	CORNELL-DUBIER PART No.	MALLORY PART No.	PYRAMID PART No.	SPRAGUE PART No.	NOTES	
C1A	20 350	AFH2-37	B0300	F2227	TMD-2375	TVL-2755			
C2A	20 350	AFH2-37	B0300	F2227	TMD-2375	TVL-2755			
C2B	20 25	AFH2-37	B0300	F2227	TMD-2375	TVL-2755			
C3	250 15	PR21210	BR2501	TC50025	TD-250-15	TVA-1161			

FIXED CAPACITORS

Capacity values given in the rating column are in mfd. for Paper Capacitors, and in mmfd. for Mica and Ceramic Capacitors.

REPLACEMENT DATA									
ITEM No.	RATING	REMARKS	AEROVOX PART No.	CORNELL-DUBIER PART No.	ELWENCO PART No.	MALLORY PART No.	SPRAGUE PART No.		
C4	75 N220 5%		BFD-01	BYA10S1	CCD-103	B-110	5HK-S10		
C5	75 N220 5%		BFD-01	BYA10S1	CCD-103	B-110	5HK-S10		
C6	10000	Note 1	BFD-01	BYA10S1	CCD-103	B-110	5HK-S10		
C7	10000		BFD-01	BYA10S1	CCD-103	B-110	5HK-S10		
C8	10000		BFD-01	BYA10S1	CCD-103	B-110	5HK-S10		
C9	10000		BFD-01	BYA10S1	CCD-103	B-110	5HK-S10		
C10	100 N150 10%	(10) †	NPO-DI 4, 7	DTZ-4R7	CCTO-4R7	CNO-547	10TCC-V47		
C11	4, 7 NPO 10%	(10) †							
C12									
C13									
C14	50 N150		BFD-001	BYA10D1	CCD-102	B-210	10TCC-Q50		
C15	1000		P288N-05	CUB2S5	4DP-3-415	GEM-415	5HK-D10		
C16	.05 200V		P488N-1	CUB4P1	4DP-3-104	GEM-401	2TM-S50		
C17	.1 400V		P488N-1	CUB4P1	4DP-3-104	GEM-401	4TM-P10		
C18	.1 400V		DI-270	LI07T27	CCD-271	GP327	10TCC-T27		
C19	270 10%		P288N-05	CUB2S5	4DP-3-503	GEM-215	2TM-S50		
C20	.05 200V	(1) †	BFD-01	BYA10S1	CCD-103	B-110	5HK-S10		
C21	10000		P288N-05	CUB2S5	4DP-3-503	GEM-415	2TM-S50		
C22	.05 200V		DI-270	LI07T27	CCD-271	GP327	10TCC-T27		
C23	.05 200V		P288N-05	CUB2S5	4DP-3-503	GEM-415	2TM-S50		
C24	100 N150 10%		DI-270	LI07T27	CCD-271	GP327	10TCC-T27		
C25	270 10%		P288N-05	CUB2S5	4DP-3-503	GEM-415	2TM-S50		
C26	2000		P288N-05	CUB2S5	4DP-3-503	GEM-415	2TM-S50		
C27	.05 200V	(1) †	P288N-05	CUB2S5	4DP-3-503	GEM-415	2TM-S50		
C28	.1 200V	Note 1	P288N-05	CUB2S5	4DP-3-503	GEM-415	2TM-S50		
C29	10000		P288N-05	CUB2S5	4DP-3-503	GEM-415	2TM-S50		
C30	.1 200V		P288N-05	CUB2S5	4DP-3-503	GEM-415	2TM-S50		
C31	.1 200V		P288N-05	CUB2S5	4DP-3-503	GEM-415	2TM-S50		
C32	1000		P288N-05	CUB2S5	4DP-3-503	GEM-415	2TM-S50		
C33	10000		P288N-05	CUB2S5	4DP-3-503	GEM-415	2TM-S50		
C34									
C35									
C36									
C37	33 N470 5%		BFD-01	BYA10S1	CCD-103	B-110	5HK-S10		
C38	10000		P288N-05	CUB2S5	4DP-3-503	GEM-415	2TM-S50		
C39	100 N150 10%		P288N-05	CUB2S5	4DP-3-503	GEM-415	2TM-S50		
C40	10 N750 5%		P288N-05	CUB2S5	4DP-3-503	GEM-415	2TM-S50		
C41	10000		P288N-05	CUB2S5	4DP-3-503	GEM-415	2TM-S50		
C42	6 NPO 10%		P288N-05	CUB2S5	4DP-3-503	GEM-415	2TM-S50		

ALIGNMENT INSTRUCTIONS

RECEIVER

- Connect DC probe of VTVM to point $\diamond$, Common to chassis. Turn squelch controls, R2 and R4 on front and rear panels, to maximum clockwise position.
Connect a 470K resistor across the secondary of L5 (1st IF Trans).
- Connect high side of Signal Generator (455KC, 400V Mod.) thru .05mfd to pin 2 of V2A, low side to chassis. Adjust A1, A2, A3 and A4 for maximum deflection.
- Connect high side of Signal Generator tuned to the proper channel frequency, (400V Mod.) to the antenna socket. Adjust A5, A6 and A7 for maximum deflection. Retouch A1, A2, A3, and A4. Remove 470K resistor.
- Using a Frequency Meter, Adjust A8, A9 and A10 to exact frequency marked on oscillator crystals (within 100 cps).

TRANSMITTER

- Connect a 50 ohm dummy load to antenna. Using a Frequency Meter, Adjust A11, A12 and A13 to the exact frequency marked on oscillator crystals, (within 100 cps).
- Connect a 0-50 ma. meter to pins 1 and 4 and a 0-2 ma. meter to pins 2 and 5 of test jack on rear panel. Adjust A14 for maximum grid current and then back off 10% on the long slope.
Adjust A15 and A16 for maximum grid current.
Adjust A17 for minimum plate current, then Adjust A18 for 20 ma. at a plate voltage of 250 Volts. Do not exceed 23 ma. of plate current.
- The power amplifier requires neutralization. Grid current will be maximum when the plate current is minimum as A17 is tuned through resonance. Slight adjustment of A19 may be necessary in the field.
- Remove the 50 ohm dummy load and connect transmitter to the antenna.
Adjust A17 for minimum plate current then adjust A18 for 20 ma. plate current.

FIXED CAPACITORS (cont)

ITEM No.	RATING	REMARKS	REPLACEMENT DATA					
			AEROVOX PART No.	CENTRALAB PART No.	CORNING-DUBIER PART No.	ELMENC0 PART No.	MALLORY PART No.	SPRAGUE PART No.
C43	10 N750 5%		N750-D1 10	DTN-10	C1002010	CCTN-10	CNT-410	10TCC-Q10
C44	10000		BPD-01	DD-103	BYA10S1	CCD-103	B-110	5HK-S10
C45	2000		DAC-9	DD-202	EYAE10D2	CCD-202	B-220	5HK-D20
C46	5000 1400V		DI-150	DD18-502	HYE16D5	RCD-502	UAC-250	BL-050
C47	150 10%			DD-151	L10715	CCD-151	GP315	10TS-T15
C48	610	Note 1			LI0762	CM-19B-621M	GP380	10TS-T50
C49	10000	Note 1	BPD-01	DD-103	BYA10S1	CCD-103	B-110	5HK-S10
C50	10000	Note 1		DD-103	BYA10S1	CCD-103	B-110	5HK-S10

Note 1. Not used in some versions.

† Alternate Value.

* Not normally in distributor's stock. Available thru distributor on order to manufacturer.

CONTROLS

ITEM No.	RATING		REPLACEMENT DATA					INSTALLATION NOTES
	RESIST-ANCE	WATTS	MORROW PART No.	CENTRALAB PART No.	CLAROSTAT PART No.	CTS-IRC PART No.	MALLORY PART No.	
RIA	500K	$\frac{1}{2}$	311-001	B-60-S	A47-500K-Z	Q13-133	U48	Volume
B	Shaft			Not Req.	RS-2	Not Req.	Not Req.	Power Off-On
C	Switch			Not Req.	SWE-12	76-1	US-26	Squelch
C2A	3000Q	$\frac{1}{2}$	311-021	B-8	A47-3000-S	Q11-112	U-8	
B	Shaft			Not Req.	RS-2	Not Req.	Not Req.	
R3	3000Q	2(WW)	311-010	WN-302	39-3000	I12-3000	F L-3K	RF Gain
R4A	Imag	$\frac{1}{2}$	311-022	B-69	A47-Imag-S	Q11-137	U54	Squelch
B	Shaft			Not Req.	RS-2	Not Req.	Not Req.	

PARTS LIST AND DESCRIPTIONS (Continued)

RESISTORS

All wattages 1/2 watt, or less, unless otherwise listed.

ITEM No.	RATING	REPLACEMENT DATA		ITEM No.	RATING	REPLACEMENT DATA	
		IRC PART No.	WORKMAN TV PART No.			IRC PART No.	WORKMAN TV PART No.
R5	56Ω			R22	330K		
R6	2.2meg			R23	47K 1W		
R7	22K			R24	15K		
R8	2.2meg			R25	47K 1W		
R9	15K 2W			R26	470K		
R10	47K			R27	470K		
R11	1meg			R28	150Ω 1W		
R12	1meg			R29	220Ω 1W		
R13	100K			R30	10K		
R14	100K			R31	82K 1W		
R15	470K			R32	47K		
R16	220K			R33	22K		
R17	1500Ω			R34	1000Ω		
R18	470K			R35	22K		
R19	470K			R36	27Ω		
R20	470K			R37	220K		
R21	10meg			R38	330Ω		

* Used in some versions.

COILS (RF-IF)

ITEM No.	USE	REPLACEMENT DATA			NOTES
		MORROW PART No.	Meritt PART No.	Stancor PART No.	
L1	RF Choke (.3uh)				
L2	Ant.				
L3	RF	108-126	6252	RTC-8570	T234
L4	RF Choke (500uh)	108-127	6174	RTC-8592	T324
L5	Input IF	108-506	TV-203	RTC-8632	T607
L6	Output IF	BC-352	BC-352	RTC-8633	T608
L7	Osc. Plate	108-128	TV-118	RTC-8609	T216
L8	Driver	108-129	6171-A		
L9	Final Plate				

FILTER CHOKE

ITEM No.	RATINGS	REPLACEMENT DATA			NOTES
		INDUCTANCE (μH)	DC RES. (Ω)	IRV PART No.	
L10	.075A 250Ω	11 HY	120-055	26CB4	C-8X

TRANSFORMER (POWER)

ITEM No.	RATING	REPLACEMENT DATA			NOTES
		MORROW PART No.	Meritt PART No.	Stancor PART No.	
T1	117V @ 500VCT .62A	120-137 ①			① Part #120-135 used in 6V Operation. Part #120-136 used in 12V Operation.
	SEC. 3 12.6V @ 1.8A	SEC. 4	SEC. 5		

TRANSFORMER (MIC)

ITEM No.	TURNS RATIO	REPLACEMENT DATA			NOTES
		MORROW PART No.	Meritt PART No.	Stancor PART No.	
T2	1 11	120-133		A-3X	

TRANSFORMER (MOD)

ITEM No.	TURNS RATIO	REPLACEMENT DATA			NOTES
		MORROW PART No.	Meritt PART No.	Stancor PART No.	
T3	1 1	120-134			

TRANSFORMER (AUDIO OUTPUT)

ITEM No.	IMPEDANCE	REPLACEMENT DATA			NOTES
		MORROW PART No.	Meritt PART No.	Stancor PART No.	
T4	4800Ω	3-4Ω	439-520 ①	A-3026	① Includes Speaker

SPEAKER

ITEM No.	TYPE	REPLACEMENT DATA			NOTES
		SIZE	FIELD	QUAM PART No.	
SP1	4"	PM	3-4Ω	439-520 *	* Includes T4

POWER RECTIFIERS

ITEM No.	RATING	REPLACEMENT DATA			NOTES
		CURRENT (Measured)	MORROW PART No.	RCA PART No.	
M1	.120A		IN1763 *	2F4 *	* Silicon Type

SIGNAL DIODES

ITEM No.	ORIG. TYPE	REPLACEMENT DATA			NOTES
		MORROW PART No.	GENERAL ELECTRIC PART No.	RAYTHEON PART No.	
M2	IN295		IN295	IN295	
M3	IN295		IN295	IN295	Squelch Squelch

MISCELLANEOUS

ITEM No.	PART NAME	MORROW PART No.	NOTES
M4	Variable Cap.		Receive (Order by Freq. - Desired) Note 1
M5	Crystal		Receive (Order by Freq. - Desired) Note 1
M6	Crystal		Receive (Order by Freq. - Desired) Note 1
M7	Crystal		Transmit (Order by Freq. - Desired) Note 2
M8	Crystal		Transmit (Order by Freq. - Desired) Note 2
M9	Crystal		Transmit (Order by Freq. - Desired) Note 2
M10	Crystal		Channel Selector
M11	Switch		12V (For 12VDC and 117VAC Versions)
M12	Relay	148-014	6V (For 6VDC Versions)

Manufacturer recommends military type crystal CR-18U

Note 1. M6 and M7 not used in CB series. To compute crystal frequency, subtract .455 from channel frequency in megacycles and divide by 3.

Note 2. M9 and M10 not used in CB series. To compute crystal frequency divide channel frequency in megacycles by 2.

WIRING DATA

General-use Unshielded Hook-up Wire	Use BELDEN No. 8530 (Solid) Available in Ten Colors
Power Cord	8524 (Stranded) Available in Ten Colors
	1765-B (6 Ft. Length)
	1725-K (7½ Ft. Length)



**RADSON MODELS
RT-70A, RT-75A, RP-115, RP-612**

TRADE NAME	Radson Models RT-70A, RT-75A, RP-115, RP-612
MANUFACTURER	Radson Engineering Corp., Macon, Illinois
TYPE SET	Seven Tube Crystal Controlled 2 Channel Citizens Band Transmitter-Receiver
POWER SUPPLY	Models RT-70A, RP-115: 110-120 Volts AC, 60 Cycles Models RT-75A, RP-612: 6 (or) 12 Volt Storage Battery
RATING	35 Watts, .38 Amp. @117 Volts AC (Receive); 46 Watts, .5 Amp. @117 Volts AC (Transmit) (or) 6 Amp. @6.3 Volts DC (Receive); 8 Amp. @6.3 Volts DC (Transmit) (or) 3 Amp. @12.6 Volts DC (Receive); 4 Amp. @12.6 Volts DC (Transmit)
TUNING RANGE	Any 2 of Citizens Band Channels 1 thru 22

NOTICE




ONLY THOSE PERSONS PROPERLY LICENSED BY FCC ARE PERMITTED TO EFFECT REPAIRS OR MAKE CRYSTAL SUBSTITUTION ON THIS TYPE EQUIPMENT.

HOWARD W. SAMS & CO., INC. Indianapolis 6, Indiana



The listing of any available replacement part herein does not constitute in any case a recommendation, warranty or guaranty by Howard W. Sams & Co., Inc., as to the quality and suitability of such replacement part. The numbers of these parts have been compiled from information furnished to Howard W. Sams & Co., Inc., by the manufacturers of KZ396


the particular type of replacement part listed. Reproduction or use, without express permission, of editorial or pictorial content, in any manner, is prohibited. No patent liability is assumed with respect to the use of the information contained herein. © 1961 Howard W. Sams & Co., Inc., Indianapolis 6, Indiana. Printed in U.S. of America

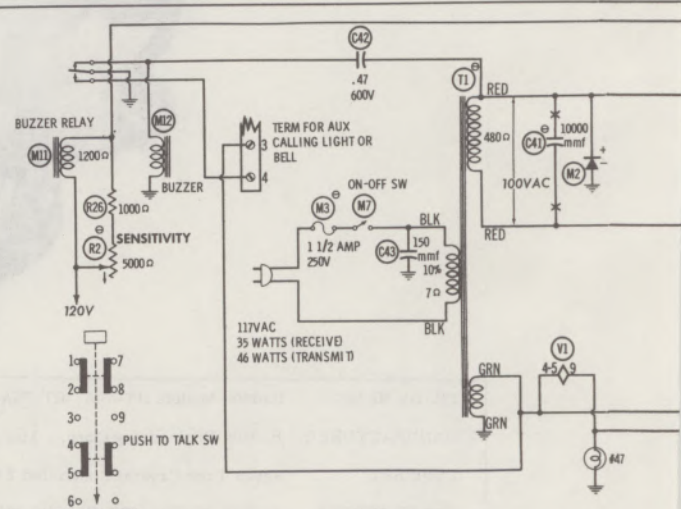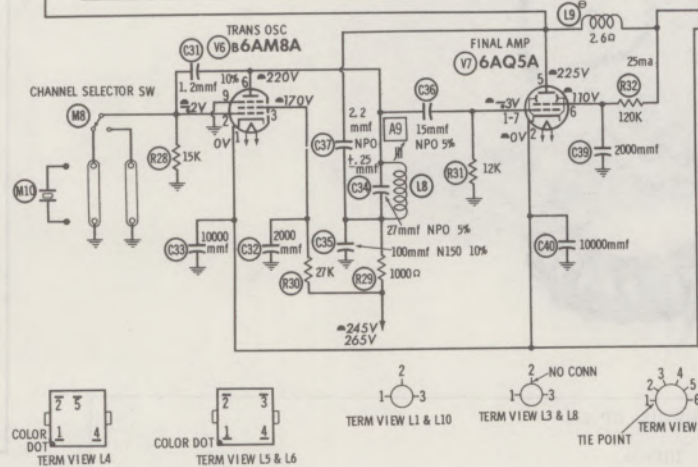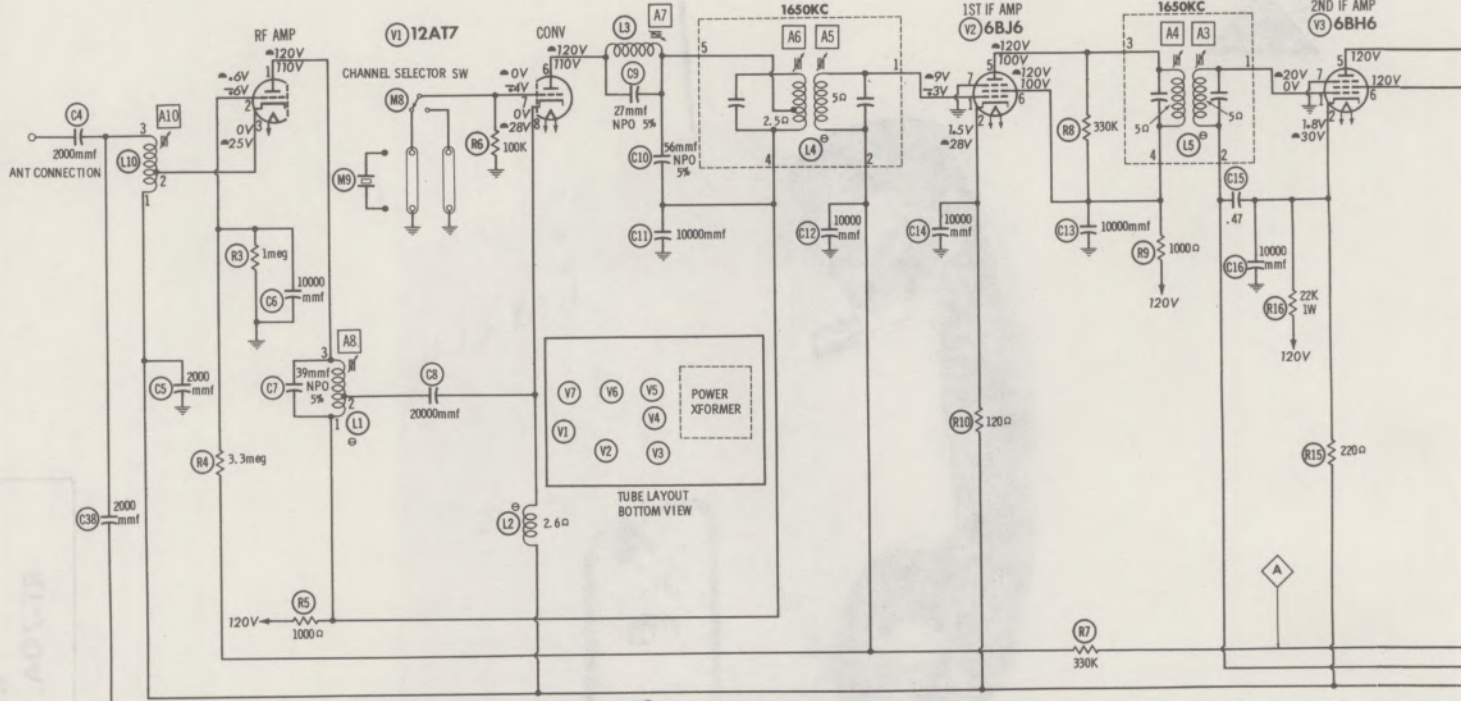





RESISTANCE READINGS

ITEM	TUBE	Pin 1	Pin 2	Pin 3	Pin 4	Pin 5	Pin 6	Pin 7	Pin 8	Pin 9
V1	12A7	† 1500Ω	1meg	0Ω	† 4700Ω	.1Ω	.1Ω	† 1500Ω	100K	0Ω
V2	6B16	3.8meg	120Ω	.1Ω	0Ω	† 1500Ω	† 1500Ω	0Ω		
V3	6BA6	2.3meg	220Ω	.1Ω	0Ω	† 1000Ω	† 1000Ω	0Ω		
V4	6A76	1meg	7600Ω	.1Ω	0Ω	670K	2.5meg	† 100K		
V5	6AQ5A	470K	560Ω	.1Ω	.1Ω	† 445Ω	† 150Ω	NC		
V6	6AM8A	0Ω	15K	† 27K	.1Ω	.1Ω	† 1100Ω	2.7meg	277K	0Ω
V7	6AQ5A	12K	0Ω	.1Ω	0Ω	† 680Ω	† 120K	NC		

ALL MEASUREMENTS MADE IN "RECEIVE" POSITION UNLESS OTHERWISE DESIGNATED.
 † MEASURED FROM JUNCTION OF C2A & R33.
 ‡ MEASURED IN "TRANSMIT" POSITION.
 § MEASURED IN "CALL" POSITION.
 NC NO CONNECTION

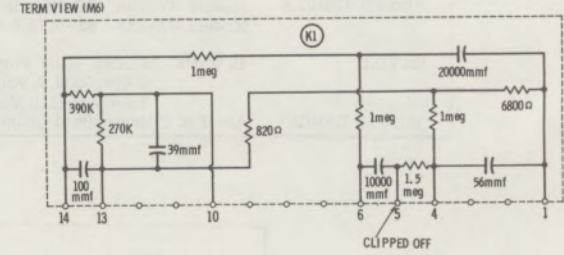

NUMBERS ASSIGNED TO COILS, SWITCHES, PLUGS, SOCKETS, AND TRANSFORMERS ARE TO FACILITATE CIRCUIT TRACING OR COMPONENT REPLACEMENT AND MAY NOT NECESSARILY BE FOUND ON THE UNIT.

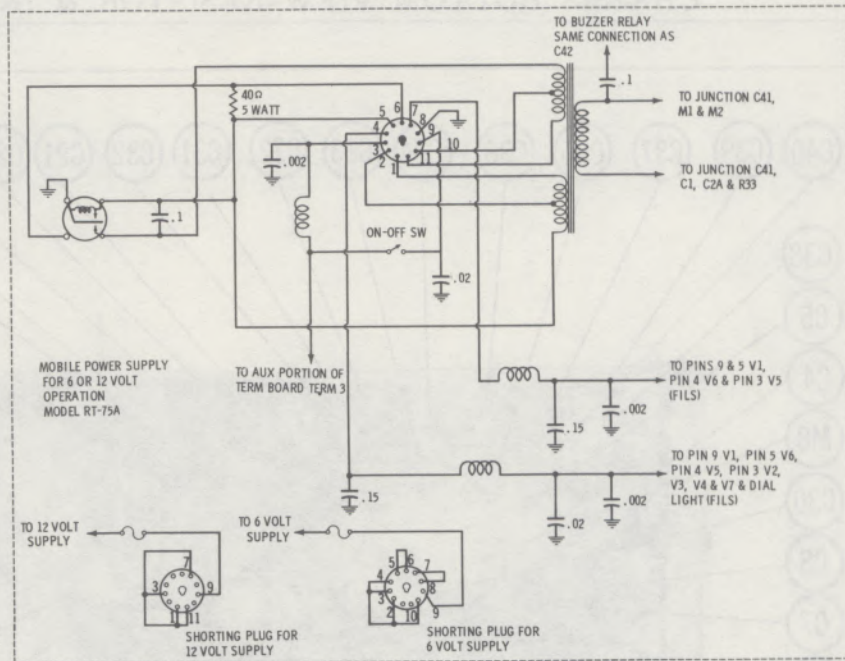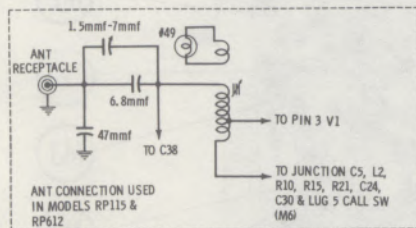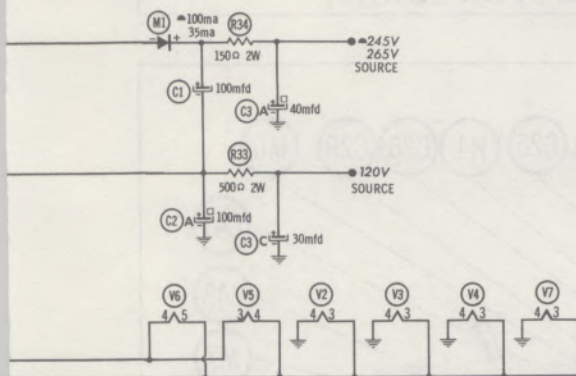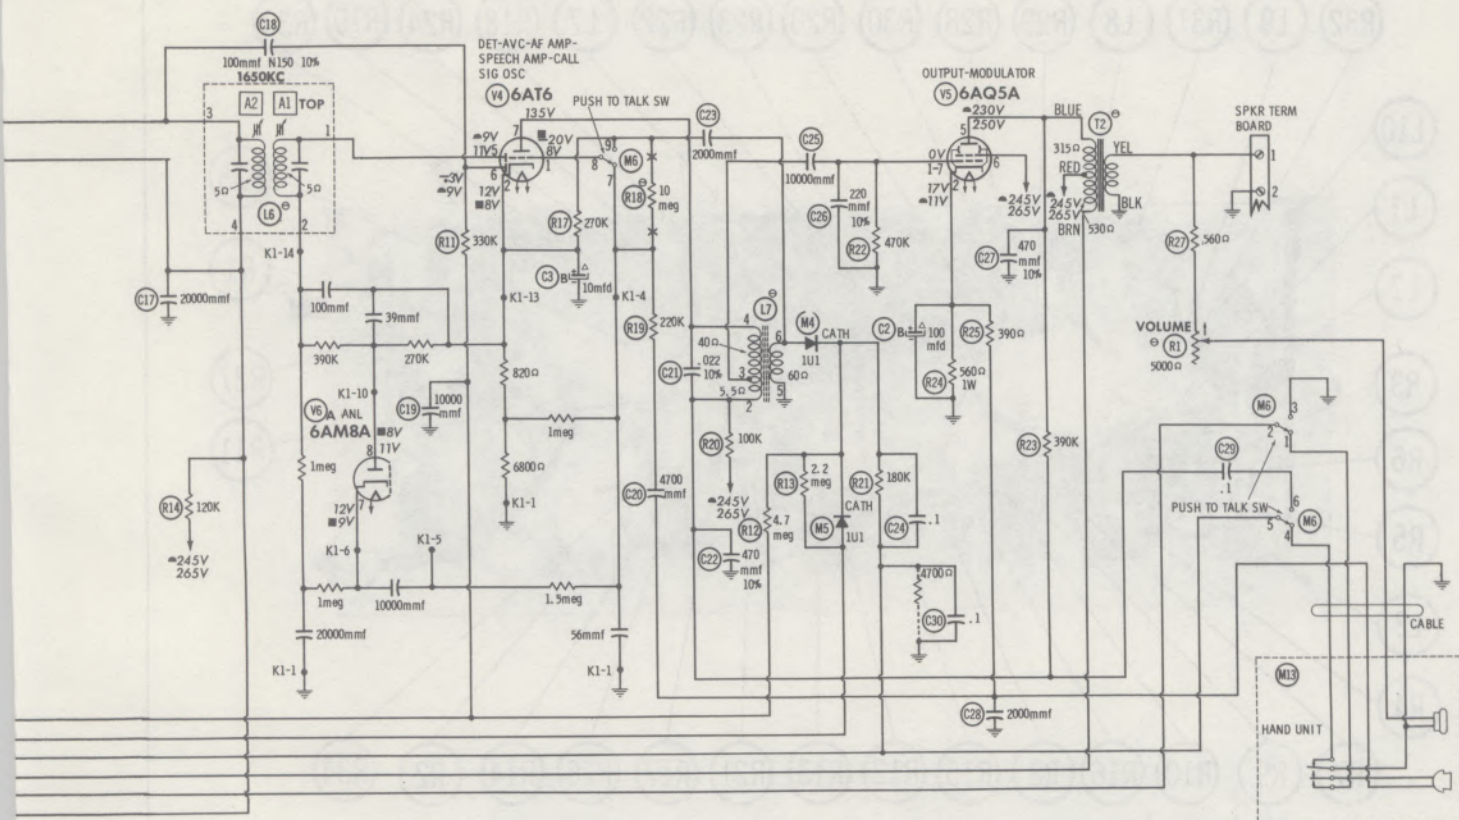


SEE PARTS LIST FOR ALTERNATE VALUE OR APPLICATION

DC COIL RESISTANCE VALUES UNDER ONE OHM NOT SHOWN ON SCHEMATIC DIAGRAM


ARROWS ON CONTROLS INDICATE CLOCKWISE ROTATION (CONTROL VIEWED FROM SHAFT END)

1. DC voltage measurements taken with vacuum tube voltmeter; AC voltages measured with 1000 ohm per volt voltmeter.
2. Socket connections are shown as bottom views.
3. Measured values are from socket pin to common ground.
4. Line voltage maintained at 117 volts for voltage readings.
5. Nominal tolerance on component values makes possible a variation of $\pm 15\%$ in voltage and resistance readings.
6. Volume control at maximum, no signal applied for voltage measurements.

RADSON MODELS
RT-70A, RT-75A, RP-115, RP-612

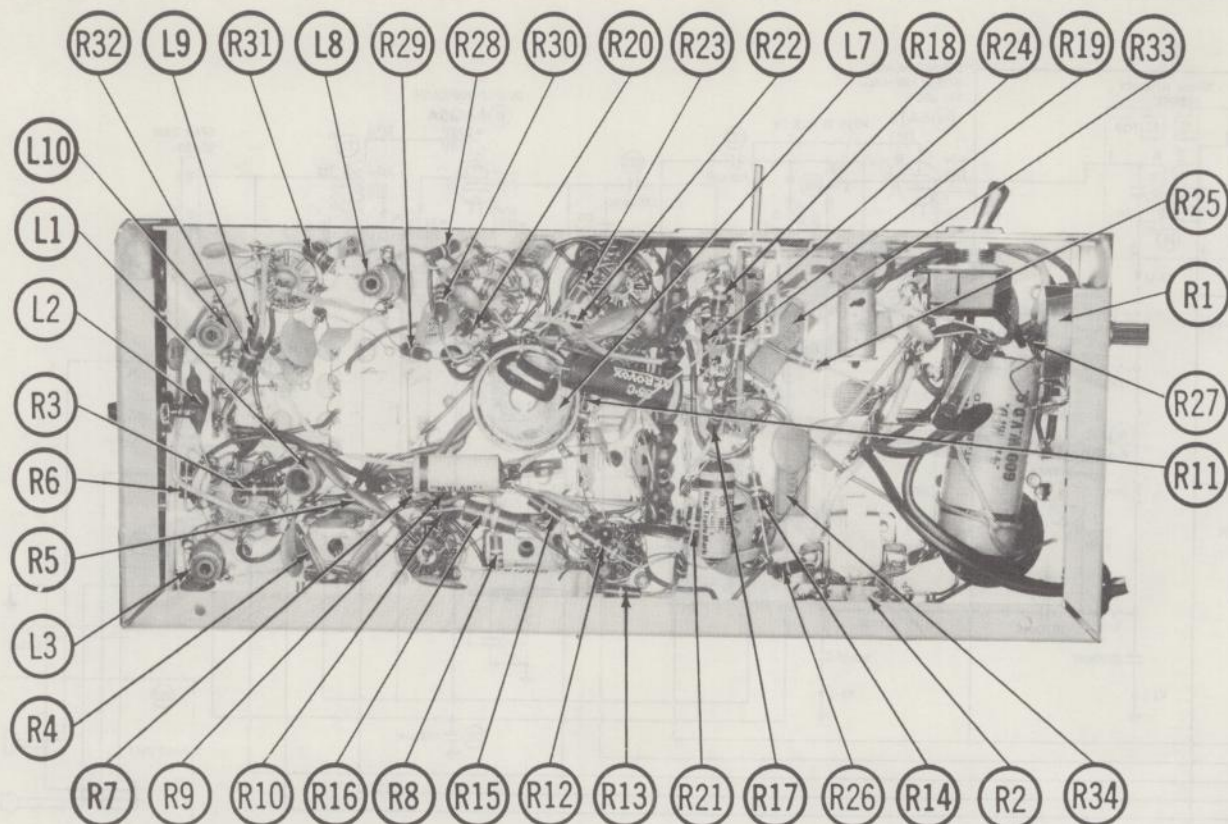

CHASSIS BOTTOM VIEW-RESISTOR & INDUCTOR IDENT.

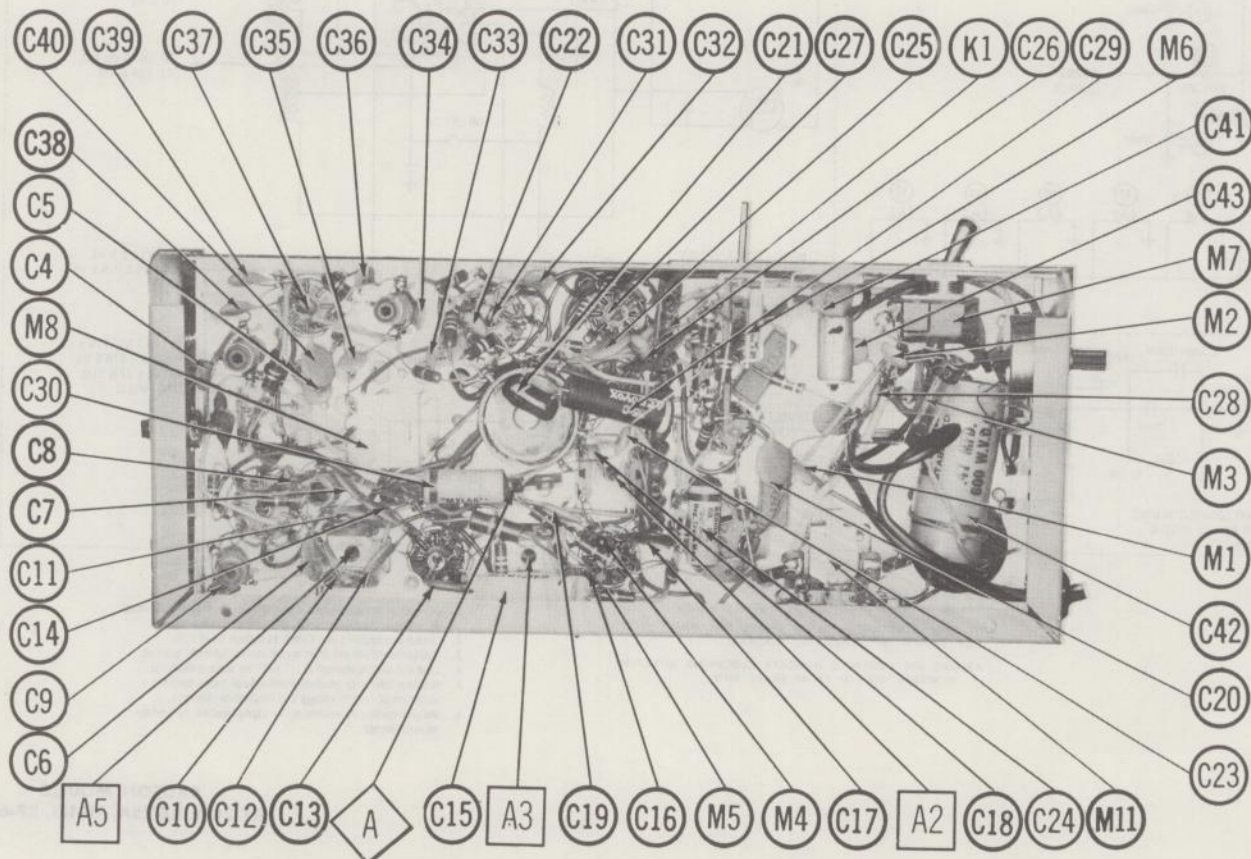

CHASSIS BOTTOM VIEW-ALIGNMENT, CAPACITOR & MISC. IDENT.

PARTS LIST AND DESCRIPTIONS

TUBES

• GENERAL ELECTRIC • RAYTHEON • SYLVANIA •			
ITEM No.	USE	ITEM No.	TYPE
V1	RF Amp. - Conv.	V5	Output-Modulator
V2	1st IF Amplifier	V6	ANL - Trans. Osc.
V3	2nd IF Amplifier	V7	Final Amplifier
V4	Dek. -AFC-AF Amp. - Speech Amp. -Cull. Sig. Osc.		

ELECTROLYTIC CAPACITORS

REPLACEMENT DATA					
ITEM No.	RATING	AEROVOX PART No.	CORNELL-DUBIER PART No.	MALLORY PART No.	SPRAGUE PART No.
C1	100 CAP. 150 VOLT.	AFH-21	XA0241	FF116	TVM-1423
C2A	100 150	AFH2-24-21	XA0241	FF116	TVM-1423
C2B	100 150	AFH2-24-21	XA0241	FF116	TVM-1423
C3A	100 300	AFH3-28-30	BR0100-25	TC2501	TVA-1207
C3B	100 300	AFH3-28-30	BR0100-25	TC2501	TVA-1207
C3C	100 300	AFH3-28-30	BR0100-25	TC2501	TVA-1207
C3D	100 300	AFH3-28-30	BR0100-25	TC2501	TVA-1207
C3E	100 300	AFH3-28-30	BR0100-25	TC2501	TVA-1207
C3F	100 300	AFH3-28-30	BR0100-25	TC2501	TVA-1207
C3G	100 300	AFH3-28-30	BR0100-25	TC2501	TVA-1207
C3H	100 300	AFH3-28-30	BR0100-25	TC2501	TVA-1207
C3I	100 300	AFH3-28-30	BR0100-25	TC2501	TVA-1207
C3J	100 300	AFH3-28-30	BR0100-25	TC2501	TVA-1207
C3K	100 300	AFH3-28-30	BR0100-25	TC2501	TVA-1207
C3L	100 300	AFH3-28-30	BR0100-25	TC2501	TVA-1207
C3M	100 300	AFH3-28-30	BR0100-25	TC2501	TVA-1207
C3N	100 300	AFH3-28-30	BR0100-25	TC2501	TVA-1207
C3O	100 300	AFH3-28-30	BR0100-25	TC2501	TVA-1207
C3P	100 300	AFH3-28-30	BR0100-25	TC2501	TVA-1207
C3Q	100 300	AFH3-28-30	BR0100-25	TC2501	TVA-1207
C3R	100 300	AFH3-28-30	BR0100-25	TC2501	TVA-1207
C3S	100 300	AFH3-28-30	BR0100-25	TC2501	TVA-1207
C3T	100 300	AFH3-28-30	BR0100-25	TC2501	TVA-1207
C3U	100 300	AFH3-28-30	BR0100-25	TC2501	TVA-1207
C3V	100 300	AFH3-28-30	BR0100-25	TC2501	TVA-1207
C3W	100 300	AFH3-28-30	BR0100-25	TC2501	TVA-1207
C3X	100 300	AFH3-28-30	BR0100-25	TC2501	TVA-1207
C3Y	100 300	AFH3-28-30	BR0100-25	TC2501	TVA-1207
C3Z	100 300	AFH3-28-30	BR0100-25	TC2501	TVA-1207

FIXED CAPACITORS

Capacity values given in the rating column are in mfd. for Paper Capacitors, and in mmfd. for Mica and Ceramic Capacitors.

REPLACEMENT DATA					
ITEM No.	RATING	AEROVOX PART No.	CORNELL-DUBIER PART No.	MALLORY PART No.	SPRAGUE PART No.
C4	2000	BPD-002	DD-202	BYA10D2	5HK-D20
C5	2000	BPD-002	DD-202	BYA10D2	5HK-D20
C6	2000	BPD-002	DD-202	BYA10D2	5HK-D20
C7	39 NPO 5%	BPD-01	TCZ-39	C10Q39C	10TCC-Q39
C8	20000	BPD-02	DD-203	BYB6S2	5HK-S20
C9	27 NPO 5%	BPD-02	DD-203	BYB6S2	5HK-S20
C10	56 NPO 5%	BPD-01	TCZ-56	C10Q56C	10TCC-Q56
C11	10000	BPD-01	DD-103	BYA10S1	5HK-S10
C12	10000	BPD-01	DD-103	BYA10S1	5HK-S10
C13	10000	BPD-01	DD-103	BYA10S1	5HK-S10
C14	10000	BPD-01	DD-103	BYA10S1	5HK-S10
C15	10000	BPD-01	DD-103	BYA10S1	5HK-S10
C16	10000	BPD-01	DD-103	BYA10S1	5HK-S10
C17	20000	BPD-02	DD-203	BYB6S2	5HK-S20
C18	100 N150 10%	BPD-01	DD-103	BYA10S1	5HK-S10
C19	10000	BPD-01	DD-103	BYA10S1	5HK-S10
C20	470 10%	BPD-01	DD-103	BYA10S1	5HK-S10
C21	.022 100V 10%	BPD-01	DD-103	BYA10S1	5HK-S10
C22	470 10%	BPD-01	DD-103	BYA10S1	5HK-S10
C23	2000	BPD-002	DD-202	BYA10D2	5HK-D20
C24	.1 200V	BPD-01	DD-103	BYA10S1	5HK-S10
C25	10000	BPD-01	DD-103	BYA10S1	5HK-S10
C26	220 10%	BPD-01	DD-103	BYA10S1	5HK-S10
C27	470 10%	BPD-01	DD-103	BYA10S1	5HK-S10
C28	2000	BPD-002	DD-202	BYA10D2	5HK-D20
C29	.1 200V	BPD-01	DD-103	BYA10S1	5HK-S10
C30	.1 200V	BPD-01	DD-103	BYA10S1	5HK-S10

FIXED CAPACITORS (cont)

REPLACEMENT DATA					
ITEM No.	RATING	AEROVOX PART No.	CORNELL-DUBIER PART No.	MALLORY PART No.	SPRAGUE PART No.
C31	1.2 10%	NPO-S1 1.5	DTZ-1R5	C10V15C	10TCC-V12
C32	2000	BPD-002	DD-202	BYA10D2	5HK-D20
C33	10000	BPD-01	DD-103	BYA10S1	5HK-S10
C34	27 NPO 5%	BPD-01	DD-103	BYA10S1	5HK-S10
C35	100 N150 10%	BPD-01	DD-103	BYA10S1	5HK-S10
C36	15 NPO 5%	BPD-01	DD-103	BYA10S1	5HK-S10
C37	2.2 NPO 5%	BPD-01	DD-103	BYA10S1	5HK-S10
C38	2000	BPD-002	DD-202	BYA10D2	5HK-D20
C39	2000	BPD-002	DD-202	BYA10D2	5HK-D20
C40	10000	BPD-01	DD-103	BYA10S1	5HK-S10
C41	10000	BPD-01	DD-103	BYA10S1	5HK-S10
C42	47 600V	BPD-01	DD-103	BYA10S1	5HK-S10
C43	150 10%	BPD-01	DD-103	BYA10S1	5HK-S10

* Not normally in distributor's stock. Available thru distributor on order to manufacturer.
Note 1. Not used in some versions.

CONTROLS

REPLACEMENT DATA					
ITEM No.	RATING	RADSON PART No.	CENTRALAB PART No.	CTS-IRC PART No.	MALLORY PART No.
R1	5000Ω	10-487-2①	B-12	Q17-114	Volume Sensitivity
R2	5000Ω	10-487-3②	B-12	Q17-114	Volume Sensitivity

① Some versions may use Part #10-487-1.
② Some versions may use Part #10-697-1.

RESISTORS

All wattages 1/2 watt, or less, unless otherwise listed.

REPLACEMENT DATA					
ITEM No.	RATING	IRC PART No.	WORKMAN TV PART No.	REMARKS	REPLACEMENT DATA
R3	Imeg				
R4	3 3/4 meg				
R5	1000Ω				
R6	100K				
R7	330K				
R8	330K				
R9	1000Ω				
R10	120Ω				
R11	330K				
R12	4.7 meg				
R13	2.2 meg				
R14	120K				
R15	220Ω				
R16	22K 1W				
R17	270K				
R18	10meg				
R19	220K				
R20	100K				
R21	180K				
R22	470K				
R23	390K				
R24	560Ω 1W				
R25	390Ω				
R26	1000Ω				
R27	560Ω				
R28	15K				
R29	1000Ω				
R30	27K				
R31	12K				
R32	120K				
R33	500Ω 2W				
R34	150Ω 2W				

Note 1. Not used in some versions.

PARTS LIST AND DESCRIPTIONS (Continued)

COMPONENT COMBINATIONS

ITEM No.	USE	DESCRIPTION	RADSON PART No.	REPLACEMENT DATA
K1	Audio Network	39mmf, 56mmf, 100mmf, 10000mmf, 20000mmf, 8200f, 6800f, 270K, 390K, 1meg, 1meg, 1.5meg	10-622-1	

COILS (RF-IF)

ITEM No.	USE	REPLACEMENT DATA				NOTES
		RADSON PART No.	Merit PART No.	Miller PART No.	Stancor PART No.	
L1	RF	10-460-2				① Alternate Part #10-022-3 (18uh)
L2	RF Choke (36uh)	10-629-1 ①	TV-180	6176	RTC-8598	② Alternate Part #20-110-2
L3	Conv. Plate	10-460-1	TV-118	6171-A	RTC-8609	③ Alternate Part #20-110-1
L4	1st IF	20-110-4 ②				④ Part #10-462-1, 10-631-2 or 10-631-1
L5	2nd IF	20-110-3 ③		13-W1	RTC-8686	(With C21) may be used.
L6	3rd IF	20-110-3 ③		13-W1	RTC-8686	⑤ Alternate Part #10-022-1 (250uh)
L7	Call Signal Osc.					
L8	Osc. Plate	10-460-1	TV-118	6171-A	RTC-8609	
L9	RF Choke (36uh)	10-629-1 ⑤	TV-180	6176	RTC-8598	
L10	Ant.	10-460-2				

TRANSFORMER (POWER)

ITEM No.	RATING		REPLACEMENT DATA				NOTES
	PRI	SEC.	RADSON PART No.	Merit PART No.	Stancor PART No.	Thorndson PART No.	
T1	117V @ .5A	100V @ .300A AC	B-20-104 ①				① Alternate Part # 20-104-1, 20-104-1, Part #20-111-1 used in Battery Operated Models.

TRANSFORMER (AUDIO OUTPUT)

ITEM No.	IMPEDANCE		REPLACEMENT DATA				NOTES
	PRI	SEC.	RADSON PART No.	Merit PART No.	Stancor PART No.	Thorndson PART No.	
T2	11.6K CT	3-40	A-10-463 ①	A-2936 ②		22587	① Alternate Part #10-463-1, ② Use Original Frame.

POWER RECTIFIERS

ITEM No.	RATING CURRENT (Measured)	REPLACEMENT DATA				NOTES
		RADSON PART No.	RCA PART No.	SARKES TARZIAN PART No.	SYLVANIA PART No.	
M1	.100A	10-526-1	1N1763	2F4	SR200	Silicon Type
M2	.100A	10-526-1	1N1763	2F4	SR200	

FUSES

ITEM No.	TYPE	RATING	REPLACEMENT DATA			
			RADSON PART No.	FUSE	HOLDER	BUSS PART No.
M3	3AG	1½A 250V P/T	10-736-2 (Note 1)	3180L-5 (1½A 250V P/T) 3AG		

Note 1. 6 volt versions use 14 Amp. and 12 volt versions use 6 Amp. fuse.

SIGNAL DIODES

ITEM No.	ORIG. TYPE	REPLACEMENT DATA			NOTES
		RADSON PART No.	GENERAL ELECTRIC PART No.	SYLVANIA PART No.	
M4	1U1	10-527-1 *			* Selenium
M5	1U1	10-527-1 *			

MISCELLANEOUS

ITEM No.	PART NAME	RADSON PART No.	NOTES
M6	Switch	10-487-1	Push-To-Call (Pushbutton Type, Spring Loaded) Power Off-On (Toggle Type) Channel Selector (Pushbutton Type) Receive (Order by Channel Desired) Transmit (Order by Channel Desired) Buzzer Control
M7	Switch	10-082-1	
M8	Crystal		
M9	Crystal		
M10	Relay	10-628-1	
M11	Buzzer	10-633-1	
M12	Buzzer	(or) 10-512-1	
M13	Hand Set	20-121-1	Includes Push-To-Talk Switch

WIRING DATA

General-use Unshielded Hook-up Wire Use BELDEN No. 8530 (Solid) Available in Ten Colors
8524 (Stranded) Available in Ten Colors
Power Cord Use BELDEN No. 1765-B (6 Ft. Length)
1725-K (7½ Ft. Length)

ALIGNMENT INSTRUCTIONS

ALIGNMENT INSTRUCTIONS—READ CAREFULLY BEFORE ATTEMPTING ALIGNMENT

Volume control should be at maximum position. Output of signal generator should be no higher than necessary to obtain an output reading.


Suggested Alignment Tools: A1 Thru A10...GENERAL CEMENT #8282, 8606, 8606-L, 9295, 9440
WALSCO #2526, 2543, 2544, 2545

RECEIVER ALIGNMENT

	SIGNAL GENERATOR COUPLING	SIGNAL GENERATOR FREQUENCY	RADIO DIAL SETTING	CONNECT VTVM	ADJUST	REMARKS
1.	High side to antenna terminal. Low side to chassis.	1650KC (400% 30% Mod.)	Not Used	DC probe to point A. Common to chassis.	A1	Adjust for MINIMUM deflection.
2.	"	"	"	"	A2, A3, A4, A5, A6	Adjust for maximum deflection.
3.	High side thru termination to antenna.	Receiver Frequency	"	"	A7	Turn clockwise until oscillator ceases, then counterclockwise until oscillation just starts. This should be within 1 turn of maximum AVC voltage as indicated on VTVM.
4.	"	"	"	"	A8	Adjust for maximum deflection (Use position farthest in which produces maximum).

TRANSMITTER ALIGNMENT

	SIGNAL GENERATOR COUPLING	SIGNAL GENERATOR FREQUENCY	RADIO DIAL SETTING	CONNECT VTVM	ADJUST	REMARKS
5.	Connect a dummy load to the antenna terminal.	Not Used	Not Used	DC probe thru 100K to pin 1 (grid) of Final. Common to chassis.	A9	Adjust for -20 volts.
6.	Connect whip antenna.	"	"	Use field strength meter.	A10	Adjust for maximum output. Check transmitter frequency with Frequency meter or crystal calibrated receiver.

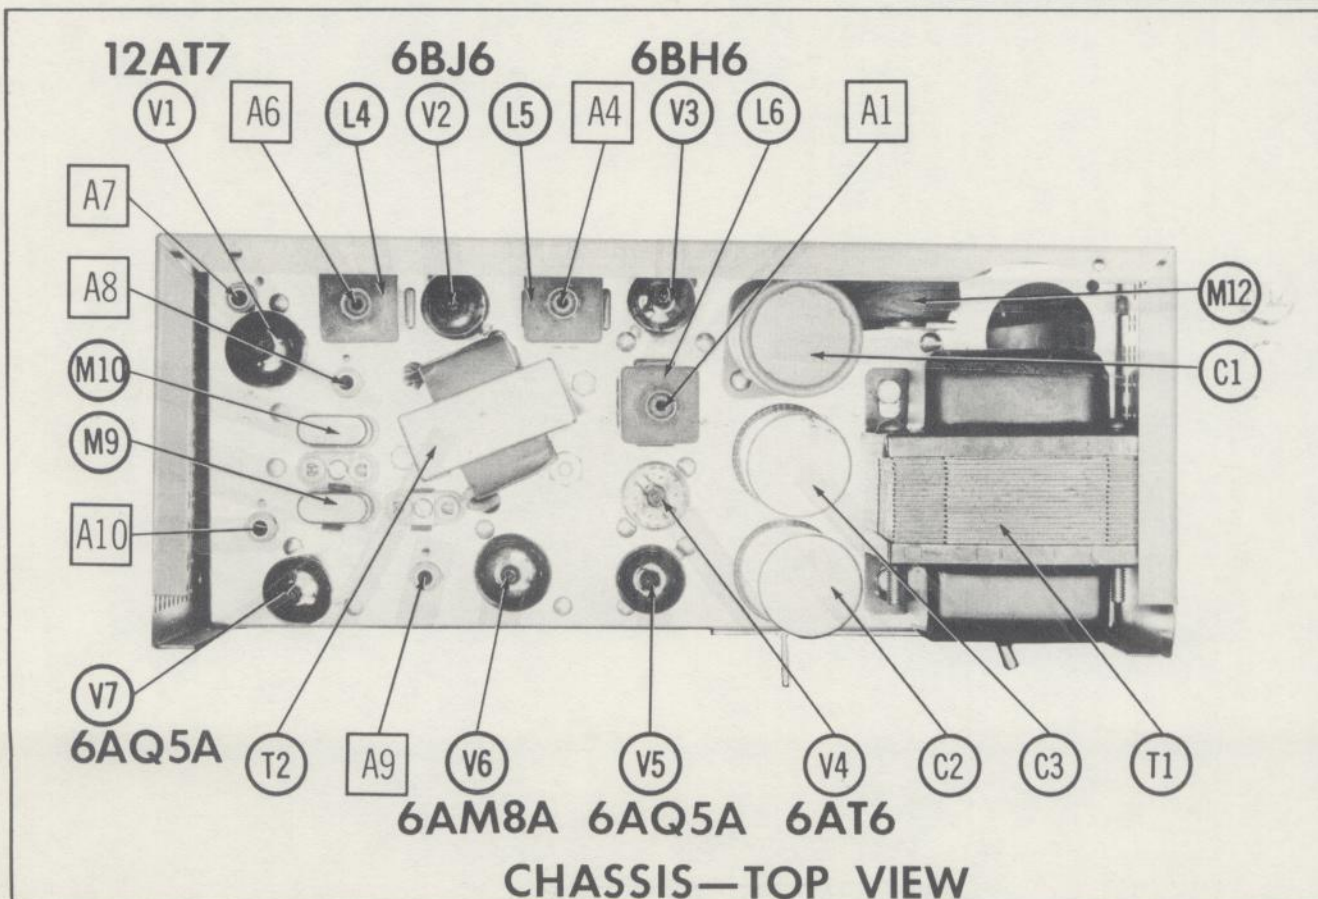

ALIGNMENT INSTRUCTIONS

1. The alignment of the chassis is critical to the proper operation of the receiver. The alignment should be performed in the following order: 1. Tune the receiver to the test frequency. 2. Adjust the alignment points in the order listed below. 3. Repeat steps 1 and 2 until the receiver is properly aligned. 4. The alignment should be performed in a clean, dry, and vibration-free environment. 5. The alignment should be performed by a qualified technician.


ALIGNMENT POINTS

ALIGNMENT POINT	ALIGNMENT POINT	ALIGNMENT POINT	ALIGNMENT POINT	ALIGNMENT POINT	ALIGNMENT POINT
1. High side of antenna circuit	2. Low side of antenna circuit	3. High side of antenna circuit	4. Low side of antenna circuit	5. High side of antenna circuit	6. Low side of antenna circuit
7. High side of antenna circuit	8. Low side of antenna circuit	9. High side of antenna circuit	10. Low side of antenna circuit	11. High side of antenna circuit	12. Low side of antenna circuit
13. High side of antenna circuit	14. Low side of antenna circuit	15. High side of antenna circuit	16. Low side of antenna circuit	17. High side of antenna circuit	18. Low side of antenna circuit
19. High side of antenna circuit	20. Low side of antenna circuit	21. High side of antenna circuit	22. Low side of antenna circuit	23. High side of antenna circuit	24. Low side of antenna circuit

ALIGNMENT POINTS

ALIGNMENT POINT	ALIGNMENT POINT	ALIGNMENT POINT	ALIGNMENT POINT	ALIGNMENT POINT	ALIGNMENT POINT
1. High side of antenna circuit	2. Low side of antenna circuit	3. High side of antenna circuit	4. Low side of antenna circuit	5. High side of antenna circuit	6. Low side of antenna circuit
7. High side of antenna circuit	8. Low side of antenna circuit	9. High side of antenna circuit	10. Low side of antenna circuit	11. High side of antenna circuit	12. Low side of antenna circuit
13. High side of antenna circuit	14. Low side of antenna circuit	15. High side of antenna circuit	16. Low side of antenna circuit	17. High side of antenna circuit	18. Low side of antenna circuit
19. High side of antenna circuit	20. Low side of antenna circuit	21. High side of antenna circuit	22. Low side of antenna circuit	23. High side of antenna circuit	24. Low side of antenna circuit



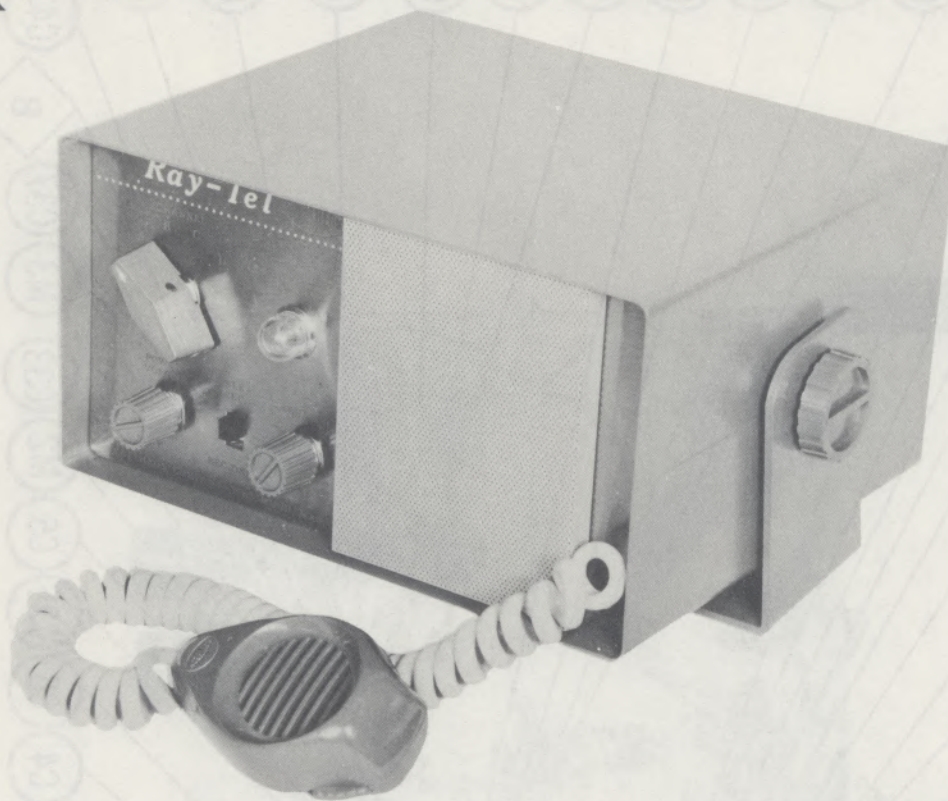

RAYTHEON MODEL
RAY-TEL (TWR-1)

TRADE NAME	Raytheon Model Ray-Tel (TWR-1)
MANUFACTURER	Raytheon Co., Distributor Products Div., 411 Providence Turnpike, Westwood, Mass.
TYPE SET	AC-Battery Operated 8 Tube Crystal Controlled Citizens Band Transmitter — Receiver
POWER SUPPLY	110-120 Volts AC, 60 Cycles (or) 12 Volt Storage Battery
RATING	65 Watts, .6 Amp. @ 117 Volts AC (or) 5 Amp. @ 12.6 Volts DC
TUNING RANGE	Any 4 of Citizens Band Channels 1 thru 23

NOTICE


ONLY THOSE PERSONS PROPERLY LICENSED BY FCC ARE PERMITTED TO MAKE CRYSTAL SUBSTITUTION OR EFFECT REPAIRS ON THE TRANSMITTER PORTION OF THIS UNIT.

HOWARD W. SAMS & CO., INC. Indianapolis 6, Indiana




The listing of any available replacement part herein does not constitute in any case a recommendation, warranty or guaranty by Howard W. Sams & Co., Inc., as to the quality and suitability of such replacement part. The numbers of these parts have been compiled from information furnished to Howard W. Sams & Co., Inc., by the manufacturers of KZ485


the particular type of replacement part listed. Reproduction or use, without express permission, of editorial or pictorial content, in any manner, is prohibited. No patent liability is assumed with respect to the use of the information contained herein. © 1961 Howard W. Sams & Co., Inc., Indianapolis 6, Indiana. Printed in U.S. of America

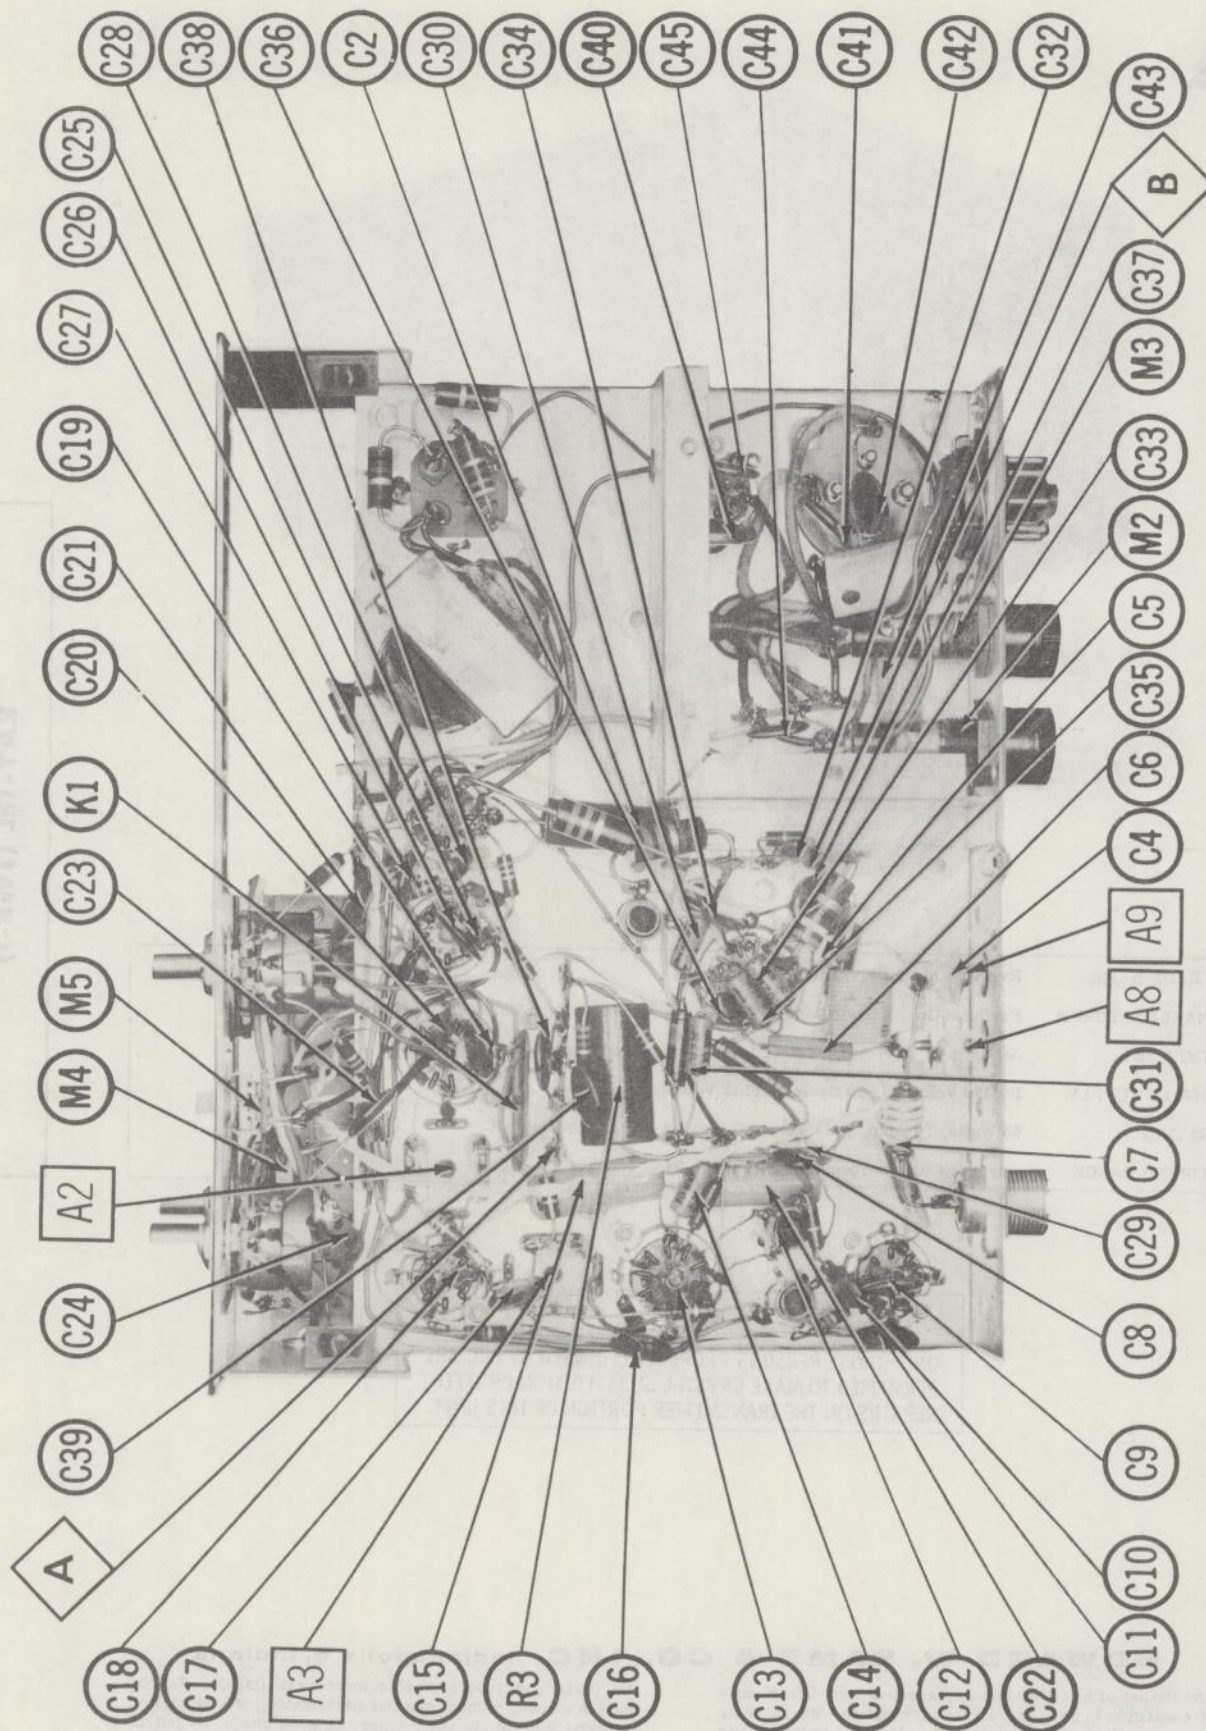

CHASSIS BOTTOM VIEW-ALIGNMENT, CAPACITOR & MISC. IDENT.

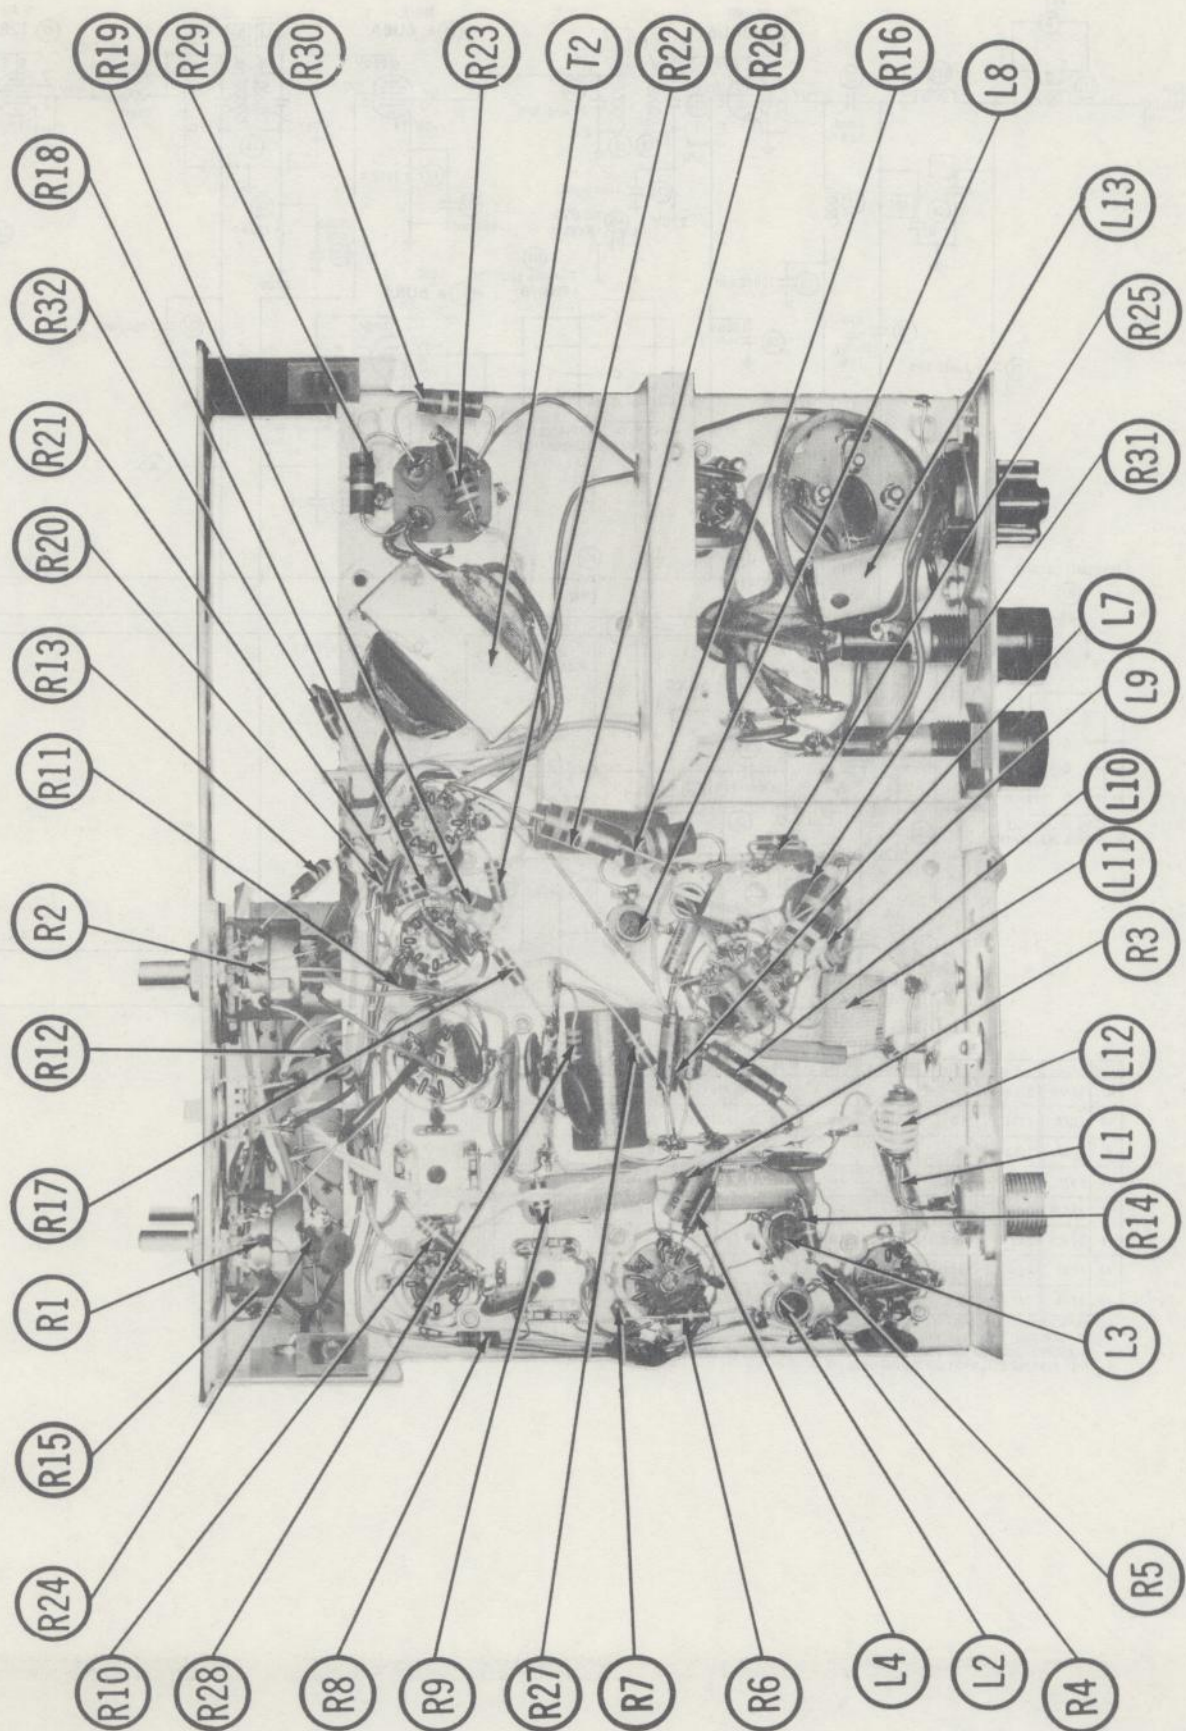

CHASSIS BOTTOM VIEW-RESISTOR & INDUCTOR IDENT.

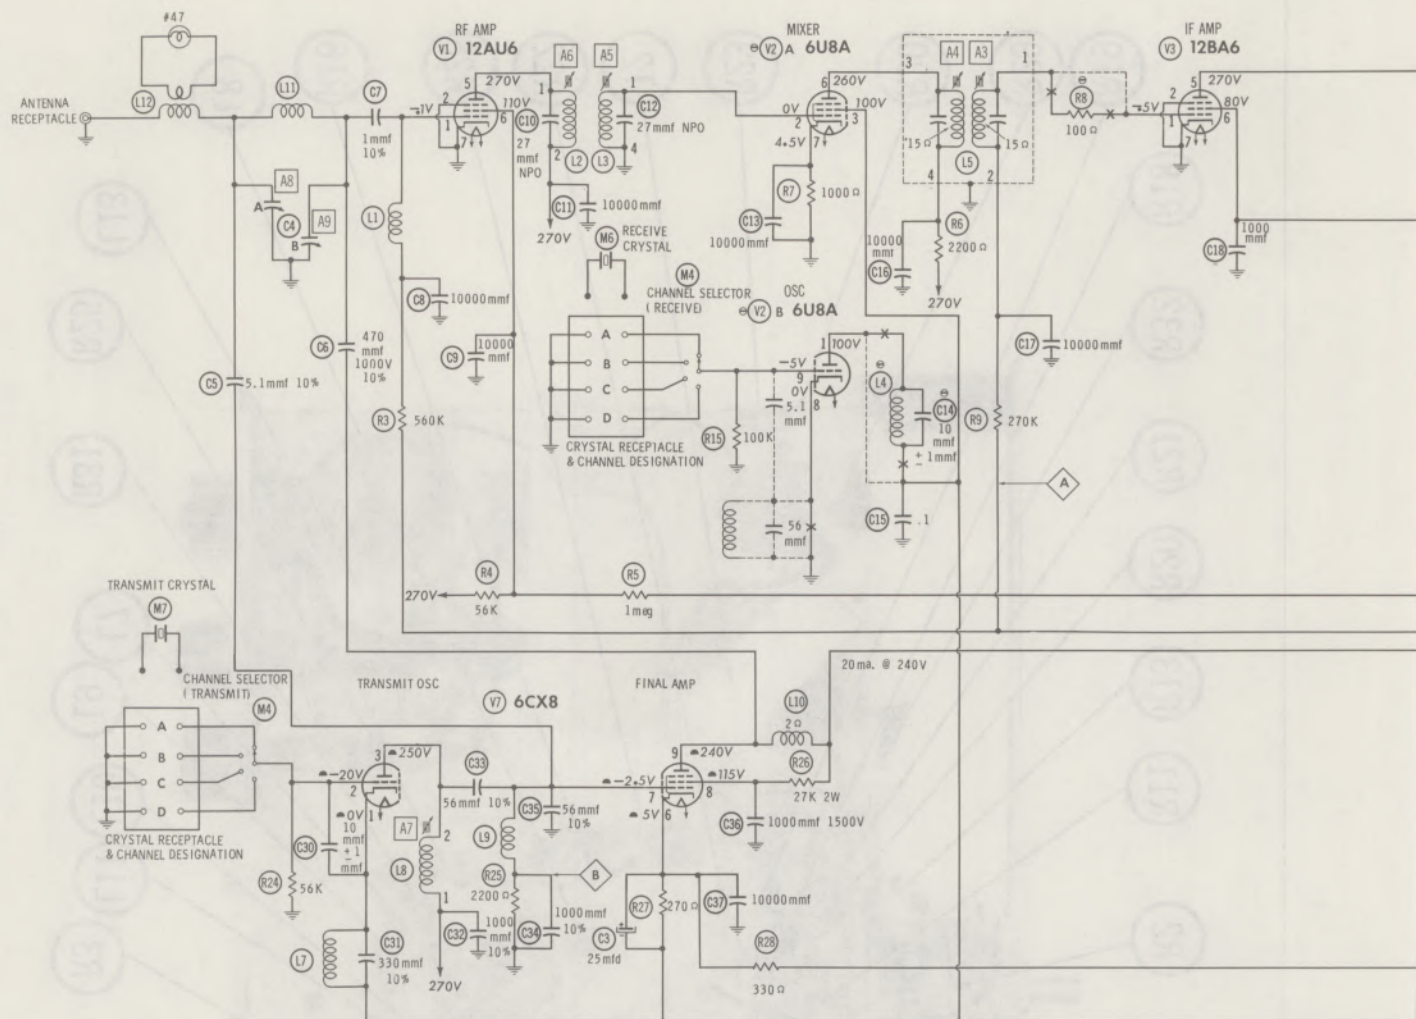

RESISTANCE READINGS

ITEM	TUBE	Pin 1	Pin 2	Pin 3	Pin 4	Pin 5	Pin 6	Pin 7	Pin 8	Pin 9
V1	12AU6	2.1 meg	0 Ω	0 Ω	.1 Ω	†200 Ω	†56 K	0 Ω		
V2	6U8A	†27 K	.1 Ω	†27 K	.1 Ω	.1 Ω	†2400 Ω	1000 Ω	0 Ω	100 K
V3	12BA6	1.5 meg	0 Ω	0 Ω	.1 Ω	†200 Ω	†56 K	0 Ω		
V4	6BJ7	0 Ω	550 K	0 Ω	.1 Ω	0 Ω	†2 meg	†1.1 meg	270 K	2.6 meg
V5	12CR6	0 Ω	NC	0 Ω	.1 Ω	†270 K	†1 meg	2.2 meg		
V6	12AQ5	560 K	470 Ω	0 Ω	.1 Ω	†460 Ω	†200 Ω	560 K		
V7	6CX8	≈0 Ω	56 K	≈†200 Ω	.1 Ω	.1 Ω	≈270 Ω	2200 Ω	†27 K	†460 Ω
V8	12X4	225 Ω	NC	.1 Ω	0 Ω	NC	210 Ω	†		


ALL MEASUREMENTS MADE IN "RECEIVE" POSITION UNLESS OTHERWISE DESIGNATED.

▲ MEASURED IN "TRANSMIT" POSITION.

† MEASURED FROM PIN 7 OF V8.

NC NO CONNECTION

† THIS READING WILL VARY DEPENDING UPON THE CONDITION OF THE ELECTROLYTIC IN THE CIRCUIT.

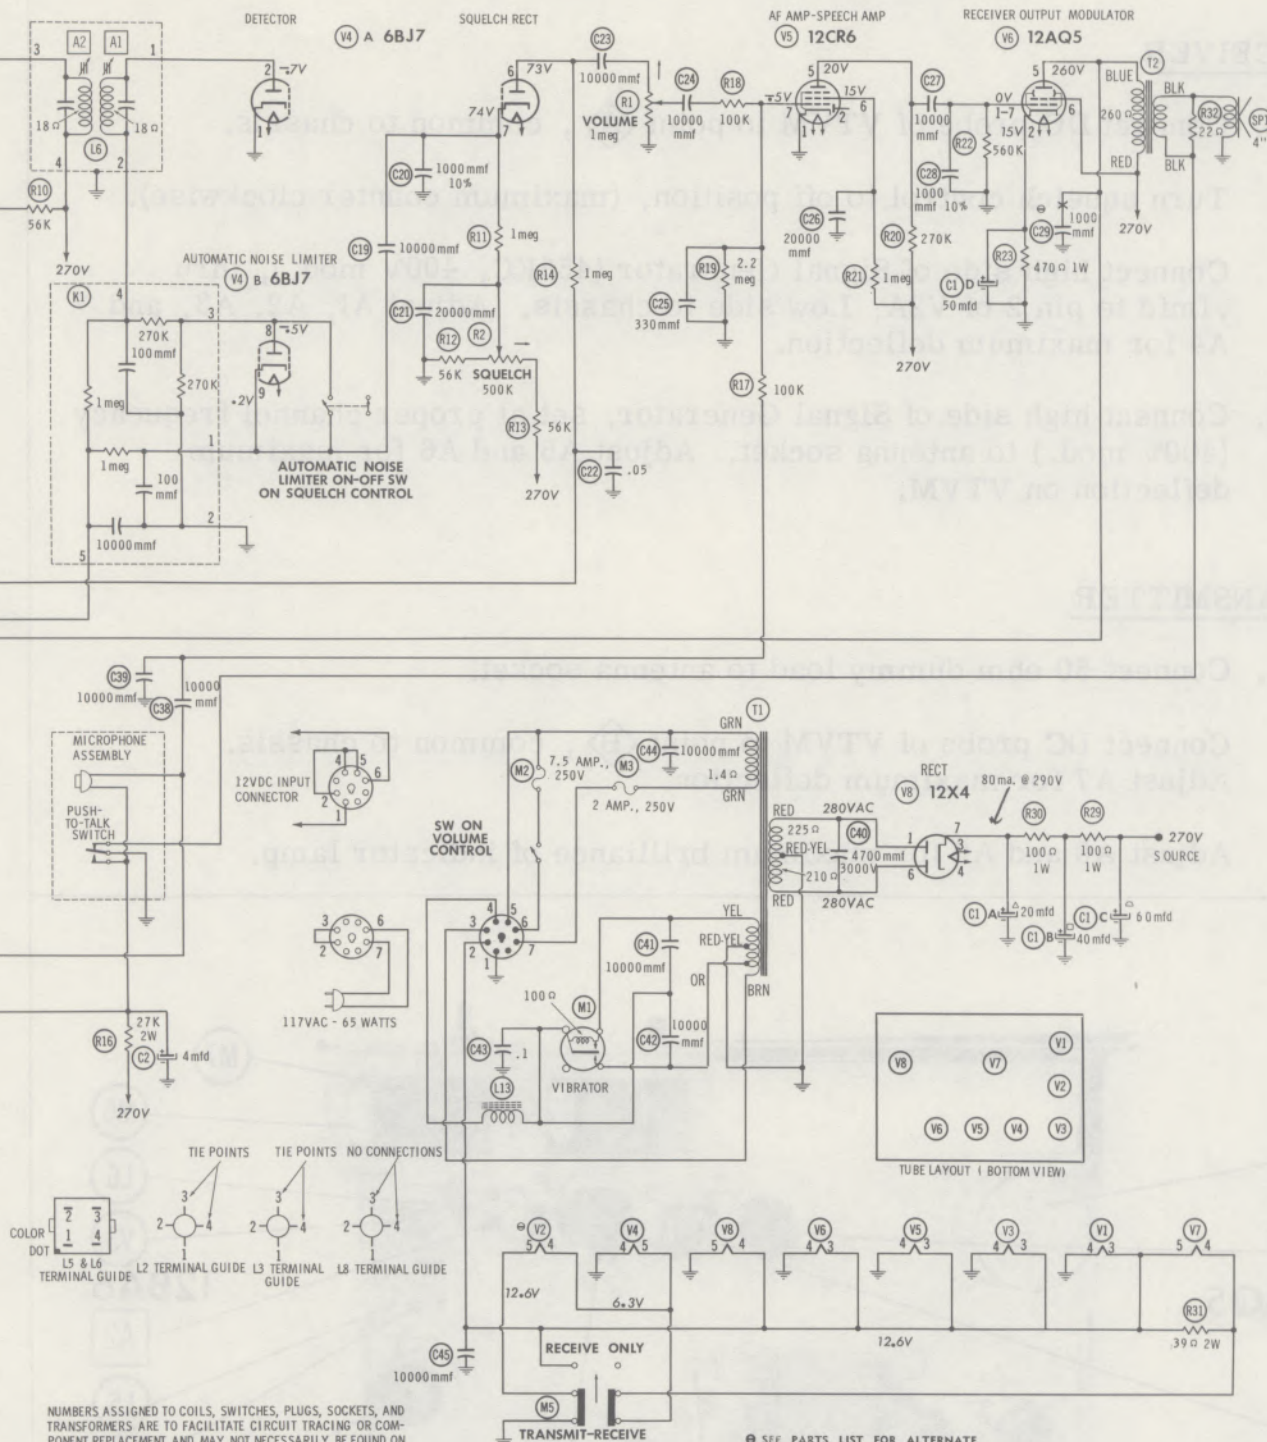

RAYTHEON MODEL
RAY-TEL (TWR-1)

ALIGNMENT INSTRUCTIONS

RECEIVER

1. Connect DC probe of VTVM to point **A**, common to chassis.

Turn squelch control to off position, (maximum counter clockwise).

Connect high side of Signal Generator (455KC, 400 μ mod.), thru .1mfd to pin 2 of V2A, Low side to chassis. Adjust A1, A2, A3, and A4 for maximum deflection.


2. Connect high side of Signal Generator, set at proper channel frequency (400 μ mod.) to antenna socket. Adjust A5 and A6 for maximum deflection on VTVM.

TRANSMITTER

1. Connect 50 ohm dummy load to antenna socket.

Connect DC probe of VTVM to point **B**, common to chassis. Adjust A7 for maximum deflection.

Adjust A8 and A9 for maximum brilliance of indicator lamp.

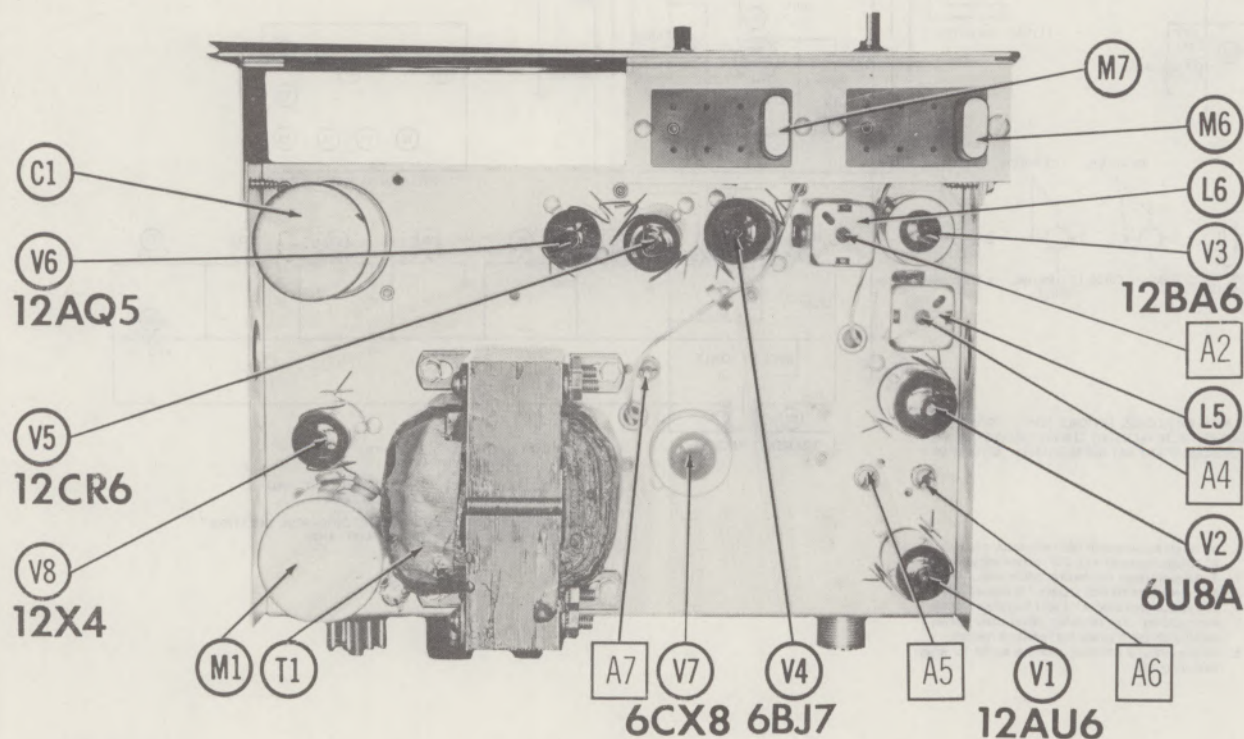

CHASSIS TOP VIEW

PARTS LIST AND DESCRIPTIONS

TUBES

GENERAL ELECTRIC				RAYTHEON				SYLVANIA			
ITEM No.	USE	TYPE	ITEM No.	USE	TYPE	ITEM No.	USE	TYPE	ITEM No.	USE	TYPE
V1	RF Amplifier	12AU6	V5	AF Amp, -Speech Amp.	12CR6	V6	Receiver Output-Modulator	12AQ5	V7	Trans. Osc. -Final Amp.	6CX8
V2	Mixer - Osc.	6UBA (618) *	V7	Trans. Osc. -Final Amp.	6CX8	V8	Rectifier	12X4			
V3	IF Amplifier	12BA6									
V4	Det. -ANL-Squelch Rect.	6BJ7									

* Alternate

ELECTROLYTIC CAPACITORS

REPLACEMENT DATA				REPLACEMENT DATA			
ITEM No.	RATING	RAYTHEON PART No.	CORNELL-DUBIER PART No.	RAYTHEON PART No.	PYRAMID PART No.	SPRAGUE PART No.	NOTES
C1A	420 300	AFH4-46	D0380	FP419, 7	TMQ-4140	TVL-4631	
C1B	420 300						
C1C	420 300						
C1D	50 25	PRSI400	BBB4-150	TT150X4	TD-4-150	TVA-1402	
C2	4 150	PRSI340	BBR25-50	TC36	TD-25-50	TVA-1306	
C3	25 50						

FIXED CAPACITORS

Capacity values given in the rating column are in mfd. for Paper Capacitors, and in mmfd. for Mica and Ceramic Capacitors.

REPLACEMENT DATA				REPLACEMENT DATA			
ITEM No.	RATING	REMARKS	AEROVOX PART No.	CENTRALAB PART No.	CORNELL-DUBIER PART No.	ELMENDO PART No.	SPRAGUE PART No.
C4A	5.1 10%	#461-466		TCZ-4R7	C10V5C	CCTO-050	10TCC-V50
C5	470 1000V 10%	#VCM20B471M	NPO-SI 1.0	TCZ-1	BYA10S1	VCM-20-471M	10TCC-V10
C6	1 10%		BPD-01	DD-103	BYA10S1	CCD-103	CNO-510
C7	10000		BPD-01	DD-103	BYA10S1	CCD-103	B-110
C8	10000		BPD-01	DD-103	BYA10S1	CCD-103	5HK-S10
C9	10000		BPD-01	DD-103	BYA10S1	CCD-103	5HK-S10
C10	27 NPO		BPD-01	DD-103	BYA10S1	CCD-103	5HK-S10
C11	10000		BPD-01	DD-103	BYA10S1	CCD-103	5HK-S10
C12	27 NPO		BPD-01	DD-103	BYA10S1	CCD-103	5HK-S10
C13	10000		BPD-01	DD-103	BYA10S1	CCD-103	5HK-S10
C14	10 1mmf	Note 1	NPO-SI 1.0	TCZ-10	C10Q3C	CCTO-100	10TCC-Q10
C15	1 200V		P288N-1	DF-104	CUBPPI	2DP-3-104	2TM-P10
C16	10000		BPD-01	DD-103	BYA10S1	CCD-103	5HK-S10
C17	10000		BPD-01	DD-103	BYA10S1	CCD-103	5HK-S10
C18	10000		BPD-01	DD-103	BYA10S1	CCD-103	5HK-S10
C19	10000		BPD-01	DD-103	BYA10S1	CCD-103	5HK-S10
C20	1000 10%		BPD-01	DD-103	BYA10S1	CCD-103	5HK-S10
C21	20000		BPD-01	DD-103	BYA10S1	CCD-103	5HK-S10
C22	.05 200V		P288N-05	DD-103	CUBPPI	2DP-3-104	2TM-P10
C23	10000		BPD-01	DD-103	BYA10S1	CCD-103	5HK-S10
C24	10000		BPD-01	DD-103	BYA10S1	CCD-103	5HK-S10
C25	330		DI-331	DD-103	BYA10S1	CCD-103	5HK-S10
C26	20000		BPD-02	DD-103	BYB6S2	CCD-203	5HK-S20
C27	10000		BPD-01	DD-103	BYA10S1	CCD-103	5HK-S10
C28	1000 10%		BPD-01	DD-103	BYA10S1	CCD-103	5HK-S10
C29	1000		BPD-01	DD-103	BYA10S1	CCD-103	5HK-S10
C30	10 1mmf		NPO-SI 1.0	TCZ-10	C10Q3C	CCTO-100	10TCC-Q10
C31	330 10%		DI-330	DD-103	BYA10S1	CCD-103	5HK-S10
C32	1000 10%		DI-1000	DD-103	BYA10S1	CCD-103	5HK-S10
C33	56 10%		NPO-SI 56	DD-103	BYA10S1	CCD-103	5HK-S10
C34	1000 10%		NPO-SI 56	DD-103	BYA10S1	CCD-103	5HK-S10
C35	56 10%		NPO-SI 56	DD-103	BYA10S1	CCD-103	5HK-S10
C36	1000 1500V		HYD15-1000	DD30-102	HYD15D1	3CCD-102	30CA-D10
C37	10000		BPD-01	DD-103	BYA10S1	CCD-103	5HK-S10
C38	10000		BPD-01	DD-103	BYA10S1	CCD-103	5HK-S10
C39	10000		BPD-01	DD-103	BYA10S1	CCD-103	5HK-S10
C40	4700 3000V		BPD-01	DD30-472	BYA10S1	3CCD-502	30CA-D10
C41	10000		BPD-01	DD-103	BYA10S1	CCD-103	5HK-S10

FIXED CAPACITORS (cont)

REPLACEMENT DATA				REPLACEMENT DATA			
ITEM No.	RATING	REMARKS	AEROVOX PART No.	CENTRALAB PART No.	CORNELL-DUBIER PART No.	ELMENDO PART No.	SPRAGUE PART No.
C42	10000		BPD-01	DD-103	BYA10S1	CCD-103	5HK-S10
C43	1 200V		P288N-1	DF-104	CUBPPI	2DP-3-104	2TM-P10
C44	10000		BPD-01	DD-103	BYA10S1	CCD-103	5HK-S10
C45	10000		BPD-01	DD-103	BYA10S1	CCD-103	5HK-S10

* Raytheon Part Number.
Note 1. Not used in some versions.

CONTROLS

REPLACEMENT DATA				REPLACEMENT DATA			
ITEM No.	RATING	RAYTHEON PART No.	CENTRALAB PART No.	CLAROSTAT PART No.	CTS-IRC PART No.	MALLORY PART No.	INSTALLATION NOTES
R1A	Imeg	G-45	B-70-S	A47-Imeg-S	Q13-137	U53	Volume
R1B	Shift		Not Req.	FS-3	Not Req.	Not Req.	Power Off-On
R1C	Switch		Not Req.	SWE-12	76-1	US-26	Squelch
R2A	500K	VF-45	B-59	A47-500K-S	Q11-133	U50	
R2B	Shift		Not Req.	FS-3	Not Req.	Not Req.	
R2C	Switch		Not Req.	SWE-20	76-2	US-27	ANL Off-On

RESISTORS

All wattages 1/2 watt, or less, unless otherwise listed.

REPLACEMENT DATA				REPLACEMENT DATA			
ITEM No.	RATING	RAYTHEON PART No.	WORKMAN TV PART No.	ITEM No.	RATING	WORKMAN TV PART No.	REMARKS
R3	560K			R18	100K		
R4	56K			R19	2.2meg		
R5	Imeg			R20	270K		
R6	2200Q			R21	Imeg		
R7	1000Q			R22	560K		
R8	100K			R23	470Q 1W		
R9	270K			R24	56K		
R10	56K			R25	2200Q		
R11	Imeg			R26	27K 2W		
R12	56K			R27	270Q		
R13	56K			R28	330Q		
R14	Imeg			R29	100Q 1W		
R15	100K			R30	100Q 2W		
R16	27K 2W			R31	39Q 2W		
R17	100K			R32	22Q		

Note 1. Not used in some versions.

COILS (RF-IF)

ITEM No.	USE	REPLACEMENT DATA					NOTES
		RAYTHEON PART No.	Merit PART No.	Miller PART No.	Stancor PART No.	Workman TV PART No.	
L1	RF Choke (5.6uh)	TL-70	SW-631	4609	RTC-8519	T959	① Not used in some versions.
L2	RF Pri	TL-91	TV-118	6171-A	RTC-8609	T216	
L3	RF Sec	TL-91	TV-118	6171-A	RTC-8609	T216	
L4	RF Choke (1.5uh)	TL-69 ①	BC-562	4604	RTC-8516	T856	
L5	Input IF	TL-34	BC-352	12-C1	RTC-8632	T807	
L6	Output IF	TL-35	BC-353	12-C2	RTC-8633	T808	
L7	RF Choke (5.6uh)	TL-70	SW-631	4609	RTC-8519	T959	
L8	Osc. Plate	TL-91	TV-118	6171-A	RTC-8609	T216	
L9	RF Choke (5.6uh)	TL-70	SW-631	4609	RTC-8519	T959	
L10	RF Choke (15uh)	TL-69	SW-631	4609	RTC-8519	T959	
L11	Final Plate	TL-93	TL-93	4624	RTC-8524	T862	
L12	Ant. Loading	TL-92					
L13	Hash Choke (46uh)	TL-72		7825-8			

PARTS LIST AND DESCRIPTIONS (Continued)

TRANSFORMER (POWER)

ITEM No.	RATING		REPLACEMENT DATA			NOTES
	PRI.	SEC. 1	RAYTHEON PART No.	Stancor PART No.	Triad PART No.	
T1	117V @ 6A (AC) 12.6VCT @ 3A (DC)	12.6V @ 1.6A (AC)	ST-102			

TRANSFORMER (AUDIO OUTPUT)

ITEM No.	IMPEDANCE		REPLACEMENT DATA			NOTES
	PRI.	SEC.	RAYTHEON PART No.	Stancor PART No.	Triad PART No.	
T2	6200Ω	3-4Ω	ST-19	24S05	S-63X	

SPEAKER

ITEM No.	TYPE		REPLACEMENT DATA		NOTES
	SIZE	FIELD	RAYTHEON PART No.	QUAM PART No.	
SP1	4"	PM	P4VA-NW	4A1	

COMPONENT COMBINATIONS

ITEM No.	USE	DESCRIPTION	RAYTHEON PART No.	REPLACEMENT DATA
K1		ANL-Squelch Network	(2) 100mmf, 10000mmf, (2) 270K, (2) 1meg	59-4719

VIBRATOR

ITEM No.	TYPE	INPUT VOLTS	FREQUENCY	REPLACEMENT DATA			NOTES
				RAYTHEON PART No.	CORNELL-DUBILIER PART No.	MALLORY PART No.	
M1	Interrupter	12.6	115%	G-1601	6301	G1601	6301

FUSES

ITEM No.	TYPE	RATING	REPLACEMENT DATA			
			RAYTHEON PART No.	HOLDER	LITTELFUSE PART No.	BUSS PART No.
M2	3AG	7.5A 250V	AGC 7½		31207.5 (3AG 7½A 250V)	AGC 7½
M3	3AG	2A 250V	AGC 2		312003 (3AG 2A 250V)	AGC 2

MISCELLANEOUS

ITEM No.	PART NAME	RAYTHEON PART No.	NOTES
M4	Switch	F-49	Channel Selector (Rotary Wafar)
M5	Switch	SW-726	Receive-Transmit (DPDT Slide Type)
M6	Crystal		Receive
M7	Crystal		Transmit

CABINETS & CABINET PARTS

(When Ordering Cabinets & Cabinet Parts, Specify Model, Chassis & Color)

NAME	PART NO.	DESCRIPTION
Lens Knob	147-10	Clear Lucite
Knob	101TB270	Channel Selector
Knob	105P-T3270	Volume, Squelch

WIRING DATA

General-use Unshielded Hook-up Wire Use BELDEN No. 8530 (Solid) Available in Ten Colors
8524 (Stranded) Available in Ten Colors
Power Cord Use BELDEN No. 1765-B (6 Ft. Length)
1725-K (7½ Ft. Length)



TRADE NAME	RCA Model CRM-P2B-5 (MI-555528, 6 Volt) (MI-555529, 12 Volt)
MANUFACTURER	Radio Corp. of America, Communication Products Dept., Radiomarine Marketing, Camden, N. J.
TYPE SET	AC - Battery Operated 7 Tube Crystal Controlled Citizens Band Transmitter-Receiver
POWER SUPPLY	110 - 120 Volts AC, 60 Cycles (or) 12 Volt Storage Battery (some versions operate on 110-120 volts AC, 60 cycles (or) 6 volt storage battery)
RATING	52 Watts, .5 Amp. @117 Volts AC (or) 3.2 Amp. @12.6 Volts DC
FREQ. RANGE	Any one of Citizens Band Channels 1 thru 23 (Receiver is tunable if crystal is removed)

NOTICE

ONLY THOSE PERSONS PROPERLY LICENSED BY FCC ARE PERMITTED TO MAKE CRYSTAL SUBSTITUTION OR EFFECT REPAIRS ON THE TRANSMITTER PORTION OF THIS UNIT.

ALIGNMENT INSTRUCTIONS

RECEIVER

Turn squelch control to maximum counter-clockwise position.

1. Connect DC probe of VTVM to point $\diamond$, common to chassis.

Connect high side of Signal Generator (1650KC, 400v Mod.) thru .001mfd to pin 7 of V2, low side to chassis. Adjust A1, A2, A3, A4, A5 and A6 for maximum deflection.

2. Connect high side of Signal Generator to antenna socket, low side to chassis. Adjust for proper channel frequency (400v Mod.). Adjust A7 for maximum deflection.

Remove receiver oscillator crystal.

3. Set Signal Generator to channel 1 (26.965mc). Set tuning capacitor (M7) for maximum capacitance. Adjust A8 for maximum deflection. Check to see if

the tuning range covers all 22 channels, if not, make compromise adjustment of A8.

TRANSMITTER

1. Connect DC probe of VTVM through 100K to point $\diamond$, low side to chassis. With the antenna disconnected, adjust A9 for maximum deflection.

Adjust A10 for minimum plate current.

Adjust A11 to approximately 3/4 of maximum capacity.

The voltage at point $\diamond$ should be noted when A10 is tuned through resonance. Adjust A12 for minimum variation in grid voltage with the tuning of A10. When properly neutralized, the variation should not cause the grid voltage to be less than -5 volts.

Connect antenna, readjust A10 for minimum plate current. Readjust A9 to set transmitter exactly on frequency.





HOWARD W. SAMS & CO., INC. Indianapolis 6, Indiana



The listing of any available replacement part herein does not constitute in any case a recommendation, warranty or guaranty by Howard W. Sams & Co., Inc., as to the quality and suitability of such replacement part. The numbers of these parts have been compiled from information furnished to Howard W. Sams & Co., Inc., by the manufacturers of KZ546

the particular type of replacement part listed. Reproduction or use, without express permission, of editorial or pictorial content, in any manner, is prohibited. No patent liability is assumed with respect to the use of the information contained herein. © 1961 Howard W. Sams & Co., Inc., Indianapolis 6, Indiana. Printed in U.S. of America

RCA MODEL CRM-P2B-5
(MI-555528, MI-555529)

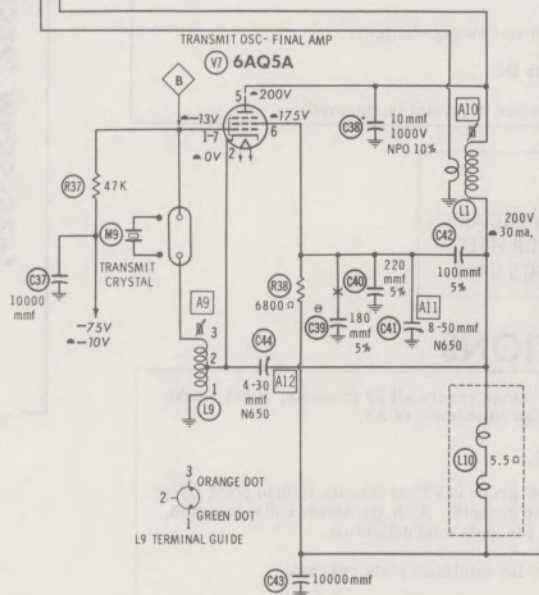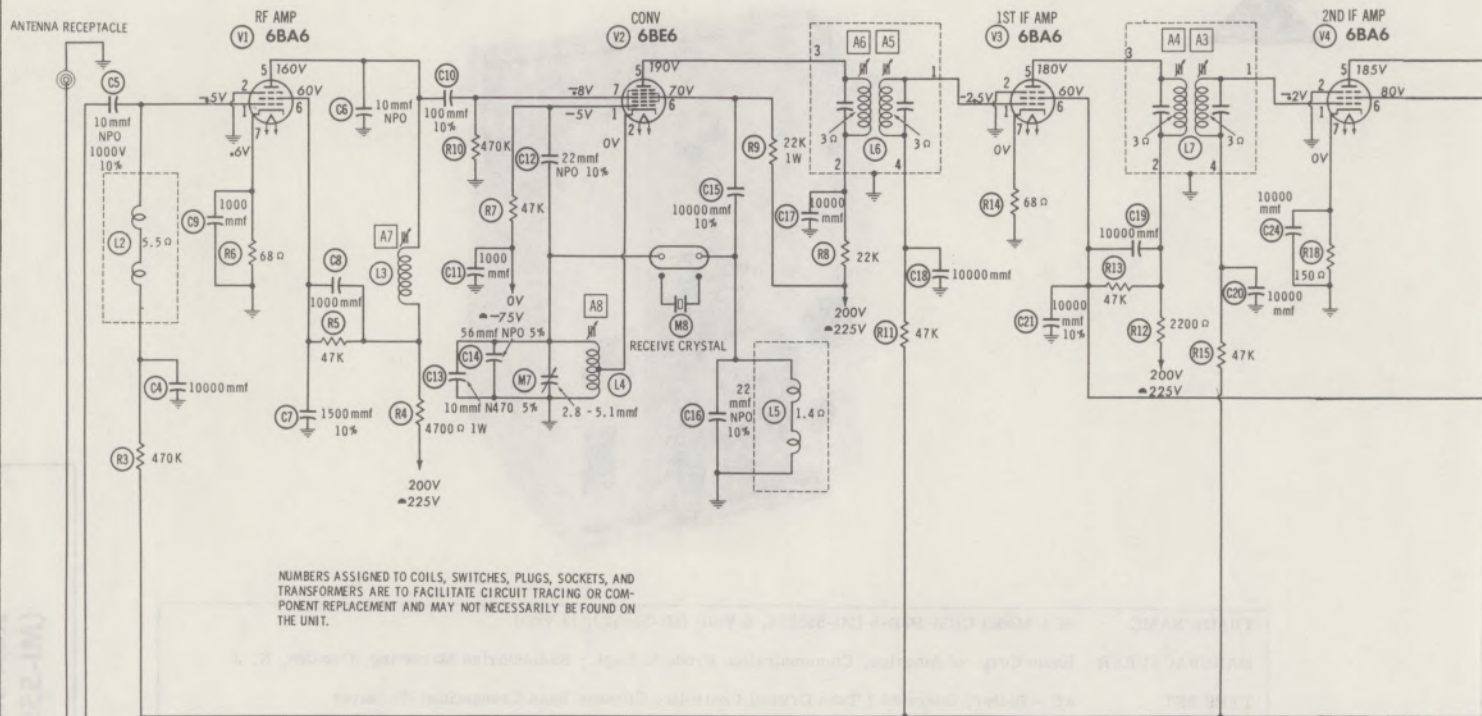

RESISTANCE READINGS

ITEM	TUBE	Pin 1	Pin 2	Pin 3	Pin 4	Pin 5	Pin 6	Pin 7	Pin 8	Pin 9
V1	6BA6	3meg	0Ω	0Ω	.1Ω	†5900Ω	†53K	68Ω		
V2	6BE6	47K	0Ω	0Ω	.1Ω	†23K	†23K	470K		
V3	6BA6	2.7meg	0Ω	0Ω	.1Ω	†3400Ω	†50K	68Ω		
V4	6BA6	2.7meg	0Ω	0Ω	.1Ω	†3400Ω	†50K	150Ω		
V5	6BA	500K	240K	NC	.1Ω	.1Ω	1.3meg	0Ω	9.5meg	†470K
V6	6AQ5A	NC	330Ω	.1Ω	.1Ω	†400Ω	†1200Ω	470K		
V7	6AQ5A	†70K	.1Ω	.1Ω	.1Ω	†1400Ω	†7800Ω	NC		

ALL MEASUREMENTS MADE IN "RECEIVE" POSITION UNLESS OTHERWISE DESIGNATED.
 † MEASURED IN "TRANSMIT" POSITION.
 ‡ MEASURED FROM OUTPUT OF M2.


NC NO CONNECTION

⊗ SEE PARTS LIST FOR ALTERNATE
VALUE OR APPLICATION


DC COIL RESISTANCE VALUES UNDER ONE OHM
NOT SHOWN ON SCHEMATIC DIAGRAM

ARROWS ON CONTROLS INDICATE CLOCKWISE ROTATION
(CONTROL VIEWED FROM SHAFT END)


- DC voltage measurements taken with vacuum tube voltmeter; AC voltages measured with 1000 ohm per volt voltmeter.
- Socket connections are shown as bottom views.
- Measured values are from socket pin to common ground.
- Line voltage maintained at 117 volts for voltage readings.
- Nominal tolerance on component values makes possible a variation of ±15% in voltage and resistance readings.
- Volume control at maximum, no signal applied for voltage measurements.

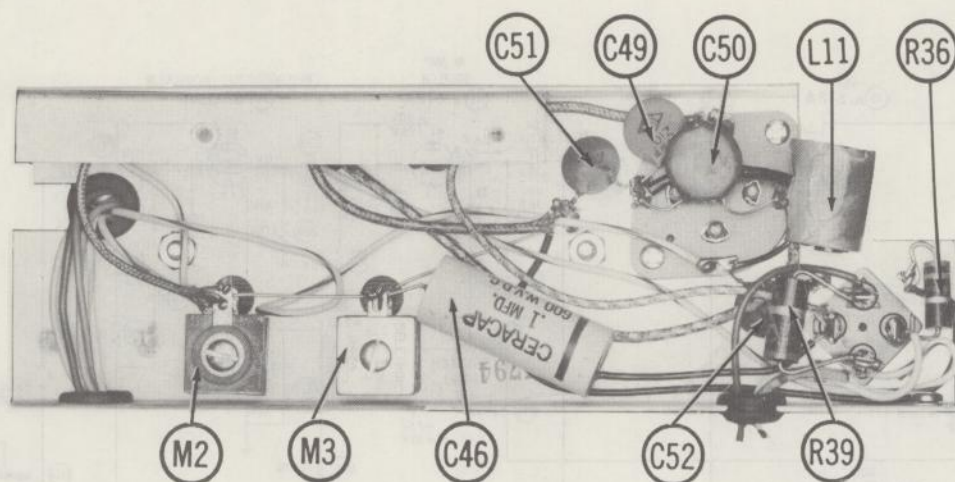


VIBRATOR CHASSIS-BOTTOM VIEW

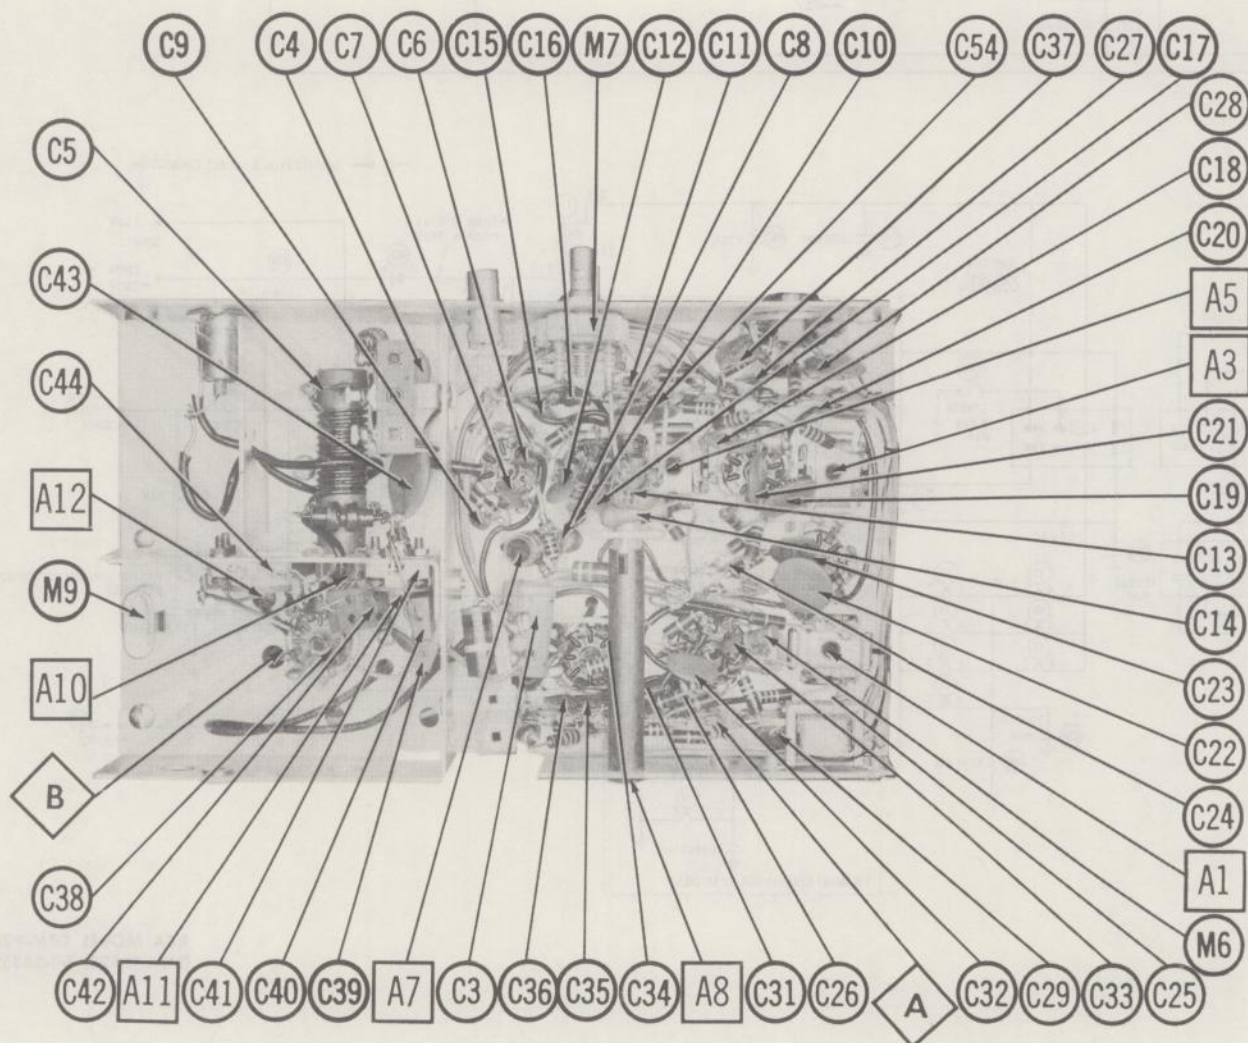


CHASSIS BOTTOM VIEW-ALIGN., CAP. & MISC. IDENT.

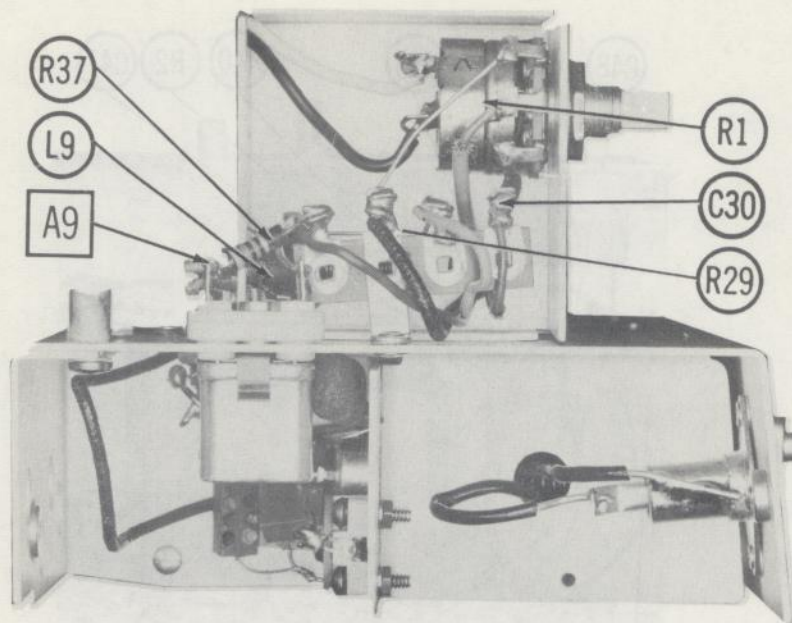


CHASSIS-END VIEW

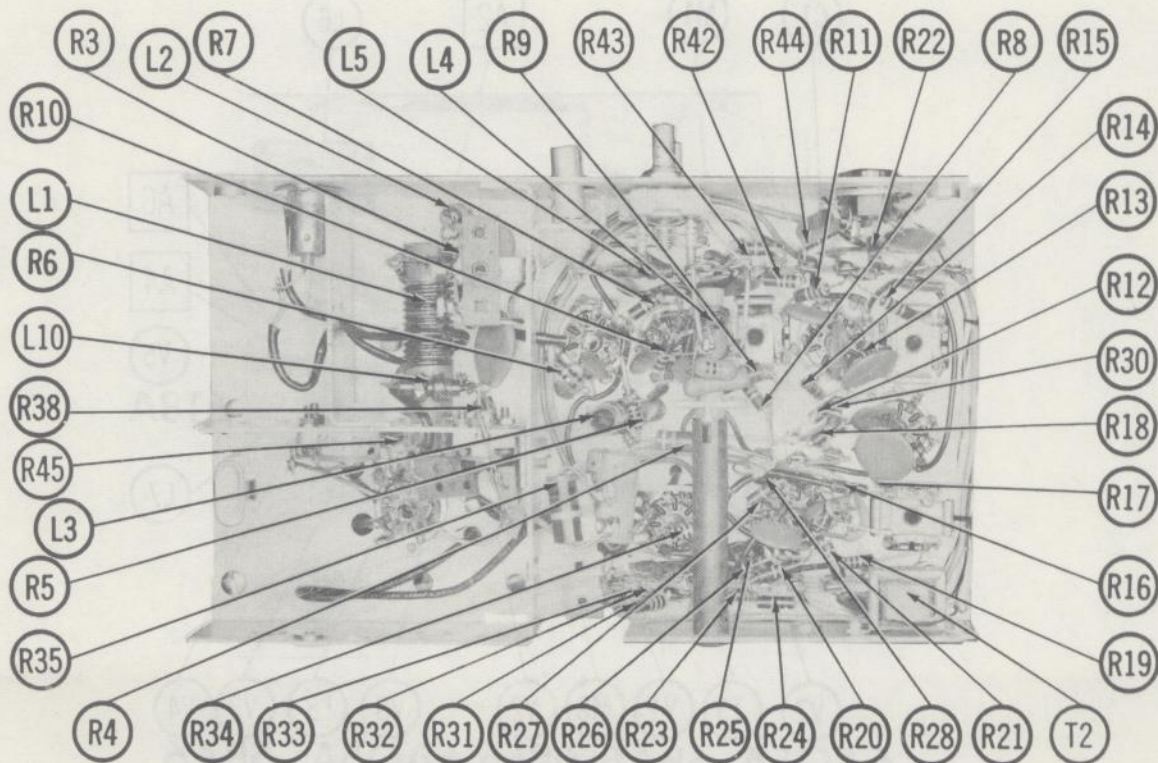

CHASSIS BOTTOM VIEW-RESISTOR & INDUCTOR IDENT.

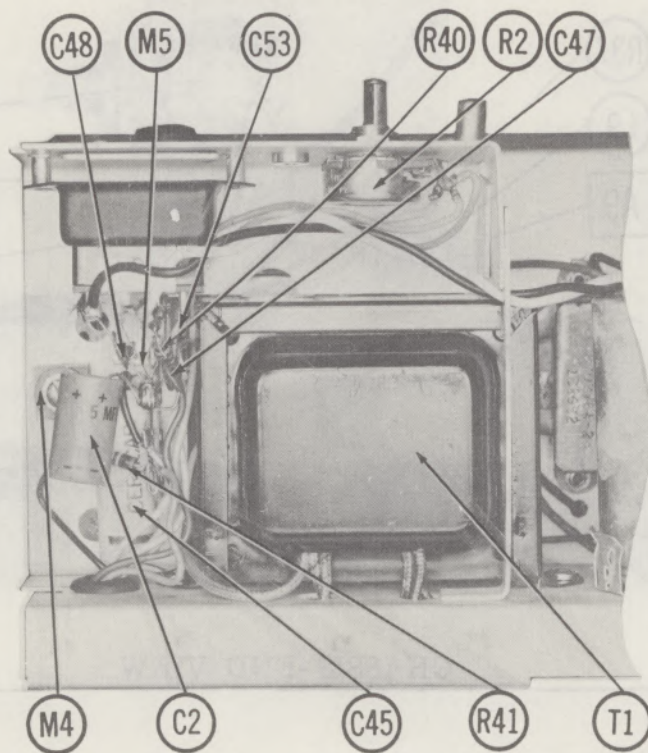

POWER CHASSIS-BOTTOM VIEW

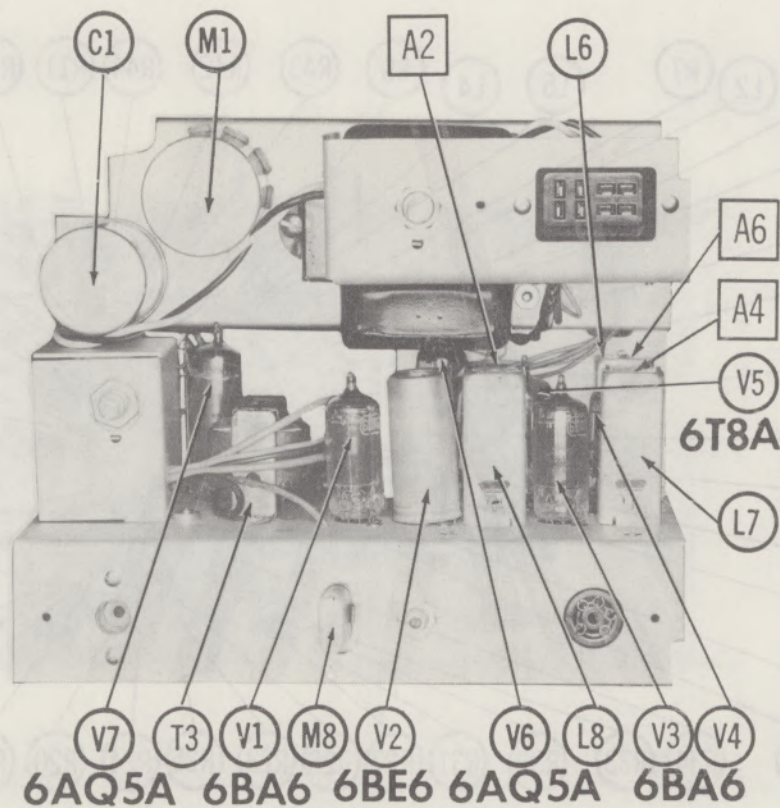

CHASSIS-TOP VIEW

PARTS LIST AND DESCRIPTIONS

TUBES

• GENERAL ELECTRIC •		• RAYTHEON •		• SYLVANIA •	
ITEM No.	USE	TYPE		ITEM No.	USE
V1	RF Amplifier	6BA6		V5	Det.-Squelch-AF Amp. - Noise Limiter
V2	Converter	6BE6			
V3	1st IF Amplifier	6BA6			
V4	2nd IF Amplifier	6BA6			
				V6	Rec. Output-Modulator
				V7	Trans. Osc. -Final Amp.

ELECTROLYTIC CAPACITORS

ITEM No.	RATING		REMARKS	REPLACEMENT DATA		NOTES
	CAP.	VOLT.		CORNELL-DUBIER PART No.	PYRAMID PART No.	
C1A	20	350		AFH4-04	TMQ-4295	TVA-4635
C1B	40	350				
C1C	20	350				
C1D	10	350				
C2	5	150				
C3	5	150				

FIXED CAPACITORS

Capacity values given in the rating column are in mfd. for Paper Capacitors, and in mmfd. for Mica and Ceramic Capacitors.

ITEM No.	RATING		REMARKS	REPLACEMENT DATA		SPRAGUE PART No.
	CAP.	VOLT.		CORNELL-DUBIER PART No.	ELMENDO PART No.	
C4	10000					
C5	10 1000V 10% NPO					
C6	10 NPO					
C7	1500 10%					
C8	1500 10%					
C9	1000					
C10	1000 10%					
C11	22 NPO 10%					
C12	10 N470 5%					
C13	56 NPO 5%					
C14	10000 10%					
C15	22 NPO 10%					
C16	10000 10%					
C17	10000					
C18	10000					
C19	10000					
C20	10000					
C21	10000 10%					
C22	10000					
C23	2700 10%					
C24	10000					
C25	100 10%					
C26	100 10%					
C27	50000					
C28	100000					
C29	10000					
C30	1000					
C31	3000 10%					
C32	10000					
C33	100 10%					
C34	1000 10%					
C35	47 10%					
C36	680 10%					
C37	10000					
C38	10 1000V NPO 10%					
C39	180 5%					
C40	220 5%					
C41	8-50 N650					
C42	100 5%					
C43	10000					
C44	4-30 N650					
C45	1 400V					
C46	1 600V					

FIXED CAPACITORS (cont)

ITEM No.	RATING	REMARKS	REPLACEMENT DATA				
			AEROVOX PART No.	CENTRALAB PART No.	CORNELL-DUBIER PART No.	ELMENDO PART No.	SPRAGUE PART No.
C47	1000		BPD-001	DD-102	BYA10D1	CCD-102	5HK-D10
C48	1000		BPD-001	DD-102	BYA10D1	CCD-102	5HK-D10
C49	10000		BPD-01	DD-103	BYA10S1	CCD-103	5HK-S10
C50	100000			DDA-104	H-05P1	IDP-2-104	TG-P10
C51	20000		BPD-02	DD-203	BYBBS2	CCD-203	5HK-S20
C52	20000		BPD-02	DD-203	BYBBS2	CCD-203	5HK-S20
C53	100000			DDA-104	H-05P1	IDP-2-104	TG-P10
C54	100000			DDA-104	H-05P1	IDP-2-104	TG-P10

Note 1. Not used in some versions.

* Not normally in distributor's stock. Available thru distributor on order to manufacturer.

CONTROLS

ITEM No.	RATING	REMARKS	REPLACEMENT DATA				
			RCA PART No.	CENTRALAB PART No.	CLAROSTAT PART No.	CTS-IRC PART No.	MALLORY PART No.
R1A	2meg						
B	Shunt						
C	Switch						
R2A	3meg						
B	Shunt						

RESISTORS

All wattages 1/2 watt, or less, unless otherwise listed.

ITEM No.	RATING	REMARKS	REPLACEMENT DATA		ITEM No.	RATING	REPLACEMENT DATA	
			IRC PART No.	WORKMAN TV PART No.			IRC PART No.	WORKMAN TV PART No.
R3	470K				R25	10meg		
R4	47000 1W				R26	8.2meg		
R5	47K				R27	470K		
R6	58K				R28	470K		
R7	22K				R29	470K		
R8	22K 1W				R30	470K		
R9	470K				R31	680K		
R10	47K				R32	220K		
R11	47K				R33	220K		
R12	22000				R34	470K		
R13	47K				R35	10000 2W		
R14	68K				R36	3300 1W		
R15	47K				R37	47K		
R16	22000				R38	68000 2W		
R17	47K				R39	12000 2W		
R18	1500				R40	470K		
R19	47K				R41	100K		
R20	220K				R42	470K		
R21	240K				R43	1meg		
R22	10K				R44	22K		
R23	680K				R45	400 3W		
R24	2.2meg							

COILS (RF-IF)

ITEM No.	USE	REPLACEMENT DATA			NOTES
		RCA PART No.	Miller PART No.	Stancor PART No.	
L1	Ant.				
L2	RF Choke (100uh)				
L3	RF Rec. Osc.				
L4	RF Choke (10uh)				
L5	1st IF				
L6	2nd IF				
L7					

PARTS LIST AND DESCRIPTIONS (Continued)

COILS (RF-IF) (cont)

ITEM No.	USE	REPLACEMENT DATA				NOTES
		RCA PART No.	Merit PART No.	Miller PART No.	Stancor PART No.	Workman TV PART No.
L8	3rd IF					
L9	Trans. Osc.					
L10	RF Choke (100uh)		6112		RTC-9574	T305
L11	Hash Choke (27uh)		BC-537	5220	RTC-9182	T960

TRANSFORMER (POWER)

ITEM No.	RATING	REPLACEMENT DATA				NOTES
		RCA PART No.	Merit PART No.	Stancor PART No.	Thordarson PART No.	Triad PART No.
T1	PRL 117V @ 12.6VCT 5A @ 1.2A (AC Only) AC 12.6VCT @ 2A (DC Only)					

TRANSFORMER (MIC)

ITEM No.	TURNS RATIO	REPLACEMENT DATA				NOTES
		RCA PART No.	Merit PART No.	Stancor PART No.	Thordarson PART No.	Triad PART No.
T2	PRL 1 SEC. 37					

TRANSFORMER (AUDIO OUTPUT)

ITEM No.	IMPEDANCE	REPLACEMENT DATA				NOTES
		RCA PART No.	Merit PART No.	Stancor PART No.	Thordarson PART No.	Triad PART No.
T3	PRL 15K Tap @ 3-4Ω SEC. 7300Ω					

SPEAKER

ITEM No.	TYPE		REPLACEMENT DATA		NOTES
	SIZE	FIELD	V. C. IMP.	QUAM PART No.	
SP1	2½"	PM	3-4Ω	8702750-1	25A07

Auxiliary Speakers:
Bulkhead Mounting Re-entrant Part #MI-6317-D4
Adjustable Mounting Re-entrant 8½" Part #MI-14859-4
Adjustable Mounting Re-entrant 6 3/8" Part #MI-555504
Universal Mounting Mobile Part #MI-17462

VIBRATOR

ITEM No.	TYPE	INPUT VOLTS	FREQUENCY	REPLACEMENT DATA			NOTES
				RCA PART No.	CORNEILL-DUBILIER PART No.	MALLOY PART No.	
M1	Interrupter	12.6	115%		6301	G-1601	12V Versions
	Interrupter	6.3	115%		5301	1601	6 V Versions

POWER RECTIFIERS

ITEM No.	CURRENT (Measured)	REPLACEMENT DATA				NOTES
		RCA PART No.	RCA PART No.	SARKES TARZIAN PART No.	SYLVANIA PART No.	
M2	.060A			65 ↑	SR200 *	* Silicon
M3	.060A			65 ↑	SR200 *	↑ Selenium
M4	.001A			Model 10 ↑		

FUSES

ITEM No.	TYPE	RATING	REPLACEMENT DATA			
			RCA PART No.	LITTELFUSE PART No.	FUSE HOLDER	BUSS PART No.
M5	2" Length of #28 Wire	3AG 10A *				
		250V				
		3AG 5A ↑				
		250V				

* 8 V Versions. ↑ 12 V Versions.

SIGNAL DIODES


ITEM No.	ORIG. TYPE	REPLACEMENT DATA				NOTES
		RCA PART No.	GENERAL ELECTRIC PART No.	RAYTHEON PART No.	SYLVANIA PART No.	
M6						ANL Detector

MISCELLANEOUS

ITEM No.	PART NAME	RCA PART No.	NOTES
M7	Variable Capacitor		
M8	Crystal		Receiver Osc. Tuning (2.8-5.1mmf)
M9	Crystal		Reactive (Order Desired Frequency)
M10	Switch		Transmit (Order Desired Frequency)

WIRING DATA

General-use Unshielded Hook-up Wire	 Use BELDEN No. 8530 (Solid) Available in Ten Colors
Power Cord	 Use BELDEN No. 1765-B (6 Ft. Length)
	 Use BELDEN No. 1725-K (7½ Ft. Length)

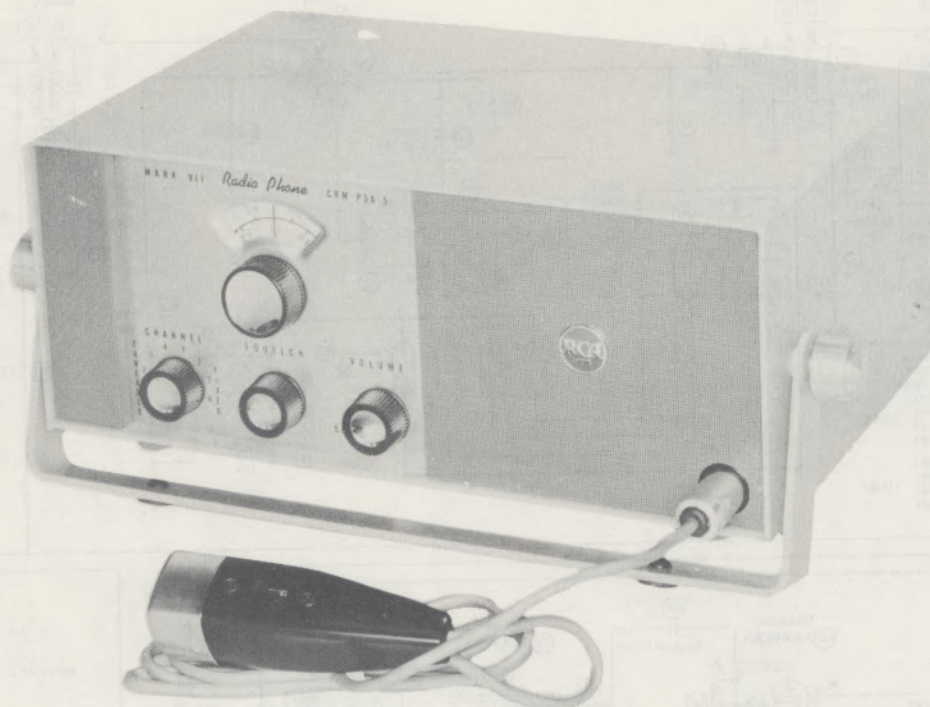

RCA MODEL
CRM-P3A-5

TRADE NAME	RCA Model Mark VII Radio Phone CRM-P3A-5 (AC-6 Volt Models MI-555565-1, -2, -3, -4) (AC-12 Volt Models MI-555566-1, -2, -3, -4)
MANUFACTURER	Radio Corp. of America, Communication Products Dept., Radiomarine Marketing, Camden, N. J.
TYPE SET	AC-Battery Operated 7 Tube Crystal Controlled Citizens Band Transmitter-Receive
POWER SUPPLY	110 - 120 Volts AC, 60 Cycles/6 Volt Storage Battery (or) 110-120 Volts AC, 60 Cycles/12 Volt Storage Battery
RATING	7.4 Amp. @6.3 Volts DC (Receive), 9 Amp. @6.3 Volts DC (Transmit) Or 3.7 Amp. @12.6 Volts DC (Receive), 4.5 Amp. @12.6 Volts DC (Transmit) Or 52 Watts, .5 Amp. @117 Volts AC
FREQ. RANGE	Any 4 of Citizens Band Channels 1 thru 23 Receiver is continuously tuneable when channel switch is in one of the "Tuneable" Channel positions.

NOTICE



ONLY THOSE PERSONS PROPERLY LICENSED BY FCC ARE PERMITTED TO MAKE CRYSTAL SUBSTITUTION OR EFFECT REPAIRS ON THE TRANSMITTER PORTION OF THIS UNIT.

HOWARD W. SAMS & CO., INC. Indianapolis 6, Indiana






The listing of any available replacement part herein does not constitute in any case a recommendation, warranty or guaranty by Howard W. Sams & Co., Inc., as to the quality and suitability of such replacement part. The numbers of these parts have been compiled from information furnished to Howard W. Sams & Co., Inc., by the manufacturers of KZ514


the particular type of replacement part listed. Reproduction or use, without express permission, of editorial or pictorial content, in any manner, is prohibited. No patent liability is assumed with respect to the use of the information contained herein. © 1961 Howard W. Sams & Co., Inc., Indianapolis 6, Indiana. Printed in U.S. of America

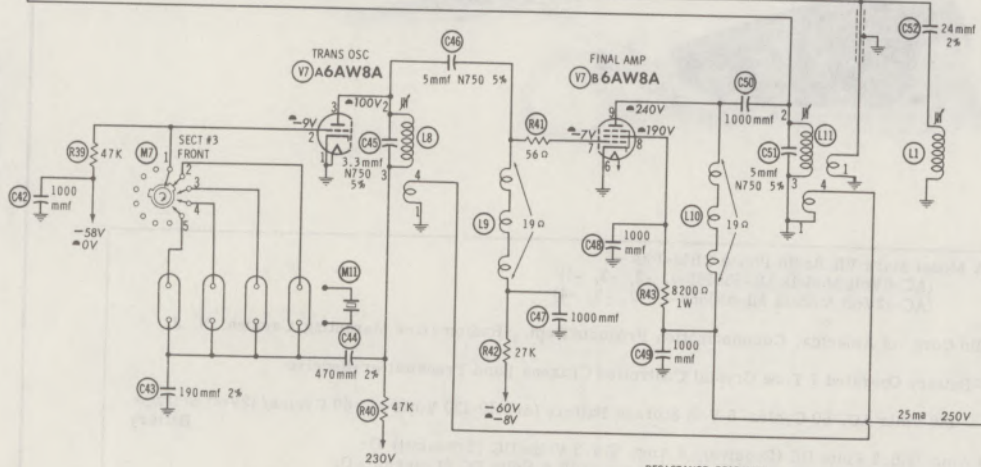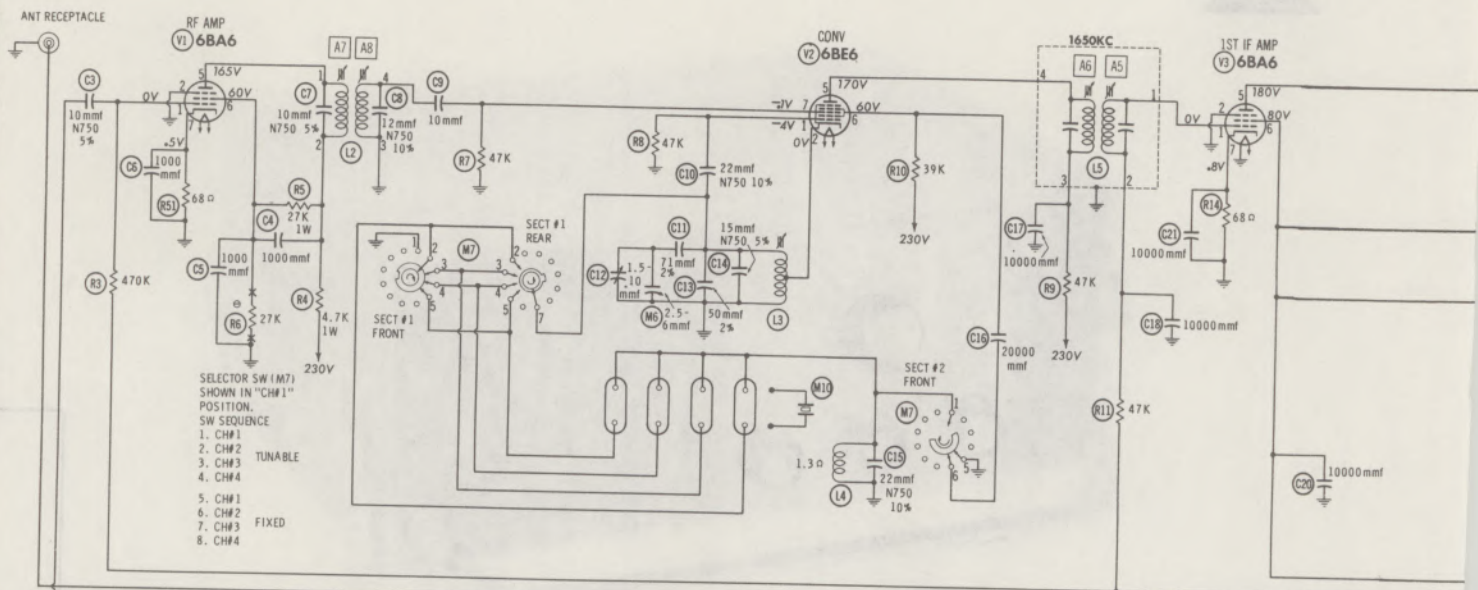

ITEM	TUBE	Pin 1	Pin 2	Pin 3	Pin 4	Pin 5	Pin 6	Pin 7	Pin 8	Pin 9
V1	6BA6	2.3meg	0Ω	.2Ω	.1Ω	15800Ω	125K	68Ω		
V2	6BE6	47K	.1Ω	.2Ω	.1Ω	148K	140K	47K		
V3	6BA6	2meg	0Ω	.8Ω	0Ω	13300Ω	130K	68Ω		
V4	6EA8	1135K	1meg	150K	.8Ω	.2Ω	13300Ω	150Ω	0Ω	2.2meg
V5	6T8A	490K	220K	1.9meg	0Ω	.3Ω	11.9meg	0Ω	10meg	1470K
V6	6AQ5A	NC	330Ω	.2Ω	.3Ω	1450Ω	11100Ω	470K		
V7	6AW8A	0Ω	.47K	148K	0Ω	.1Ω	0Ω	1183K	19300Ω	1470Ω

ALL MEASUREMENTS MADE IN "RECEIVE" POSITION WITH MIKE UNPLUGGED UNLESS OTHERWISE DESIGNATED.
 * MEASURED IN "TRANSMIT" POSITION. NC NO CONNECTION
 † MEASURED FROM OUTPUT OF M1. ‡ MEASURED FROM OUTPUT OF M3.

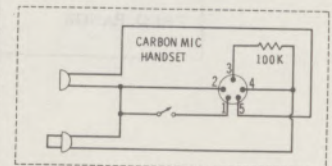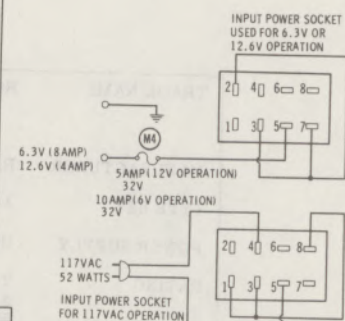

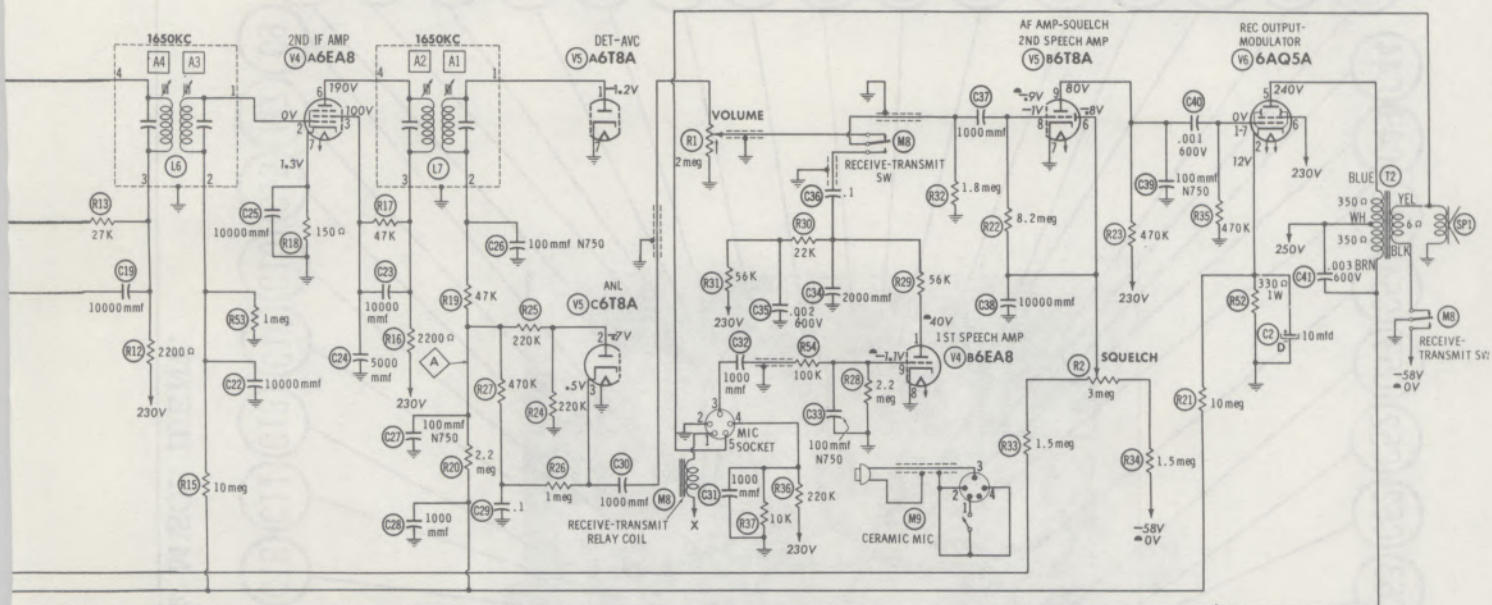


PARTS LIST FOR ALTERNATE VALUE OR APPLICATION

DC COIL RESISTANCE VALUES UNDER ONE OHM NOT SHOWN ON SCHEMATIC DIAGRAM


ARROWS ON CONTROLS INDICATE CLOCKWISE ROTATION (CONTROL VIEWED FROM SHAFT END)

NUMBERS ASSIGNED TO COILS, SWITCHES, PLUGS, SOCKETS, AND TRANSFORMERS ARE TO FACILITATE CIRCUIT TRACING OR COMPONENT REPLACEMENT AND MAY NOT NECESSARILY BE FOUND ON THE UNIT.

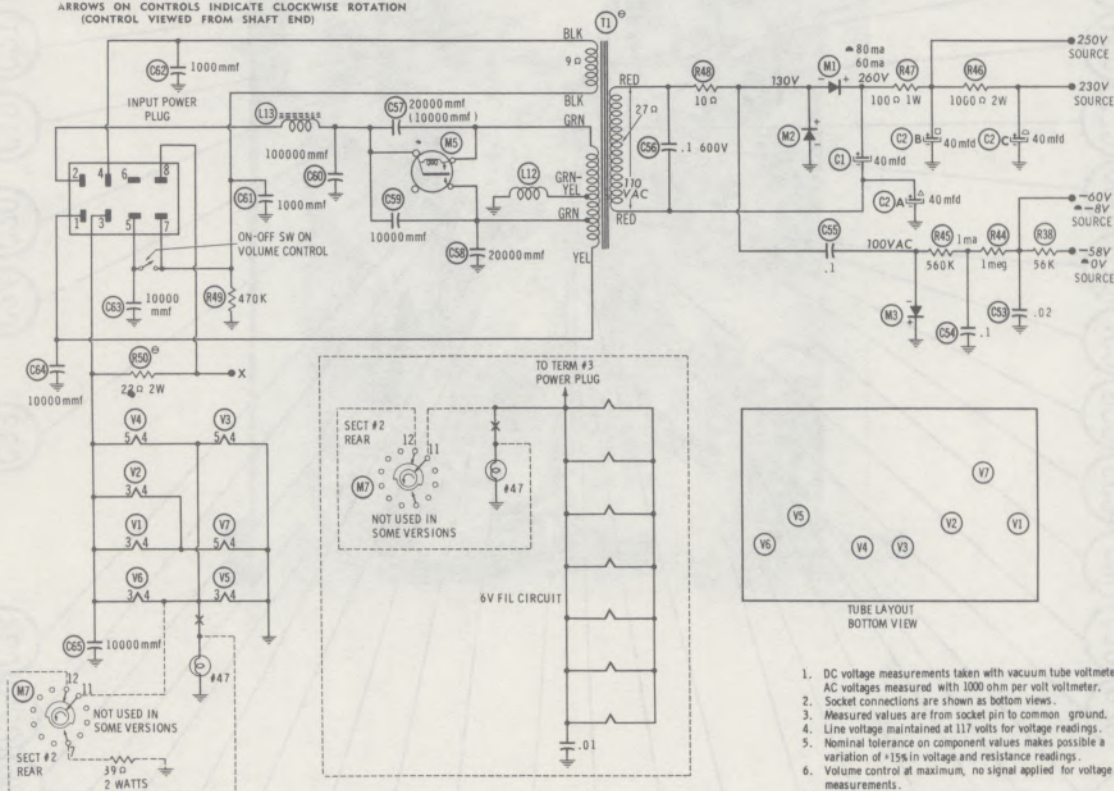


1. DC voltage measurements taken with vacuum tube voltmeter; AC voltages measured with 1000 ohm per volt voltmeter.
2. Socket connections are shown as bottom views.
3. Measured values are from socket pin to common ground.
4. Line voltage maintained at 117 volts for voltage readings.
5. Nominal tolerance on component values makes possible a variation of $\pm 15\%$ in voltage and resistance readings.
6. Volume control at maximum, no signal applied for voltage measurements.

RCA MODEL CRM-P3A-5

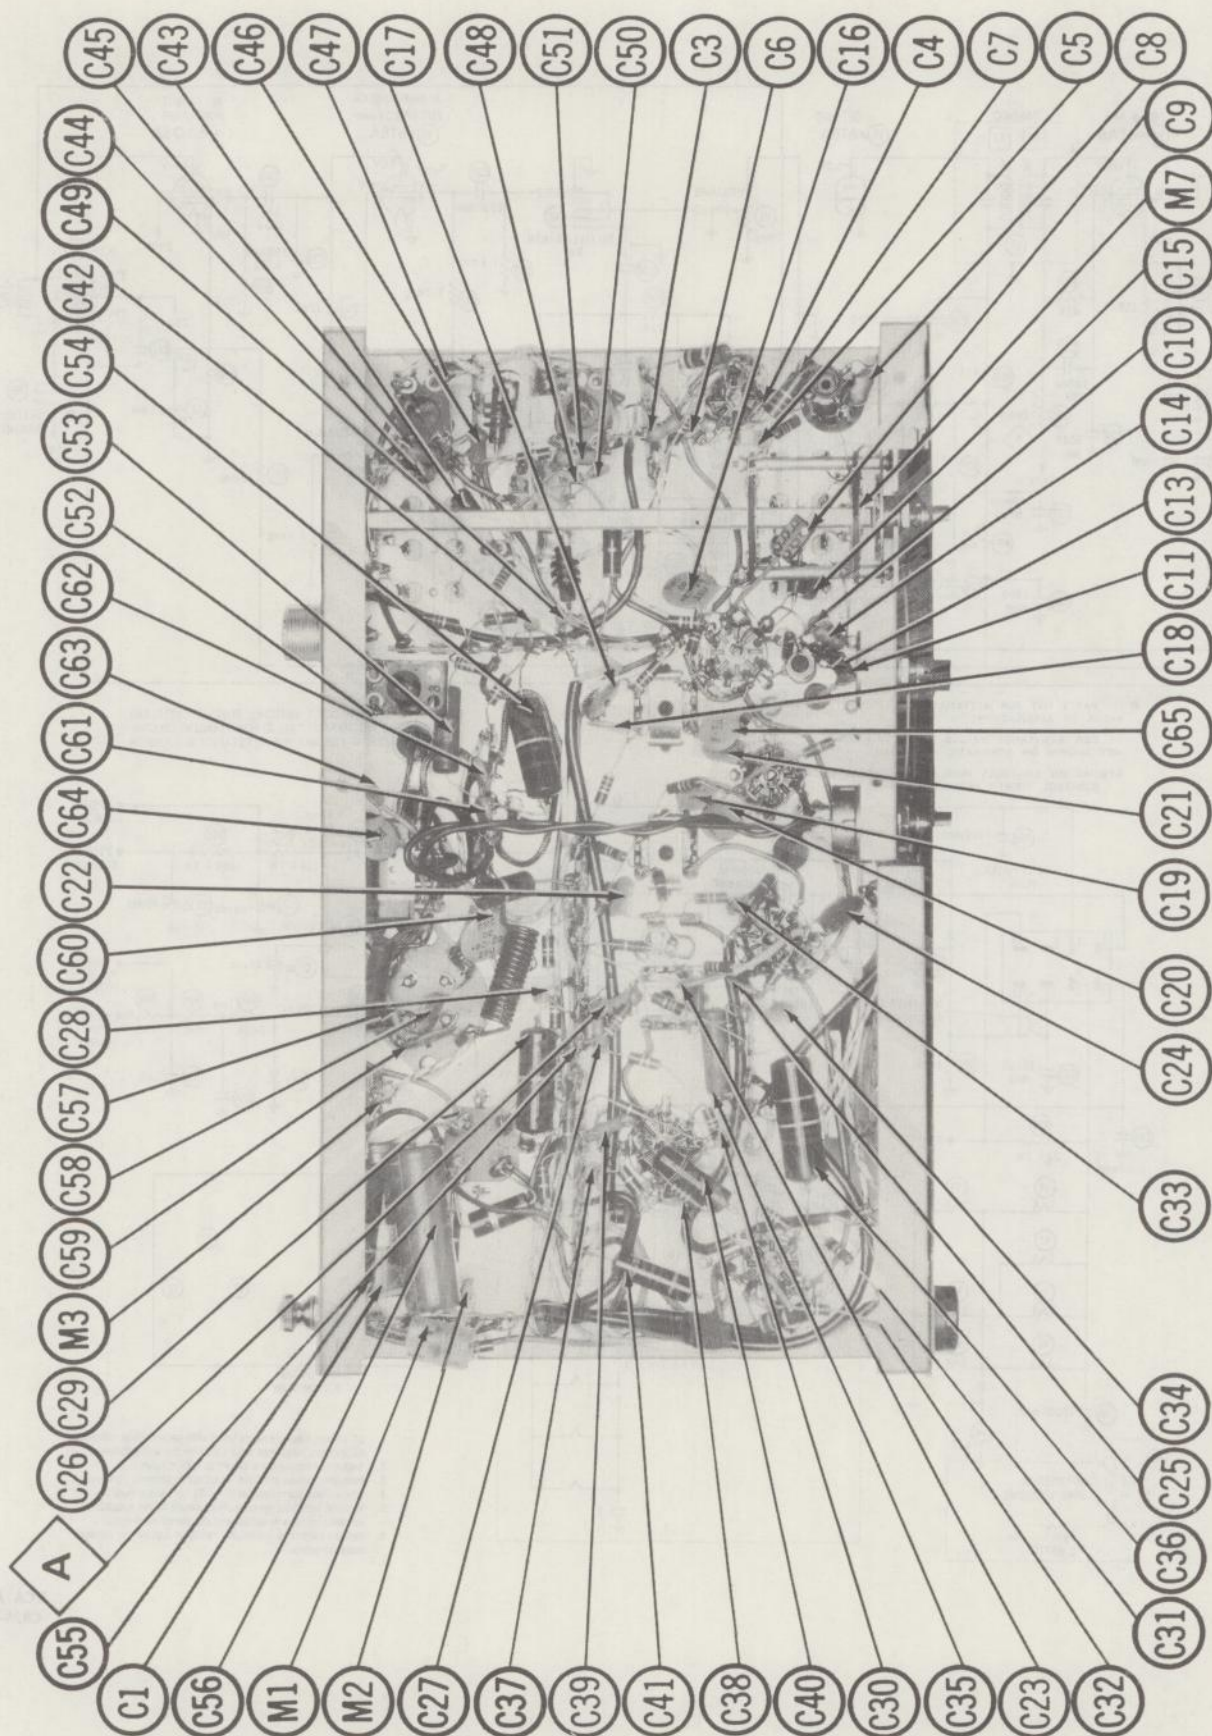

CHASSIS BOTTOM VIEW-CAPACITOR & MISC. IDENT.

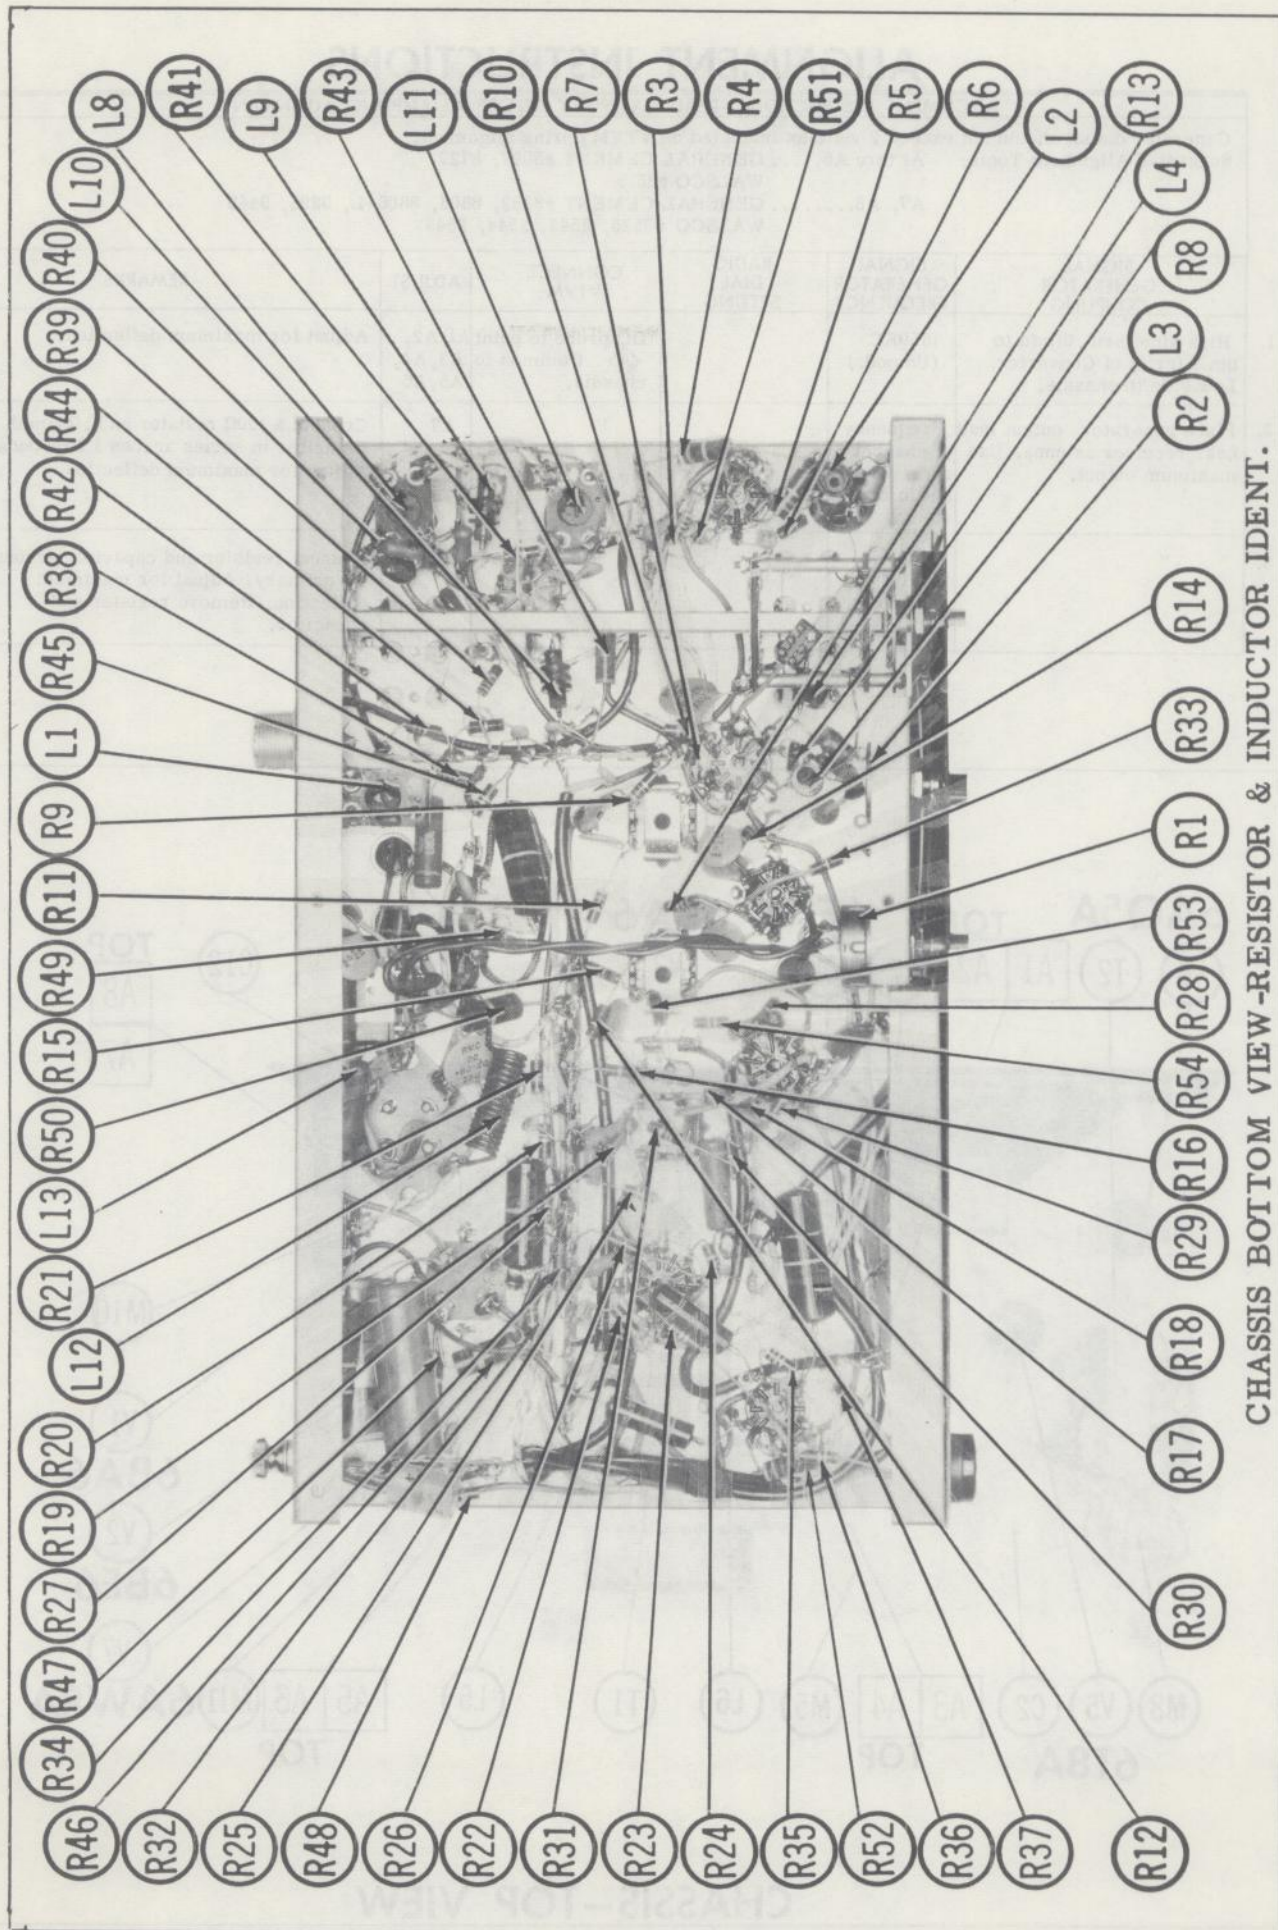

CHASSIS BOTTOM VIEW-RESISTOR & INDUCTOR IDENT.

ALIGNMENT INSTRUCTIONS

ALIGNMENT INSTRUCTIONS—READ CAREFULLY BEFORE ATTEMPTING ALIGNMENT

Generator output should not exceed 2 volts as indicated on VTVM during alignment.


Suggested Alignment Tools: A1 thru A6.....GENERAL CEMENT #5097, 8727

WALSCO #2515

A7, A8..... GENERAL CEMENT #8282, 8606, 8606-L, 9295, 9440

WALSCO #2526, 2543, 2544, 2545

	SIGNAL GENERATOR COUPLING	SIGNAL GENERATOR FREQUENCY	RADIO DIAL SETTING	CONNECT VTVM	ADJUST	REMARKS
1.	High side thru .01mfd to pin 7 (grid) of Converter. Low side to chassis.	1650KC (Unmod.)		DC probe to point Δ . Common to chassis.	A1, A2, A3, A4, A5, A6	Adjust for maximum deflection.
2.	Place generator output lead near receiver antenna. Use maximum output.	Frequency of channel receiver is set to operate on.		"	A7	Connect a 100 Ω resistor and .005mfd capacitor in series across L2Secondary. Adjust for maximum deflection
3.	"	"		"	A8	Connect resistor and capacitor across L2 primary. Adjust for maximum deflection. Remove resistor and capacitor.

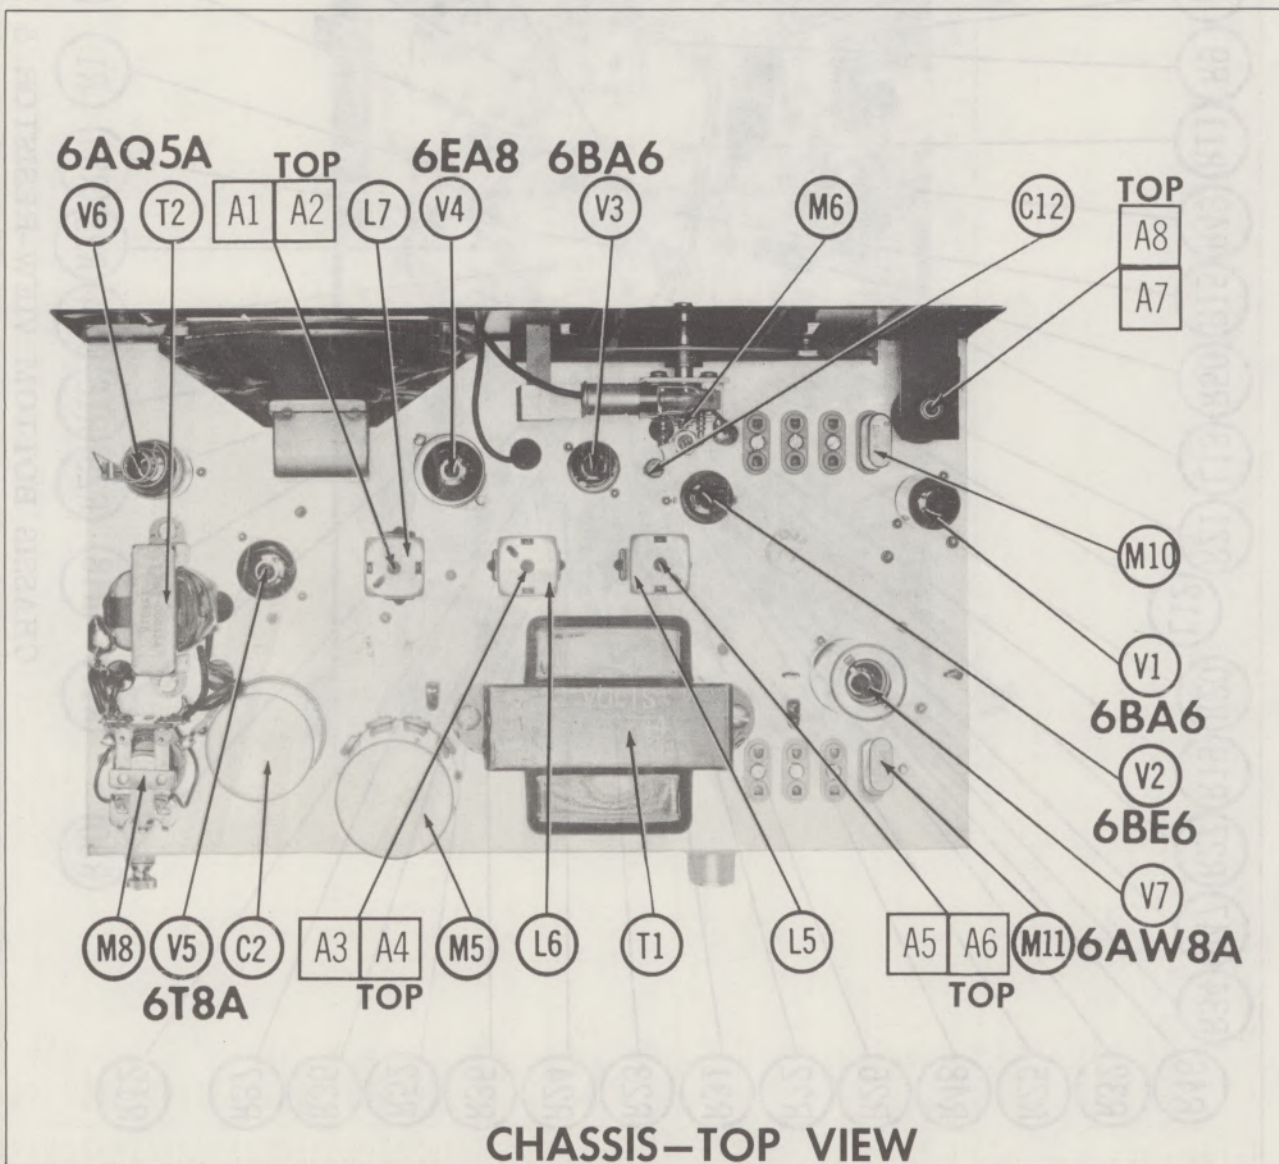

PARTS LIST AND DESCRIPTIONS

TUBES

GENERAL ELECTRIC • RAYTHEON • SYLVANIA			
ITEM No.	USE	TYPE	TYPE
V1	RF Amplifier	6BA6	6T8A 2nd Speech Amp. 6AQ5A 6AW8A
V2	Converter	6BE6	
V3	1st IF Amplifier	6BA6	
V4	2nd IF Amplifier-1st Speech Amp.	6EA8	

ELECTROLYTIC CAPACITORS

REPLACEMENT DATA			
ITEM No.	RATING	REMARKS	TYPE
C1	40 200	219977	6T8A
C2	40 200	219977	6T8A
C3	40 200	219977	6T8A
C4	40 200	219977	6T8A
C5	40 200	219977	6T8A
C6	40 200	219977	6T8A
C7	40 200	219977	6T8A
C8	40 200	219977	6T8A
C9	40 200	219977	6T8A
C10	40 200	219977	6T8A
C11	40 200	219977	6T8A
C12	40 200	219977	6T8A
C13	40 200	219977	6T8A
C14	40 200	219977	6T8A
C15	40 200	219977	6T8A
C16	40 200	219977	6T8A
C17	40 200	219977	6T8A
C18	40 200	219977	6T8A
C19	40 200	219977	6T8A
C20	40 200	219977	6T8A
C21	40 200	219977	6T8A
C22	40 200	219977	6T8A
C23	40 200	219977	6T8A
C24	40 200	219977	6T8A
C25	40 200	219977	6T8A
C26	40 200	219977	6T8A
C27	40 200	219977	6T8A
C28	40 200	219977	6T8A
C29	40 200	219977	6T8A
C30	40 200	219977	6T8A
C31	40 200	219977	6T8A
C32	40 200	219977	6T8A
C33	40 200	219977	6T8A
C34	40 200	219977	6T8A
C35	40 200	219977	6T8A
C36	40 200	219977	6T8A
C37	40 200	219977	6T8A
C38	40 200	219977	6T8A
C39	40 200	219977	6T8A
C40	40 200	219977	6T8A
C41	40 200	219977	6T8A
C42	40 200	219977	6T8A
C43	40 200	219977	6T8A
C44	40 200	219977	6T8A
C45	40 200	219977	6T8A

* Not normally in distributor's stock. Available thru distributor on order to manufacturer.

FIXED CAPACITORS

Capacity values given in the rating column are in mfd. for Paper Capacitors, and in mmfd. for Mica and Ceramic Capacitors.

REPLACEMENT DATA			
ITEM No.	RATING	REMARKS	TYPE
C3	10 N750 5%	219977	6T8A
C4	10 N750 5%	219977	6T8A
C5	10 N750 5%	219977	6T8A
C6	10 N750 5%	219977	6T8A
C7	10 N750 5%	219977	6T8A
C8	10 N750 5%	219977	6T8A
C9	10 N750 5%	219977	6T8A
C10	10 N750 5%	219977	6T8A
C11	10 N750 5%	219977	6T8A
C12	10 N750 5%	219977	6T8A
C13	10 N750 5%	219977	6T8A
C14	10 N750 5%	219977	6T8A
C15	10 N750 5%	219977	6T8A
C16	10 N750 5%	219977	6T8A
C17	10 N750 5%	219977	6T8A
C18	10 N750 5%	219977	6T8A
C19	10 N750 5%	219977	6T8A
C20	10 N750 5%	219977	6T8A
C21	10 N750 5%	219977	6T8A
C22	10 N750 5%	219977	6T8A
C23	10 N750 5%	219977	6T8A
C24	10 N750 5%	219977	6T8A
C25	10 N750 5%	219977	6T8A
C26	10 N750 5%	219977	6T8A
C27	10 N750 5%	219977	6T8A
C28	10 N750 5%	219977	6T8A
C29	10 N750 5%	219977	6T8A
C30	10 N750 5%	219977	6T8A
C31	10 N750 5%	219977	6T8A
C32	10 N750 5%	219977	6T8A
C33	10 N750 5%	219977	6T8A
C34	10 N750 5%	219977	6T8A
C35	10 N750 5%	219977	6T8A
C36	10 N750 5%	219977	6T8A
C37	10 N750 5%	219977	6T8A
C38	10 N750 5%	219977	6T8A
C39	10 N750 5%	219977	6T8A
C40	10 N750 5%	219977	6T8A
C41	10 N750 5%	219977	6T8A
C42	10 N750 5%	219977	6T8A
C43	10 N750 5%	219977	6T8A
C44	10 N750 5%	219977	6T8A
C45	10 N750 5%	219977	6T8A

FIXED CAPACITORS (cont)

REPLACEMENT DATA			
ITEM No.	RATING	REMARKS	TYPE
C44	470 2%	219977	6T8A
C45	470 2%	219977	6T8A
C46	470 2%	219977	6T8A
C47	470 2%	219977	6T8A
C48	470 2%	219977	6T8A
C49	470 2%	219977	6T8A
C50	470 2%	219977	6T8A
C51	470 2%	219977	6T8A
C52	470 2%	219977	6T8A
C53	470 2%	219977	6T8A
C54	470 2%	219977	6T8A
C55	470 2%	219977	6T8A
C56	470 2%	219977	6T8A
C57	470 2%	219977	6T8A
C58	470 2%	219977	6T8A
C59	470 2%	219977	6T8A
C60	470 2%	219977	6T8A
C61	470 2%	219977	6T8A
C62	470 2%	219977	6T8A
C63	470 2%	219977	6T8A
C64	470 2%	219977	6T8A
C65	470 2%	219977	6T8A

RCA Part Number.
† Alternate Value.

CONTROLS

REPLACEMENT DATA			
ITEM No.	RATING	REMARKS	TYPE
R1A	2meg	219971	6T8A
R1B	2meg	219971	6T8A
R1C	2meg	219971	6T8A
R1D	2meg	219971	6T8A
R1E	2meg	219971	6T8A
R1F	2meg	219971	6T8A
R1G	2meg	219971	6T8A
R1H	2meg	219971	6T8A
R1I	2meg	219971	6T8A
R1J	2meg	219971	6T8A
R1K	2meg	219971	6T8A
R1L	2meg	219971	6T8A
R1M	2meg	219971	6T8A
R1N	2meg	219971	6T8A
R1O	2meg	219971	6T8A
R1P	2meg	219971	6T8A
R1Q	2meg	219971	6T8A
R1R	2meg	219971	6T8A
R1S	2meg	219971	6T8A
R1T	2meg	219971	6T8A
R1U	2meg	219971	6T8A
R1V	2meg	219971	6T8A
R1W	2meg	219971	6T8A
R1X	2meg	219971	6T8A
R1Y	2meg	219971	6T8A
R1Z	2meg	219971	6T8A

RESISTORS

All wattages 1/2 watt, or less, unless otherwise listed.

REPLACEMENT DATA			
ITEM No.	RATING	REMARKS	TYPE
R3	470K	219971	6T8A
R4	470K	219971	6T8A
R5	470K	219971	6T8A
R6	470K	219971	6T8A
R7	470K	219971	6T8A
R8	470K	219971	6T8A
R9	470K	219971	6T8A
R10	470K	219971	6T8A
R11	470K	219971	6T8A
R12	470K	219971	6T8A
R13	470K	219971	6T8A
R14	470K	219971	6T8A
R15	470K	219971	6T8A
R16	470K	219971	6T8A
R17	470K	219971	6T8A
R18	470K	219971	6T8A
R19	470K	219971	6T8A
R20	470K	219971	6T8A
R21	470K	219971	6T8A
R22	470K	219971	6T8A
R23	470K	219971	6T8A
R24	470K	219971	6T8A
R25	470K	219971	6T8A
R26	470K	219971	6T8A
R27	470K	219971	6T8A

PARTS LIST AND DESCRIPTIONS (Continued)

RESISTORS (cont)

ITEM No.	RATING	REPLACEMENT DATA		ITEM No.	RATING	REPLACEMENT DATA	
		IRC PART No.	WORKMAN TV PART No.			IRC PART No.	WORKMAN TV PART No.
R53	1meg			R54	100K		

Note 1. 6 volt versions use 5Ω in this application.
Note 2. Not used in some versions.

COILS (RF-IF)

ITEM No.	USE	REPLACEMENT DATA				NOTES
		RCA PART No.	Meritt PART No.	Miller PART No.	Stancor PART No.	Workman TV PART No.
L1	Ant. Loading	219989				
L2	RF	220251				
L3	Osc.	219985				
L4	RF Choke (7.2uh)	219983				
L5	1st IF	219978	BC-565	4611	RTC-8521	T859
L6	2nd IF	219978				
L7	3rd IF	219978				
L8	Osc. Plate	219981				
L9	RF Choke (500uh)	219988	TV-204	6174	RTC-8592	T324
L10	RF Choke (500uh)	219988	TV-204	6174	RTC-8592	T324
L11	Final Plate	219980				
L12	Hash Choke (10uh)	219984				
L13	Hash Choke (30uh)	219982				

TRANSFORMER (POWER)

ITEM No.	RATING	REPLACEMENT DATA				NOTES
		RCA PART No.	Meritt PART No.	Stancor PART No.	Thordarson PART No.	Triad PART No.
T1	117V @ 110V @ 12.6VCT 1.5A 2.5A (AC Only)	219987 ①				① Part #219986 used in 6 volt versions.

TRANSFORMER (AUDIO OUTPUT)

ITEM No.	IMPEDANCE	REPLACEMENT DATA				NOTES
		RCA PART No.	Meritt PART No.	Stancor PART No.	Thordarson PART No.	Triad PART No.
T2	10K CT 3-4Ω	219990	A-2938	A-3850	24S05	S-51X

SPEAKER

ITEM No.	TYPE	REPLACEMENT DATA		NOTES
		RCA PART No.	QUAM PART No.	
SPI	4" PM 3-4Ω	79696-B	4A05	

POWER RECTIFIERS

ITEM No.	BATING CURRENT (Measured)	REPLACEMENT DATA				NOTES
		RCA PART No.	SARKIS PART No.	TARZIAN PART No.	SYLVANIA PART No.	
M1	.080A	219973 *	IN1763 *	2F4 *	SR200 *	* Silicon Diode
M2	.080A	219973 *	IN1763 *	2F4 *	SR200 *	* Selenium Diode
M3	.001A	218022 *		Model 10 *		

FUSES

ITEM No.	TYPE	RATING	RCA PART No.		LITTELFUSE PART No.		BUSS PART No.
			FUSE	HOLDER	FUSE	HOLDER	
M4	3AG	5A			312005		
		32V			3AG 5A 32V		
		10A			312010		
		32V			3AG 10A 32V		

VIBRATOR

ITEM No.	TYPE	INPUT VOLTS	FREQUENCY	REPLACEMENT DATA				NOTES
				RCA PART No.	CORNELL-DUBILIER PART No.	MALORY PART No.	RADIART PART No.	
M5	Interrupter	12.6	115%	220001 *				♦ 12 Volt versions
	Interrupter	6.3	115%	220000 *				* 6 Volt Versions.

MISCELLANEOUS

ITEM No.	PART NAME	RCA PART No.	NOTES
M6	Variable Cap	219974	2.5 - 6mmf
M7	Switch	219991	Selector (Includes Wafer #219992) Rotary Type
M8	Relay	219970	Switching, 12 Volt
M9	Microphone	219969	Switching, 6 Volt
M10	Crystal	MI-555583 *	Includes 48" Cable & Connector
			Receive (Crystal is marked 019-002362-*)
M11	Crystal	MI-555582 *	Replace * with Channel Number
			Transmit (Crystal is marked 019-002361-*)
			Replace * with Channel Number.

CABINETS & CABINET PARTS

(When Ordering Cabinets & Cabinet Parts, Specify Model, Chassis & Color)

NAME	PART NO.	DESCRIPTION
Indicator Scale Knob	219995	Dial
Knob	219996	Tuning
Knob	219966	Volume, Channel, Squelch
Knob	219968	Handle Retaining
Knob	219967	

WIRING DATA

General-use Unshielded Hook-up Wire Use BELDEN No. 8530 (Solid) Available in Ten Colors
8524 (Stranded) Available in Ten Colors
Power Cord Use BELDEN No. 1765-B (6 Ft. Length)
1725-K (7½ Ft. Length)



REALISTIC
MODEL TRC-27 (94L595)

TRADE NAME	Realistic Model TRC-27 (94L595)
SUPPLIER	Radio Shack Corp., 730 Commonwealth Ave., Boston 17, Mass.
TYPE SET	AC-Battery Operated 10 Tube— 2 Transistor Single Channel Crystal Controlled Citizens Band Transmitter-Receiver
POWER SUPPLY	105 — 125 Volts AC, 60 Cycles (or) 12 Volt Storage Battery
RATING	50 Watts, .5 Amp. @ 117 Volts AC (Transmit); 42 Watts, .42 Amp. @ 117 Volts AC (Receive) (or) 5 Amp. @ 12.6 Volts DC (Transmit or Receive)
FREQ. RANGE	Any one of Citizens Band Channels 1 thru 22

NOTICE

ONLY THOSE PERSONS PROPERLY LICENSED BY FCC ARE PERMITTED TO MAKE CRYSTAL SUBSTITUTION OR EFFECT REPAIRS ON THE TRANSMITTER PORTION OF THIS UNIT.

HOWARD W. SAMS & CO., INC. Indianapolis 6, Indiana



The listing of any available replacement part herein does not constitute in any case a recommendation, warranty or guaranty by Howard W. Sams & Co., Inc., as to the quality and suitability of such replacement part. The numbers of these parts have been compiled from information furnished to Howard W. Sams & Co., Inc., by the manufacturers of KZ599

the particular type of replacement part listed. Reproduction or use, without express permission, of editorial or pictorial content, in any manner, is prohibited. No patent liability is assumed with respect to the use of the information contained herein. © 1961 Howard W. Sams & Co., Inc., Indianapolis 6, Indiana. Printed in U.S. of America

ALIGNMENT INSTRUCTIONS

ALIGNMENT INSTRUCTIONS—READ CAREFULLY BEFORE ATTEMPTING ALIGNMENT

Volume control should be at maximum position. Output of signal generator should be no higher than necessary to obtain an output reading.

Suggested Alignment Tools: A1 thru A10, A12... GENERAL CEMENT #8721, 8722
WALSCO #2519
A11..... GENERAL CEMENT #5000, 5003, 8276, 8290
WALSCO #2512, 2515, 2522, 2523, 2525, 2537


RECEIVER ALIGNMENT

	SIGNAL GENERATOR COUPLING	SIGNAL GENERATOR FREQUENCY	RADIO DIAL SETTING	OUTPUT METER	ADJUST	REMARKS
1.	High side thru .01mfd to pin 2 (grid) of Mixer. Low side to chassis.	455KC (400% Mod.)		Across voice coil.	A1, A2, A3, A4, A5, A6	Adjust for maximum output.
2.	High side thru 50mmf to antenna input.	Frequency to be received.		"	A7, A8	"


TRANSMITTER ALIGNMENT

- Connect DC probe of VTVM to pin 1 (grid) of Final Amplifier. Common to chassis. Depress Transmit switch and adjust A9 and A10 for maximum deflection. Push slide switch to Tune Position. Press Transmit switch and adjust A11 and A12 for maximum bulb brilliance. Repeat adjustment of A11 and A12.


NOTE: To check plate power input to final amplifier, measure voltage drop across R52 (approximately 2V) and from R52 to chassis (approximately 215V). Multiply the 2 voltages and divide by 100. At no time should this exceed 5 watts.

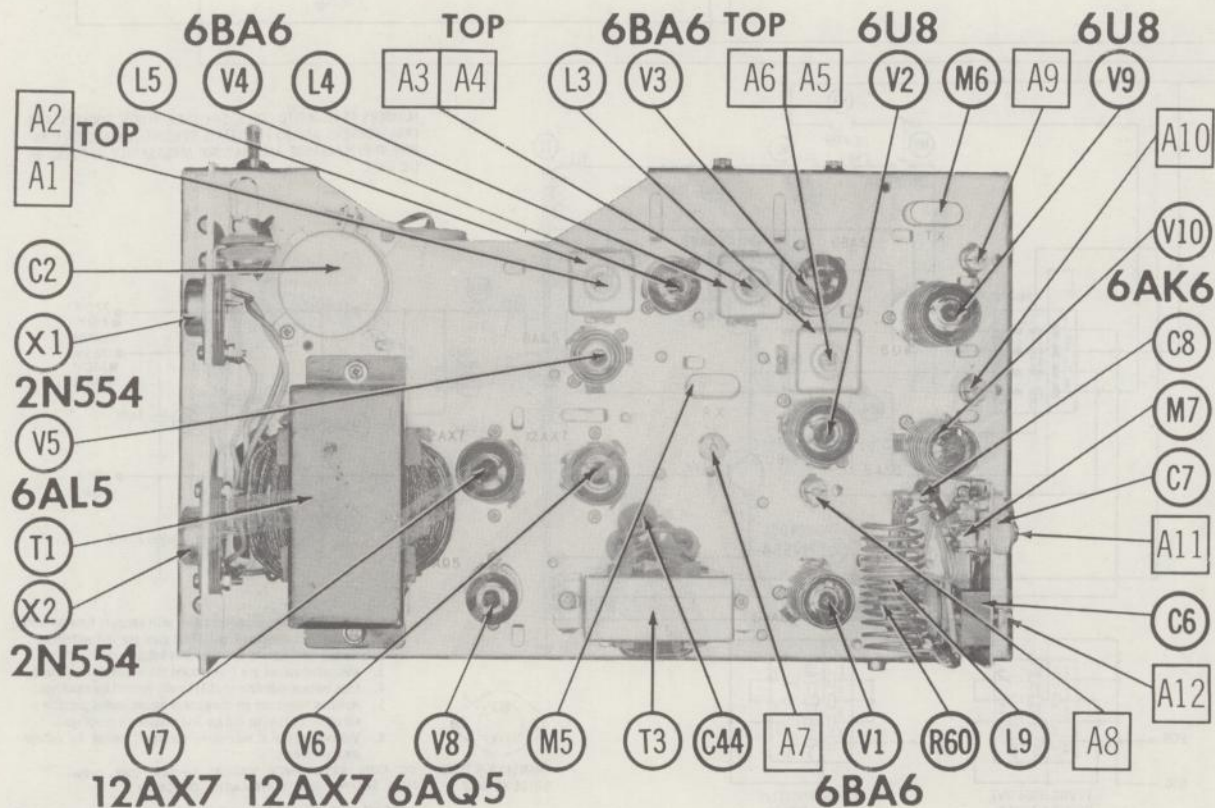

CHASSIS—TOP VIEW

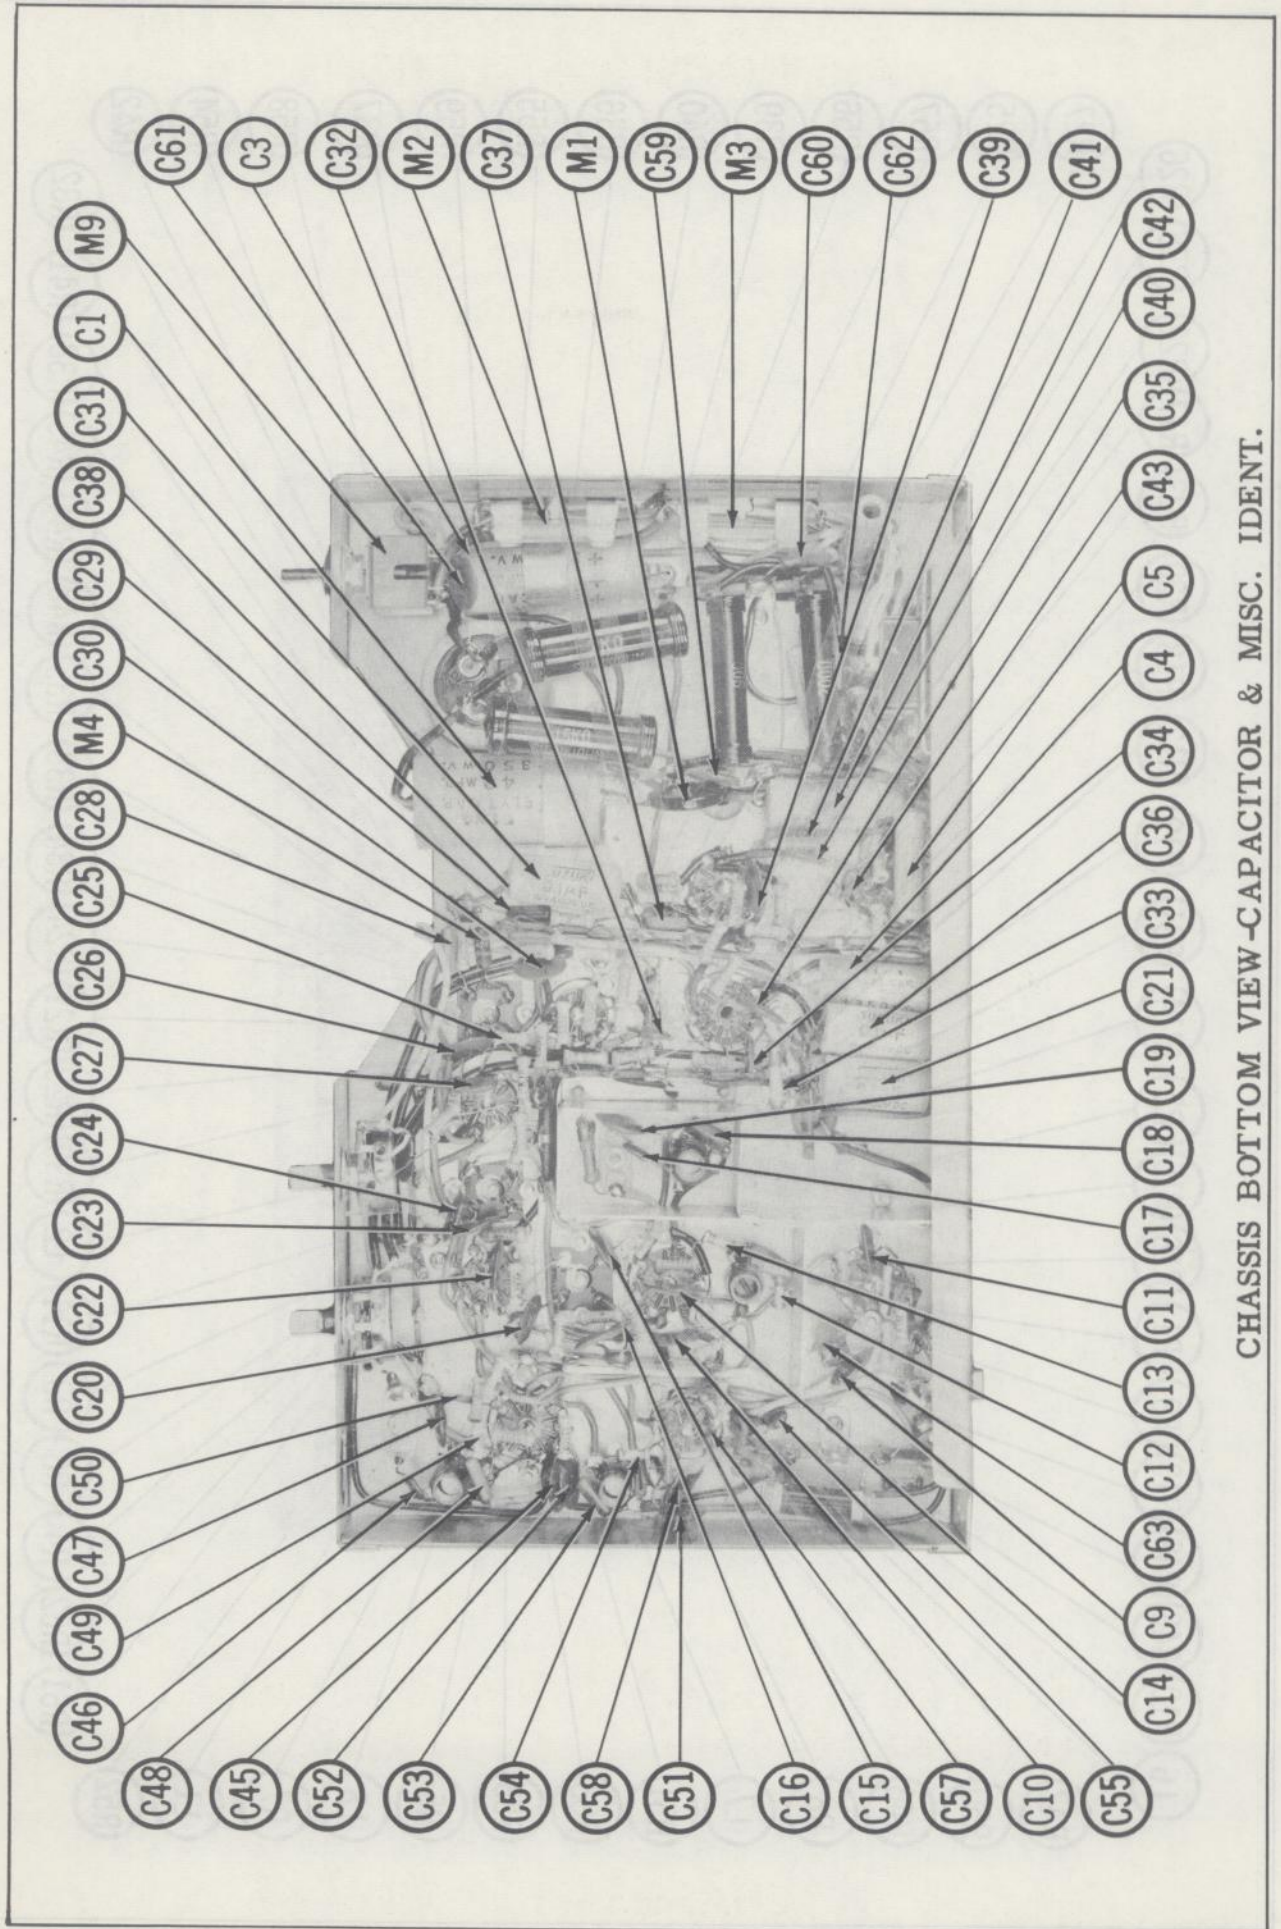

CHASSIS BOTTOM VIEW-CAPACITOR & MISC. IDENT.

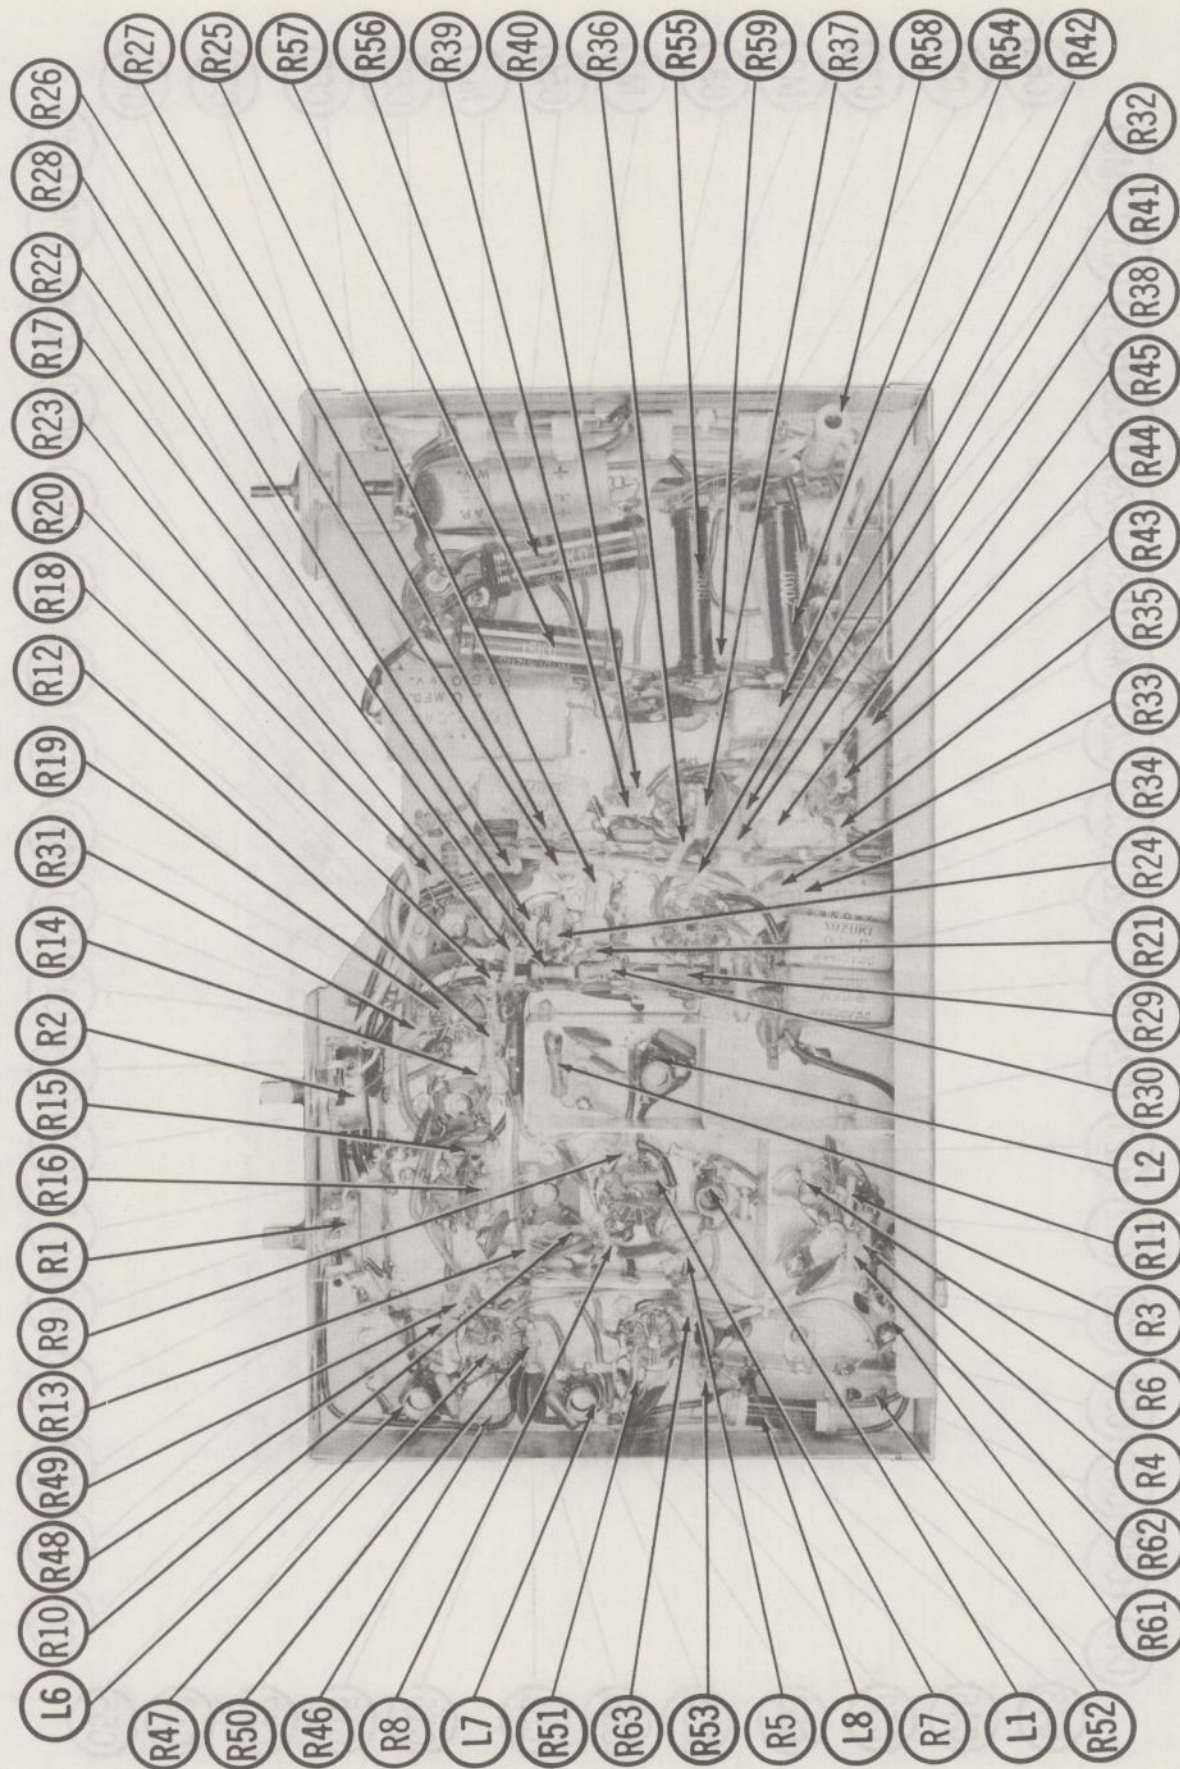

CHASSIS BOTTOM VIEW-RESISTOR & INDUCTOR IDENT.

PARTS LIST AND DESCRIPTIONS

TUBES

* GENERAL ELECTRIC * RAYTHEON * SYLVANIA *									
ITEM No.	USE	TYPE		ITEM No.	USE	TYPE			
V1	RF Amplifier	6BA6		V6	Squelch - AF Amp.	12AX7			
V2	Mixer-Osc.	6U8		V7	Speech Amplifier	12AX7			
V3	1st IF Amplifier	6BA6		V8	Output-Modulator	6AQ5			
V4	2nd IF Amplifier	6BA6		V9	Trans. Osc. -Buffer	6U8			
V5	AVC Det. -Noise Limiter	6AL5		V10	Final Amplifier	6AK6			

TRANSISTORS

ITEM No.	ORIG. TYPE	USE	REPLACEMENT DATA		NOTES
			RCA PART No.	SYLVANIA PART No.	
X1	2N554	Power Osc.			PNP
X2	2N554	Power Osc.			PNP

ELECTROLYTIC CAPACITORS

ITEM No.	CAP.	VOLT.	REPLACEMENT DATA		NOTES
			CORNEILL-DUBILIER PART No.	SPRAGUE PART No.	
C1	40	350	BR4035	TYA-1811	
C2	40	450	AFH2-57	TMD-2850	
C3	20	350	BR2035	TYA-1608	
C4	3	350	BR435	TC897	
C5	25	25	BR25-25	TYA-1205	

FIXED CAPACITORS

Capacity values given in the rating column are in mfd. for Paper Capacitors, and in mmfd. for Mica and Ceramic Capacitors.

ITEM No.	RATING	REMARKS	REPLACEMENT DATA		SPRAGUE PART No.
			AEROVOX PART No.	ELMENDO PART No.	
C6	50-380		NPO-SI 20	465	107S-Q20
C7	5-25		BPD-01	461	5HK-S10
C8	20 10%		BPD-01	CCD-200	5HK-S10
C9	10000		BPD-01	CCD-103	5HK-S10
C10	10000		BPD-01	CCD-103	5HK-S10
C11	10000		BPD-01	CCD-103	5HK-S10
C12	25 10%		NPO-SI 25	CCTO-240	107CC-Q25
C13	20 10%		NPO-SI 20	CCD-250	107S-Q20
C14	10000		BPD-01	CCD-103	5HK-S10
C15	10000		BPD-01	CCD-103	5HK-S10
C16	10000		BPD-01	CCD-103	5HK-S10
C17	20 10%		BPD-01	CCD-103	5HK-S10
C18	20 10%		BPD-01	CCD-103	5HK-S10
C19	10000		BPD-01	CCD-103	5HK-S10
C20	10000		BPD-01	CCD-103	5HK-S10
C21	1 400V		BPD-01	CCD-103	5HK-S10
C22	10000		BPD-01	CCD-103	5HK-S10
C23	10000		BPD-01	CCD-103	5HK-S10
C24	10000		BPD-01	CCD-103	5HK-S10
C25	50 10%		NPO-SI 50	CCD-103	5HK-S10
C26	10000		BPD-01	CCD-103	5HK-S10
C27	10000		BPD-01	CCD-103	5HK-S10
C28	1000 10%		BPD-01	CCD-103	5HK-S10
C29	1000 10%		BPD-01	CCD-103	5HK-S10
C30	1 400V		BPD-01	CCD-103	5HK-S10
C31	3000		BPD-01	CCD-103	5HK-S10
C32	3000		BPD-01	CCD-103	5HK-S10
C33	300 10%		BPD-01	CCD-103	5HK-S10
C34	2000		BPD-01	CCD-103	5HK-S10
C35	10000		BPD-01	CCD-103	5HK-S10
C36	1 400V		BPD-01	CCD-103	5HK-S10
C37	1000 10%		BPD-01	CCD-103	5HK-S10

FIXED CAPACITORS (cont)

ITEM No.	RATING	REMARKS	REPLACEMENT DATA		SPRAGUE PART No.
			AEROVOX PART No.	ELMENDO PART No.	
C38	.05 400V		P488N-05	4DP-3-503	47M-S50
C39	10000		BPD-01	CCD-103	5HK-S10
C40	10000		BPD-01	CCD-103	5HK-S10
C41	.05 400V		P488N-05	4DP-3-503	47M-S50
C42	.1 400V		P488N-1	4DP-3-104	47M-P10
C43	1500		BPD-0015	CCD-152	5HK-D15
C44	10000		BPD-01	CCD-103	5HK-S10
C45	10000		BPD-01	CCD-103	5HK-S10
C46	2000		BPD-002	CCD-202	5HK-D20
C47	10000		BPD-01	CCD-103	5HK-S10
C48	10 10%		1469-00001	CM-19B-100K	MS-41
C49	10 10%		NPO-SI 10	CCD-100	107S-Q10
C50	10000		BPD-001	CCD-103	5HK-D10
C51	10000		BPD-01	CCD-103	5HK-S10
C52	10000		BPD-01	CCD-103	5HK-S10
C53	15 10%		1469-000015	CM-19B-150K	MS-415
C54	20 10%		NPO-SI 20	CCD-200	107S-Q20
C55	500		BPD-0005	CCD-501	107S-T50
C56	500		BPD-0005	CCD-501	107S-T50
C57	500		BPD-01	CCD-103	5HK-S10
C58	10000		BPD-01	CCD-103	5HK-S10
C59	10000		BPD-01	CCD-103	5HK-S10
C60	10000		BPD-01	CCD-103	5HK-S10
C61	10000		BPD-01	CCD-103	5HK-S10
C62	.05 400V		P488N-05	4DP-3-503	47M-S50
C63	10000		BPD-01	CCD-103	5HK-S10

CONTROLS

ITEM No.	RATING	REMARKS	REPLACEMENT DATA		INSTALLATION NOTES
			CENTRALAB PART No.	MALLORY PART No.	
R1A	500K		B-60	U48	Volume
R2A	500K		B-59	U50	Squelch
R3	Shaft		Not Req.	Not Req.	

RESISTORS

All wattages 1/2 watt, or less, unless otherwise listed.

ITEM No.	RATING	REMARKS	REPLACEMENT DATA		REMARKS
			WORKMAN TV PART No.	ITEM No.	
R3	470K			R26	500K
R4	1meg			R27	500K
R5	10000			R28	200K
R6	68K			R29	100K
R7	470K			R30	1meg
R8	10000			R31	47K
R9	33K			R32	220K
R10	68000			R33	470K
R11	15K			R34	22000
R12	15K			R35	220K
R13	1meg			R36	22K
R14	10000			R37	470K
R15	100K			R38	220K
R16	150K			R39	50000
R17	470K			R40	470K
R18	10000			R41	220K
R19	560K			R42	50000
R20	47K			R43	470K
R21	1.5meg			R44	5000 3W
R22	15K			R45	50000 1W
R23	500K			R46	100K
R24	500K			R47	56K
R25	500K			R48	10000

PARTS LIST AND DESCRIPTIONS (Continued)

RESISTORS (cont)

ITEM No.	RATING	REPLACEMENT DATA		ITEM No.	RATING	REPLACEMENT DATA	
		IRC PART No.	WORKMAN PART No.			IRC PART No.	WORKMAN PART No.
R49	10K			R57	15000 5W	PW5-15000	5W-SQ-15000
R50	5600			R58	560 3W	PW5-56	5W-SQ-56
R51	20K			R59	30		
R52	1000			R60	500		
R53	1000			R61	10000		
R54	2000 5W	PW5-2000	5W-SQ-2000	R62	1meg		
R55	900 5W	PW5-90	5W-SQ-90	R63	50000		
R56	20000 5W	PW5-20000	5W-SQ-20000				

COILS (RF-IF)

ITEM No.	USE	REPLACEMENT DATA		ITEM No.	RATING	REPLACEMENT DATA	
		REALISTIC PART No.	Miller PART No.			Stancor PART No.	Workman TV PART No.
L1	RF						
L2	Osc. Plate						
L3	1st IF						
L4	2nd IF						
L5	3rd IF						
L6	Osc. Plate						
L7	Buffer Plate						
L8	RF Choke						
L9	Ant. Loading						

TRANSFORMER (POWER)

ITEM No.	RATING	REPLACEMENT DATA		ITEM No.	RATING	REPLACEMENT DATA	
		REALISTIC PART No.	Merit PART No.			Stancor PART No.	Triad PART No.
T1	INPUT SEC. 1 SEC. 2 117V @ 125V @ 12.6VCT .5A (or) .230A @ 1.8A 12.6VCT AC (AC Only) @ 3.6A						

TRANSFORMER (MIC.)

ITEM No.	TURNS RATIO	REPLACEMENT DATA		ITEM No.	RATING	REPLACEMENT DATA	
		REALISTIC PART No.	Merit PART No.			Stancor PART No.	Triad PART No.
T2	PRL SEC. 18 IMP. IMP. 400 50K						

TRANSFORMER (AUDIO OUTPUT)

ITEM No.	IMPEDANCE	REPLACEMENT DATA		ITEM No.	RATING	REPLACEMENT DATA	
		REALISTIC PART No.	Merit PART No.			Stancor PART No.	Triad PART No.
T3	70000 Tap @ 50000						

SPEAKER

ITEM No.	TYPE	REPLACEMENT DATA		ITEM No.	RATING	REPLACEMENT DATA	
		REALISTIC PART No.	QUAM PART No.			Stancor PART No.	Triad PART No.
SP1	4" PM 3-40						

POWER RECTIFIERS

ITEM No.	CURRENT (Measured)	REPLACEMENT DATA		ITEM No.	RATING	REPLACEMENT DATA	
		REALISTIC PART No.	RCA PART No.			SARKES TARTZIAN PART No.	SYLVANIA PART No.
M1	.005A						Dual Selenium

FUSES

ITEM No.	TYPE	RATING	REPLACEMENT DATA						
			REALISTIC PART No.		LITTELFUSE PART No.		BUSS PART No.		
M2		1A		HOLDER		FUSE	HOLDER		
M3		250V							
		10A							
		250V							

SIGNAL DIODES

ITEM No.	ORIG. TYPE	REPLACEMENT DATA		ITEM No.	RATING	REPLACEMENT DATA	
		REALISTIC PART No.	GENERAL ELECTRIC PART No.			RAYTHEON PART No.	SYLVANIA PART No.
M4	OA79					IN295	IN295

MISCELLANEOUS

ITEM No.	PART NAME	REALISTIC PART No.	NOTES
M5	Crystal		Receive
M6	Crystal		Transmit
M7	Switch		Operate-Tune (SPDT Slide Type)
M8	Microphone Assy.		Includes Press-to-talk Switch and T2
M9	Switch		Power Off-On (Toggle)

WIRING DATA

General-use Unshielded Hook-up Wire	Use BELDEN No. 8530 (Solid) Available in Ten Colors
Power Cord	Use BELDEN No. 1765-B (6 Ft. Length)
	Use BELDEN No. 1725-K (7 1/2 Ft. Length)




REGENCY MODELS
CB-27, CBM-27-6, CBM-27-12

TRADE NAME	Regency Models CB-27, CBM-27-6, CBM-27-12
MANUFACTURER	Regency, I.D.E.A., 7900 Pendleton Pike, Indianapolis, Indiana
TYPE SET	AC (or Battery) Operated 9 Tube Crystal Controlled Citizens Band Transmitter-Receiver
POWER SUPPLY	Model CB-27: 110-120 Volts AC Model CBM-27-6: 6Volts DC Model CBM-27-12: 12Volts DC
RATING	50 Watts, .45 Amp. @117 Volts AC (Receive) 55 Watts, .5 Amp. @117 Volts AC (Transmit)
TUNING RANGE	Any one of Citizens Band Channels 1 thru 22

NOTICE

ONLY THOSE PERSONS PROPERLY LICENSED BY FCC ARE PERMITTED TO EFFECT REPAIRS OR MAKE CRYSTAL SUBSTITUTION ON THIS TYPE EQUIPMENT.

DIAL CORD STRINGING

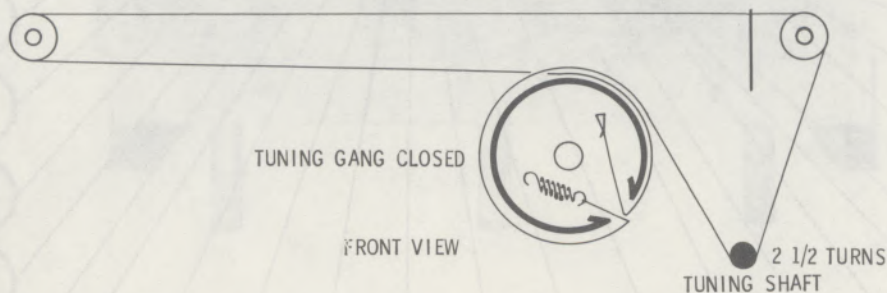


HOWARD W. SAMS & CO., INC. Indianapolis 6, Indiana




The listing of any available replacement part herein does not constitute in any case a recommendation, warranty or guaranty by Howard W. Sams & Co., Inc., as to the quality and suitability of such replacement part. The numbers of these parts have been compiled from information furnished to Howard W. Sams & Co., Inc., by the manufacturers of KZ487



the particular type of replacement part listed. Reproduction or use, without express permission, of editorial or pictorial content, in any manner, is prohibited. No patent liability is assumed with respect to the use of the information contained herein. © 1961 Howard W. Sams & Co., Inc., Indianapolis 6, Indiana. Printed in U.S. of America

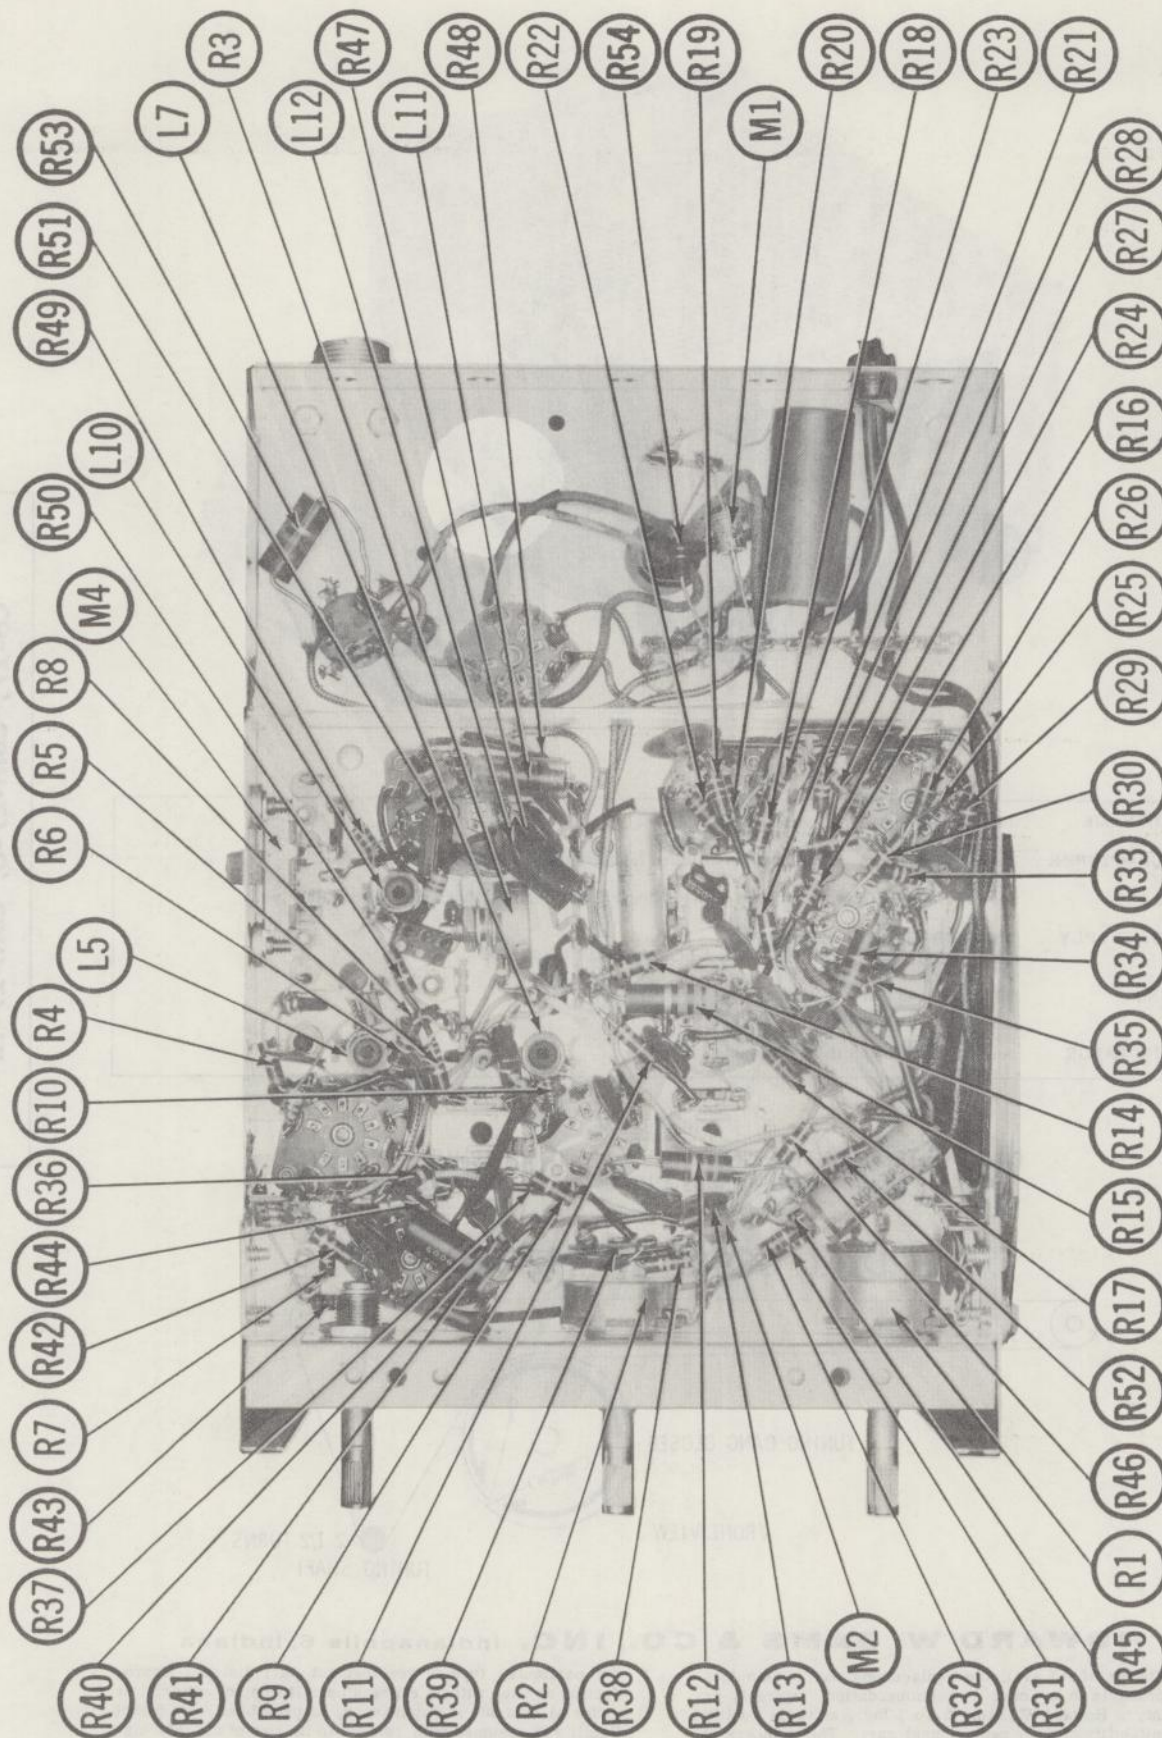

CHASSIS BOTTOM VIEW-RESISTOR, INDUCTOR & MISC. IDENTIFICATION

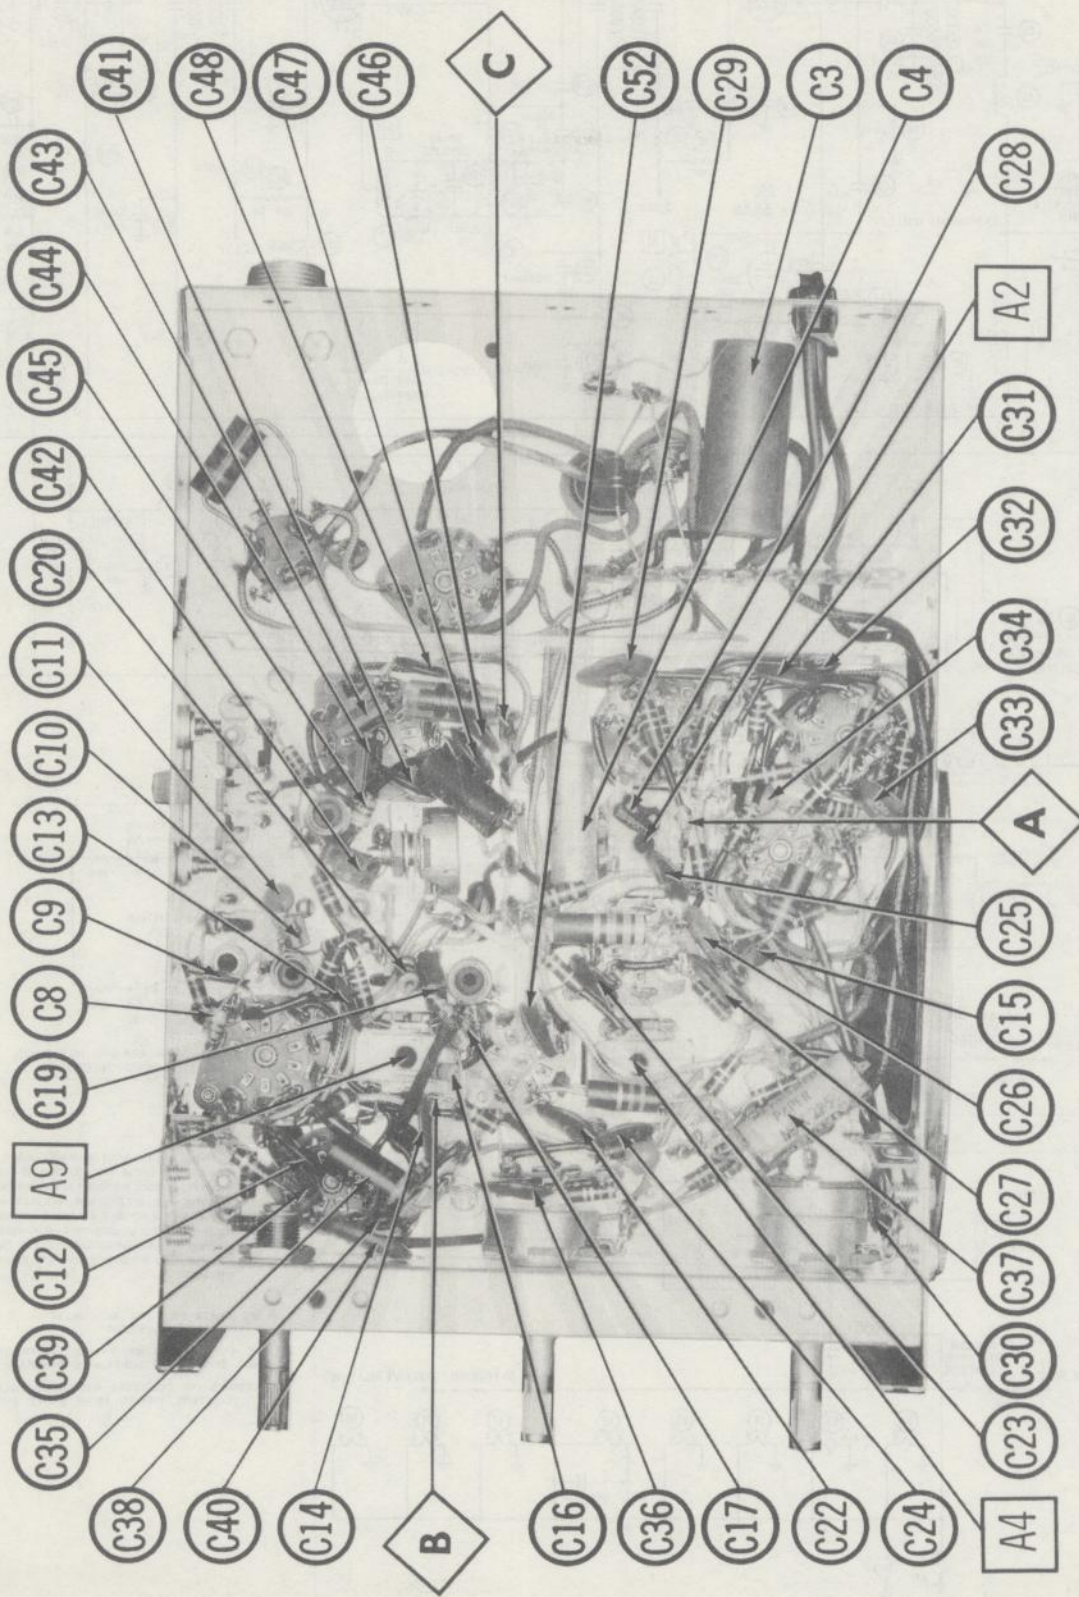

CHASSIS BOTTOM VIEW-ALIGNMENT & CAPACITOR IDENTIFICATION

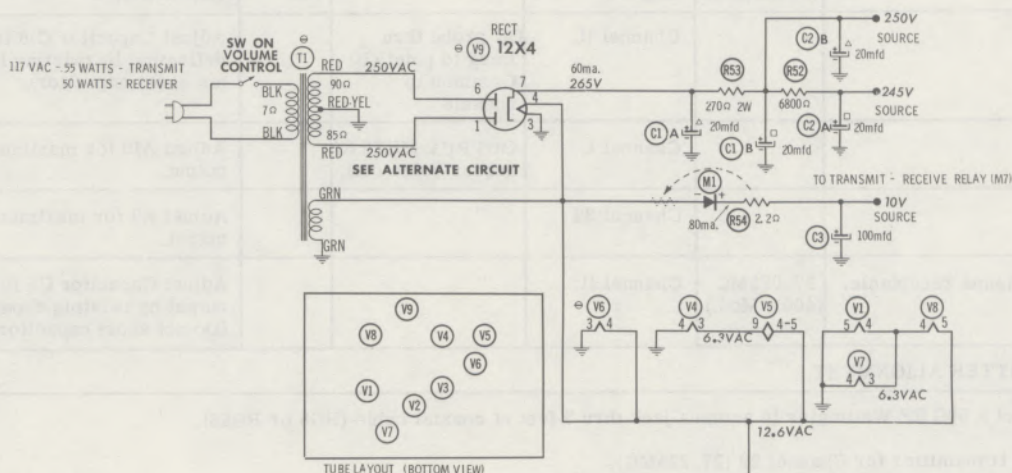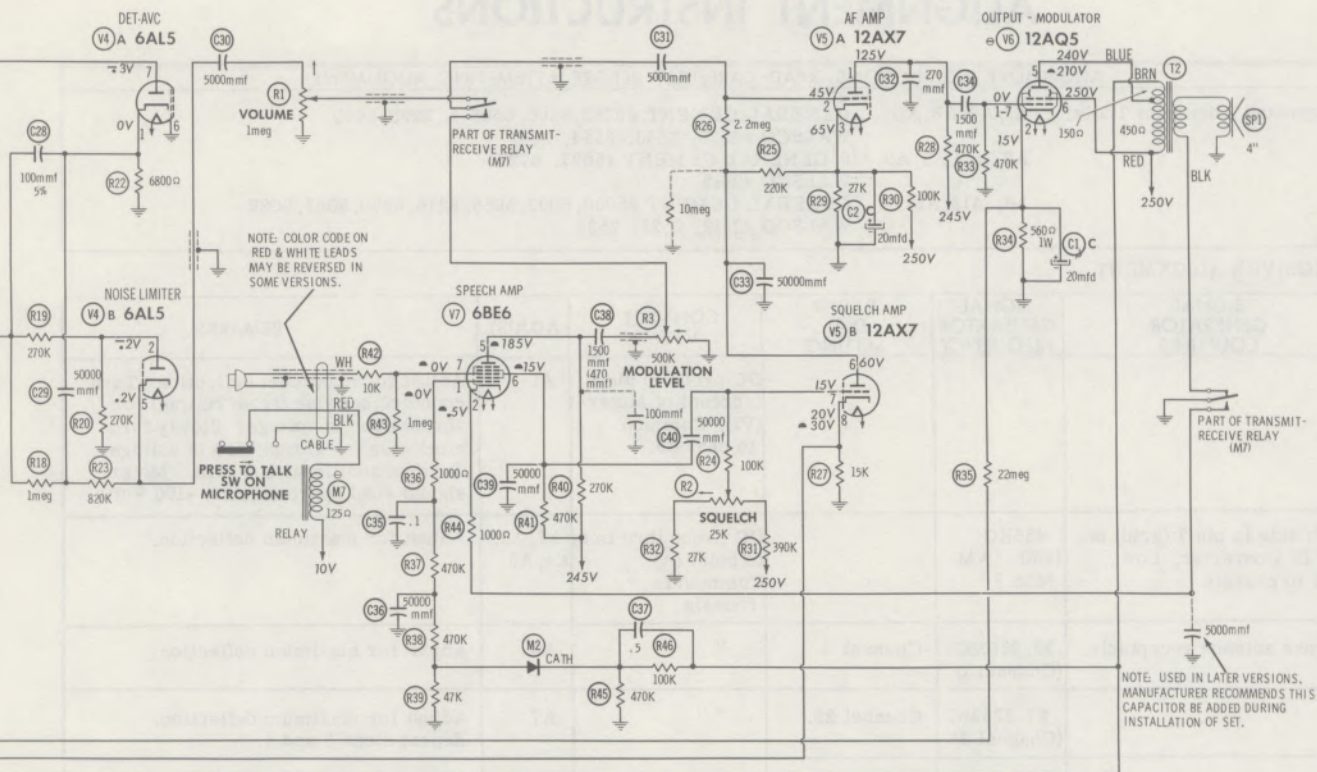


RESISTANCE READINGS

ITEM	TUBE	Pin 1	Pin 2	Pin 3	Pin 4	Pin 5	Pin 6	Pin 7	Pin 8	Pin 9
V1	6AR	168K	1meg	100K	10	0	199K	30	30	47K
V2	6BE6	22K	0	0	10	16800	127K	2.5meg		
V3	6BA6	1.6meg	120	10	10	16800	147K	120		
V4	6AL5	6800	270K	10	0	2.3meg	0	550K		
V5	12AX7	1470K	2.4meg	25K	.10	.10	250K	140K	15K	10
V6	12AQ5	470K	560	0	.10	1720	270	NC		
V7	6BE6	1meg	1000	10	0	1280K	1470K	1meg		
V8	6CX8	100	47K	127K	10	.10	30	2700	123K	1870
V9	12X4	85	NC	0	.10	NC	80	1		

ALL MEASUREMENTS MADE IN "RECEIVE" POSITION UNLESS OTHERWISE DESIGNATED.
 * THIS READING WILL VARY DEPENDING UPON THE CONDITION OF THE ELECTROLYTIC IN THE CIRCUIT.
 † MADE IN "TRANSMIT" POSITION.
 ‡ MEASURED FROM PIN 7 OF V9.

NC NO CONNECTION

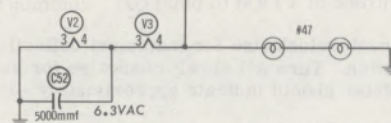

NUMBERS ASSIGNED TO COILS, SWITCHES, PLUGS, SOCKETS, AND TRANSFORMERS ARE TO FACILITATE CIRCUIT TRACING OR COMPONENT REPLACEMENT AND MAY NOT NECESSARILY BE FOUND ON THE UNIT.

REGENCY MODELS
 CB-27, CBM-27-6, CBM-27-12

ALIGNMENT INSTRUCTIONS

ALIGNMENT INSTRUCTIONS—READ CAREFULLY BEFORE ATTEMPTING ALIGNMENT

Suggested Alignment Tools: A1, A7, A8, A11. . . . GENERAL CEMENT #8282, 8606, 8606-L, 9295, 9440
 WALSCO #2526, 2543, 2544, 2545
 A2 thru A5, A9, A10. GENERAL CEMENT #5097, 8727
 WALSCO #2515
 A6, A12, A13. . . . GENERAL CEMENT #5000, 5003, 5066, 8276, 8290, 9087, 9089
 WALSCO #2512, 2525, 2528

RECEIVER ALIGNMENT

	SIGNAL GENERATOR COUPLING	SIGNAL GENERATOR FREQUENCY	RADIO DIAL SETTING	CONNECT VTVM	ADJUST	REMARKS
1.				DC probe to pin 3 (screen) of Mixer (V1). Common to chassis.	A1	Adjust for maximum deflection. Turn counterclockwise (from bottom) for abrupt drop in voltage. Slowly turn clockwise for abrupt rise in voltage. Turn an additional 1/4 turn. Meter should read approximately +100 Volts.
2.	High side to pin 7 (grid) of 2nd IF Converter. Low side to chassis.	455KC (400v AM Mod.)		DC probe thru lme to point A. Common to chassis.	A2, A3, A4, A5	Adjust for maximum deflection.
3.	Across antenna receptacle.	26.965MC (Channel 1)	Channel 1.	"	A6	Adjust for maximum deflection.
4.	"	27.225MC (Channel 2)	Channel 22.	"	A7	Adjust for maximum deflection. Repeat Steps 3 and 4.
5.	"	27.085MC (Channel 11)	Channel 11 Signal.	"	A8, A9, A10	Adjust for maximum deflection. Repeat Step 1.
6.			Channel 11.	DC probe thru lme to point B. Common to chassis.		Adjust Capacitor C16 for maximum deflection by twisting leads. (Do not short capacitor).
7.			Channel 1.	OUTPUT METER across voice coil.		Adjust A10 for maximum noise output.
8.			Channel 22	"		Adjust A9 for maximum noise output.
9.	Across antenna receptacle.	27.085MC (400v Mod.)	Channel 11.	"		Adjust Capacitor C5 for maximum output by twisting capacitor leads. (Do not short capacitor).

TRANSMITTER ALIGNMENT

1. Connect a 50Ω RF Wattmeter to antenna jack thru 3 feet of coaxial cable (RG8 or RG58).
2. Set up transmitter for Channel 22 (27.225MC).
3. Connect DC probe of VTVM to point C, common to chassis.
4. Adjust A11 counterclockwise for maximum deflection. Continue turning all counterclockwise for an abrupt drop in meter deflection. Turn A11 slowly clockwise for an abrupt rise in meter deflection. Continue turning A11 clockwise 1/4 turn. (Meter should indicate approximately -3V).
5. Adjust A12 and A13 for maximum output on RF Wattmeter (2 Watts minimum).

PARTS LIST AND DESCRIPTIONS TUBES

* GENERAL ELECTRIC *		RAYTHEON *		SYLVANIA *	
ITEM No.	USE	TYPE	ITEM No.	USE	TYPE
V1	Mixer-Oscillator	6EA8	V6	Output — Modulator	12AQ5 (6AQ5) *
V2	IF Conv.	6BE6	V7	Speech Amplifier	6BE6
V3	IF Amplifier	6BA6	V8	Trans. Osc. — Final Amp.	6CX8
V4	Det. -AVC-Noise Limiter	6AL5	V9	Rectifier	12X4 (6X4) *
V5	AF Amp. -Squelch Amp.	12AX7			

* Used in 6 Volt versions.

ELECTROLYTIC CAPACITORS


ITEM No.	RATING	REPLACEMENT DATA				NOTES
		REGENCY PART No.	AEROVOX PART No.	CORNELL-DUBILIER PART No.	MALLORY PART No.	
C1A	350	300-773-2	AFH3-28-30	B0300	FP227	
B	350			BBR20-150	TT50X20	
C	50					
C2A	350	300-773-2	AFH3-28-30	B0300	FP227	
B	350			BBR20-150	TT50X20	
C	50					
C3	100	300-718-5	PRS1270	BBR100-25	TC2501	
C4	150	300-718-6	SRE150V10	NLW10-150	TT150X10	

FIXED CAPACITORS

Capacity values given in the rating column are in mfd. for Paper Capacitors, and in mmfd. for Mica and Ceramic Capacitors.

ITEM No.	RATING	REMARKS	REPLACEMENT DATA					
			AEROVOX PART No.	CENTRALAB PART No.	CORNELL-DUBILIER PART No.	ELEMCO PART No.	MALLORY PART No.	SPRAGUE PART No.
C5	2.2 10%		NPO-SI 2.2	TCZ-2R32	C10V23C	CCTO-2R2	CNO-522	10TCC-V22
C6	27 5%		1469-000027	TCZ-27	22RSQ27	CM-19B-270J	MS-427	MS-31
C7	10 10%		1469-00001	DD-103	22RSQ10	CM-19B-100K	MS-410	5HK-S10
C8	1.2 10%		NPO-SI 1.5	TCZ-1R5	C10V15C	CM-19B-100K	CNO-515	10TCC-V12
C9	5000		BPD-005	DD-502	22RSQ1	CD-502	B-250	5HK-D50
C10	10 10%		1469-00001	DD-102	BYA10D1	CD-102	B-210	5HK-D10
C11	1000		BPD-001	DD-502	BYA10D5	CD-502	B-250	5HK-D50
C12	5000		BPD-005	DD-502	BYA10D5	CD-502	B-250	5HK-D50
C13	5000		BPD-001	DD-103	BYA10D5	CD-103	B-110	5HK-S10
C14	10000		BPD-01	DD-103	BYA10S1	CD-103	B-110	5HK-S10
C15	10000		BPD-01	TCZ-R5	BYA10S1	CD-103	B-110	5HK-S10
C16	.5 10%		NPO-SI .5	TCZ-96	22RSQ36	CM-19B-360J	MS-436	
C17	36 5%		1469-000036	822-AZ				
C18	4.5-25	NPO						
C19	20 2%							
C20	39 NT50 10%							
C21	100 10%							
C22	10000	Note 1	NT50-SI 39	TCN-39	C10Q39U	VCN-20-201G	MCE237	10TCC-Q39
C23	10000		1469-0001	TCZ-100	22RS71	CM-19B-101K	MCE235	MS-31
C24	10000		BPD-01	DD-103	BYA10S1	CD-103	B-110	5HK-S10
C25	10000		BPD-01	DD-103	BYA10S1	CD-103	B-110	5HK-S10
C26	10000		BPD-01	DD-103	BYA10S1	CD-103	B-110	5HK-S10
C27	50000		BPD-05	DD-503	BYA10D5	CD-502	B-250	5HK-D50
C28	100 5%		BPD-05	DD-503	BYA10D5	CD-502	B-250	5HK-D50
C29	50000		BPD-05	DD-503	BYA10D5	CD-502	B-250	5HK-D50
C30	50000		BPD-05	DD-502	BYA10D5	CD-502	B-250	5HK-D50
C31	5000		BPD-005	DD-502	BYA10D5	CD-502	B-250	5HK-D50
C32	270		DL-270	DD-271	L0727	CD-271	B-327	10TTS-T27
C33	50000		BPD-05	DD-503	BYA10D5	CD-502	B-250	5HK-D50
C34	15000		BPD-0015	DD-152	BYA10D15	CD-152	B-215	5HK-D15
C35	1 200V		P288N-1	DF-104	CUB2P1	4DP-3-104	GP150	27M-P50
C36	50000		BPD-05	DD-503	CUB2P5	4DP-3-504	GP150	27M-P50
C37	.5 200V		P288N-5	DD-503	CUB2P5	4DP-3-504	GP150	27M-P50
C38	1500	(470) †	BPD-0015	DD-152	BYA10D15	CD-152	B-215	5HK-D15
C39	50000		BPD-05	DD-503	BYA10D5	CD-502	B-250	5HK-D50
C40	50000		BPD-05	DD-503	BYA10D5	CD-502	B-250	5HK-D50
C41	10000		BPD-01	DD-103	BYA10S1	CD-103	B-110	5HK-S10
C42	100 5%	(180) †	1469-0001	TCZ-100	22RS71	CM-19B-101J	MCE235	MS-31
C43	56 5%		1469-000056	TCZ-56	22RSQ56	CM-19B-560J	CNO-456	MS-456
C44	68 5%		1469-000068	TCZ-68	22RSQ68	CM-19B-680J	CNO-468	MS-468
C45	1.2 10%		NPO-SI 1.5	TCZ-1R5	C10V15C	CM-19B-101J	CNO-515	10TCC-V12
C46	10000	(1500) †	BPD-01	DD-103	BYA10S1	CD-103	B-110	5HK-S10
C47	10000	Note 1	BPD-01	DD-103	BYA10S1	CD-103	B-110	5HK-S10
C48	10000		BPD-01	DD-103	BYA10S1	CD-103	B-110	5HK-S10

CHASSIS—TOP VIEW

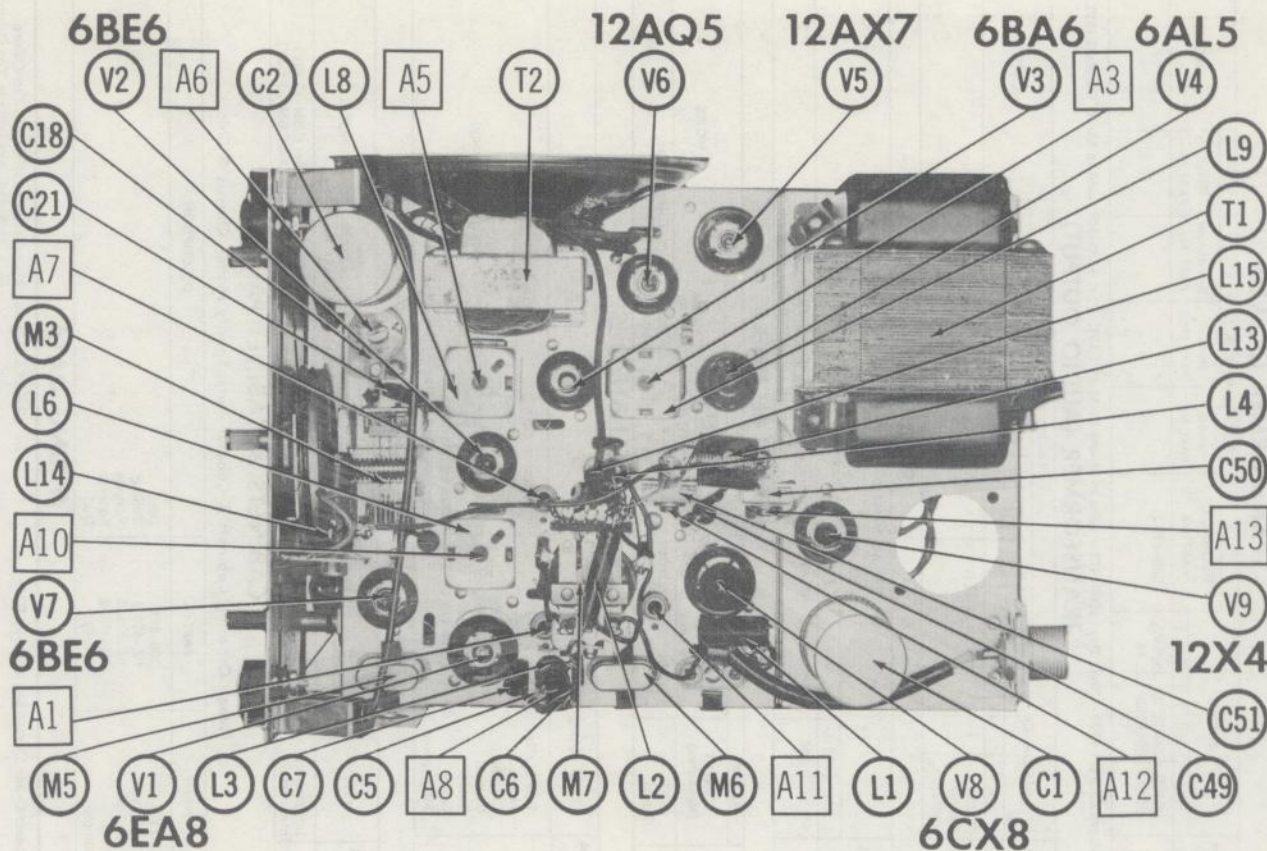

PARTS LIST AND DESCRIPTIONS (Continued)

FIXED CAPACITORS (cont)

ITEM No.	RATING	REMARKS	REPLACEMENT DATA			
			AEROVOX PART No.	CENTRALAB PART No.	CORNEIL-DUBIER PART No.	ELMENDO PART No.
C49	510 10 μ		1469-000510	5R151	CM-19B-51UK	MS-351
C50	3-30				461	
C51	25-280				464	
C52	5000				CCD-502	
			BPD-005	DD-502	BYA10D5	5HK-D50

Note 1. Not used in some versions.

† Alternate Value.

CONTROLS

ITEM No.	RATING	REMARKS	REPLACEMENT DATA			
			CENTRALAB PART No.	CLAROSTAT PART No.	CTS-IRC PART No.	MALLORY PART No.
R1A	Imeg	100-093-8	B-70-S	A47-Imeg-Z	Q13-137	U53
R1B	Imeg	100-093-9	Not Req.	KSS-3	Not Req.	US-26
R2A	25K	Switch	B-27	SWE-12	76-1	U28
R2B	25K	Shift	Not Req.	A47-25K-Y	Not Req.	MLCN55A
R3	500K	1/4	44-500K-W	KSS-3	Not Req.	
			JL-504	44-500K-W		

RESISTORS

All wattages 1/2 watt, or less, unless otherwise listed.

ITEM No.	RATING	REMARKS	REPLACEMENT DATA			
			IRC PART No.	WORKMAN TV PART No.	RATING	REMARKS
R4	Imeg					
R5	59K					
R6	100K					
R7	47K					
R8	68K					
R9	Imeg					
R10	22K					
R11	6800 Ω					
R12	27K 1W					
R13	100K					
R14	6800 Ω					
R15	47K 1W					
R16	47K					
R17	120 Ω					
R18	Imeg					
R19	270K					
R20	270K					
R21	Imeg					
R22	6800 Ω					
R23	820K					
R24	100K					
R25	220K					
R26	2.2meg					
R27	15K					
R28	470K					
R29	27K					

† Alternate Value.

COILS (RF-IF)

ITEM No.	USE	REPLACEMENT DATA			
		REGENCY PART No.	Merit PART No.	Miller PART No.	Stancor PART No.
L1	RF Choke(200uh)				
L2	RF Choke (10uh)				
L3	Ant.				
L4	RF Choke(200uh)				
L5	1st Receiver Osc.				
L6	1st IF (10.7MC)				
L7	2nd Receiver Osc.				
L8	1st IF (455KC)				
L9	2nd IF (455KC)				
L10	Trans. Osc.				
L11	RF Choke(200uh)				
L12	RF Choke (200uh)				
L13	Final Output				
L14	RF Choke				
L15	RF Choke(200uh)				

TRANSFORMER (POWER)

ITEM No.	RATING	REPLACEMENT DATA			
		PRI.	SEC. 1	SEC. 2	REGENCY PART No.
T1	117V @ 500VCT @ .075A 1.8A DC				500-470 Ω

① Alternate Part #500-470-1. Part #500-472-1 used in Model CBM-27 (12V). Part #500-503 used in Model CBM-27 (6V).

TRANSFORMER (AUDIO OUTPUT)

ITEM No.	IMPEDANCE	REPLACEMENT DATA			
		PRI.	SEC.	REGENCY PART No.	REGENCY PART No.
T2	7500 Ω Tap @ 5600 Ω		3-4 Ω	(Part of SP1)	

SPEAKER

ITEM No.	TYPE	REPLACEMENT DATA			
		SIZE	FIELD	V. C. IMP.	REGENCY PART No.
SP1	4"	PM	3-4 Ω	500-467 *	4A07 †

* Includes T2

† Cut Mounting Tab to Fit.

POWER RECTIFIERS

ITEM No.	RATING	REPLACEMENT DATA			
		CURRENT (Measured)	REGENCY PART No.	RCA PART No.	REGENCY PART No.
M1	.080A Signal		SD-91 *	2F4 *	SR200 *
M2			F-6 *	IN1763 *	SR500 *

MISCELLANEOUS

ITEM No.	PART NAME	REGENCY PART No.	REPLACEMENT DATA			
			REGENCY PART No.	SARKES TARZIAN PART No.	SYLVANIA PART No.	REGENCY PART No.
M3	Tuning Cap.		300-876			
M4	Switch		SS-32			
M5	Crystal		300-886			
M6	Relay		300-887			
M7	Microphone		101-436			
			101-514			
			101-391			

VIBRATOR

ITEM No.	TYPE	INPUT VOLTS	FREQUENCY	REPLACEMENT DATA			
				REGENCY PART No.	CORNEIL-DUBIER PART No.	MALLORY PART No.	REGENCY PART No.
	Interrupter	6	115 $\pm$				
		12	115 $\pm$				


CABINETS & CABINET PARTS

(When Ordering Cabinets & Cabinet Parts, Specify Model, Chassis & Color)

ITEM No.	NAME	PART No.	REPLACEMENT DATA			
			REGENCY PART No.	CORNEIL-DUBIER PART No.	MALLORY PART No.	REGENCY PART No.
	Glass					
	Knob					
	Knob					
	Knob					
	Pointer					

WIRING DATA

General-use Unshielded Hook-up Wire		Use BELDEN No. 8530 (Solid) Available in Ten Colors	
Power Cord		8524 (Stranded) Available in Ten Colors	
		Use BELDEN No. 1765-B (6 Ft. Length)	
		1765-K (7 1/2 Ft. Length)	

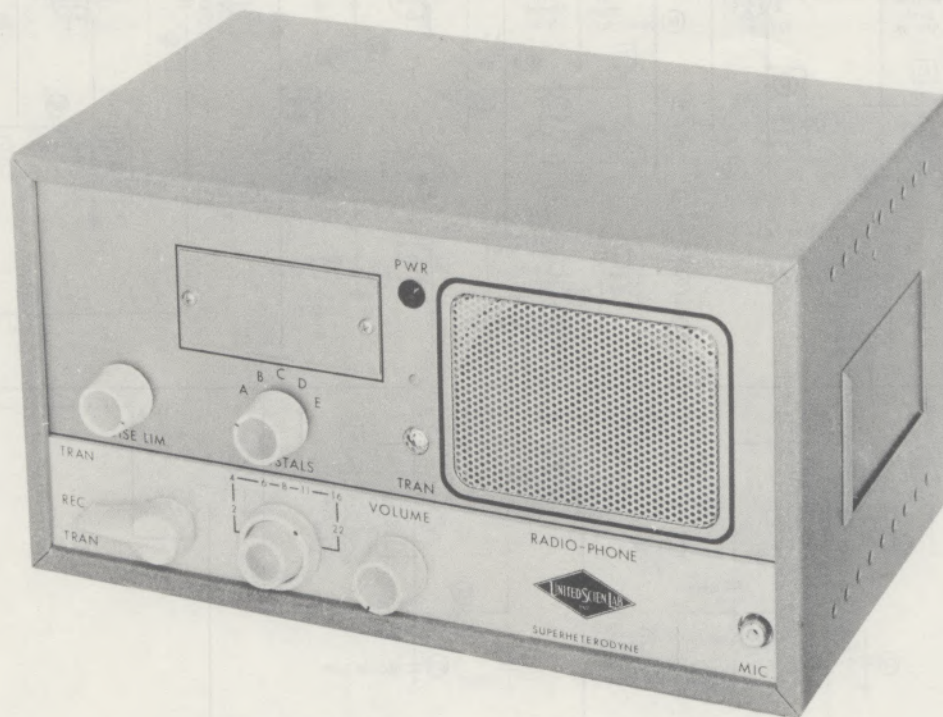

TRADE NAME	U. S. L. Model TR-800
MANUFACTURER	United Scientific Laboratories Inc., 35-15 37th Ave., Long Island City 1, N. Y.
TYPE SET	AC-Battery Operated Crystal Controlled 6 Tube Citizens Band Transmitter-Receiver
POWER SUPPLY	110 - 120 Volts AC, 50-60 Cycles (or) 6 or 12 Volt Storage Battery
RATING	40 Watts, .38 Amp. @ 117 Volts AC
FREQ. RANGE	TRANSMITTER: Any 5 of Citizens Band Channels 1 thru 22 RECEIVER: All Citizens Band Channels 1 thru 22

NOTICE


ONLY THOSE PERSONS PROPERLY LICENSED BY FCC ARE PERMITTED TO MAKE CRYSTAL SUBSTITUTION OR EFFECT REPAIRS ON THE TRANSMITTER PORTION OF THIS UNIT.

HOWARD W. SAMS & CO., INC. Indianapolis 6, Indiana



The listing of any available replacement part herein does not constitute in any case a recommendation, warranty or guaranty by Howard W. Sams & Co., Inc., as to the quality and suitability of such replacement part. The numbers of these parts have been compiled from information furnished to Howard W. Sams & Co., Inc., by the manufacturers of KZ385

the particular type of replacement part listed. Reproduction or use, without express permission, of editorial or pictorial content, in any manner, is prohibited. No patent liability is assumed with respect to the use of the information contained herein. © 1961 Howard W. Sams & Co., Inc., Indianapolis 6, Indiana. Printed in U.S. of America

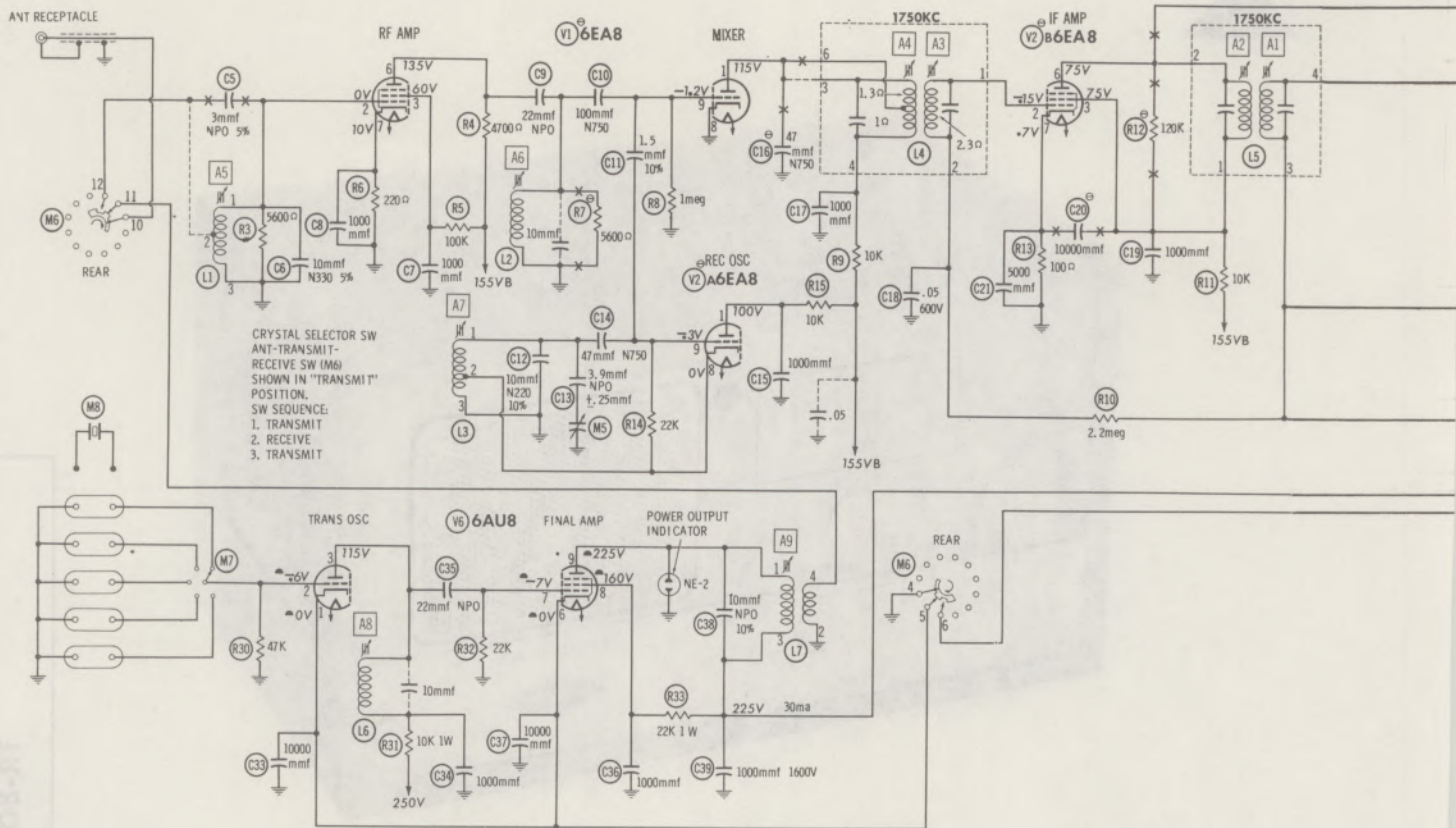

NUMBERS ASSIGNED TO COILS, SWITCHES, PLUGS, SOCKETS, AND TRANSFORMERS ARE TO FACILITATE CIRCUIT TRACING OR COMPONENT REPLACEMENT AND MAY NOT NECESSARILY BE FOUND ON THE UNIT.

RESISTANCE READINGS


ITEM	TUBE	Pin 1	Pin 2	Pin 3	Pin 4	Pin 5	Pin 6	Pin 7	Pin 8	Pin 9
V1	6EA8	† 15K	0Ω	† 100K	0Ω	.1Ω	† 10K	220Ω	0Ω	1meg
V2	6EA8	† 15K	2.8meg	† 15K	0Ω	.1Ω	† 15K	100Ω	0Ω	22K
V3	6AL5	2.1meg	500K	.1Ω	0Ω	2.1meg	0Ω	500K		
V4	ECC83 12AX7	† 475K	4.7meg	0Ω	.1Ω	.1Ω	† 225K	470K	3300Ω	0Ω
V5	6V6GT	0Ω	.1Ω	† 630Ω	† 330Ω	470K	TP	0Ω	470Ω	
V6	6AU8	† 0Ω	47K	† 10K	.1Ω	0Ω	† 0Ω	22K	† 22K	† 680Ω

ALL MEASUREMENTS MADE IN "RECEIVE" POSITION UNLESS OTHERWISE DESIGNATED.


▲ MEASURED IN "TRANSMIT" POSITION.

† MEASURED FROM OUTPUT OF M1.







NC NO CONNECTION
TP TIE POINT

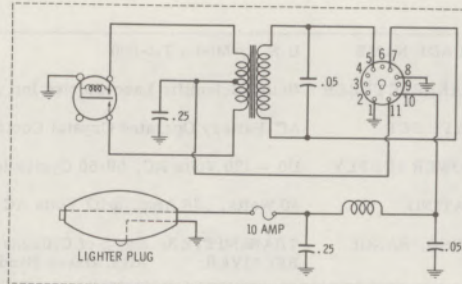

INPUT POWER CIRCUIT
USED IN 6 VOLT
OPERATION

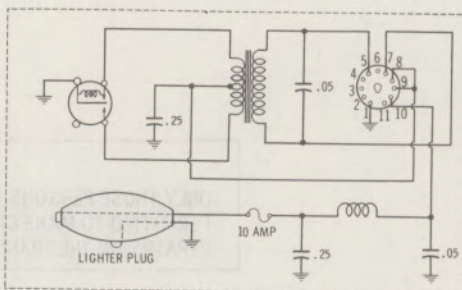

INPUT POWER CIRCUIT
USED IN 12 VOLT
OPERATION

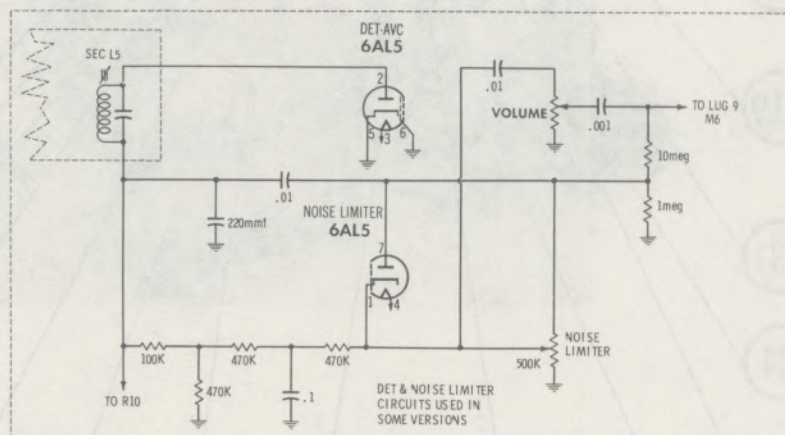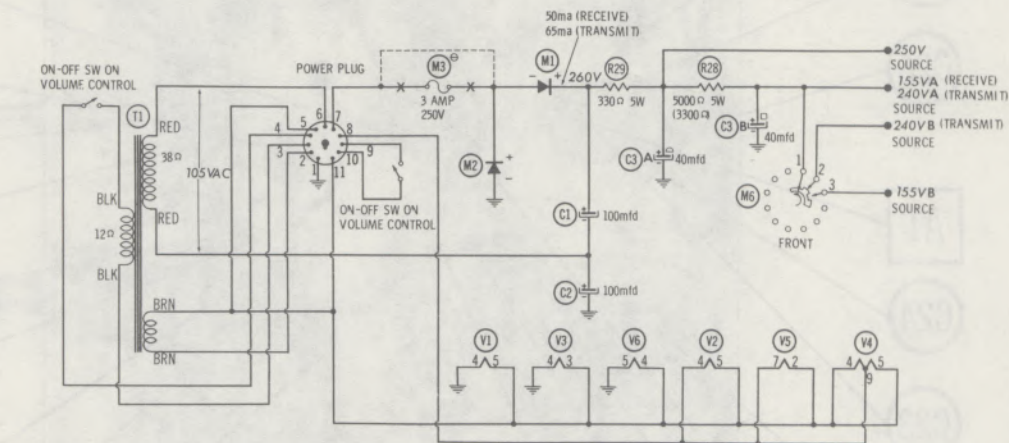


- ⊖ SEE PARTS LIST FOR ALTERNATE
VALUE OR APPLICATION


DC COIL RESISTANCE VALUES UNDER ONE OHM
NOT SHOWN ON SCHEMATIC DIAGRAM

ARROWS ON CONTROLS INDICATE CLOCKWISE ROTATION
(CONTROL VIEWED FROM SHAFT END)

139

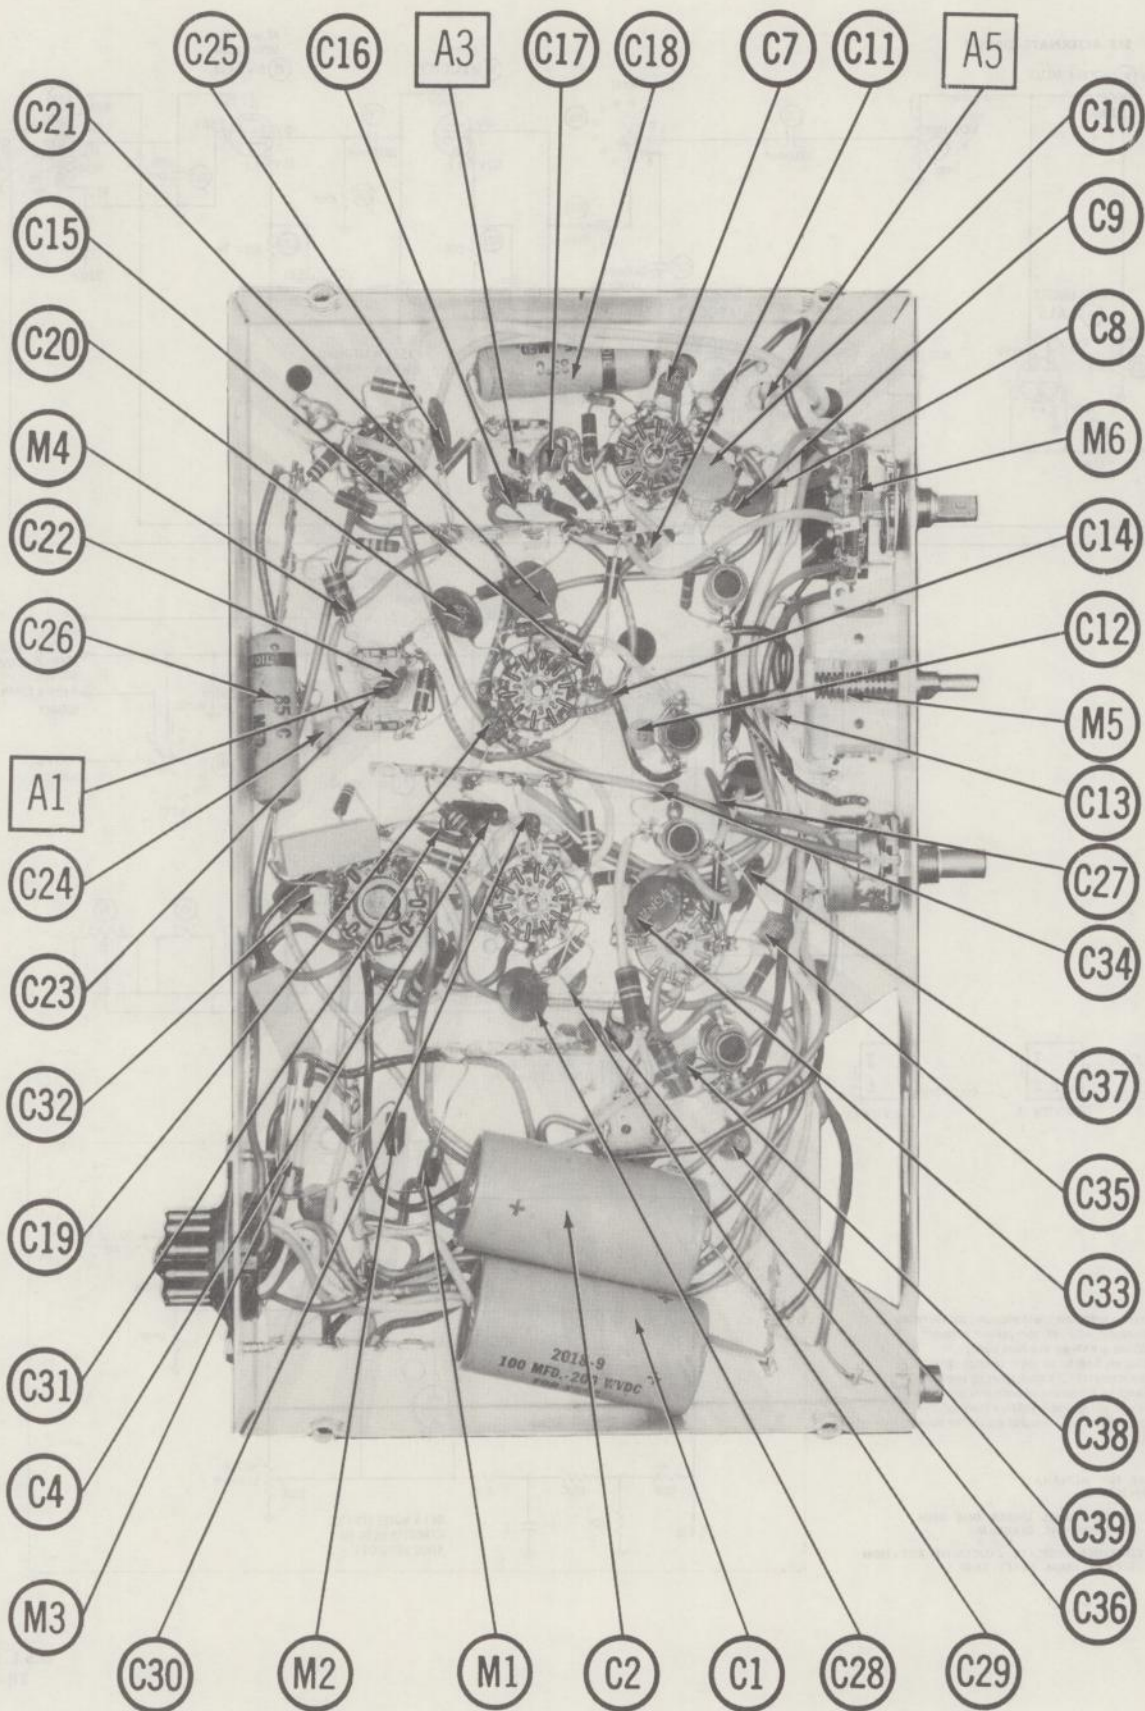

CHASSIS BOTTOM VIEW-ALIGNMENT, CAPACITOR & MISC. IDENT.

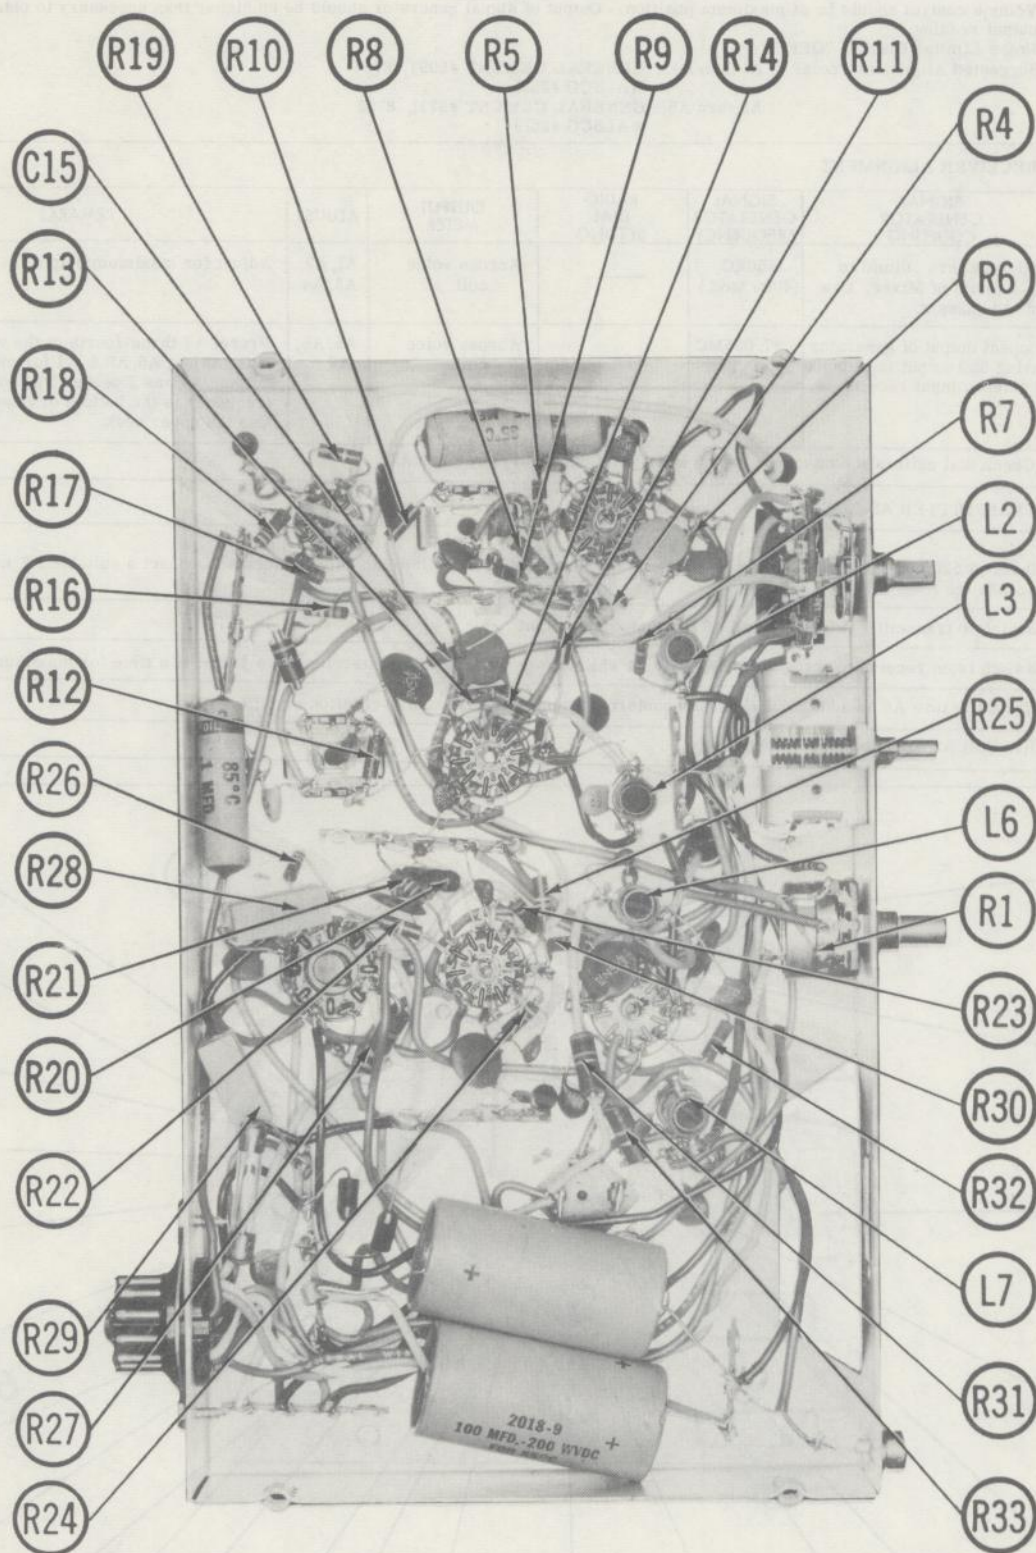

CHASSIS BOTTOM VIEW-RESISTOR & INDUCTOR IDENT.

ALIGNMENT INSTRUCTIONS

ALIGNMENT INSTRUCTIONS—READ CAREFULLY BEFORE ATTEMPTING ALIGNMENT

Volume control should be at maximum position. Output of signal generator should be no higher than necessary to obtain an output reading.

Noise Limiter Control "OFF".

Suggested Alignment Tools: A1 thru A4...GENERAL CEMENT #5097, 8727
WALSCO #2515

A5 thru A9...GENERAL CEMENT #8721, 8722
WALSCO #2519


RECEIVER ALIGNMENT

	SIGNAL GENERATOR COUPLING	SIGNAL GENERATOR FREQUENCY	RADIO DIAL SETTING	OUTPUT METER	ADJUST	REMARKS
1.	High side thru .01mfd to pin 9 (grid) of Mixer. Low side to chassis.	1750KC (400v Mod.)	—	Across voice coil.	A1, A2, A3, A4	Adjust for maximum output.
2.	Connect output of generator having 52Ω output impedance to antenna input receptacle.	27.065MC	—	Across voice coil.	A5, A6, A7	Preset A7 three-fourth of the way out. Adjust A5, A6 & A7 for maximum output. A7 has 2 peaks. The image frequency is the bottom or lower peak. Use the upper peak.
3.	Check dial calibration on channels 1, 9 and 22. If necessary, retouch A7.					

TRANSMITTER ADJUSTMENT

Insert a 52Ω non-inductor dummy load (minimum 3 watt dissipation) into the antenna socket. Connect a suitable RF meter across the load.

1. Switch to transmit. Adjust A8 and A9 for maximum output.
2. Switch from receive to transmit several times while slowly turning A8 counterclockwise $\frac{1}{2}$ turn at a time for maximum output.
3. Carefully turn A8 an additional $1\frac{1}{2}$ turns counterclockwise for maximum oscillation stability.
4. Readjust A9 for maximum output.

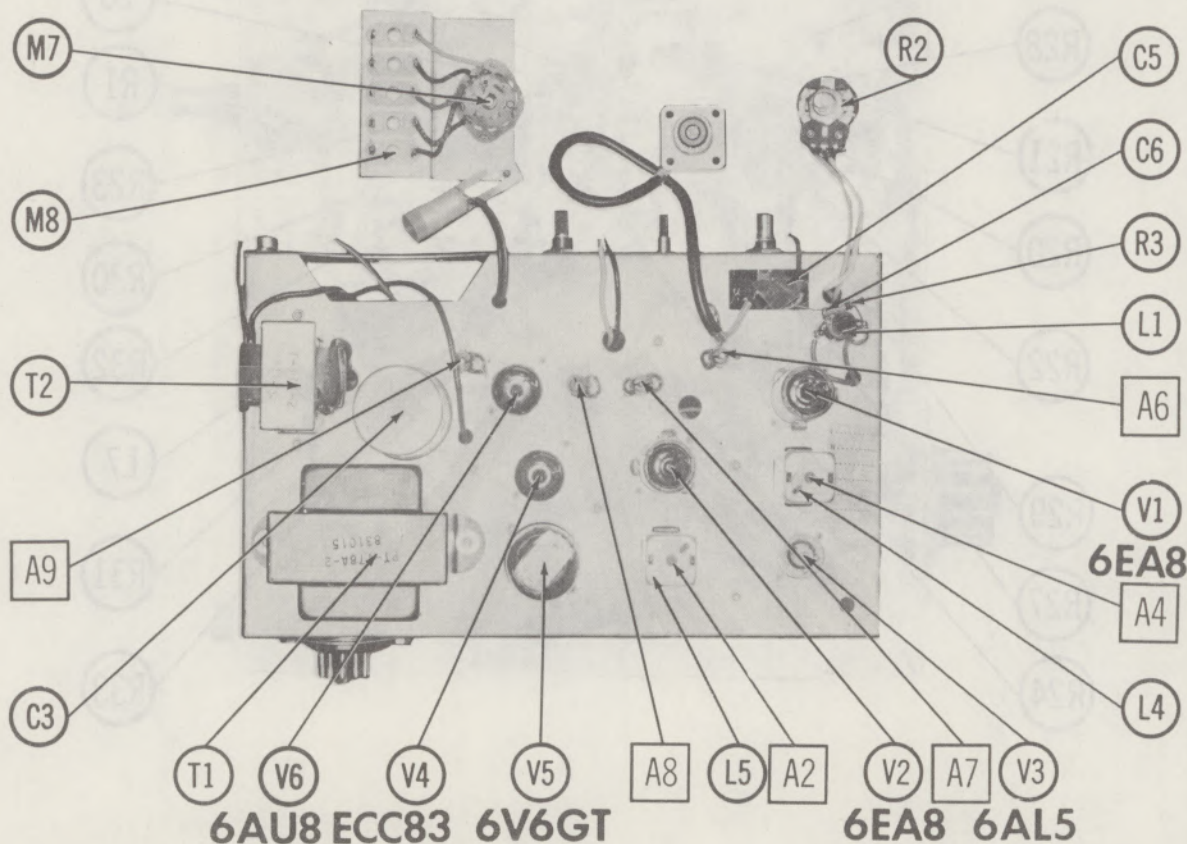

CHASSIS—TOP VIEW

PARTS LIST AND DESCRIPTIONS

TUBES

ITEM No.	GENERAL ELECTRIC		RAYTHEON	SYLVANIA		TYPE
	USE		ITEM No.	USE		
V1	RF Amp. - Mixer	6EA8 (6UBA) *	V4	AF Amp. - Speech Amp.	ECC83/12AX7	
V2	Rec. Osc. - IF Amp.	6EA8 (6UBA) *	V5	AF Output-Modulator	6V6GT	
V3	Noise Limiter	6AL5	V6	Trans. Osc. - Final Amp.	6AU6	

* Alternate

ELECTROLYTIC CAPACITORS

ITEM No.	RATING		REPLACEMENT DATA		NOTES
	CAP.	VOLT.	CORNEILL-DUBILIER PART No.	MALLORY PART No.	
C1	100	200	BRU0035	TCI265	TD-100-200 TVAS-1445 *
C2	100	200	PRSI595	TCI265	TD-100-200 TVAS-1445 *
C3A	40	350	BRU0035	FP387.5	TMT-3367 TVL-3754.5
C3B	40	350	C0870		
C4	5	10	PTT-10005	NLW5-15	TE-1127

* Not normally in distributor's stock. Available thru distributor on order to manufacturer.

FIXED CAPACITORS

Capacity values given in the rating column are in mfd. for Paper Capacitors, and in mmfd. for Mica and Ceramic Capacitors.

ITEM No.	RATING	REMARKS	REPLACEMENT DATA		SPRAGUE PART No.
			CORNEILL-DUBILIER PART No.	ELENCO PART No.	
C5	3 NPO 5%		C10V3C	CCTO-3R3	CNO-533
C6	10 N330 5%		TC4-10		10TCC-V33
C7	1000		DD-102	BYA10D1	10TCC-Q33
C8	1000		DD-102	BYA10D1	5HK-D10
C9	22 NPO		DTZ-22	C10Q22C	5HK-D10
C10	100 N750		DTN-100	CCTN-101	10TCC-Q22
C11	1.5 10%		TCZ-1R5	C10V15C	10TCC-V15
C12	10 N220 10%				10TCC-Q10
C13	3.9 NPO +25mmf				10TCC-V39
C14	47 N750		DTN-47	C10Q47U	10TCU-Q47
C15	1000		DD-102	BYA10D1	5HK-D10
C16	47 N750		DTN-47	C10Q47U	10TCU-Q47
C17	1000	Note 1	DD-102	BYA10D1	5HK-D10
C18	1000		DD-503	C10Q503	5HK-D10
C19	1000		DD-503	C10Q503	5HK-D10
C20	1000	Note 1	DD-102	BYA10D1	5HK-D10
C21	5000		DD-102	BYA10D1	5HK-D10
C22	10 NPO 10%		DD-102	BYA10D1	5HK-D10
C23	10 N750		DD-102	BYA10D1	5HK-D10
C24	220 10%		DD-102	BYA10D1	5HK-D10
C25	20000		DD-102	BYA10D1	5HK-D10
C26	.1 200V		DD-102	BYA10D1	5HK-D10
C27	1000		DD-102	BYA10D1	5HK-D10
C28	1000		DD-102	BYA10D1	5HK-D10
C29	1000		DD-102	BYA10D1	5HK-D10
C30	1000		DD-102	BYA10D1	5HK-D10
C31	1000		DD-102	BYA10D1	5HK-D10
C32	2000		DD-102	BYA10D1	5HK-D10
C33	1000		DD-102	BYA10D1	5HK-D10
C34	1000		DD-102	BYA10D1	5HK-D10
C35	22 NPO		DD-102	BYA10D1	5HK-D10
C36	1000		DD-102	BYA10D1	5HK-D10
C37	1000		DD-102	BYA10D1	5HK-D10
C38	10 NPO 10%		DD-102	BYA10D1	5HK-D10
C39	1000 1600V		DD-102	BYA10D1	5HK-D10

* Not normally in distributor's stock. Available thru distributor on order to manufacturer.

† Alternate Value.

Note 1. Not used in some versions.

CONTROLS

ITEM No.	RATING	REPLACEMENT DATA		INSTALLATION NOTES
		U.S. L. PART No.	CENTRALAB PART No.	
R1A	1 meg			
B	Shaft			
C	Switch			
R2	10meg			

Note 1. Some versions may use 2meg in this application.

Note 2. Some versions may use 500K in this application.

RESISTORS

All wattages 1/2 watt, or less, unless otherwise listed.

ITEM No.	RATING	REPLACEMENT DATA		REMARKS	ITEM No.	RATING	REPLACEMENT DATA		REMARKS
		U.S. L. PART No.	WORKMAN TV PART No.				U.S. L. PART No.	WORKMAN TV PART No.	
R3	5600Ω				R19	1meg			
R4	4700Ω				R20	270K			
R5	100K				R21	470K			
R6	220Ω				R22	220K			
R7	5600Ω				R23	3300Ω			
R8	1meg				R24	4.7meg			
R9	10K				R25	470K			
R10	2.2meg				R26	470K			
R11	10K				R27	470Ω 1W			
R12	120K				R28	5000Ω 5W			
R13	100Ω				R29	330Ω 5W			
R14	22K				R30	47K			
R15	10K				R31	10K 1W			
R16	680K				R32	22K			
R17	1meg				R33	22K 1W			
R18	470K								

* Alternate Value.

Note 1. Not used in some versions.

COILS (RF-IF)

ITEM No.	USE	REPLACEMENT DATA		NOTES
		U.S. L. PART No.	WORKMAN TV PART No.	
L1	Ant.			
L2	RF			
L3	Osc.			
L4	Input IF			
L5	Output IF			
L6	T transmitter Osc.			
L7	T transmitter Output			

TRANSFORMER (POWER)

ITEM No.	RATING	REPLACEMENT DATA		NOTES
		U.S. L. PART No.	WORKMAN TV PART No.	
T1	117V @ .39A (AC)			

PARTS LIST AND DESCRIPTIONS (Continued)

TRANSFORMER (AUDIO OUTPUT)

ITEM No.	IMPEDANCE		REPLACEMENT DATA			NOTES
	PRI.	SEC.	U. S. L. PART No.	Merit PART No.	Thorndarson PART No.	
T2	6500Ω Tap @ 4800Ω	3-4Ω	T-179-2			

SPEAKER

ITEM No.	TYPE		REPLACEMENT DATA		NOTES
	SIZE	V. C. IMP.	U. S. L. PART No.	GUAM PART No.	
SP1	4"	PM 3-4Ω	7896144A (S7171)	4A1	

POWER RECTIFIERS

ITEM No.	BATING CURRENT (Measured)	REPLACEMENT DATA			NOTES
		U. S. L. PART No.	RCA PART No.	SARKES TAZIAN PART No.	
M1	.065A	IN1763	40H	SR500	Silicon Type
M2	.065A	IN1763	40H	SR500	

FUSES

ITEM No.	TYPE	RATING	REPLACEMENT DATA		
			U. S. L. PART No.	LITTELFUSE PART No.	BUSS PART No.
M3	3AG	3A 250V P/T	(Note 1)	318003 (3A 250V P/T)	GVJ 3

Note 1. Not used in some versions.

SIGNAL DIODES

ITEM No.	ORIG. TYPE	REPLACEMENT DATA			NOTES
		U. S. L. PART No.	GENERAL ELECTRIC PART No.	RAYTHEON PART No.	
M4	IN34A		IN34A	IN34A	AVC Diode (Pigtail)

MISCELLANEOUS

ITEM No.	PART NAME	U. S. L. PART No.	NOTES
M5	Tuning Cap.		Antenna, Transmit-Receive-Transmit, (Rotary Type) Crystal Selector (Rotary Type)
M6	Switch		
M7	Switch		
M8	Crystal		


WIRING DATA

General-use Unshielded Hook-up Wire Use BELDEN No. 8530 (Solid) Available in Ten Colors
 8524 (Stranded) Available in Ten Colors
 Power Cord Use BELDEN No. 1765-B (6 Ft. Length)
 1725-K (7½ Ft. Length)

PHOTOFACT® Folder



VIKING MODELS 242-126,
242-127, 242-128, 242-129

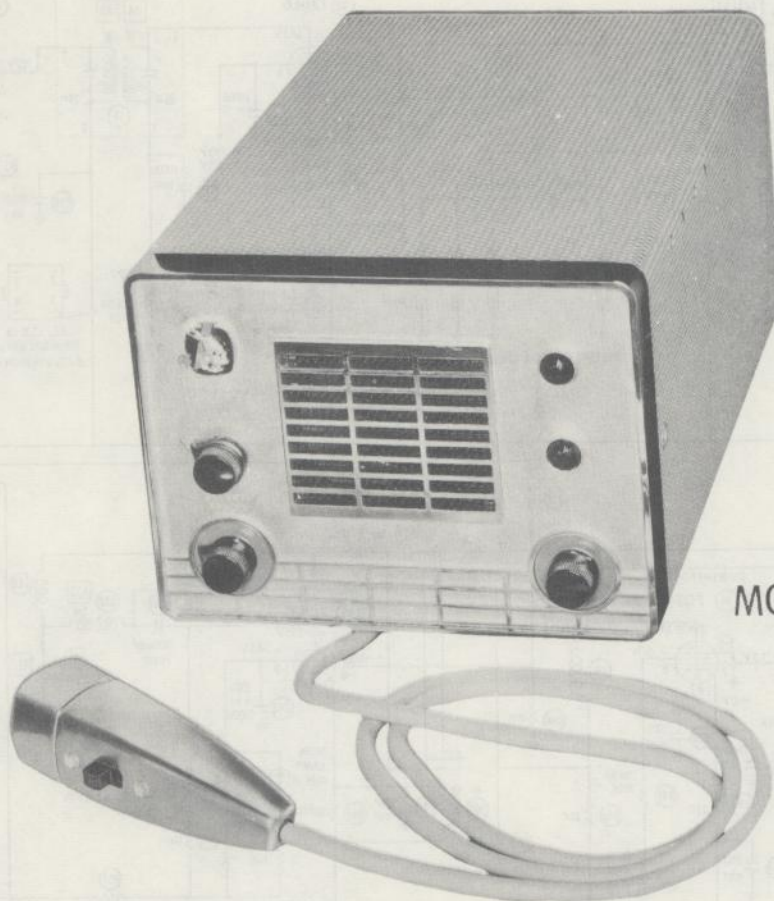

MODEL 242-128

VIKING MODELS 242-126,
242-127, 242-128, 242-129

TRADE NAME	Johnson Viking Models 242-126, 242-127, 242-128, 242-129
MANUFACTURER	E. F. Johnson Co., Waseca, Minnesota
TYPE SET	AC-Battery Operated 10 Tube Crystal Controlled Citizens Band Transmitter-Receiver
POWER SUPPLY	Model 242-126 : 110-120 Volts AC, 60 Cycles Model 242-127 : 110-120 Volts AC, 60 Cycles or 6 Volt Storage Battery Model 242-128 : 110-120 Volts AC, 60 Cycles or 12 Volt Storage Battery Model 242-129 : 110-120 Volts AC, 60 Cycles or 24 Volt Storage Battery
RATING	Model 242-128 : 61 Watts, .58 Amp. @117 Volts AC (Receive) 73 Watts, .68 Amp. @117 Volts AC (Transmit) 4.8 Amp. @12.6 Volts AC (Receive) 5.5 Amp. @12.6 Volts AC (Transmit)
FREQ. RANGE	Any 5 of Citizens Band Channels 1 thru 23

NOTICE


ONLY THOSE PERSONS PROPERLY LICENSED BY FCC ARE PERMITTED TO EFFECT REPAIRS OR MAKE CRYSTAL SUBSTITUTION ON THIS TYPE EQUIPMENT.

HOWARD W. SAMS & CO., INC. Indianapolis 6, Indiana





The listing of any available replacement part herein does not constitute in any case a recommendation, warranty or guaranty by Howard W. Sams & Co., Inc., as to the quality and suitability of such replacement part. The numbers of these parts have been compiled from information furnished to Howard W. Sams & Co., Inc., by the manufacturers of KZ386

the particular type of replacement part listed. Reproduction or use, without express permission, of editorial or pictorial content, in any manner, is prohibited. No patent liability is assumed with respect to the use of the information contained herein. © 1961 Howard W. Sams & Co., Inc., Indianapolis 6, Indiana. Printed in U.S. of America

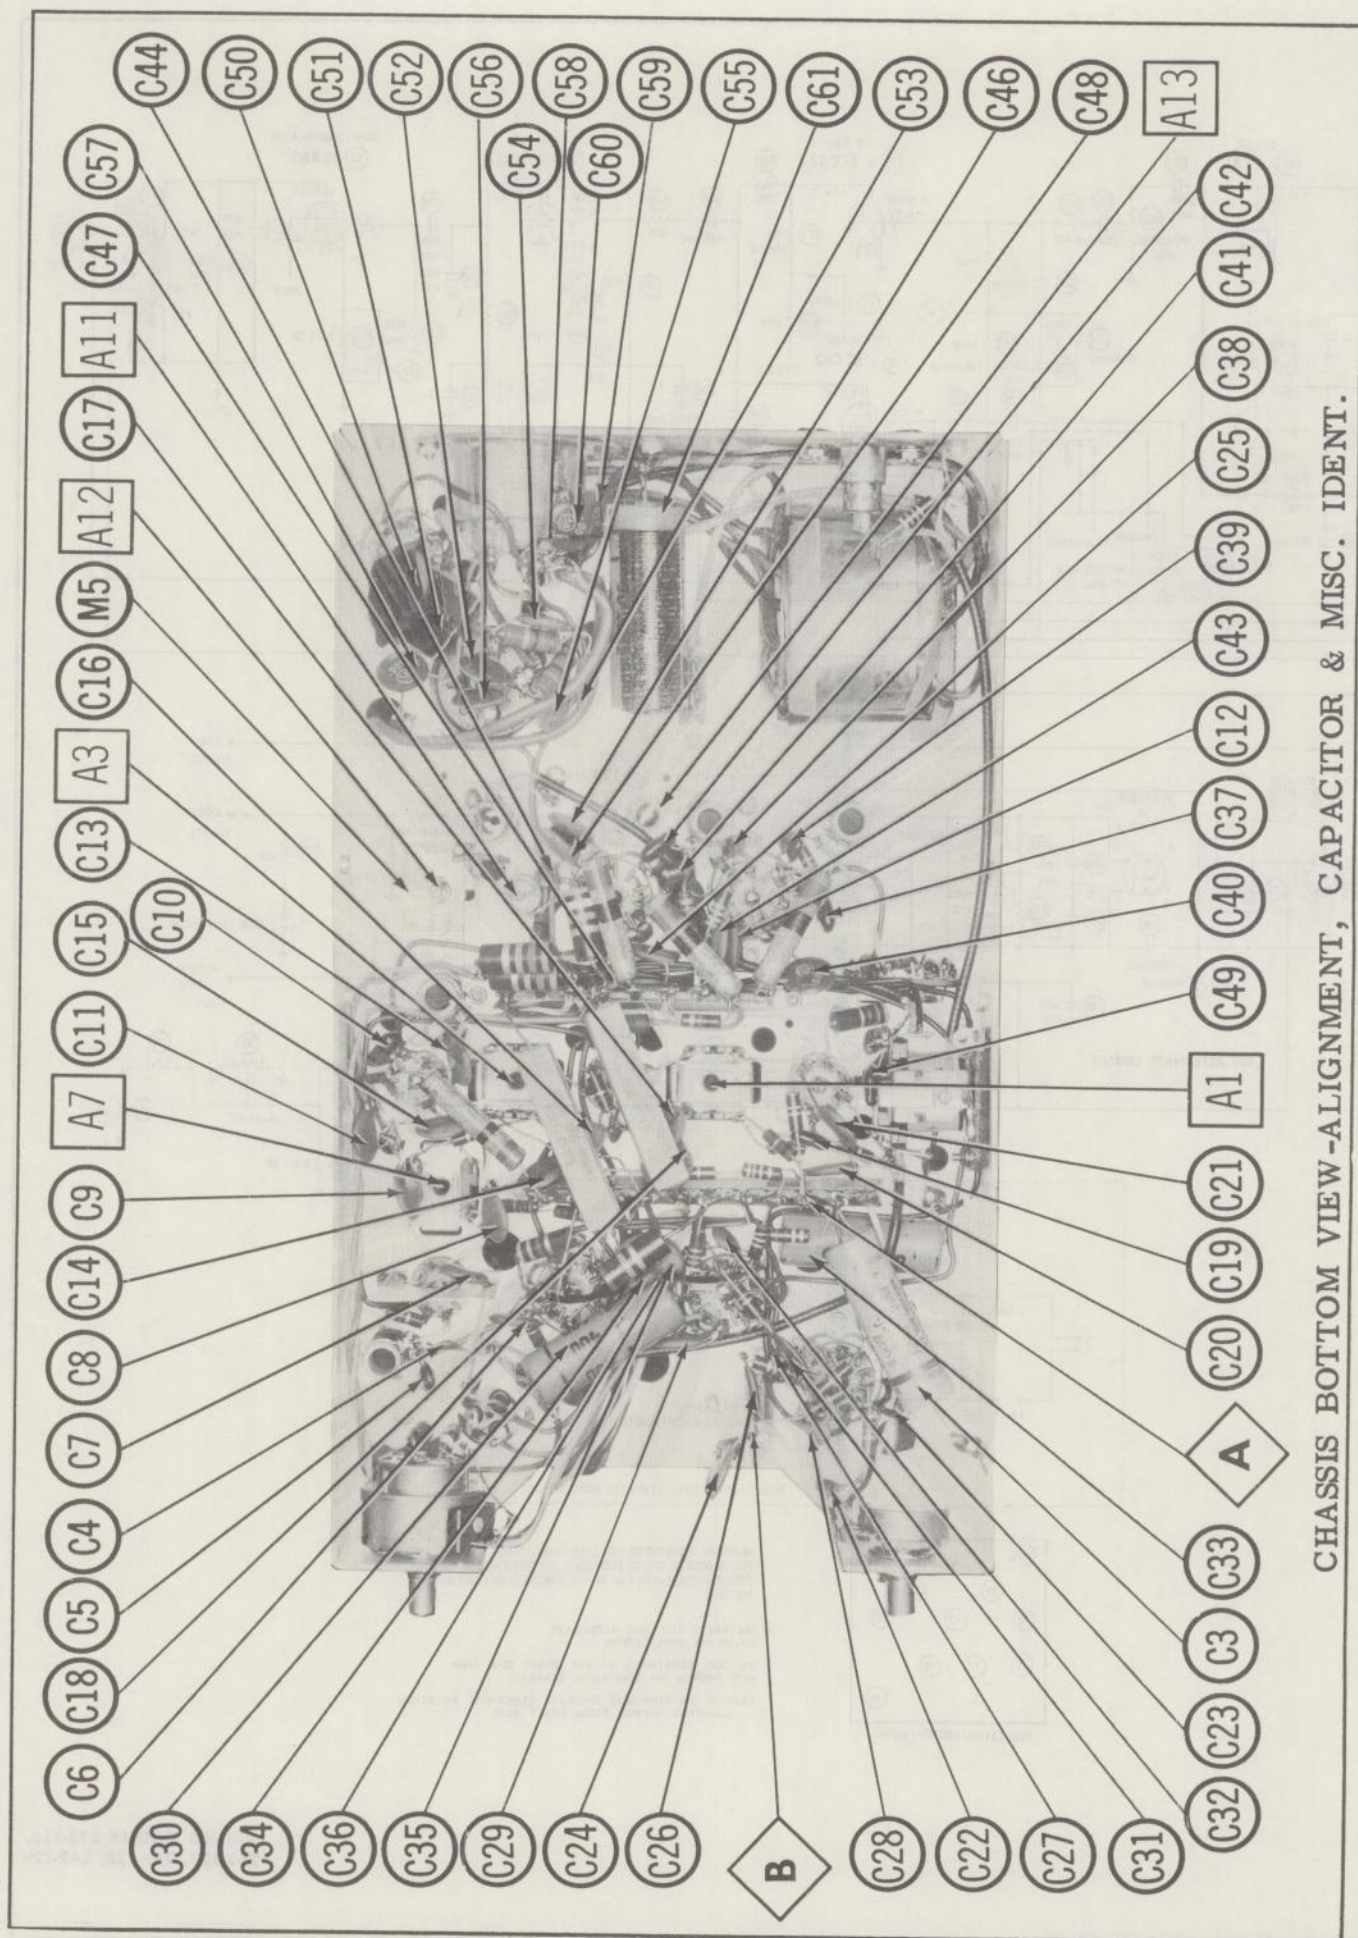

CHASSIS BOTTOM VIEW-ALIGNMENT, CAPACITOR & MISC. IDENT.

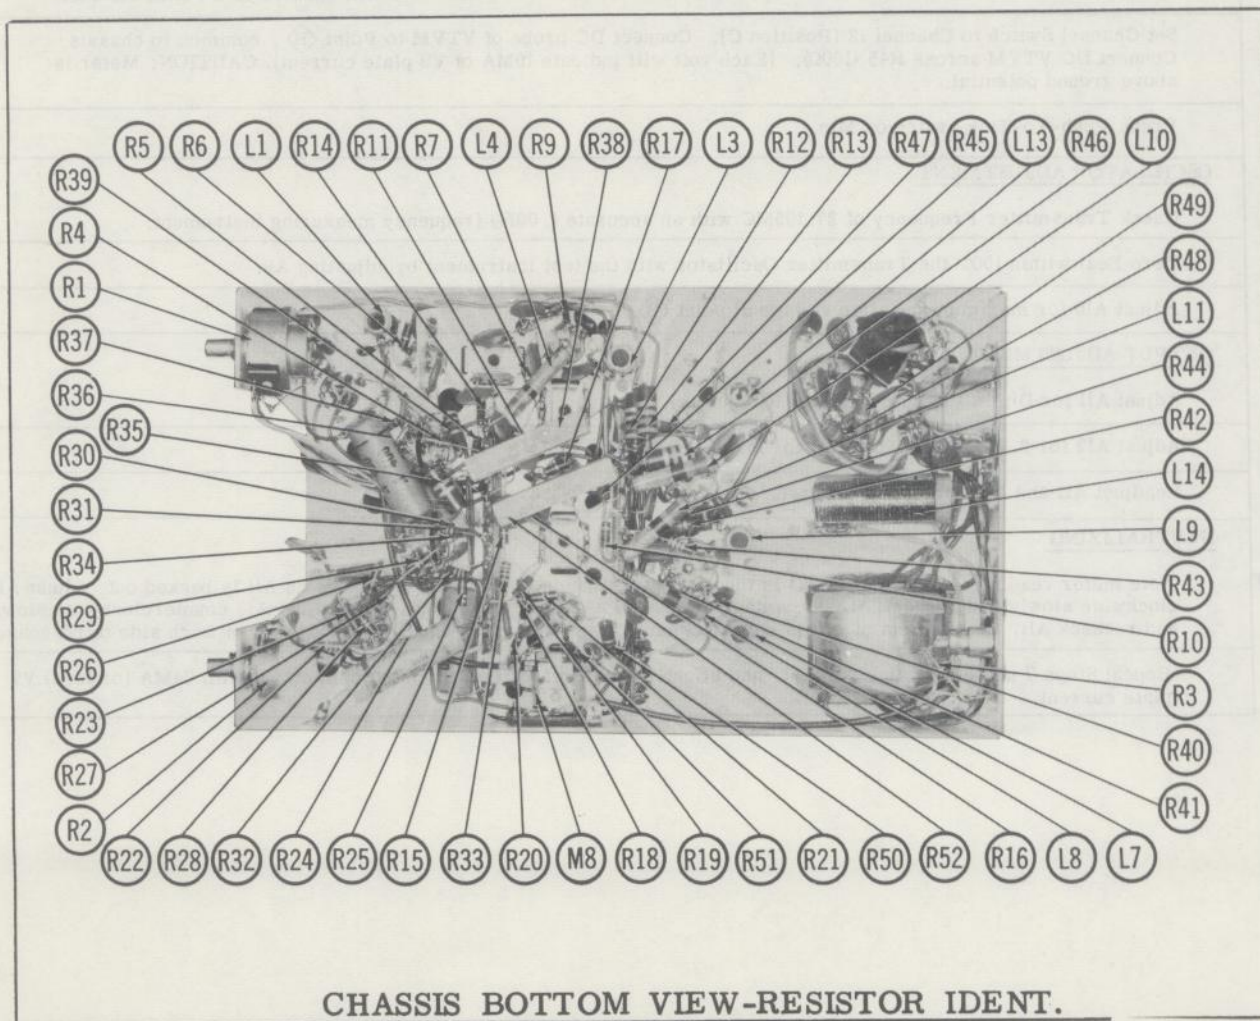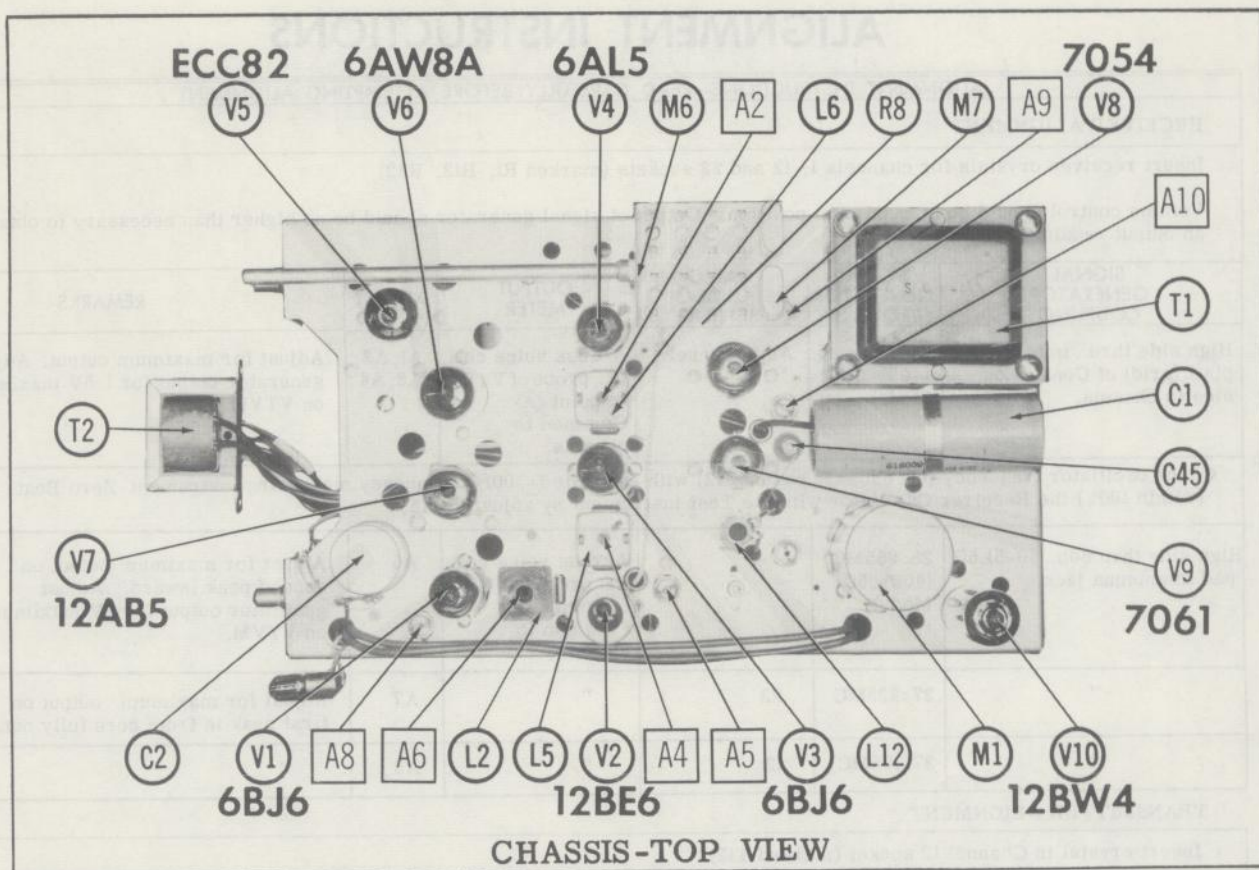

ALIGNMENT INSTRUCTIONS

ALIGNMENT INSTRUCTIONS—READ CAREFULLY BEFORE ATTEMPTING ALIGNMENT

RECEIVER ALIGNMENT

Insert receiver crystals for channels 1, 12 and 22 sockets (marked R1, R12, R22)

Volume control should be at maximum position. Output of signal generator should be no higher than necessary to obtain an output reading.

	SIGNAL GENERATOR COUPLING	SIGNAL GENERATOR FREQUENCY	RADIO DIAL SETTING	OUTPUT METER	ADJUST	REMARKS
1.	High side thru .1mfd to pin 1 (grid) of Conv. Low side to chassis.	455KC $\pm$.1% (400v 30% Mod.)	Any Channel	Across voice coil. DC probe of VTVM to point $\diamond A$. Common to chassis.	A1, A2, A3, A4	Adjust for maximum output. Adjust generator output for 1.5V maximum on VTVM.
Check oscillator frequency (26.650MC, channel 12) with accurate ($\pm$.001%) frequency measuring instrument—Zero Beat (within 100v) the Receiver Oscillator with the Test instrument by adjusting A5.						
2.	High side thru 6db, 50-51.5 Ω pad to antenna jack.	26.965MC (400v 30% Mod.)	1	Across voice coil DC probe of VTVM to point $\diamond A$. Common to chassis.	A6	Adjust for maximum output on second peak inward. Adjust generator output for 2V maximum on VTVM.
3.	"	27.225MC	22	"	A7	Adjust for maximum output on first peak in from core fully out.
4.	"	27.105MC	12	"	A8	"

TRANSMITTER ALIGNMENT

Insert crystal in Channel 12 socket (marked T12).

- Connect a 50-51.5 Ω non-inductive dummy load in series with a 0-500MA RF milliammeter to the Antenna Jack.
- Set Channel Switch to Channel 12 (Position C). Connect DC probe of VTVM to Point $\diamond B$, common to chassis. Connect DC VTVM across R45 (100 Ω). (Each volt will indicate 10MA of V9 plate current). CAUTION: Meter is above ground potential.
- Press Push-To-Talk switch on Mic.

OSCILLATOR ADJUSTMENT

- Check Transmitter Frequency of 27.105MC with an accurate ($\pm$.001%) frequency measuring instrument.
- Zero Beat within 100v the Transmitter Oscillator with the test instrument by adjusting A9.
- Adjust A10 for maximum negative voltage at point $\diamond B$.

OUTPUT ADJUSTMENT

- Adjust A11 for Dip in V9 plate current (Resonance).
- Adjust A12 for 2.4V (24MA) (or less for maximum output).
- Readjust A11 and A12, adjusting A11 last.

NEUTRALIZING

- Note meter reading at point $\diamond B$ as A11 is tuned thru resonance. If voltage increases as A11 is backed out, adjust A13 clockwise slowly and recheck A11. If voltage increases as A11 is turned into coil, adjust A13 counterclockwise slowly and recheck A11. Adjustment of A13 is correct when voltage increases equally or not at all on each side of resonance.
- Repeat Steps 7 and 8 adjusting A11 last, and slightly counterclockwise for maximum output with 24MA (or less) V9 plate current.

PARTS LIST AND DESCRIPTIONS

TUBES

GENERAL ELECTRIC				RAYTHEON				SYLVANIA			
ITEM No.	USE	TYPE	ITEM No.	USE	TYPE	ITEM No.	USE	TYPE	ITEM No.	USE	TYPE
V1	RF Amplifier	6B6	V6	AF Amp.-Squelch Amp.	6AW8A	V10	Rectifier	12BW4			
V2	Converter	12BE6	V7	Output Modulator	12AB5						
V3	IF Amplifier	6B6	V8	Trans. Oscillator	7054 (12BY7A)*						
V4	Det.-AVC-Noise Limiter	6AL5	V9	Final Amplifier	7061						
V5	AF Amp.-Speech Amp.	ECC82/12AU7									

* Used in Models 242-127

ELECTROLYTIC CAPACITORS

REPLACEMENT DATA				REPLACEMENT DATA			
ITEM No.	RATING	JOHNSON PART No.	AEROVOX PART No.	CORNELL-DUBILIER PART No.	MALLORY PART No.	PYRAMID PART No.	SPRAGUE PART No.
C1	80	22.1258-1	PR81780	BR8045	TC80	TD-80-450	TVA-1716
C2A	15	22.1541	AFH3-22	C0760	FP328	TMT-3292	TVL-3580
C3	350	22.1654	PR81600	BR435	TC697	TD-4-450	TVA-1601

FIXED CAPACITORS

Capacity values given in the rating column are in mfd. for Paper Capacitors, and in mmfd. for Mica and Ceramic Capacitors.

REPLACEMENT DATA				REPLACEMENT DATA			
ITEM No.	RATING	REMARKS	AEROVOX PART No.	CORNELL-DUBILIER PART No.	ELMENDO PART No.	MALLORY PART No.	SPRAGUE PART No.
C4	1000		BPD-001	DD-102	CD-102	B-210	5HK-D10
C5	22.10%		1469-000022	TCZ-22	CM-19B-220K	CNO-422	MS-422
C6	10000		BPD-01	DD-103	CD-103	B-110	5HK-S10
C7	10000		BPD-01	DD-103	CD-103	B-110	5HK-S10
C8	10000		BPD-01	DD-103	CD-103	B-110	5HK-S10
C9	10000		BPD-01	DD-103	CD-103	B-110	5HK-S10
C10	330.10%		1469-00033	DD-103	CD-103	MCB241	MS-333
C11	10000	Note 1	BPD-01	DD-103	CD-103	B-110	5HK-S10
C12	10000	Note 1	BPD-01	DD-103	CD-103	B-110	5HK-S10
C13	10000		BPD-01	DD-103	CD-103	B-110	5HK-S10
C14	10000		BPD-01	DD-103	CD-103	B-110	5HK-S10
C15	10000		BPD-01	DD-103	CD-103	B-110	5HK-S10
C16	10000		BPD-01	DD-103	CD-103	B-110	5HK-S10
C17	10000		BPD-01	DD-103	CD-103	B-110	5HK-S10
C18	10000		BPD-01	DD-103	CD-103	B-110	5HK-S10
C19	150.10%		1469-00015	DD-103	CD-103	MCB236	MS-315
C20	10000		BPD-01	DD-103	CD-103	B-110	5HK-S10
C21	10000		BPD-01	DD-103	CD-103	B-110	5HK-S10
C22	10000		BPD-01	DD-103	CD-103	B-110	5HK-S10
C23	150.10%		1469-00015	DD-103	CD-103	MCB236	MS-315
C24	10000		BPD-01	DD-103	CD-103	B-110	5HK-S10
C25	10000		BPD-01	DD-103	CD-103	B-110	5HK-S10
C26	5000		BPD-01	DD-103	CD-103	B-110	5HK-S10
C27	100.10%		1469-00010	DD-103	CD-103	MCB235	MS-31
C28	10000		BPD-01	DD-103	CD-103	B-110	5HK-S10
C29	10000		BPD-01	DD-103	CD-103	B-110	5HK-S10
C30	1.400V		1468N-1	DD-103	CD-103	GEM-401	4TM-P10
C31	5000		BPD-005	DD-103	CD-103	B-250	5HK-D50
C32	2000		BPD-002	DD-103	CD-103	B-220	5HK-D20
C33	1.400V		1468N-1	DD-103	CD-103	GEM-401	4TM-P10
C34	3000		BPD-0033	DD-103	CD-103	B-230	10TS-D30
C35	3000		BPD-0033	DD-103	CD-103	B-233	5HK-D33
C36	3300		1469-00033	DD-103	CD-103	B-233	5HK-D33
C37	3300		1469-00033	DD-103	CD-103	B-233	5HK-D33
C38	1000		BPD-001	DD-102	CD-102	B-210	5HK-D10
C39	15.10%		1469-000015	DD-102	CD-102	CNO-415	MS-415
C40	5000		BPD-005	DD-102	CD-102	B-250	5HK-D50
C41	10.10%		1469-00010	DD-102	CD-102	CNO-322	MS-322
C42	220.10%		1469-00022	DD-102	CD-102	B-110	5HK-S10
C43	1000		BPD-01	DD-102	CD-102	B-210	5HK-D10
C44	1000		BPD-001	DD-102	CD-102	B-210	5HK-D10
C45	1-7.5	#22.1514					

FIXED CAPACITORS (cont)

REPLACEMENT DATA				REPLACEMENT DATA			
ITEM No.	RATING	REMARKS	AEROVOX PART No.	CORNELL-DUBILIER PART No.	ELMENDO PART No.	MALLORY PART No.	SPRAGUE PART No.
C46	1000 1500V		HVD-15-1000	DD30-102	3CCD-102	2HV-210	20GA-D1
C47	1000 1500V		HVD-15-1000	DD30-102	3CCD-102	2HV-210	20GA-D1
C48	1000 1500V		HVD-15-1000	DD30-102	3CCD-102	2HV-210	20GA-D1
C49	5.10%		1469-000005	TCZ-4R7	22R5V5	MCB205	MS-55
C50	10000 3000V	Note 2				GEM-3011	30GA-S10
C51	10000 3000V		BPD-005	DD-502	CCD-502	B-250	5HK-D50
C52	5000		BPD-01	DD-103	CCD-103	B-110	5HK-S10
C53	10000		BPD-01	DD-103	CCD-103	B-110	5HK-S10
C54	10000		BPD-01	DD-103	CCD-103	B-110	5HK-S10
C55	10000		BPD-01	DD-103	CCD-103	B-110	5HK-S10
C56	5000		BPD-005	DD-502	CCD-502	B-250	5HK-D50
C57	5000		BPD-005	DD-502	CCD-502	B-250	5HK-D50
C58	5000		BPD-005	DD-502	CCD-502	B-250	5HK-D50
C59	5000		BPD-005	DD-502	CCD-502	B-250	5HK-D50
C60	5000		BPD-005	DD-502	CCD-502	B-250	5HK-D50
C61	.5 400V		P468N-3	DD-502	4DP-6-504	GEM-405	4TM-P50

Note 1. Not used in some versions.

Note 2. Not used in 6 volt versions.

† Alternate Values.

Viking Part Number.

CONTROLS

REPLACEMENT DATA				REPLACEMENT DATA			
ITEM No.	RATING	JOHNSON PART No.	CORNELL-DUBILIER PART No.	ELMENDO PART No.	MALLORY PART No.	SPRAGUE PART No.	REMARKS
R1A	Imeg	22.1647	B-70	Not Req.	U53	Volume	
R2A	10K	22.1648	Not Req.	Not Req.	Not Req.	Squelch	
R3	Switch				US-30	Power Off-On	

RESISTORS

All wattages 1/2 watt, or less, unless otherwise listed.

REPLACEMENT DATA				REPLACEMENT DATA			
ITEM No.	RATING	JOHNSON PART No.	CORNELL-DUBILIER PART No.	ELMENDO PART No.	MALLORY PART No.	SPRAGUE PART No.	REMARKS
R3	47K						
R4	10K						
R5	2200K						
R6	150K						
R7	10K						
R8	680K						
R9	22K						
R10	Imeg						
R11	2200K						
R12	68K 2W						
R13	68K 2W						
R14	820K						
R15	Imeg						
R16	2200K						
R17	2704						
R18	150K						
R19	Imeg						
R20	Imeg						
R21	820K						
R22	47K						
R23	Imeg						
R24	22K						
R25	220K						
R26	10K						
R27	4.7meg						

* Alternate Value.

PARTS LIST AND DESCRIPTIONS (Continued)

COILS (RF-IF)

ITEM No.	USE	REPLACEMENT DATA				NOTES
		JOHNSON PART No.	Meritt PART No.	Miller PART No.	Stancor PART No.	
L1	Ant.	23.1175-21				① IRC Part #CL-1
L2	RF	22.1623				
L3	Osc. Grid	22.1175-15				② Not used in some versions.
L4	RF Choke(20uh)	22.1549	TV-118	6171-A	RTC-8609	
L5	Input IF	22.1556	TV-192	6152	RTC-8594	
L6	Output IF	22.1557	BC-352	I2-C1	RTC-8632	
L7	Osc. Grid	23.1175-17	BC-353	I2-C2	RTC-8609	
L8	RF Choke(20uh)	22.1549	TV-116	6171-A	RTC-8594	
L9	Osc. Plate	22.1175-17	TV-192	6152	RTC-8609	
L10	RF Choke(20 uh)	22.1549	TV-116	6171-A	RTC-8594	
L11	RF Choke (20uh)	22.1549	TV-192	6152	RTC-8609	
L12	Final Plate	23.1175-24	TV-118	6171-A	RTC-8594	
L13	Ant.	23.1175-23				
L14	Flash Choke (4uh)	16.1456				

TRANSFORMER (POWER)

ITEM No.	RATING	REPLACEMENT DATA				NOTES
		JOHNSON PART No.	Meritt PART No.	Stancor PART No.	Thordarson PART No.	
T1	PRI. 1 117V * ⑥ PRI. 2 18V(6V tap) SEC. 1 68A SEC. 2 12.6VCT SEC. 3 3A SEC. 4 12.6VCT ③ 2.6A ④ 117V Operation	22.1560 ①				① Part #22.1620 used in 6V operation. * Not used on DC operation.

TRANSFORMER (AUDIO OUTPUT)

ITEM No.	IMPEDANCE	REPLACEMENT DATA				NOTES
		JOHNSON PART No.	Meritt PART No.	Stancor PART No.	Thordarson PART No.	
T2	PRI. 1 4200Ω PRI. 2 4200Ω SEC. 3-4Ω	22.1616				

SPEAKER

ITEM No.	TYPE	REPLACEMENT DATA		NOTES
		JOHNSON PART No.	QUAM PART No.	
SP1	SIZE 3 1/2" PM	22-1612*	3A070T	* Alternate Part #22.1612-2

VIBRATOR

ITEM No.	TYPE	INPUT VOLTS/FREQUENCY	REPLACEMENT DATA			NOTES
			JOHNSON PART No.	CORNELL DUBILIER PART No.	MALLORY PART No.	
M1	Interrupter	12.6 115%	22-1570-1*	6301 *	6101 *	* 12 Volt
	Interrupter	6 115%	22-1570-2*	5301 *	1601 *	* 6 Volt

FUSES

ITEM No.	TYPE	RATING	JOHNSON PART No.		LITTELFUSE PART No.		BUSS PART No.	
			FUSE	HOLDER	FUSE	HOLDER	FUSE	HOLDER
M2	SFE	9A	22.1590-4 ①		307009 (SFE 9A 32V)	155009	SFE 9	HHH
	SFE	32V	22.1590-1 ②		307004 (SFE 4A 32V)	155004	SFE 4	HRF
	SFE	32V	22.1590-6 ③		31020 (SFE 20A 32V)	155020	SFE 20	HHJ
M3	3AG	2A	22.1257 ④		312002 (3AG 2A 125V)		AGC 2	
M4	3AG	2A	22.1257 ④		312002 (3AG 2A 125V)		AGC 2	

① 12 Volt Operation. ② 24 Volt Operation. ③ 6 Volt Operation. ④ AC Operation.

MISCELLANEOUS

ITEM No.	PART NAME	JOHNSON PART No.	NOTES
M5	Variable Cap.	148-6-3	(4.5-100mmf)
M6	Switch	22.1615	Channel Selector (Rotary Wafer Type)
M7	Crystal	250-901	Channel 1 (Matched Pair, Receive-Transmit)
	Crystal	250-902	Channel 2 (Matched Pair, Receive-Transmit)
	Crystal	250-903	Channel 3 (Matched Pair, Receive-Transmit)
	Crystal	250-904	Channel 4 (Matched Pair, Receive-Transmit)
	Crystal	250-905	Channel 5 (Matched Pair, Receive-Transmit)
	Crystal	250-906	Channel 6 (Matched Pair, Receive-Transmit)
	Crystal	250-907	Channel 7 (Matched Pair, Receive-Transmit)
	Crystal	250-908	Channel 8 (Matched Pair, Receive-Transmit)
	Crystal	250-909	Channel 9 (Matched Pair, Receive-Transmit)
	Crystal	250-910	Channel 10 (Matched Pair, Receive-Transmit)
	Crystal	250-911	Channel 11 (Matched Pair, Receive-Transmit)
	Crystal	250-912	Channel 12 (Matched Pair, Receive-Transmit)
	Crystal	250-913	Channel 13 (Matched Pair, Receive-Transmit)
	Crystal	250-914	Channel 14 (Matched Pair, Receive-Transmit)
	Crystal	250-915	Channel 15 (Matched Pair, Receive-Transmit)
	Crystal	250-916	Channel 16 (Matched Pair, Receive-Transmit)
	Crystal	250-917	Channel 17 (Matched Pair, Receive-Transmit)
	Crystal	250-918	Channel 18 (Matched Pair, Receive-Transmit)
	Crystal	250-919	Channel 19 (Matched Pair, Receive-Transmit)
	Crystal	250-920	Channel 20 (Matched Pair, Receive-Transmit)
	Crystal	250-921	Channel 21 (Matched Pair, Receive-Transmit)
	Crystal	250-922	Channel 22 (Matched Pair, Receive-Transmit)
	Crystal	250-923	Channel 23 (Matched Pair, Receive-Transmit)
M8	Relay	22-1656 *	Antenna Switching (SPDT, 290Ω Coll)
	Microphone	22-1627-2	

* Early versions used a 2300Ω relay, replace with Part #22-1656.

CABINETS & CABINET PARTS

(When Ordering Cabinets & Cabinet Parts, Specify Model, Chassis & Color)

NAME	PART NO.	DESCRIPTION
Knob	22.920	
Cabinet	23.1360-2	

WIRING DATA

General-use Unshielded Hook-up Wire Use BELDEN No. 8530 (Solid) Available in Ten Colors
Power Cord Use BELDEN No. 8524 (Stranded) Available in Ten Colors
1725-K (7 1/2 Ft. Length)



MODEL ED-27M-12

VOCALINE MODELS ED-27-6,
ED-27-12, ED-27M-6, ED-27M-12

TRADE NAME	Vocaline Models ED-27-6, ED-27-12, ED-27M-6, ED-27M-12 (Commaire)
MANUFACTURER	Vocaline Company of America, Inc., Old Saybrook, Connecticut
TYPE SET	AC-Battery Operated Crystal Controlled 10 Tube Citizens Band Transmitter-Receiver
POWER SUPPLY	110-120 Volts AC, 60 Cycles (or) 12 Volt Storage Battery (-12 Versions) 110-120 Volts AC, 60 Cycles (or) 6 Volt Storage Battery (-6 Versions)
RATING	48 Watts, .5 Amp. @ 117 Volts AC (Receive); 58 Watts, .58 Amp. @ 117 Volts AC (Transmit) 7.4 Amp @ 6.3 Volts DC (Receive); 8.2 Amp @ 6.3 Volts DC (Transmit) 4.3 Amp @ 12.6 Volts DC (Receive-Transmit)
TUNING RANGE	Any 4 of Citizens Band Channels 1 thru 22.

NOTICE





ONLY THOSE PERSONS PROPERLY LICENSED BY FCC ARE
PERMITTED TO MAKE CRYSTAL SUBSTITUTION OR EFFECT
REPAIRS ON THE TRANSMITTER PORTION OF THIS UNIT.


HOWARD W. SAMS & CO., INC. Indianapolis 6, Indiana



The listing of any available replacement part herein does not constitute in any case a recommendation, warranty or guaranty by Howard W. Sams & Co., Inc., as to the quality and suitability of such replacement part. The numbers of these parts have been compiled from information furnished to Howard W. Sams & Co., Inc., by the manufacturers of KZ431

the particular type of replacement part listed. Reproduction or use, without express permission, of editorial or pictorial content, in any manner, is prohibited. No patent liability is assumed with respect to the use of the information contained herein. © 1961 Howard W. Sams & Co., Inc., Indianapolis 6, Indiana. Printed in U.S. of America

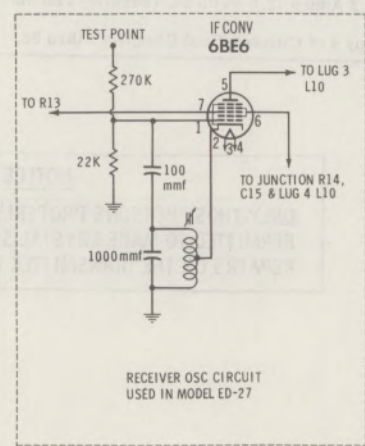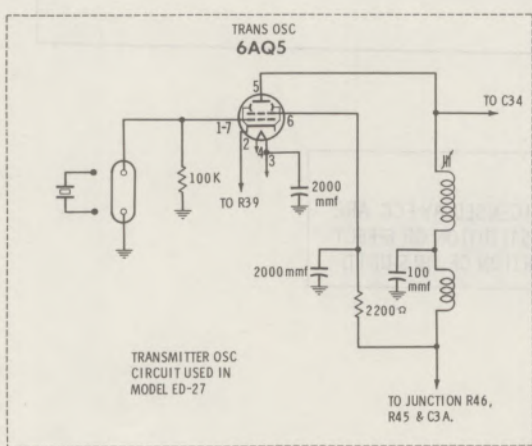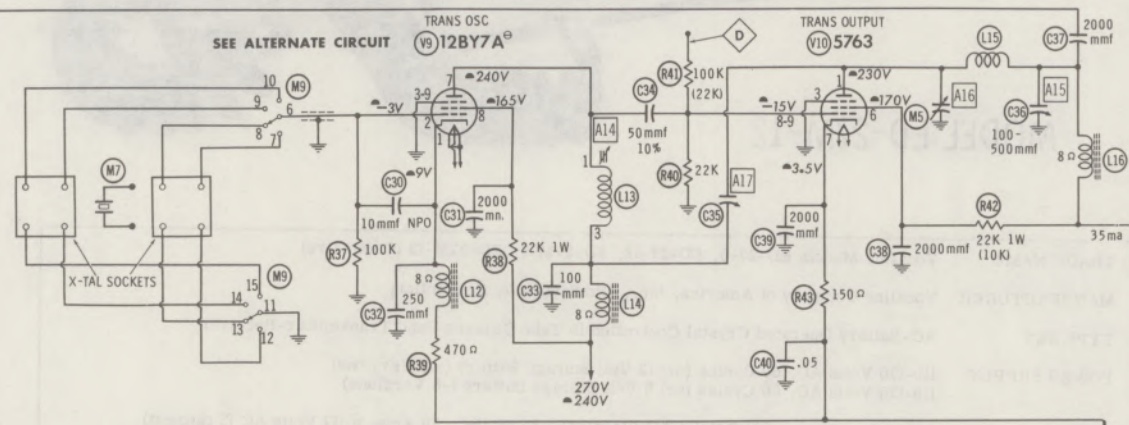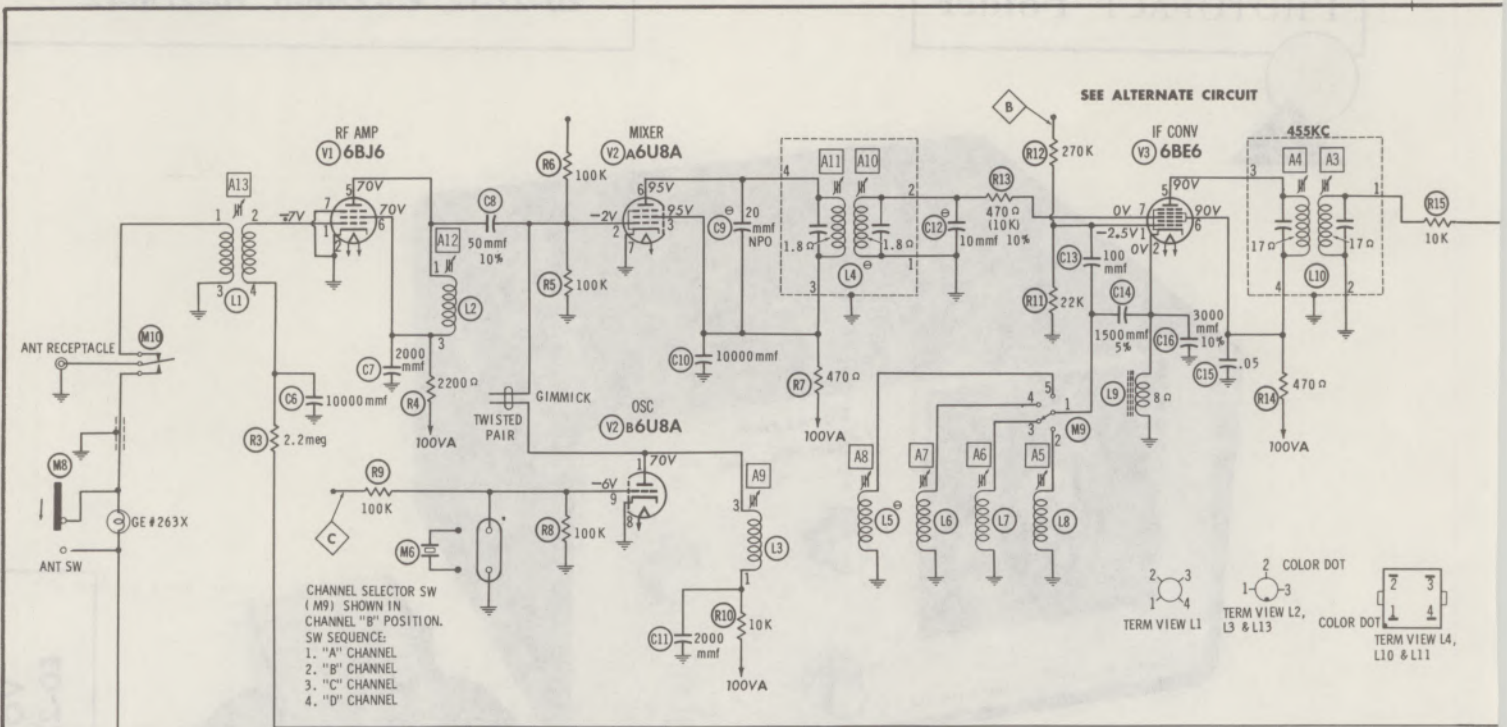

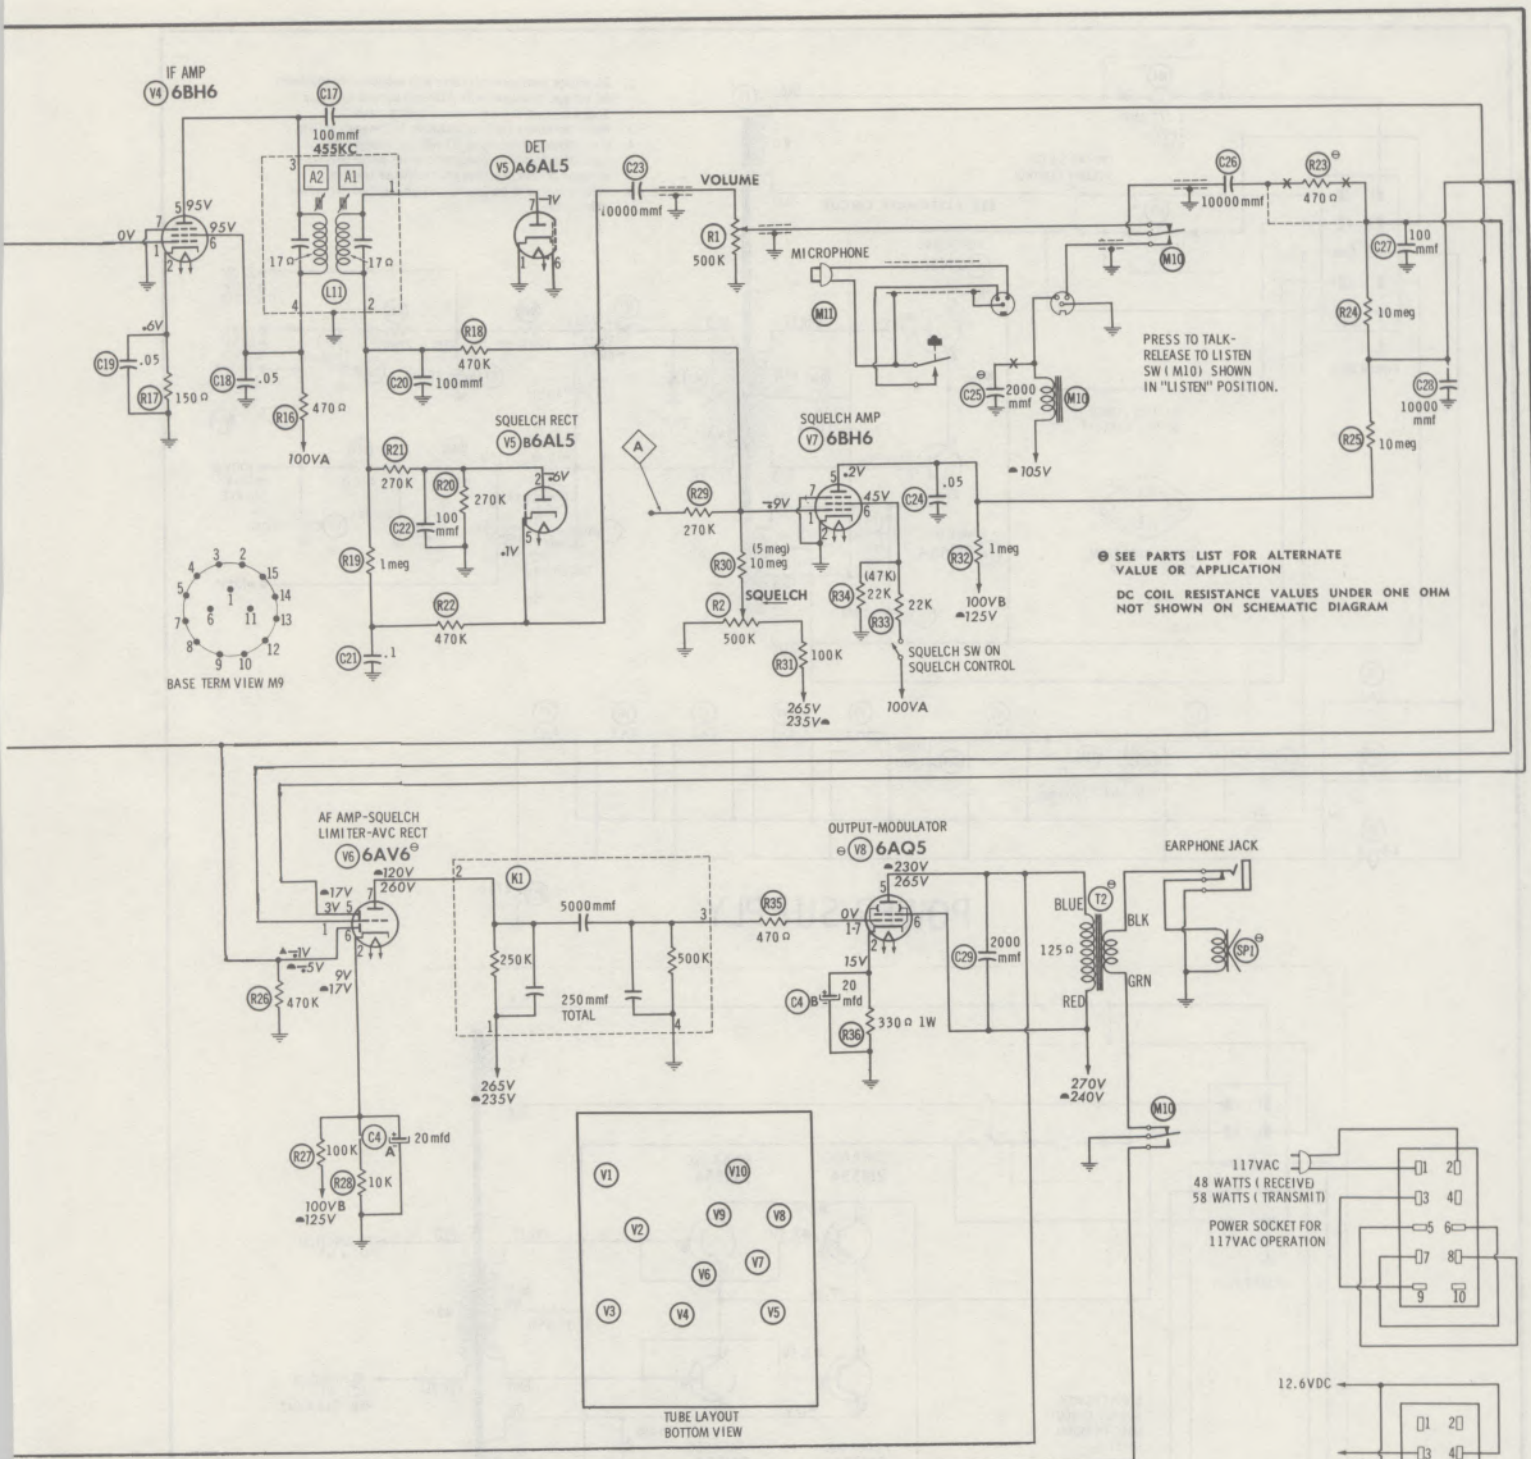



RESISTANCE READINGS

ITEM	TUBE	Pin 1	Pin 2	Pin 3	Pin 4	Pin 5	Pin 6	Pin 7	Pin 8	Pin 9
V1	6BJ6	2.7 meg	0 Ω	.1 Ω	.1 Ω	$\pm$ 3200 Ω	$\pm$ 3200 Ω	0 Ω		
V2	6U8A	$\pm$ 11K	100K	$\pm$ 1500 Ω	.1 Ω	.1 Ω	$\pm$ 1500 Ω	0 Ω	0 Ω	100K
V3	6BE6	22K	8 Ω	.1 Ω	.1 Ω	$\pm$ 1500 Ω	$\pm$ 1500 Ω	470 Ω		
V4	6BH6	10K	150 Ω	.1 Ω	.1 Ω	$\pm$ 1500 Ω	$\pm$ 1500 Ω	0 Ω		
V5	6AL5	0 Ω	270K	.1 Ω	.1 Ω	2 meg	0 Ω	540K		
V6	6AV6	$\pm$ 21 meg	10K	.1 Ω	.1 Ω	$\pm$ 11 meg	470K	$\pm$ 200K		
V7	6BH5	1 meg	0 Ω	.1 Ω	.1 Ω	$\pm$ 1 meg	$\pm$ 15K	0 Ω		
V8	6AQ5A	500K	330 Ω	.1 Ω	.1 Ω	$\pm$ 345 Ω	$\pm$ 220 Ω	NC		
V9	12BY7A	470 Ω	100K	0 Ω	.1 Ω	.1 Ω	.1 Ω	$\pm$ 230 Ω	$\pm$ 22K	0 Ω
V10	5763	$\pm$ 345 Ω	NC	0 Ω	.1 Ω	.1 Ω	$\pm$ 22K	$\pm$ 150 Ω	22K	22K


SEE POWER-SUPPLY SCHEMATIC
ON PAGE 156

RESISTANCE MEASUREMENTS FOR X1 AND X2 NOT GIVEN BECAUSE OF THE WIDE VARIATION IN INTERNAL TRANSISTOR RESISTANCE.
ALL MEASUREMENTS MADE IN "RECEIVE" POSITION, WITH SQUELCH ON, UNLESS OTHERWISE DESIGNATED.
▲ MEASURED IN "TRANSMIT" POSITION. ▲ MEASURED FROM CATHODE
† MEASURED FROM OUTPUT OF M1. ■ MEASURED FROM NEGATIVE BATTERY CONNECTOR.
‡ MEASURED FROM JUNCTION OF C1 & C2A. NC NO CONNECTION
ALL RESISTANCE MEASUREMENTS MADE USING 117VAC POWER CORD.
ALL TRANSISTOR MEASUREMENTS MADE IN DC OPERATION.


VOCALINE MODELS ED-27-6,
ED-27-12, ED-27M-6, ED-27M-12

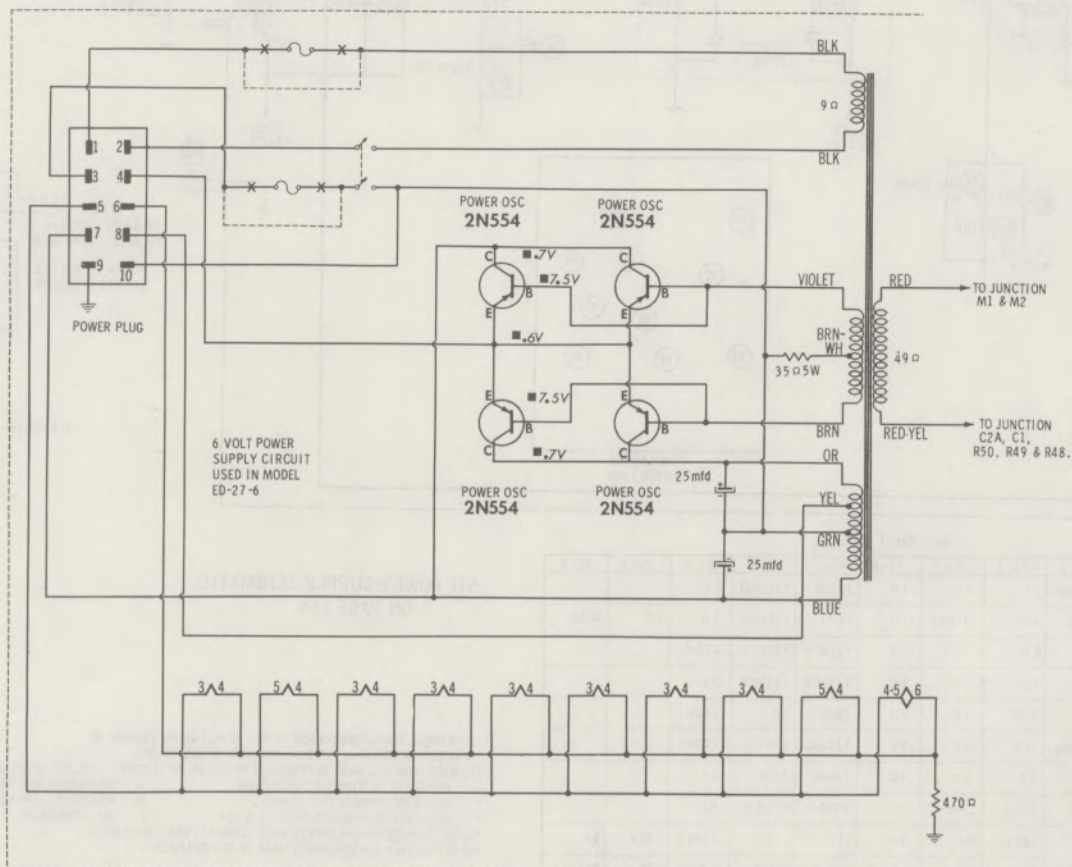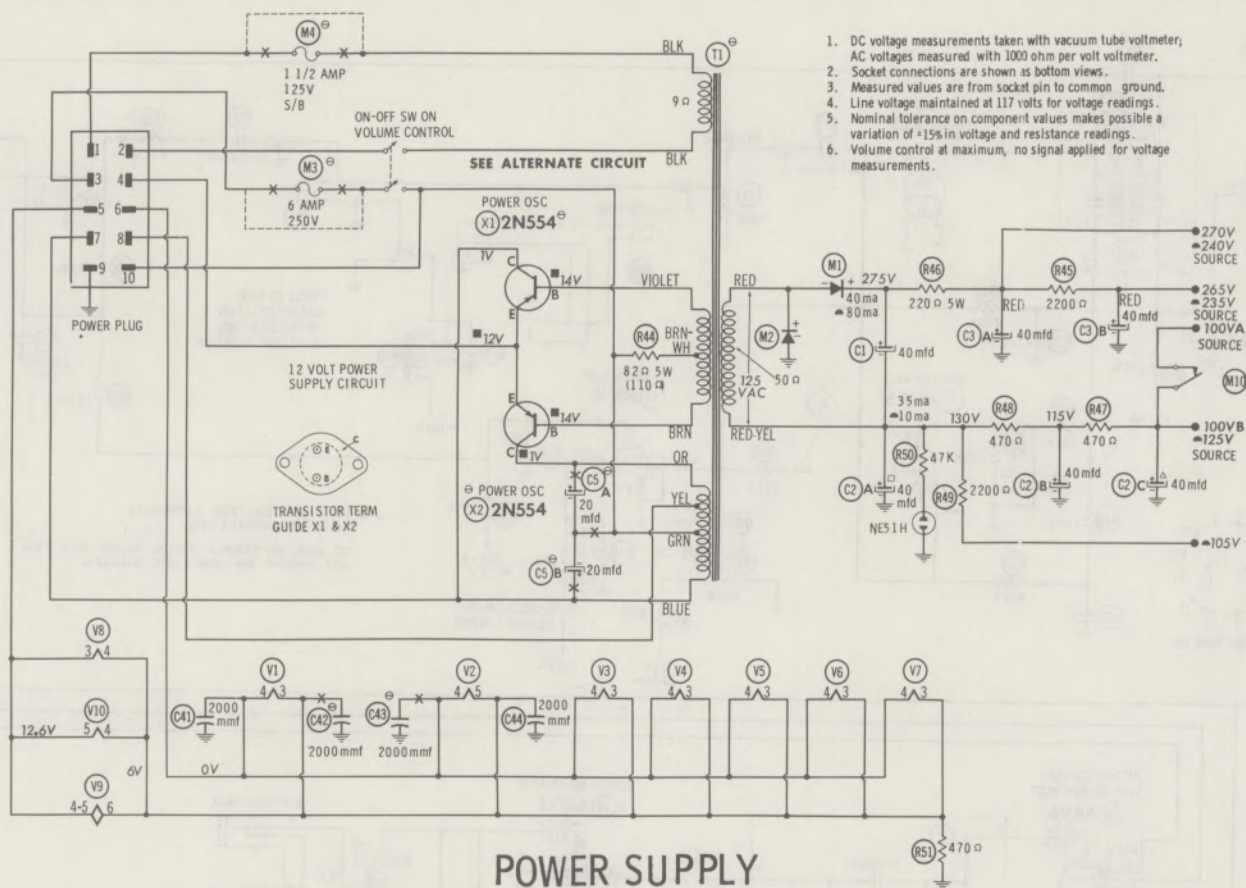

NUMBERS ASSIGNED TO COILS, SWITCHES, PLUGS, SOCKETS, AND TRANSFORMERS ARE TO FACILITATE CIRCUIT TRACING OR COMPONENT REPLACEMENT AND MAY NOT NECESSARILY BE FOUND ON THE UNIT.

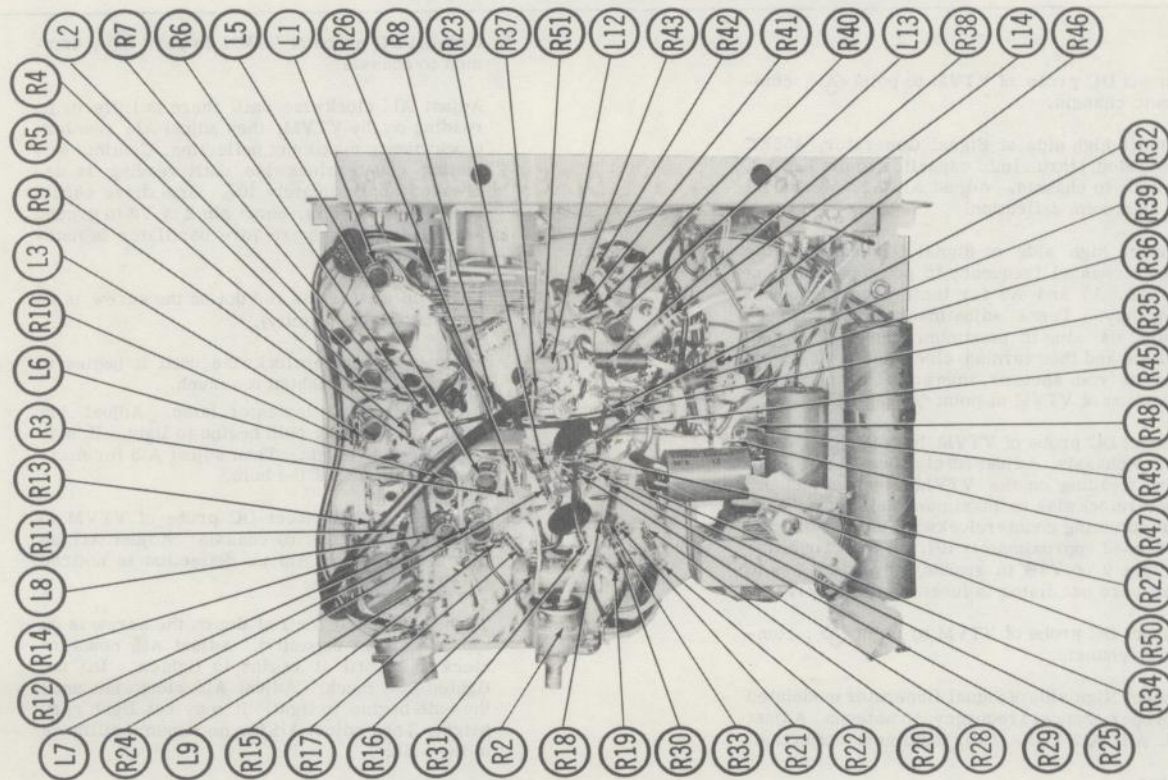

CHASSIS BOTTOM VIEW
RESISTOR & INDUCTOR IDENT.

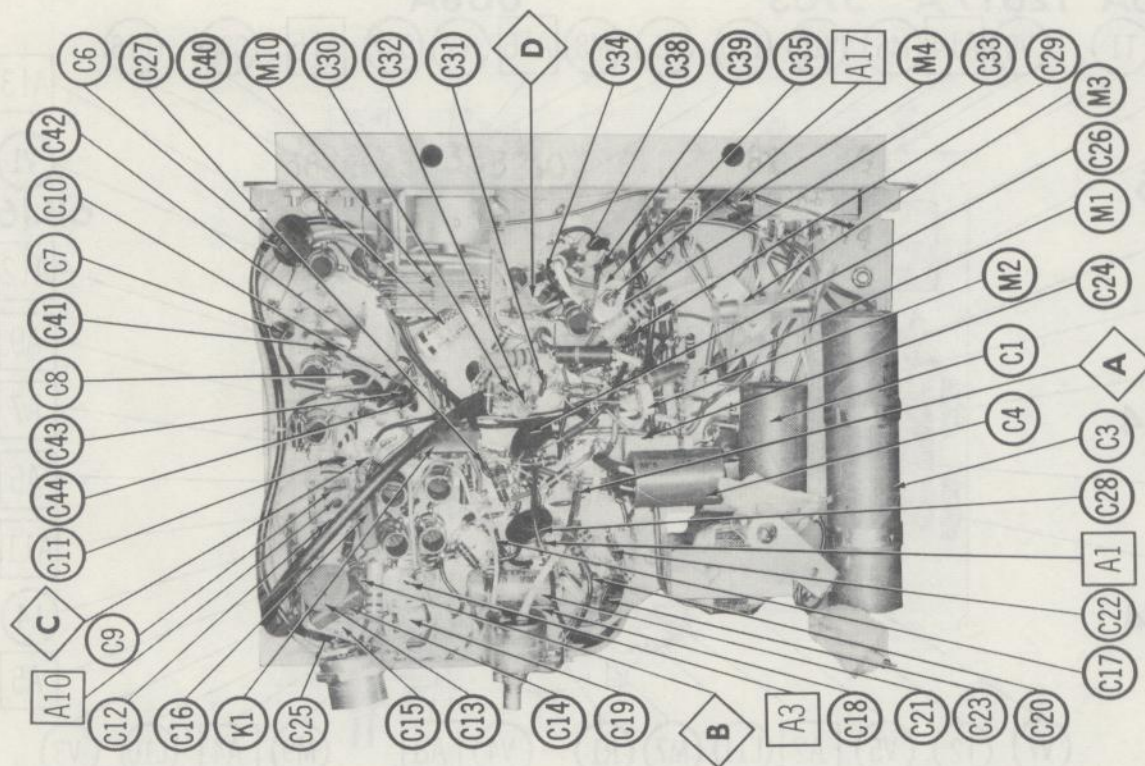

CHASSIS BOTTOM VIEW
ALIGNMENT, CAPACITOR & MISC. IDENT.

PARTS LIST AND DESCRIPTIONS

TUBES

* GENERAL ELECTRIC				* RAYTHEON				* SYLVANIA			
ITEM No.	USE	TYPE	ITEM No.	USE	TYPE	ITEM No.	USE	TYPE	ITEM No.	USE	TYPE
V1	RF Amplifier	6B56	V6	AF Amp.-Squelch Limiter	6AV6 ①	V7	AFC Rectifier	6B86	V8	Squelch Amplifier	6B86
V2	Mixer-Osc.	6U8A	V7	Output-Modulator	6AQA ②	V9	Trans. Oscillator	12BYA ③	V10	Trans. Output	5763
V3	IF Converter	6BE6									
V4	IF Amplifier	6BH6									
V5	Det.-Squelch Rect.	6AL5									

- ① Some versions may use 6AQ6 in this application.
 ② Model ED-27M Serial #16551 (12V) and #02550 (6V) use 6BQ5 or 7189.
 ③ Some versions may use 6AQ5 in this application.

TRANSISTORS

ITEM No.	ORIG. TYPE	REPLACEMENT DATA		NOTES
		RCA PART No.	SYLVANIA PART No.	
X1	2N554*			PNP
X2	2N554*			PNP

* Alternate Type 2N234A or 2N1540.

ELECTROLYTIC CAPACITORS

ITEM No.	RATING	REPLACEMENT DATA				NOTES
		VOCALINE PART No.	AEROVOX PART No.	CORNELL-DUBILIER PART No.	MALLORY PART No.	
C1	40	77-38	PRS1580	BR4025	TD-40-250	
C2A	40	77-25	AFH3-10	C0090	TMT-3127	
C3A	40	77-39	PRS2420	BBRD4445	TDLD-31	
C4A	20	77-24	PRS2075	BBRD2202	TDLD-3	
C5A	20	77-24	PRS2075	BBRD2202	TDLD-3	Note 1

Note 1. Not used in some versions.

FIXED CAPACITORS

Capacity values given in the rating column are in mfd. for Paper Capacitors, and in mmfd. for Mica and Ceramic Capacitors.

ITEM No.	RATING	REPLACEMENT DATA				SPRAGUE PART No.
		AEROVOX PART No.	CORNELL-DUBILIER PART No.	ELMENCOR PART No.	MALLORY PART No.	
C6	10000	BPD-01	DD-103	BYA1081	CCD-103	5HK-S10
C7	2000	BPD-02	DD-202	BYA10D2	CCD-202	5HK-D20
C8	50 10%	NPO-81 20	DD-500	LIQ95	CCD-500	10TCC-Q20
C9	20 NPO	BPD-01	DD-103	BYA1081	CCD-103	5HK-S10
C10	10000	BPD-02	DD-202	BYA10D2	CCD-202	5HK-D20
C11	2000	DI-10	DD-100	LIQ91	CCD-100	10TCC-Q10
C12	10 10%	BPD-0001	DD-101	LIQ91	CCD-101	10TCC-Q10
C13	100	1469-0015	DD-503	3RS5D15	CCD-503	5HK-S10
C14	1500 5%	V84C455	DD-503	3RS5D15	CCD-503	5HK-S10
C15	05 400V	1469-003	DD-101	LIQ91	CCD-101	5HK-S10
C16	3000 10%	BPD-0001	DD-101	LIQ91	CCD-101	5HK-S10
C17	100	V84C455	DD-503	3RS5D15	CCD-503	5HK-S10
C18	05 400V	V84C455	DD-503	3RS5D15	CCD-503	5HK-S10
C19	05 400V	V84C455	DD-503	3RS5D15	CCD-503	5HK-S10
C20	100	BPD-0001	DD-101	LIQ91	CCD-101	5HK-S10
C21	1.1 400V	BPD-0001	DD-101	LIQ91	CCD-101	5HK-S10
C22	10000	BPD-0001	DD-101	LIQ91	CCD-101	5HK-S10
C23	05 400V	V84C455	DD-503	3RS5D15	CCD-503	5HK-S10
C24	05 400V	V84C455	DD-503	3RS5D15	CCD-503	5HK-S10
C25	2000	BPD-01	DD-103	BYA1081	CCD-103	5HK-S10
C26	10000	BPD-01	DD-103	BYA1081	CCD-103	5HK-S10
C27	100	BPD-0001	DD-101	LIQ91	CCD-101	5HK-S10

FIXED CAPACITORS (cont)

ITEM No.	RATING	REMARKS	REPLACEMENT DATA				SPRAGUE PART No.
			AEROVOX PART No.	CORNELL-DUBILIER PART No.	ELMENCOR PART No.	MALLORY PART No.	
C28	10000		BPD-01	DD-103	BYA1081	CCD-103	5HK-S10
C29	2000		BPD-02	DD-202	BYA10D2	CCD-202	5HK-D20
C30	10 NPO		NPO-81 20	DD-500	LIQ95	CCD-500	10TCC-Q20
C31	2000		BPD-02	DD-202	BYA10D2	CCD-202	5HK-D20
C32	250		DI-250	DD-250	LIQ91	CCD-250	10TCC-Q20
C33	100		BPD-0001	DD-101	LIQ91	CCD-101	10TCC-Q20
C34	50 10%		DI-50	DD-500	LIQ95	CCD-500	10TCC-Q20
C35	100-500	#77-19					
C36	2000	#77-36					
C37	2000		BPD-002	DD-202	BYA10D2	CCD-202	5HK-D20
C38	2000		BPD-002	DD-202	BYA10D2	CCD-202	5HK-D20
C39	2000		BPD-002	DD-202	BYA10D2	CCD-202	5HK-D20
C40	05 400V		V84C455	DD-503	4DP-3-503	GEM-415	47M-S
C41	2000		BPD-002	DD-202	BYA10D2	CCD-202	5HK-D20
C42	2000	Note 2	BPD-002	DD-202	BYA10D2	CCD-202	5HK-D20
C43	2000	Note 2	BPD-002	DD-202	BYA10D2	CCD-202	5HK-D20
C44	2000		BPD-002	DD-202	BYA10D2	CCD-202	5HK-D20

Vocaline Part Number.
 Note 1. Not used when L4 is Part #86-72.
 Note 2. Not used in some versions.

CONTROLS

ITEM No.	RATING	REPLACEMENT DATA				INSTALLATION NOTES
		RESIST-ANCE	VOCALINE PART No.	CLEARSTAT PART No.	MALLORY PART No.	
R1A	500K	Switch	79-40	B-60-S	Q13-133	Volume
R2	500K	Switch	79-43S	Not Req.	Not Req.	Power Off-On
R3A	500K	Switch	79-43S	Not Req.	US-27	Squelch
R4	500K	Switch	79-43S	Not Req.	US-26	Squelch Off-On

RESISTORS

All wattages 1/2 watt, or less, unless otherwise listed.

ITEM No.	RATING	REPLACEMENT DATA				REMARKS	REPLACEMENT DATA				REMARKS
		ITEM No.	WORKMAN TV PART No.	IRV PART No.	BATING PART No.		ITEM No.	WORKMAN TV PART No.	IRV PART No.	BATING PART No.	
R3	2.2meg	R28			10K		R28			10K	
R4	2200Ω	R29			270K		R29			270K	
R5	100K	R30			10meg		R30			10meg	
R6	100K	R31			10meg		R31			10meg	
R7	470Ω	R32			22K		R32			22K	
R8	100K	R33			22K		R33			22K	
R9	100K	R34			22K		R34			22K	
R10	10K	R35			470Ω		R35			470Ω	
R11	22K	R36			330Ω 1W		R36			330Ω 1W	
R12	270K	R37			100K		R37			100K	
R13	470Ω	R38			22K 1W		R38			22K 1W	
R14	470Ω	R39			470Ω		R39			470Ω	
R15	10K	R40			22K		R40			22K	
R16	470Ω	R41			100K		R41			100K	
R17	150Ω	R42			22K 1W		R42			22K 1W	
R18	470K	R43			150Ω		R43			150Ω	
R19	1meg	R44			82Ω 5W		R44			82Ω 5W	
R20	270K	R45			2200Ω		R45			2200Ω	
R21	270K	R46			2200Ω		R46			2200Ω	
R22	470K	R47			470Ω		R47			470Ω	
R23	470Ω	R48			2200Ω		R48			2200Ω	
R24	10meg	R49			47K		R49			47K	
R25	10meg	R50			47K		R50			47K	
R26	470K	R51			470Ω		R51			470Ω	

* Alternate Value.
 Note 1. Not used in some versions.
 Note 2. 270Ω used when V8 is 6BQ5 or 7189.

PARTS LIST AND DESCRIPTIONS (Continued)

COMPONENT COMBINATIONS

ITEM No.	USE	DESCRIPTION	VOCALINE PART No.	REPLACEMENT DATA
K1	Audio Coupling	250mm ² , 5000mm ² , 250K, 500K	105-8	Aerovox Centralab PC-71 Sprague T-4

SPEAKER

ITEM No.	TYPE		REPLACEMENT DATA		NOTES
	SIZE	FIELD	V. C. IMP.	VOCALINE PART No.	
SPI	4"	PM	3-4Ω	98-2	4A07

COILS (RF-IF)

ITEM No.	USE	REPLACEMENT DATA				NOTES
		VOLCALINE PART No.	Meritt PART No.	Miller PART No.	Stancor PART No.	Workman TV PART No.
L1	Ant.	88-14		6250	RTC-8568	T232A
L2	RF	88-15	TV-118	6171-A	RTC-8609	T216
L3	Osc. Plate	88-15	TV-118	6171-A	RTC-8609	T216
L4	1st IF (4.5MC)	88-11 ①	TV-113	6203	RTC-8545	T235
L5	Osc.	88-16 ②				
L6	Osc.	88-16				
L7	Osc.	88-16				
L8	Osc.	88-16				
L9	RF Choke (IMH)	88-13	BC-513	4652	RTC-8532	T874
L10	1st IF (455KC)	88-12	BC-352	12-C1	RTC-8632	T807
L11	2nd IF (455KC)	88-12	BC-353	12-C2	RTC-8633	T808
L12	RF Choke (IMH)	88-13	BC-513	4652	RTC-8532	T874
L13	Osc. Plate	88-17	TV-118	6171-A	RTC-8609	T216
L14	RF Choke (IMH)	88-13	BC-513	4652	RTC-8532	T874
L15	Final Plate	88-18				
L16	RF Choke (IMH)	88-13	BC-513	4652	RTC-8532	T874

TRANSFORMER (POWER)

ITEM No.	RATING				REPLACEMENT DATA			NOTES
	AC OPERATION		SEC. 2		VOCALINE PART No.	Meritt PART No.	Stancor PART No.	
	PRI.	SEC. 1	PRI.	SEC. 2				
T1	117V @ .58A	120V @ .30A AC	12.6V @ 1.8A		99-14-1 ①		Thordarson PART No.	① Model ED-27-12, ED-27M-12 ② Used in Model ED-27-6, ED-27M-6
	DC OPERATION							
	INPUT		OUTPUT					
	12.6V @ 2.5A	120V @ .30A AC						
	6V DC OPERATION							
	INPUT		OUTPUT					
	6.3V @ 7.4A	120V @ .30A AC			99-14-2 ②			

TRANSFORMER (AUDIO OUTPUT)

ITEM No.	IMPEDANCE		REPLACEMENT DATA				NOTES
	PRI.	SEC.	VOCALINE PART No.	Meritt PART No.	Stancor PART No.	Thordarson PART No.	
T2	5300Ω	3-4Ω	99-4 ①				① Part #99-40 used if V8 is 6BQ5 or 7189.

POWER RECTIFIERS

ITEM No.	RATING CURRENT (Measured)	REPLACEMENT DATA		NOTES
		VOCALINE PART No.	SARKES TARZIAN PART No.	
M1	.080A	85-5 *	2F4 *	* Silicon
M2	.080A	85-5 *	2F4 *	

FUSES

ITEM No.	TYPE	RATING	REPLACEMENT DATA		BUSS PART No.
			VOCALINE PART No.	LITTELFUSE PART No.	
M3	3AG	6A	Note 1	318006	GJV6
M4	3AG	250V P/T 114A 125V P/T S/B	Note 1	31501.5 (3AG 1/4A 125V S/B)	MDV 1 1/2

Note 1. Not used in some versions.

MISCELLANEOUS

ITEM No.	PART NAME	VOCALINE PART No.	NOTES
M5	Tuning Cap.	77-37	One Section (Requires Extra Ground Wire)
M6	Crystal	77-73	One Section (Grounds thru Mounting)
M7	Crystal	112-1-31	Receiver (31MC)
M8	Switch	112-1-27.105	Transmitter (27.105MC)
M9	Relay	64-41	Antenna, SPST Slide Type
M10	Microphone	93-2	Channel Selector (Rotary Type)
		102-3	Switching

WIRING DATA

General-use Unshielded Hook-up Wire	 Use BELDEN No. 8530 (Solid) Available in Ten Colors
Shielded Hook-up Wire	 Use BELDEN No. 8524 (Stranded) Available in Ten Colors
Bonding Strap	 Use BELDEN No. 8885
Power Cord	 Use BELDEN No. 8861
	 Use BELDEN No. 1765-B (6 Ft. Length)
	 Use BELDEN No. 1725-K (7 1/2 Ft. Length)

**FOR USE ONLY
IN THIS LIBRARY
NOT TO BE LOANED**

**REFERENCE AND INTERLIBRARY LOAN
SUFFOLK COOPERATIVE LIBRARY SYSTEM
BOX 187, BELLPORT, N.Y. 11713**

CITIZENS BAND RADIO MANUAL

The growing and widespread popularity of Citizens-band radio has opened an entire new field in communications. Since the introduction of the Class-D service several years ago, there has been an increasing demand for additional servicing facilities to handle this type of two-way equipment. Thus, there are excellent opportunities awaiting qualified technicians who want to build a more profitable business by expanding into the Citizens-band field.

The primary purpose of this manual is to provide data needed by the user or technician. An introductory editorial section at the front describes typical CB equipment, the type of test equipment needed, license qualifications, and some of the problems most likely to be encountered.

Complete PHOTOFACT® service data have been included for 46 popular models. The coverage includes schematics, photos showing component layout and identification, alignment instructions, complete parts lists and replacement data, and other valuable information which will make CB servicing easier and more profitable.

COVERING THESE BRANDS:

APELCO
CITI-FONE
GLOBE
GONSET
HALLICRAFTERS

HEATH
LAFAYETTE
MORROW
RADSON
RAYTHEON
RCA

REALISTIC
REGENCY
U.S.L.
VIKING
VOCALINE



HOWARD W. SAMS & CO., INC.
THE BOBBS-MERRILL COMPANY, INC.

Indianapolis • New York