

REALISTIC[®]

ServiceManual

20-135/9135

PRO-34

Programmable Scanner

Catalog Number: 20-135/9135

©1988, Tandy Corporation.

All Rights Reserved.

Realistic and Radio shack are registered trademarks of Tandy Corporation.

CONTENTS


	Page
Contents.....	2
Specifications.....	3
Block Diagram.....	4
Principles of Operation.....	5
General Operation Outline.....	7
Alignment/Adjustment.....	9
Reception Check.....	16
Memory Check.....	17
Troubleshooting.....	18
Wiring Diagram.....	20
Jack PCB (Top View).....	21
Jack PCB (Bottom View).....	22
Linear PCB (Top View).....	23
Linear PCB (Bottom View).....	25
Logic PCB (Top View).....	27
Logic PCB (Bottom View).....	29
Electrical Parts List.....	31
Mechanical Parts List.....	44
Disassembly Diagram/Exploded View.....	45
Semiconductor Lead Identification and IC Circuit Diagram.....	46
Microprocessor (IC1) Port Format.....	54
Appendix.....	55
Schematic Diagram (Linear Section).....	56
Schematic Diagram (Logic Section).....	58

SPECIFICATIONS

Frequency Coverage	VHF LOW AIRCRAFT	*1 30–54 MHz 5 kHz steps 108–136 MHz 25 kHz steps		
	VHF HIGH	136.005–174 MHz 5 kHz steps		
	UHF LOW	380–512 MHz 12.5 kHz steps		
	UHF HIGH	*2 806.0000–823.9375 MHz *2 851.1125–868.9375 MHz *2 896.1125–960.0000 MHz 12.5 kHz steps		
Sensitivity	VHF LOW FM	UNIT	NOMINAL	LIMIT
	AIRCRAFT AM	μV	1.0	2.0
	VHF HIGH FM	μV	2.0	5.0
	UHF LOW FM	μV	1.0	3.0
	UHF HIGH FM	μV	1.0	4.0
Squelch Sensitivity	at threshold	μV	2.0	4.0
	at tight	dB	1	2
Selectivity	–6 dB	kHz	25	15
	–50 dB	kHz	±10	±14
Spurious Rejection (except primary image)	VHF LOW at 40 MHz	dB	±20	±25
	AIRCRAFT at 124 MHz	dB	50	40
	VHF HIGH at 154 MHz	dB	50	40
	UHF			Not specified
*1 68–88 MHz for 20–9134				
*2 806–960 MHz for 20–9134				
IF Rejection		dB	50	40
Modulation Acceptance	(EIA RS-204-A)	kHz	±8	±5
Signal to Noise Ratio	VHF LOW at 40 MHz	dB	45	30
	AIRCRAFT at 124 MHz	dB	35	25
	VHF HIGH at 154 MHz	dB	45	30
	UHF LOW at 450 MHz	dB	35	25
	UHF HIGH at 860 MHz	dB	35	25
Residual Noise	Vol. Min.	mV	3	5
Scanning Speed		channels/sec	8	6-10
Scan Delay Time		sec	2	1-3
Audio Output Power	T.H.D.10%	mW	200	150
Channels of Operation	Any 200 channels in any band combination			
Channel, Frequency and Mode Display	Liquid crystal display			
Receiving System	Direct Key entry Digital-Controlled Synthesizer, Superheterodyne 1st IF:10.7 MHz 2nd IF:455 kHz			
Power Source	9V DC negative ground only 6 AA batteries or a suitable adapter			
Jacks	Antenna, Earphone, External Power and Charge			

Note: Nominal Specs represent the design specs: all units should be able to approximate these—some will exceed and some may drop slightly below these specs. Limit Specs represent the absolute worst condition that still might be considered acceptable: in no case should a unit perform to less than any limit spec.

BLOCK DIAGRAM

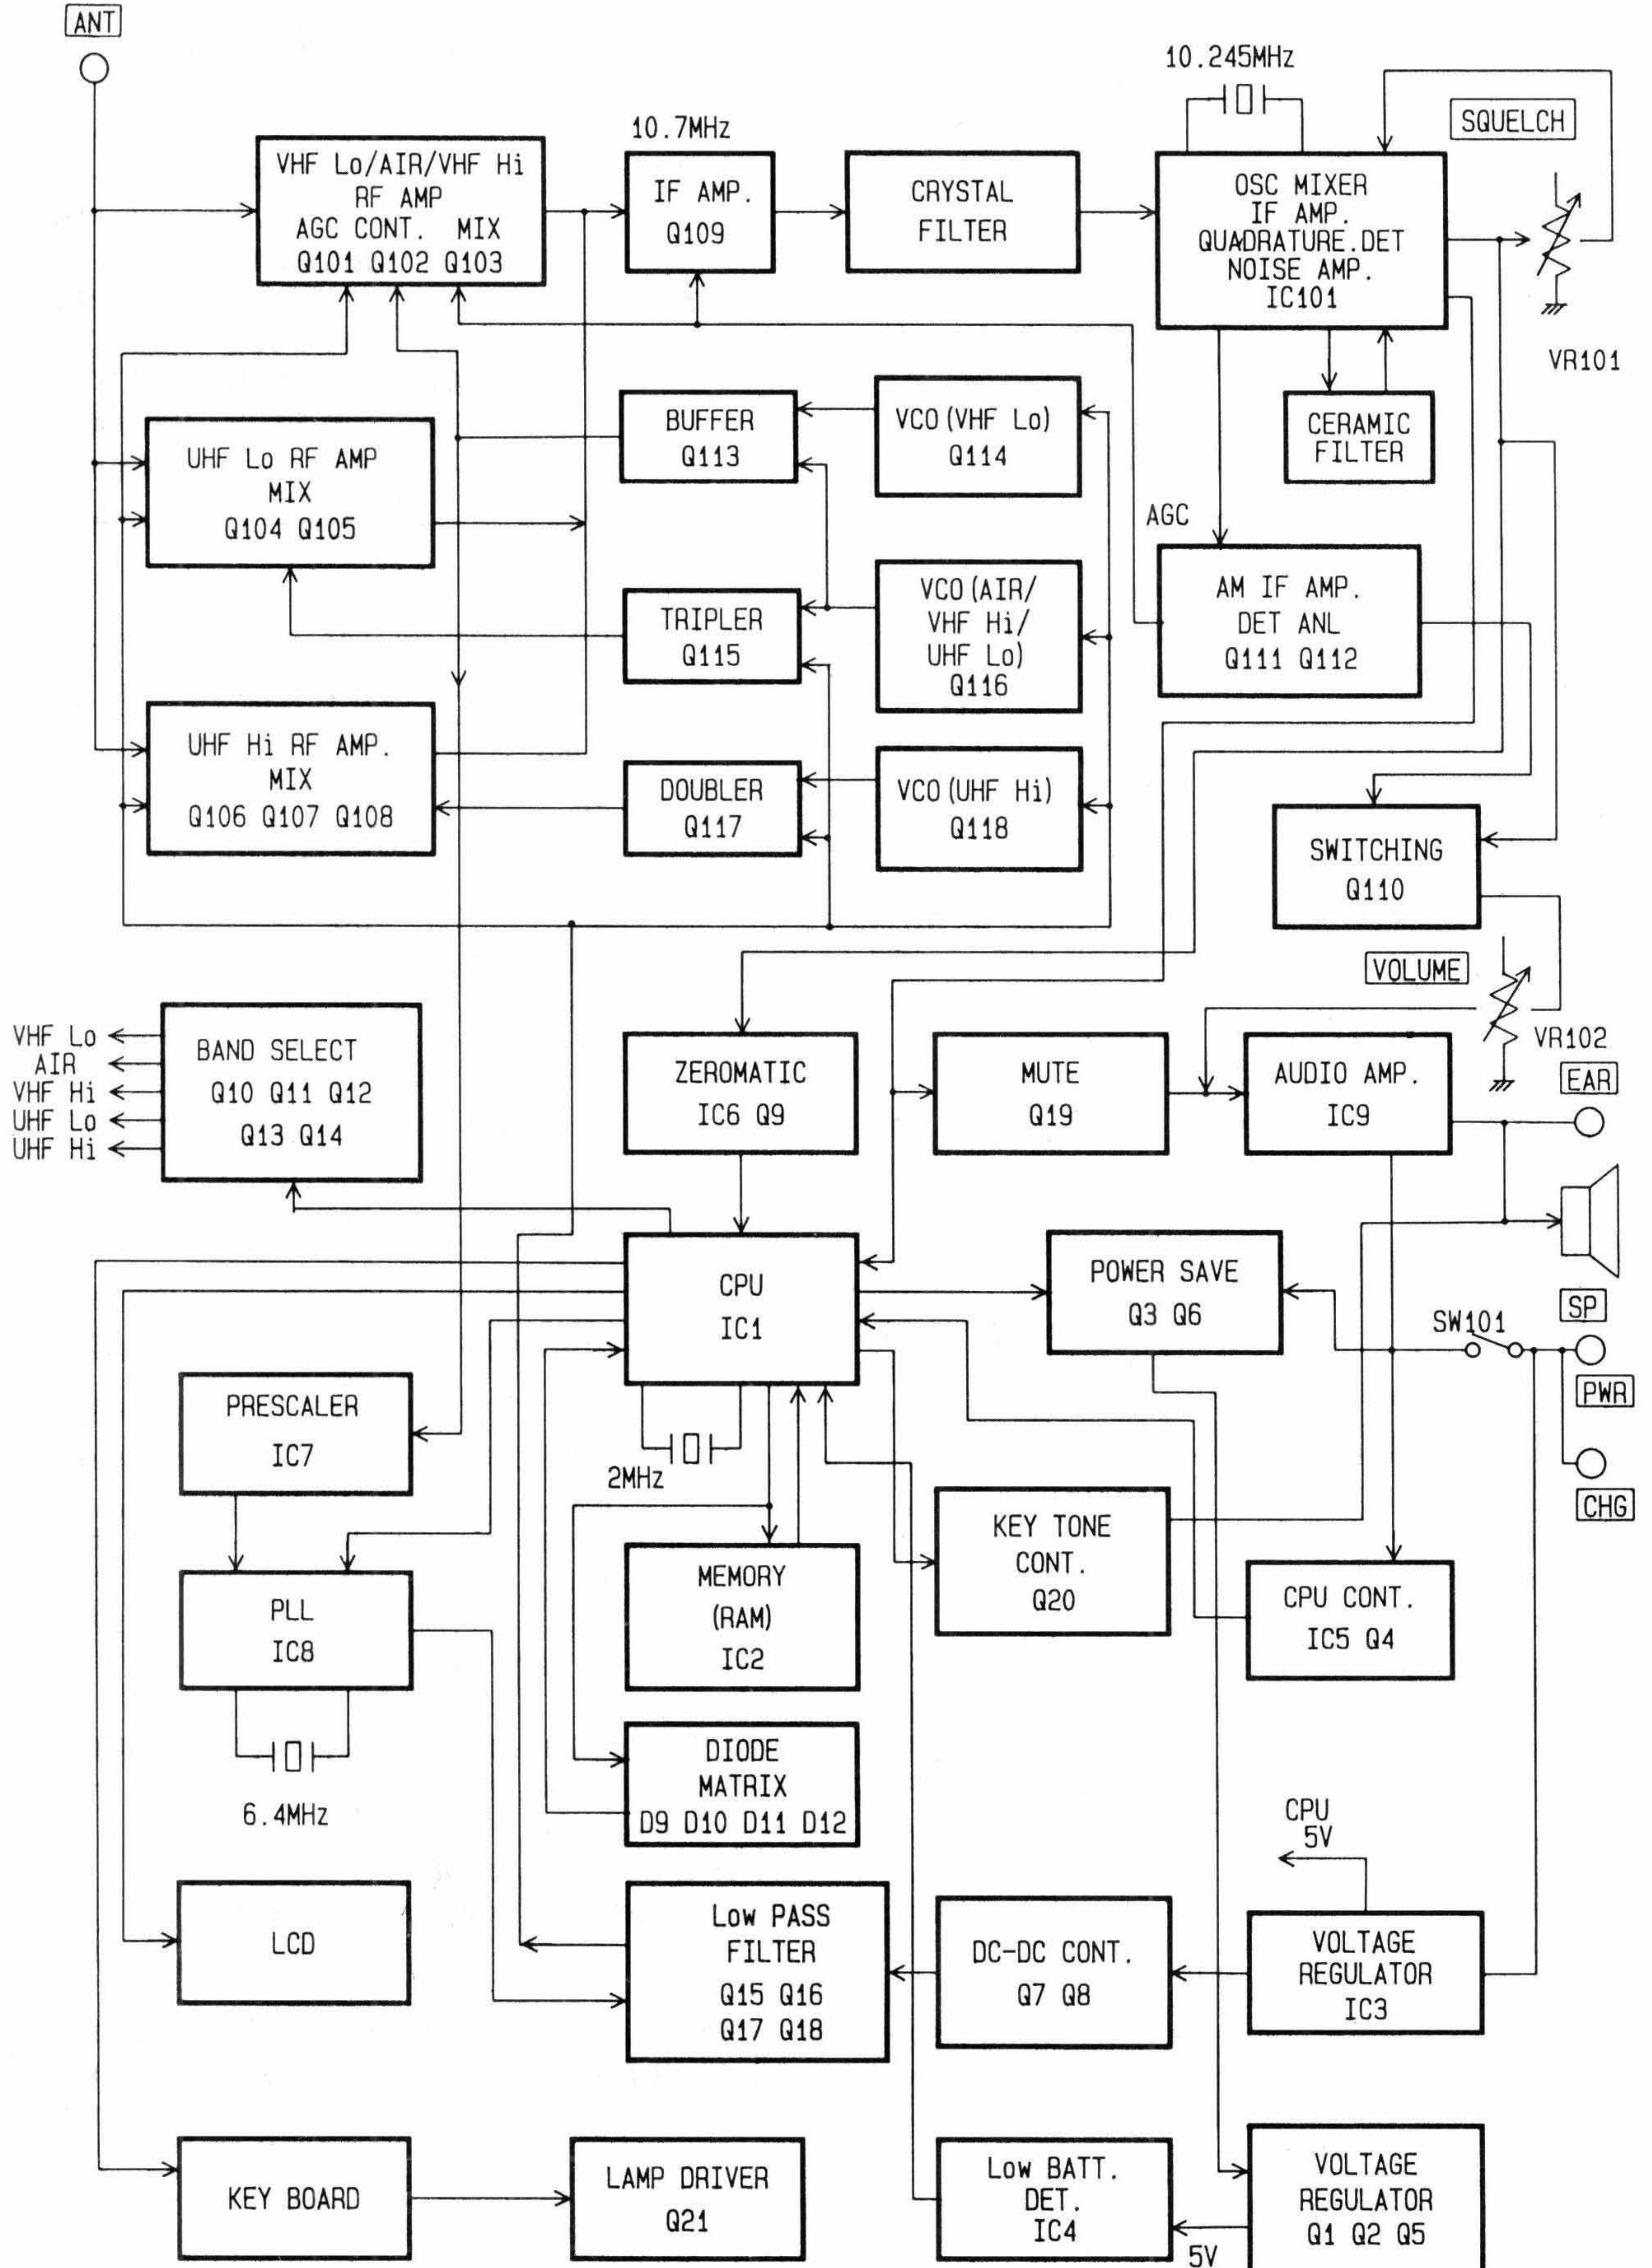

PRINCIPLES OF OPERATION

The PRO-34 is a PLL (Phase Locked Loop) synthesized VHF/UHF FM receiver, controlled by a CPU (central processing unit) via a keyboard.

The VHF Lo band (30~54 MHz) or VHF Hi band (136.005~174 MHz) is received in 5 kHz increments and the UHF Lo band (380~512 MHz) or UHF Hi band (806~960 MHz) is set up to be 12.5 kHz increments. Similarly, the aircraft band (108~136 MHz) is in a 25 kHz step.

All functions such as receiving frequency range, frequency determination, scanning and delay time etc. are controlled by the CPU. The CPU is able to do only the assigned functions, and no modification of the CPU is feasible.

The following paragraphs explain the operation of the circuit in terms of the functional blocks:

A varactor (variable capacitance diode) tuning ("Automatic Tuning System") is employed on all Bands.

Field-effect transistors (FET) are used in the RF/MIX circuits of low and high Bands, to achieve optimum mix-modulation and mutual-modulation characteristics. Q109 amplifies the 10.7 MHz IF. A 10.7 MHz monolithic crystal filter is incorporated to obtain a good IF selectivity.

IC101 contains the local oscillator, mixer, IF amplifier, quadrature FM detector and noise amplifier. A crystal oscillator produces 10.245 MHz which is mixed with 10.7 MHz, resulting in 455 kHz IF. A 455 kHz ceramic filter is provided to increase the IF selectivity. The 455 kHz IF signal is amplified in the IF amp stage, and the quadrature FM detector detects it to an audio signal.

The detected output of the FM is applied to IC9. IC9 amplifies the audio signals and drives the speaker.

IC1 is the CPU. The CPU does data processing, calculation etc. Any unstable supply voltage (V_{DD}) to the CPU can cause the CPU to get mal-functioned, such as wrong data processing, wrong data transfer etc. To overcome this, C2 and R13 in the logic circuit "initialize" the CPU. (Refer to the logic section schematic on page 60.)

The initialization is done as soon as batteries or external power is connected. Figure A shows the initializing waveform. Memory backup function is automatically started whenever the initialization has been done and then functions in approximately 1 hour after the batteries or external power is disconnected.

The RESET switch is located in the hole on the bottom of the battery compartment and is used to correct an LCD or keyboard mal-function.

The unit has battery-saving control circuit in manual mode. When the unit is in operation, the pin 74 of IC1 (CPU) is "H" and Q3 is ON. If no signal input or no key input existed more than 5 seconds in manual mode with the SQUELCH on, the pin 74 becomes "L" (Fig. B) and Q3 turns off then the power supply for most of circuit is shut down (except CPU and Audio circuit). In this battery-saving mode, 40% of the power can be saved during normal operation.

The initialization of the CPU, mentioned above can also be done by pushing RESET switch. Figure A shows the rise time duration when the initialization is done.

CX1 (2 MHz) is a ceramic oscillator clock which is used for CPU control. Figure C shows 1/8 divided waveform of Figure D.

IC 1 Pin①

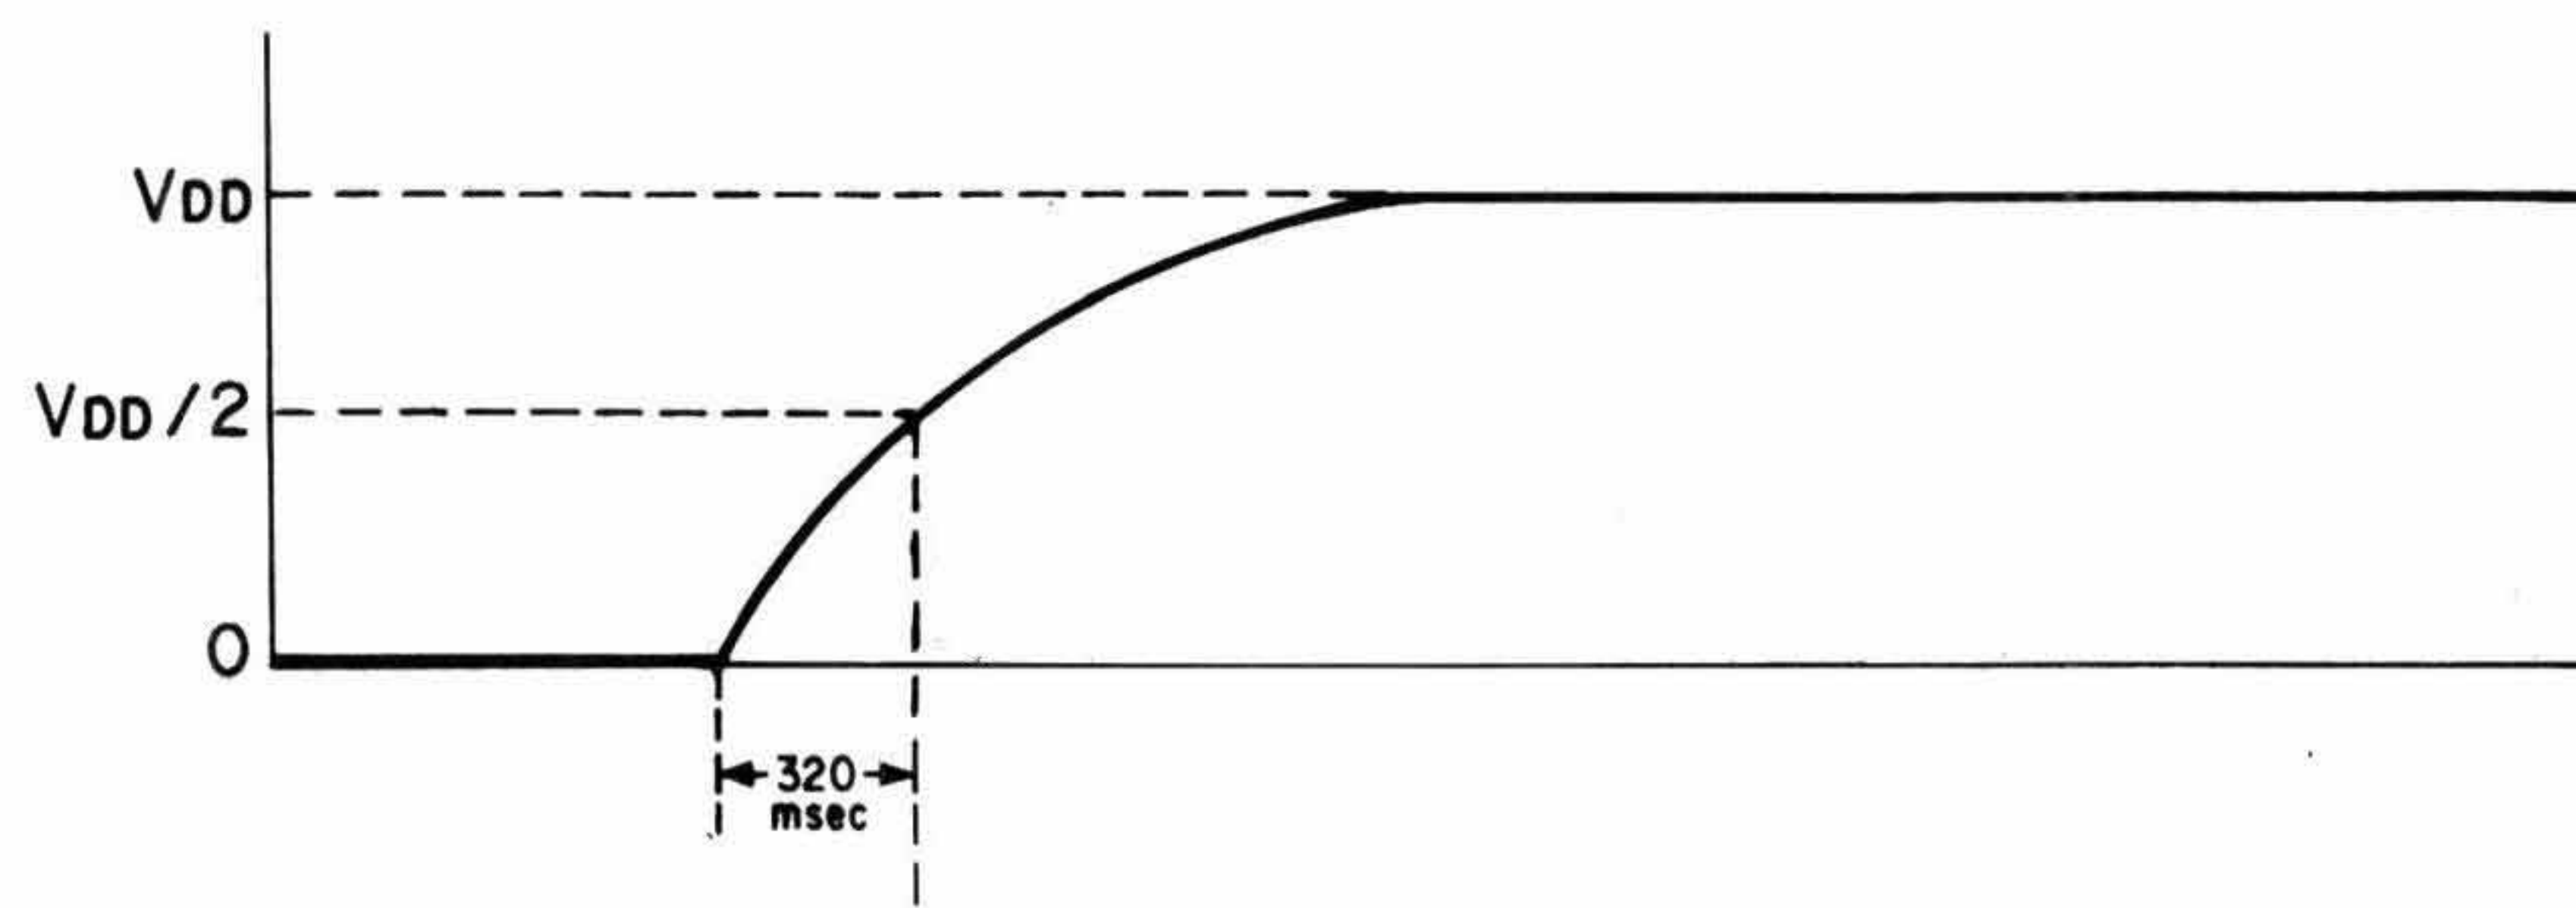


Figure A

IC 1 Pin⑦④

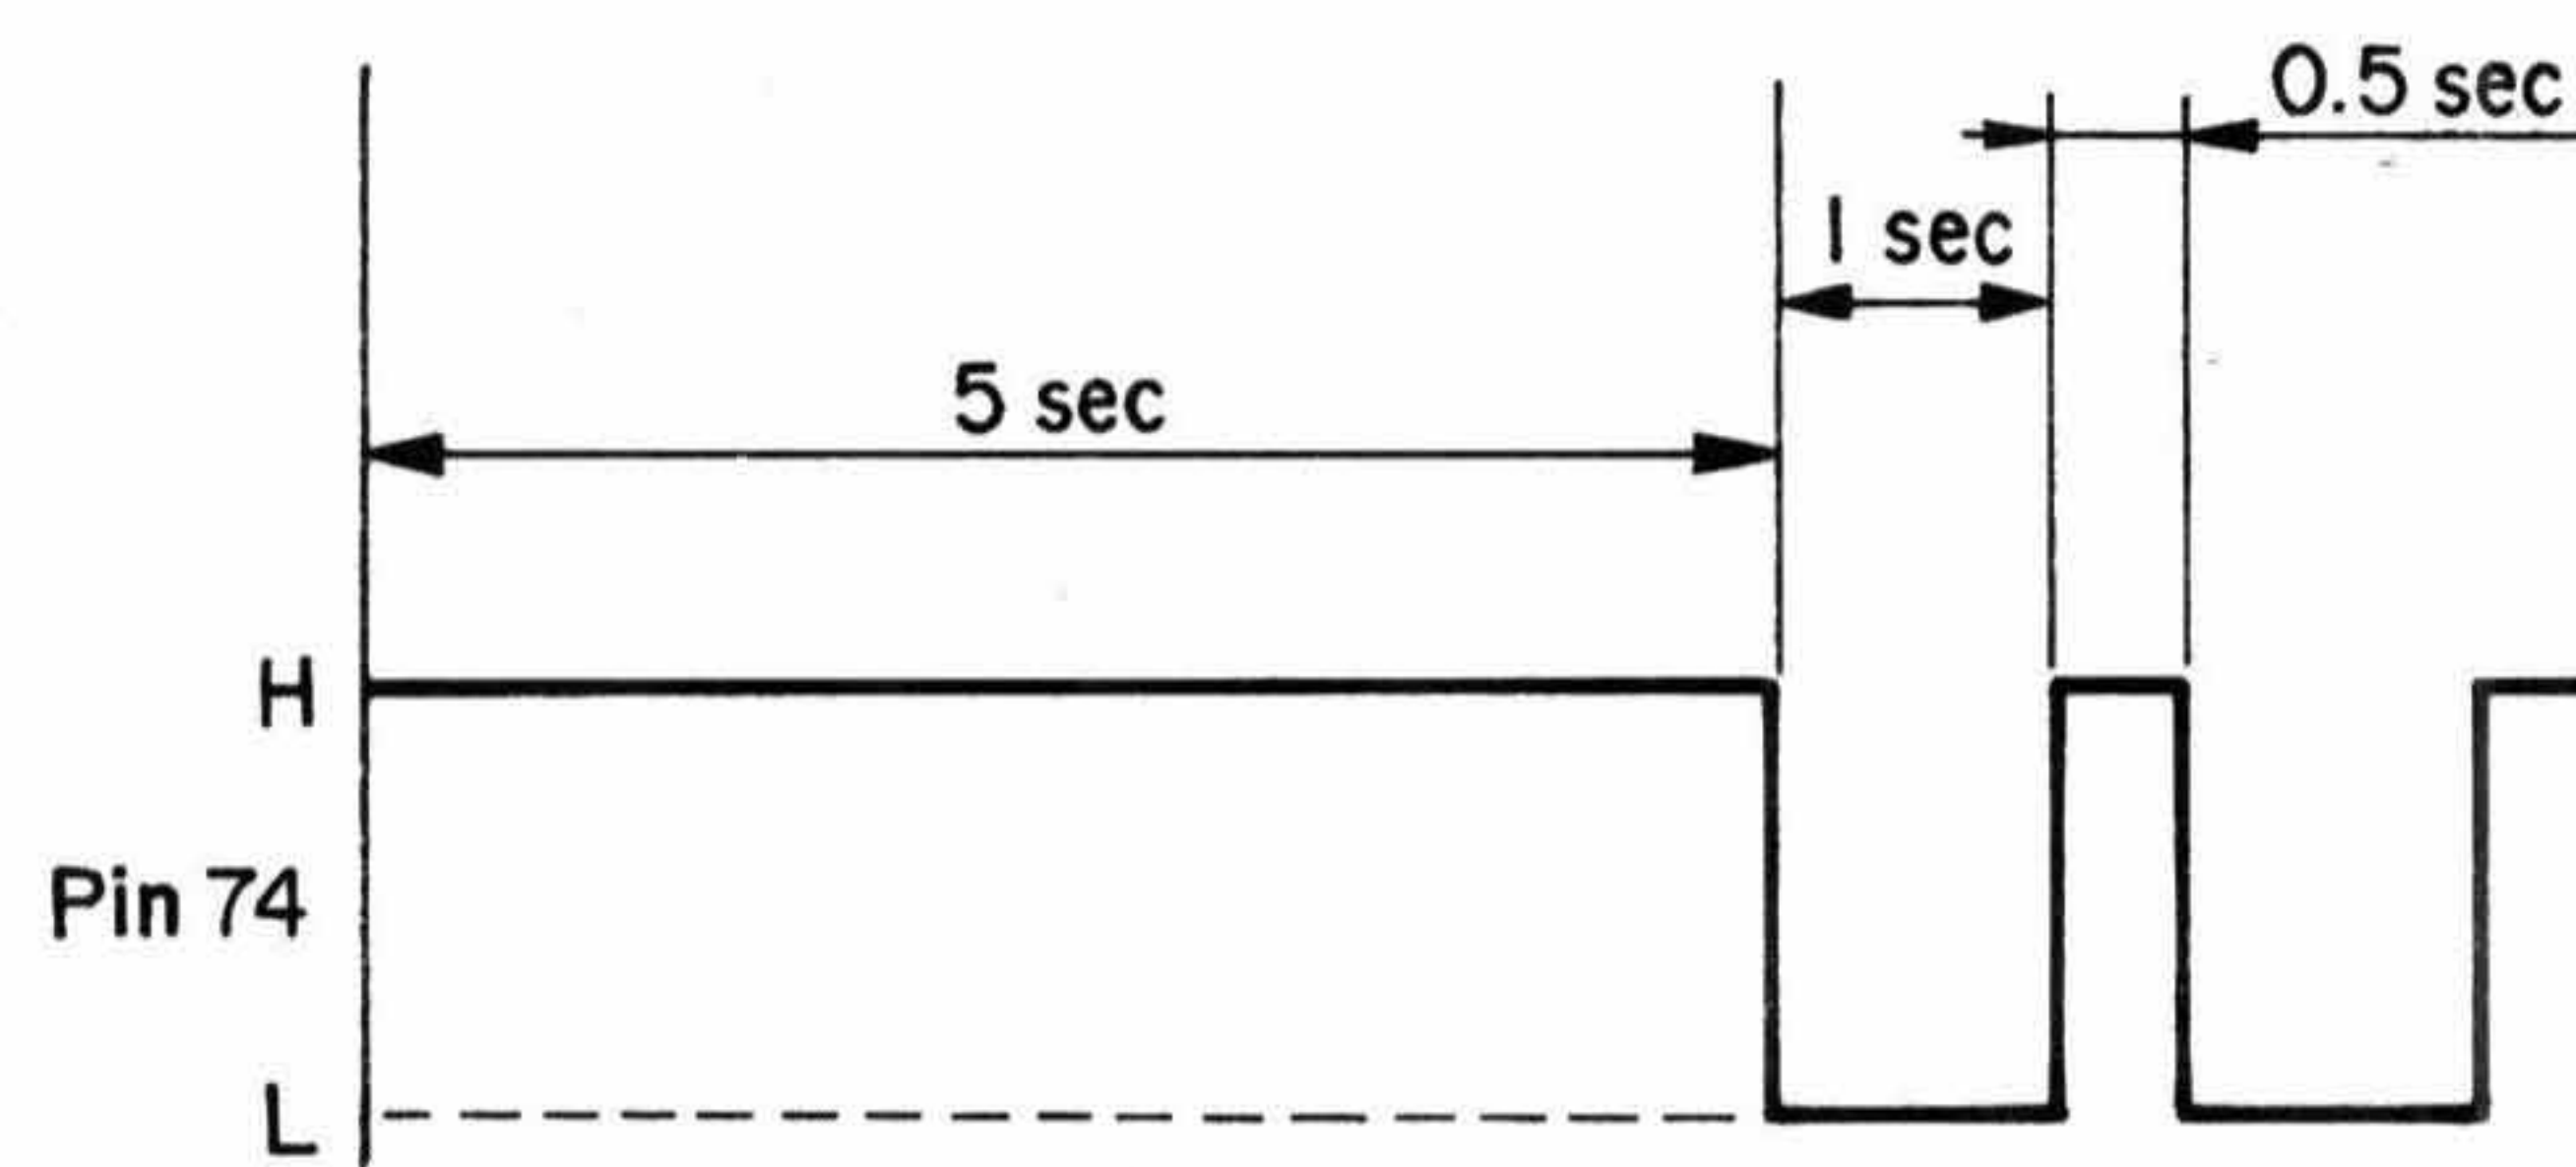


Figure B

IC 1 Pin⑧④

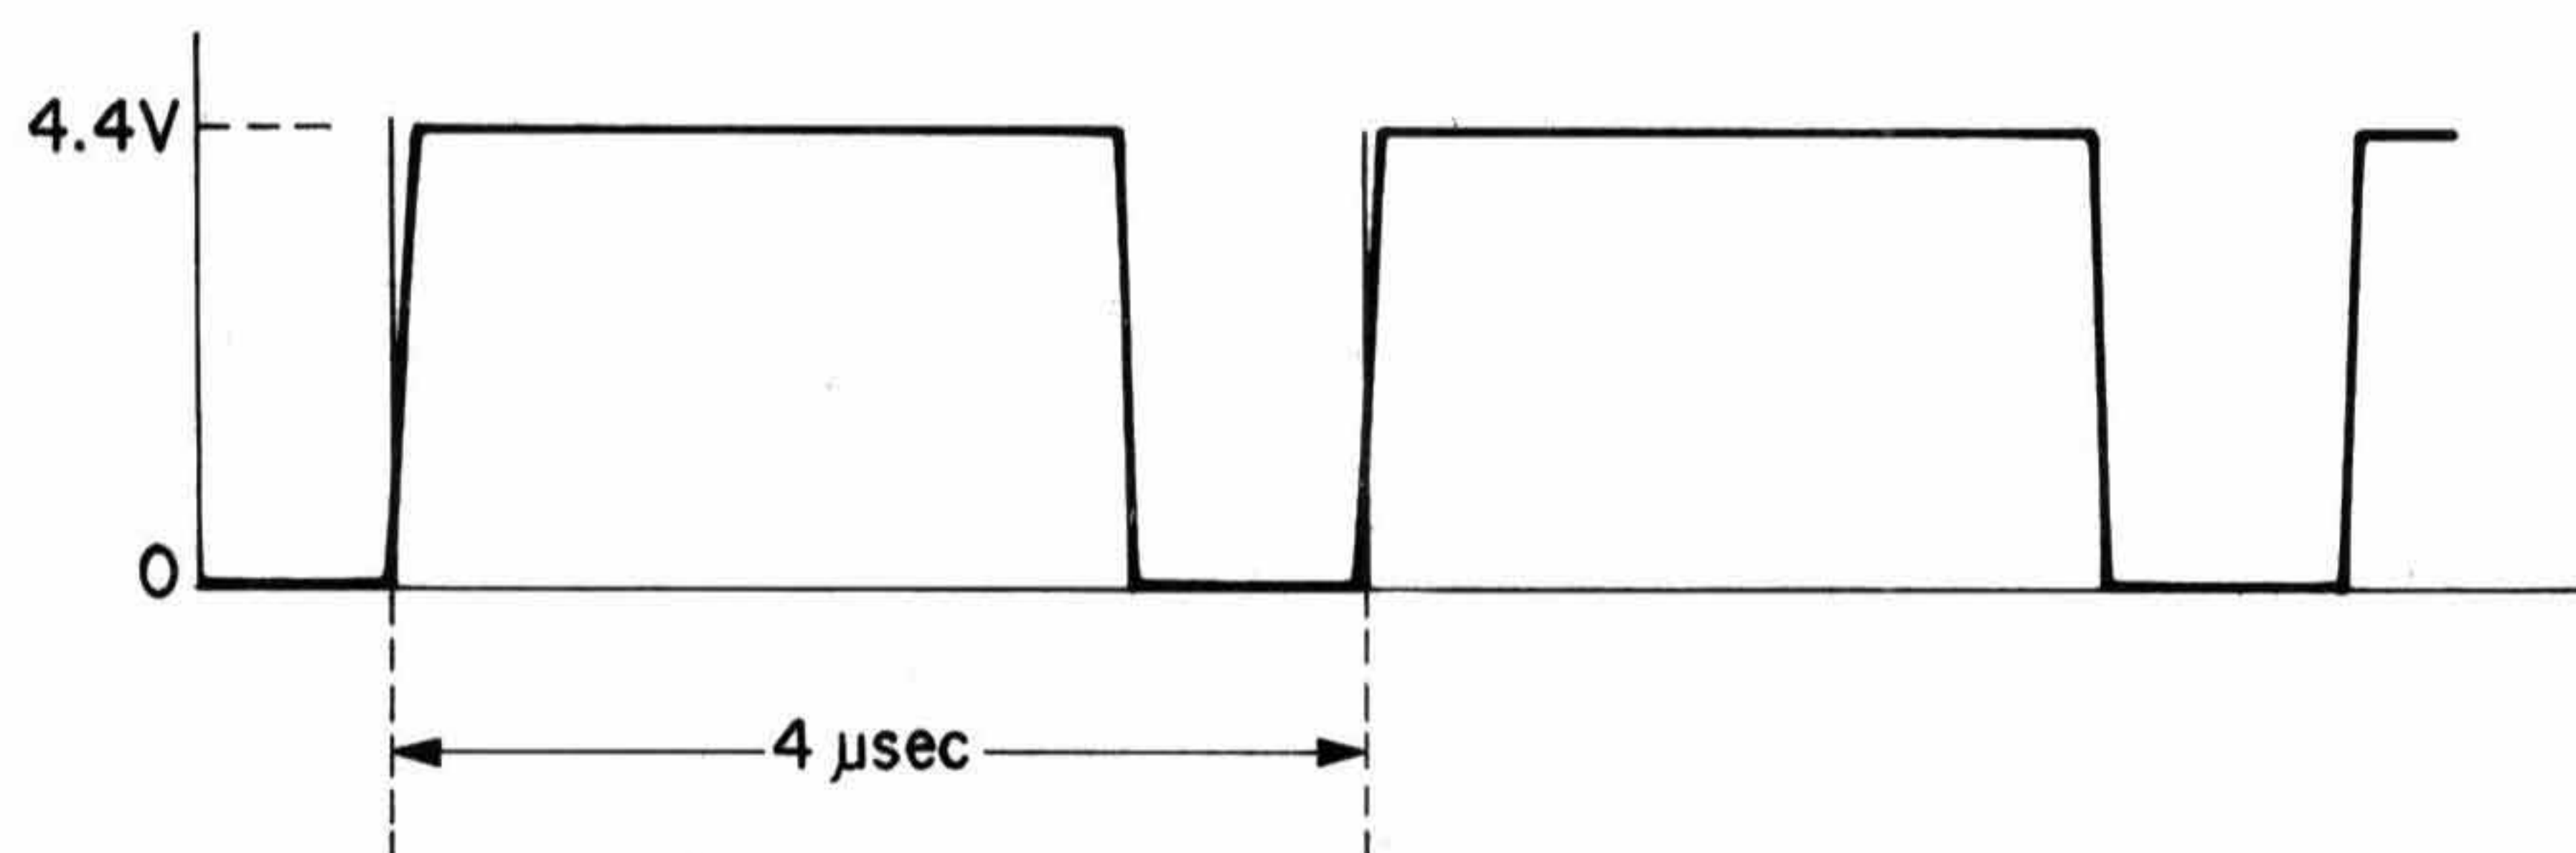


Figure C

IC 1 Pin⑤


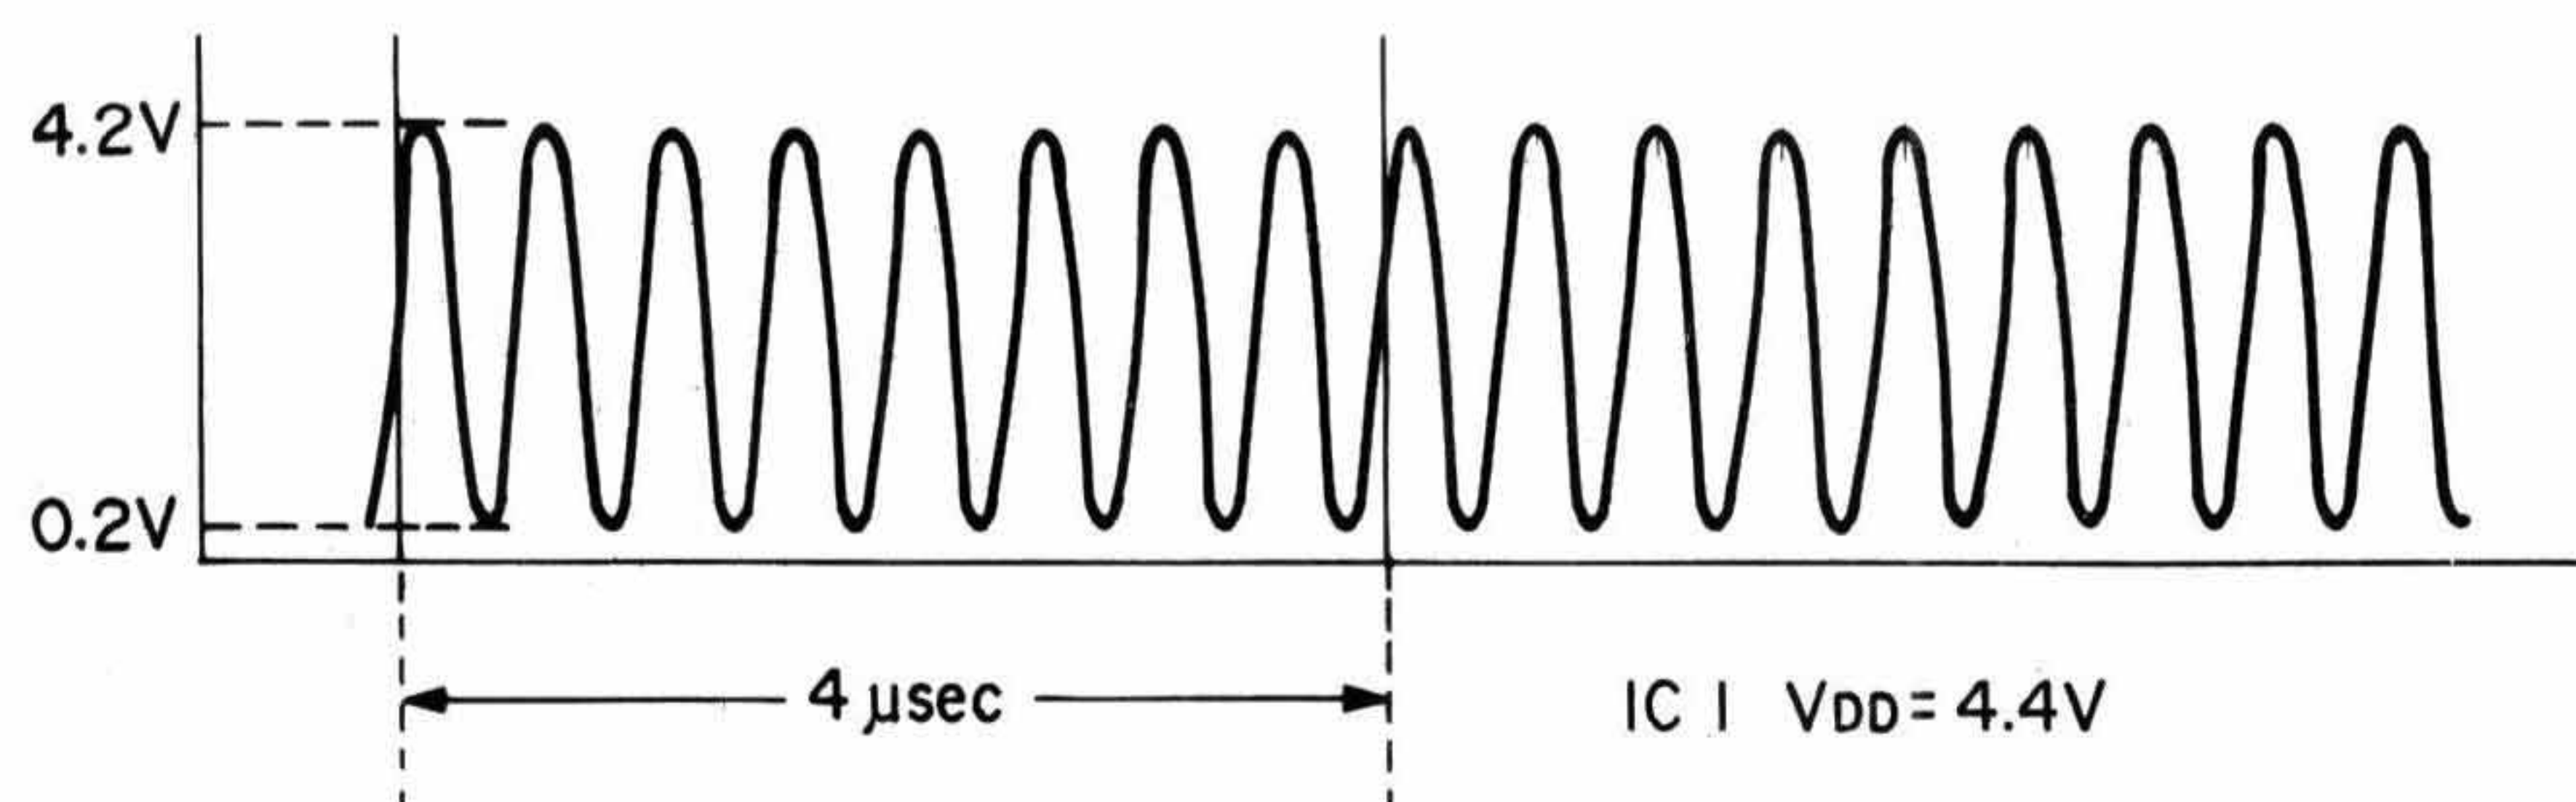


Figure D

GENERAL OPERATION OUTLINE

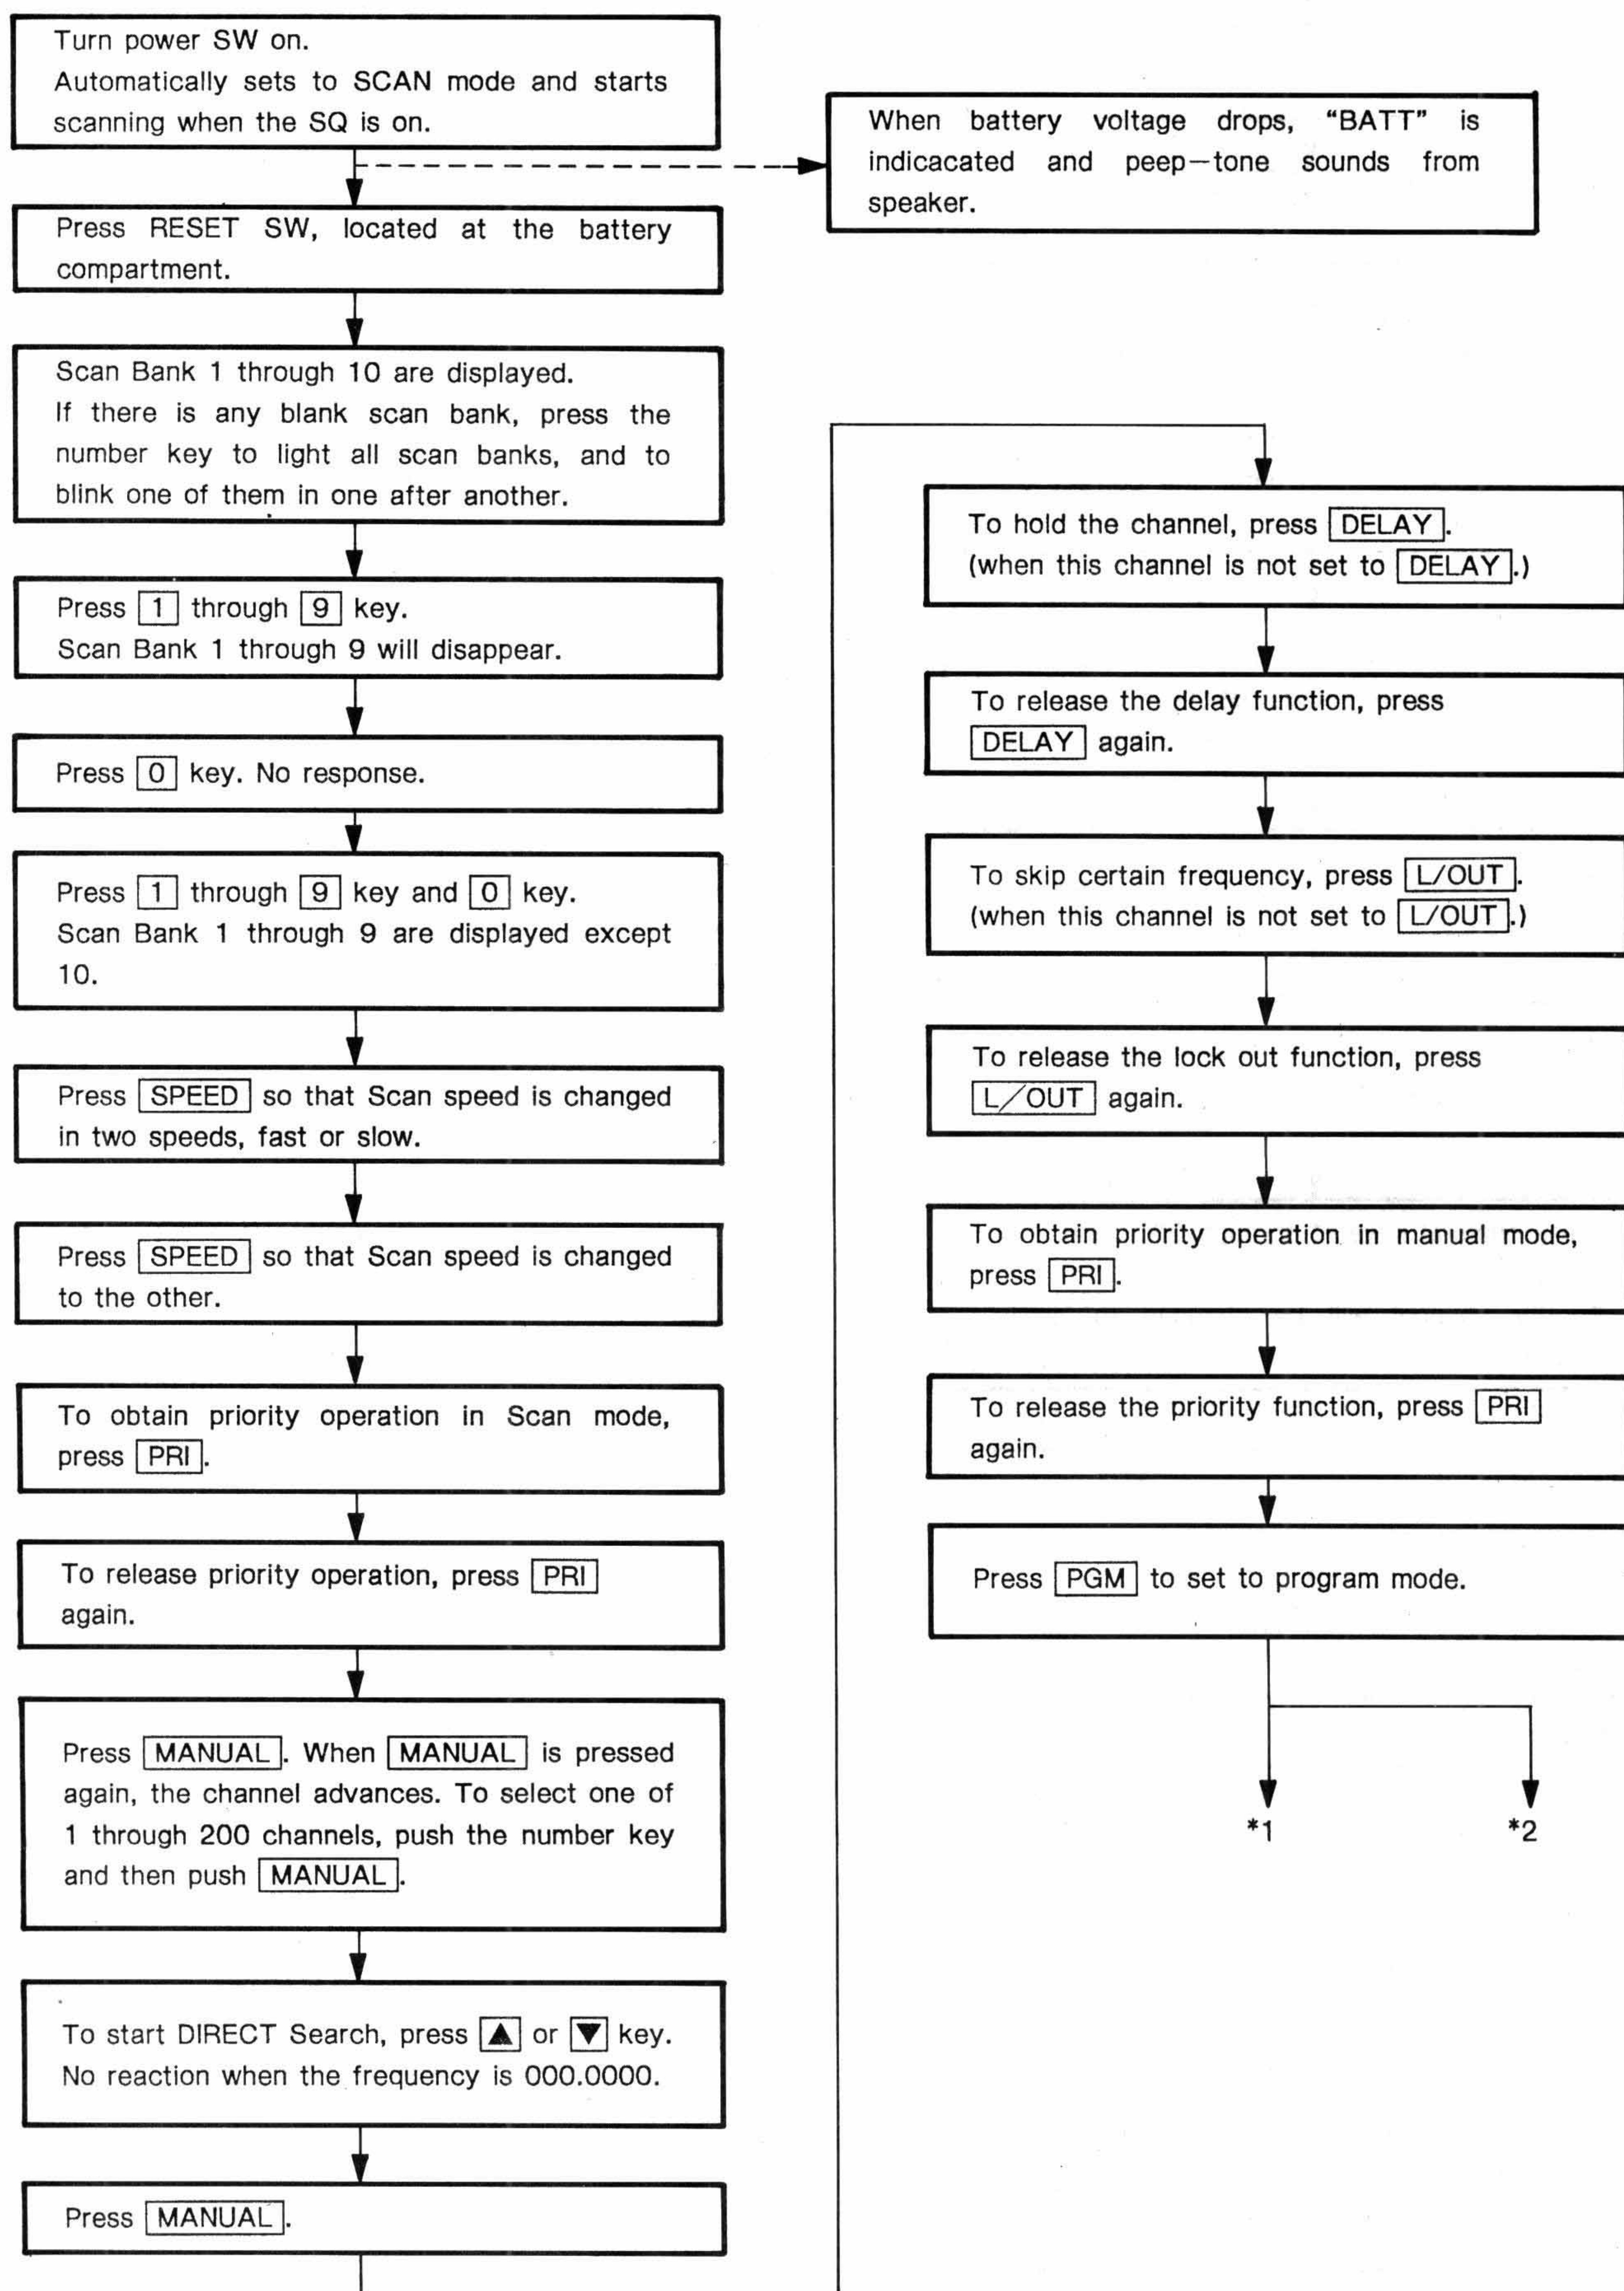

*1

Enter the desired frequency in each channel as follows:

Enter the desired frequency with numeral keys.

Press **ENTER** to memorize the frequency.
If wrong frequency (out of the band) is entered, "ERROR" will be displayed.
Press **CLEAR**, then enter the correct frequency.

Press **PGM** to advance to next channel.
Enter the frequency and press **ENTER**.
Repeat it to memorize frequencies one by one.

Press **PRI** so that priority channel appears.

To revert to the previous channel, press **PRI** again.

Press numeral keys (1 through 200) and then press **PRI**.
Priority channel will be changed to newly entered channel.

To call monitor channels, press **MON**.

Press **MON** so that next monitor channel appears.

To call the monitor channels directly, press numeral keys.

To revert to the previous channel, press **PGM**.

KEY LOCK switch ON. All keys unoperate except REMOTE KEY (SCAN, MAN).

*2

Enter search frequency as follows.

Press **LIMIT** and enter the lower frequency of the range to search with numeral keys.

Press **ENTER**.

Press **LIMIT** and enter the upper frequency of the range to search.

Press **ENTER**.

Press **▲** to search from lower frequency.
Press **▼** to search from upper frequency (squench must be on).


Press **MON** to store the desired frequency (10 monitor channels) in the search mode.

To start search, press **▲** or **▼**.


ALIGNMENT/ADJUSTMENT

Alignment and Test Point Locations

Logic PCB

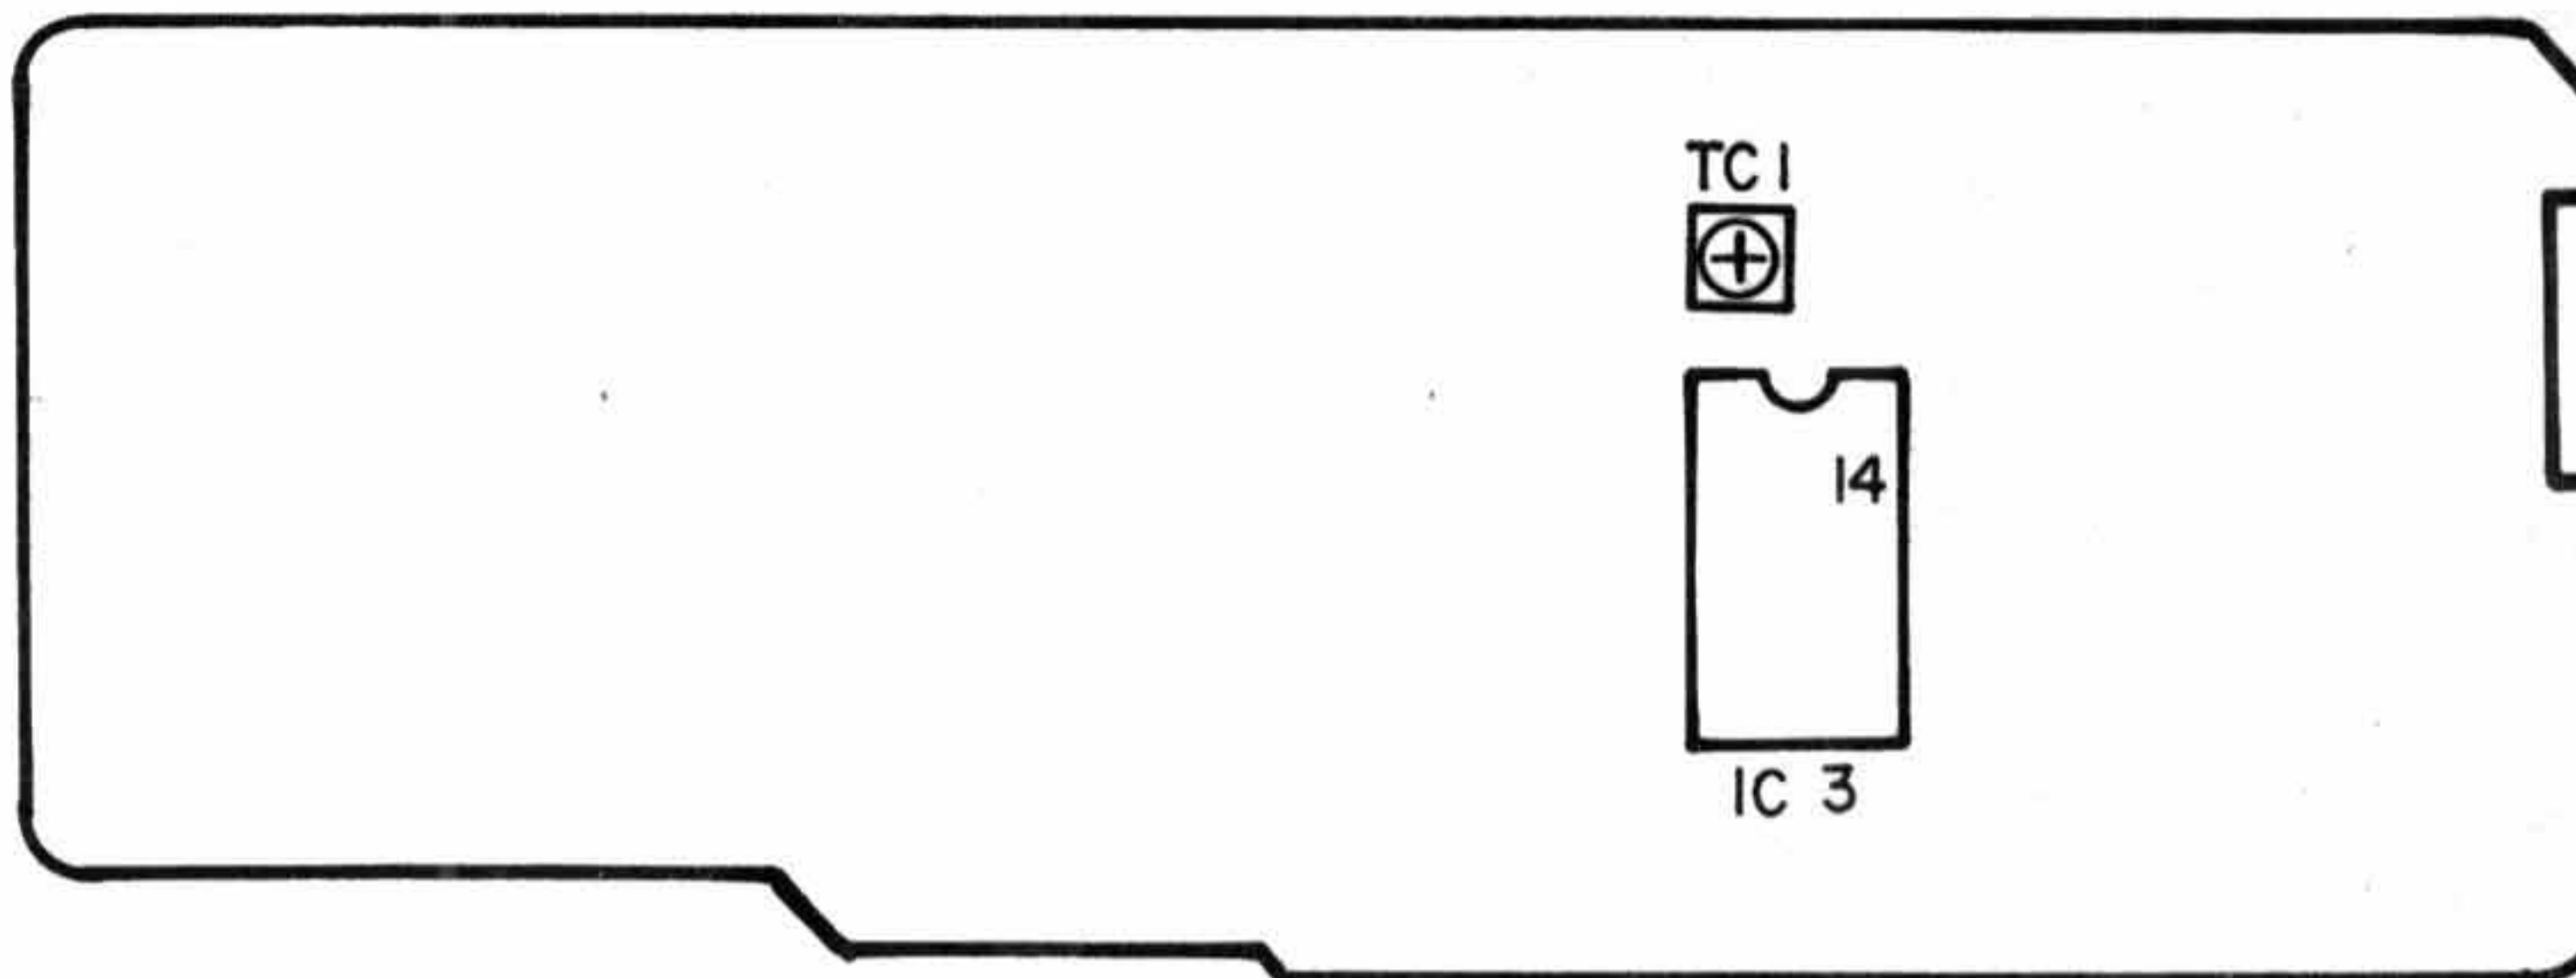

Linear PCB

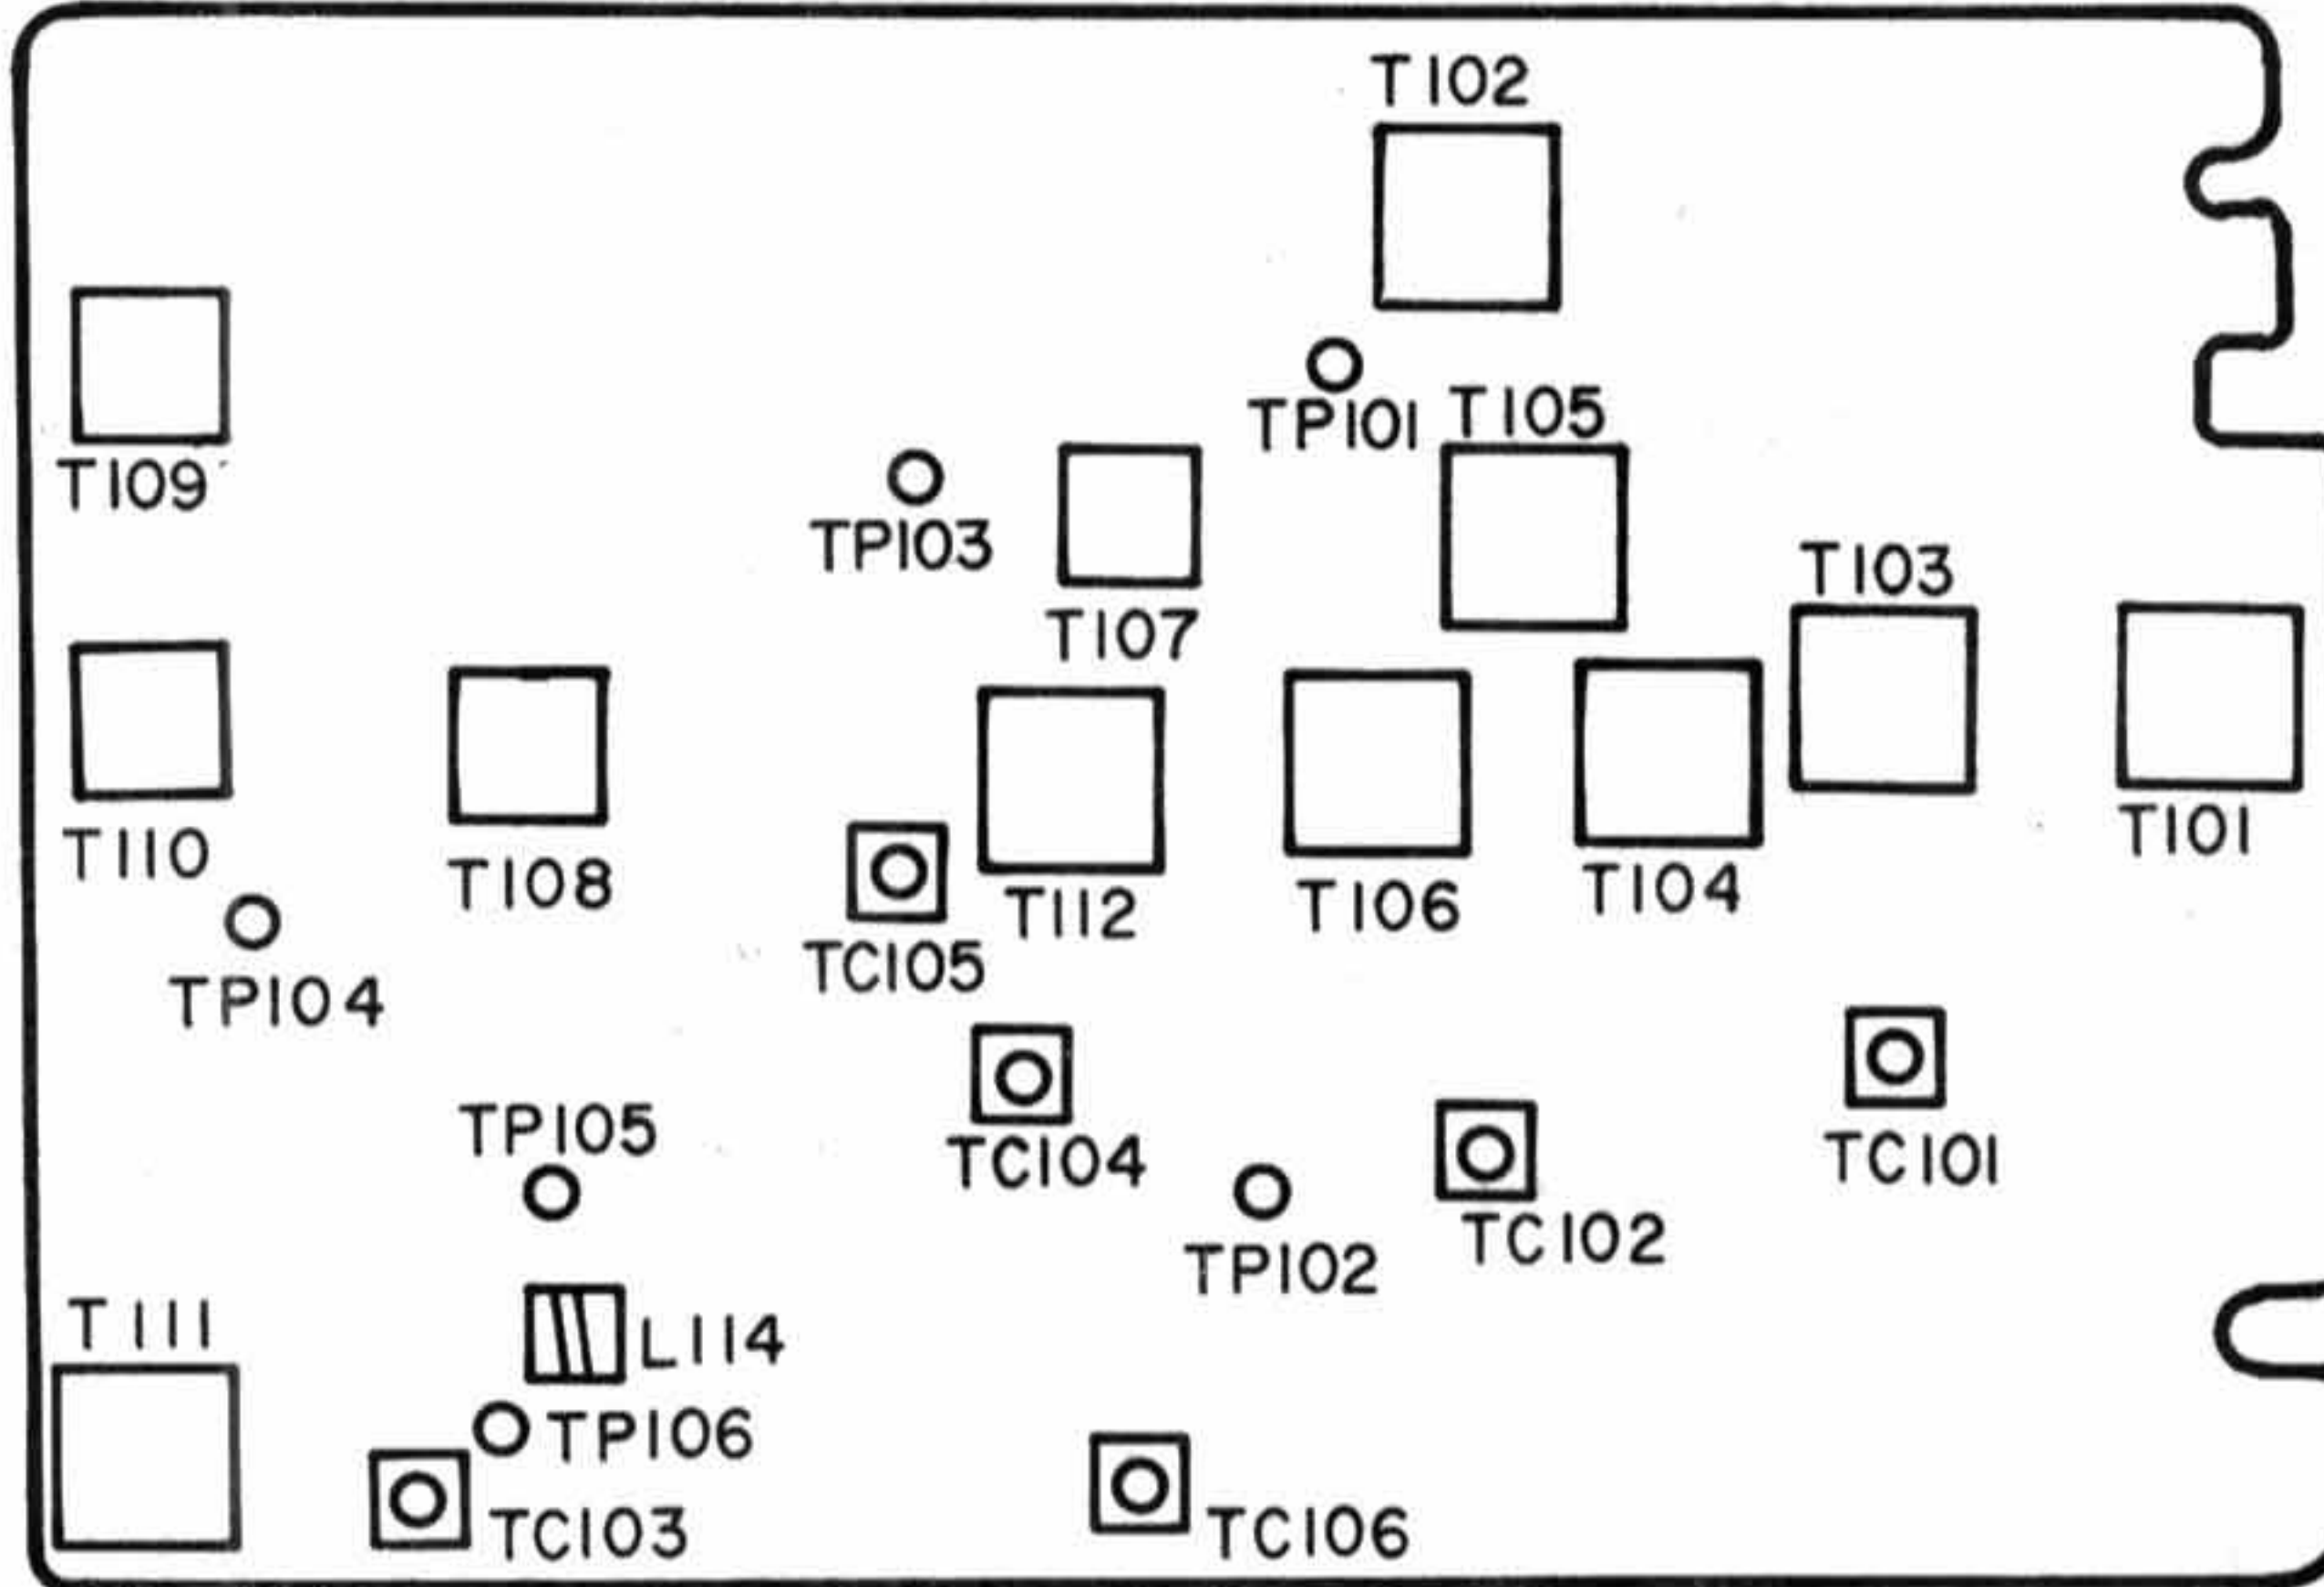

Alignment Preparation

Test equipment required

1. Oscilloscope (0~500 kHz, 0~50 MHz)
2. AC SSVM
3. DC SSVM
4. Frequency Counter (200 MHz)
5. 8-ohm dummy load
6. Slow Sweep Generator with variable marker (10.7 MHz)
7. VHF Sweep Generator with variable marker (30~54 MHz, 136.005~174 MHz)
8. UHF Sweep Generator with variable marker (380~512 MHz)
9. FM Signal Generator (30~54 MHz, 136.005~174 MHz, 380~512 MHz, 806~960 MHz)

Notes:

- Use non-metallic tuning tools.
- The test equipment and receiver should be warmed up at least 10 minutes before proceeding to alignment.
- The signal level from the generator should be kept as low as possible to obtain the usable output.
- 6 AA batteries are required to hold the memory when the external power is disconnected. Always be sure the batteries are fresh. If the low—battery indicator lights, replace the batteries, or the pre-programmed channel memories will be lost (and will have to be re-programmed).

The memory backup circuit can hold the programmed channel memories for about one hour even when neither the batteries nor the external power is provided.

Program CH1 to CH15 as follows.

Channel	Frequency(MHz)	Channel	Frequency(MHz)
1	30.0000	9	174.0000
2	41.0050	10	380.0000
3	54.0000	11	451.0000
4	108.0000	12	512.0000
5	121.0000	13	806.0000
6	136.0000	14	860.0000
7	136.0050	15	960.0000
8	155.0000		

Table 1

ALIGNMENT PROCEDURES

Reference Frequency OSC Alignment

Step	Control Setting	Test Instrument Connection	Adjust	Remarks
1	OFF/VOLUME Control: ON SQUELCH Control: Fully counterclockwise (CCW) Select Channel 4.	Connect Frequency counter to TP105 through a ceramic capacitor (5–10 pF) and GND. Figure 1	TC1	Adjust TC1 so that the frequency is 118.700000 MHz ± 10 Hz.

IF Section Alignment

Step	Control Setting	Test Instrument Connection	Adjust	Remarks
2	OFF/VOLUME control: ON SQUELCH Control: CCW	Connect test instruments as shown in Fig. 2	T107 T108	Adjust T107 to symmetrize the upper and lower heights of the S curve to be equal and adjust T108 to symmetrize the left and the right of the S curve.

Note:
During alignment, maintain the sweep generator output at the lowest level possible to prevent overloading.

Figure 1


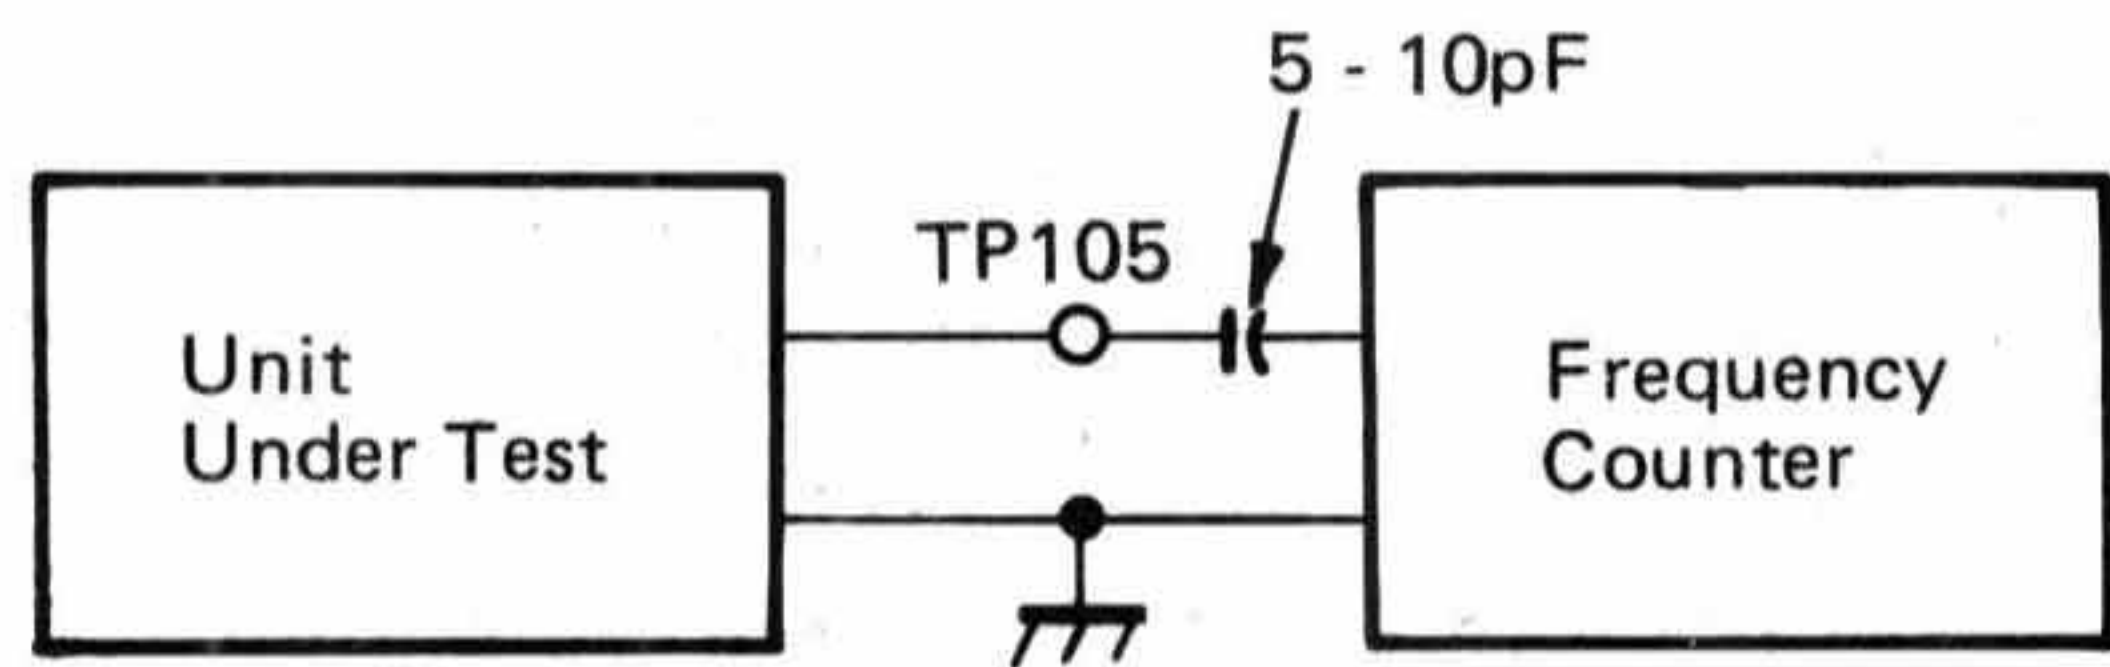


Figure 2

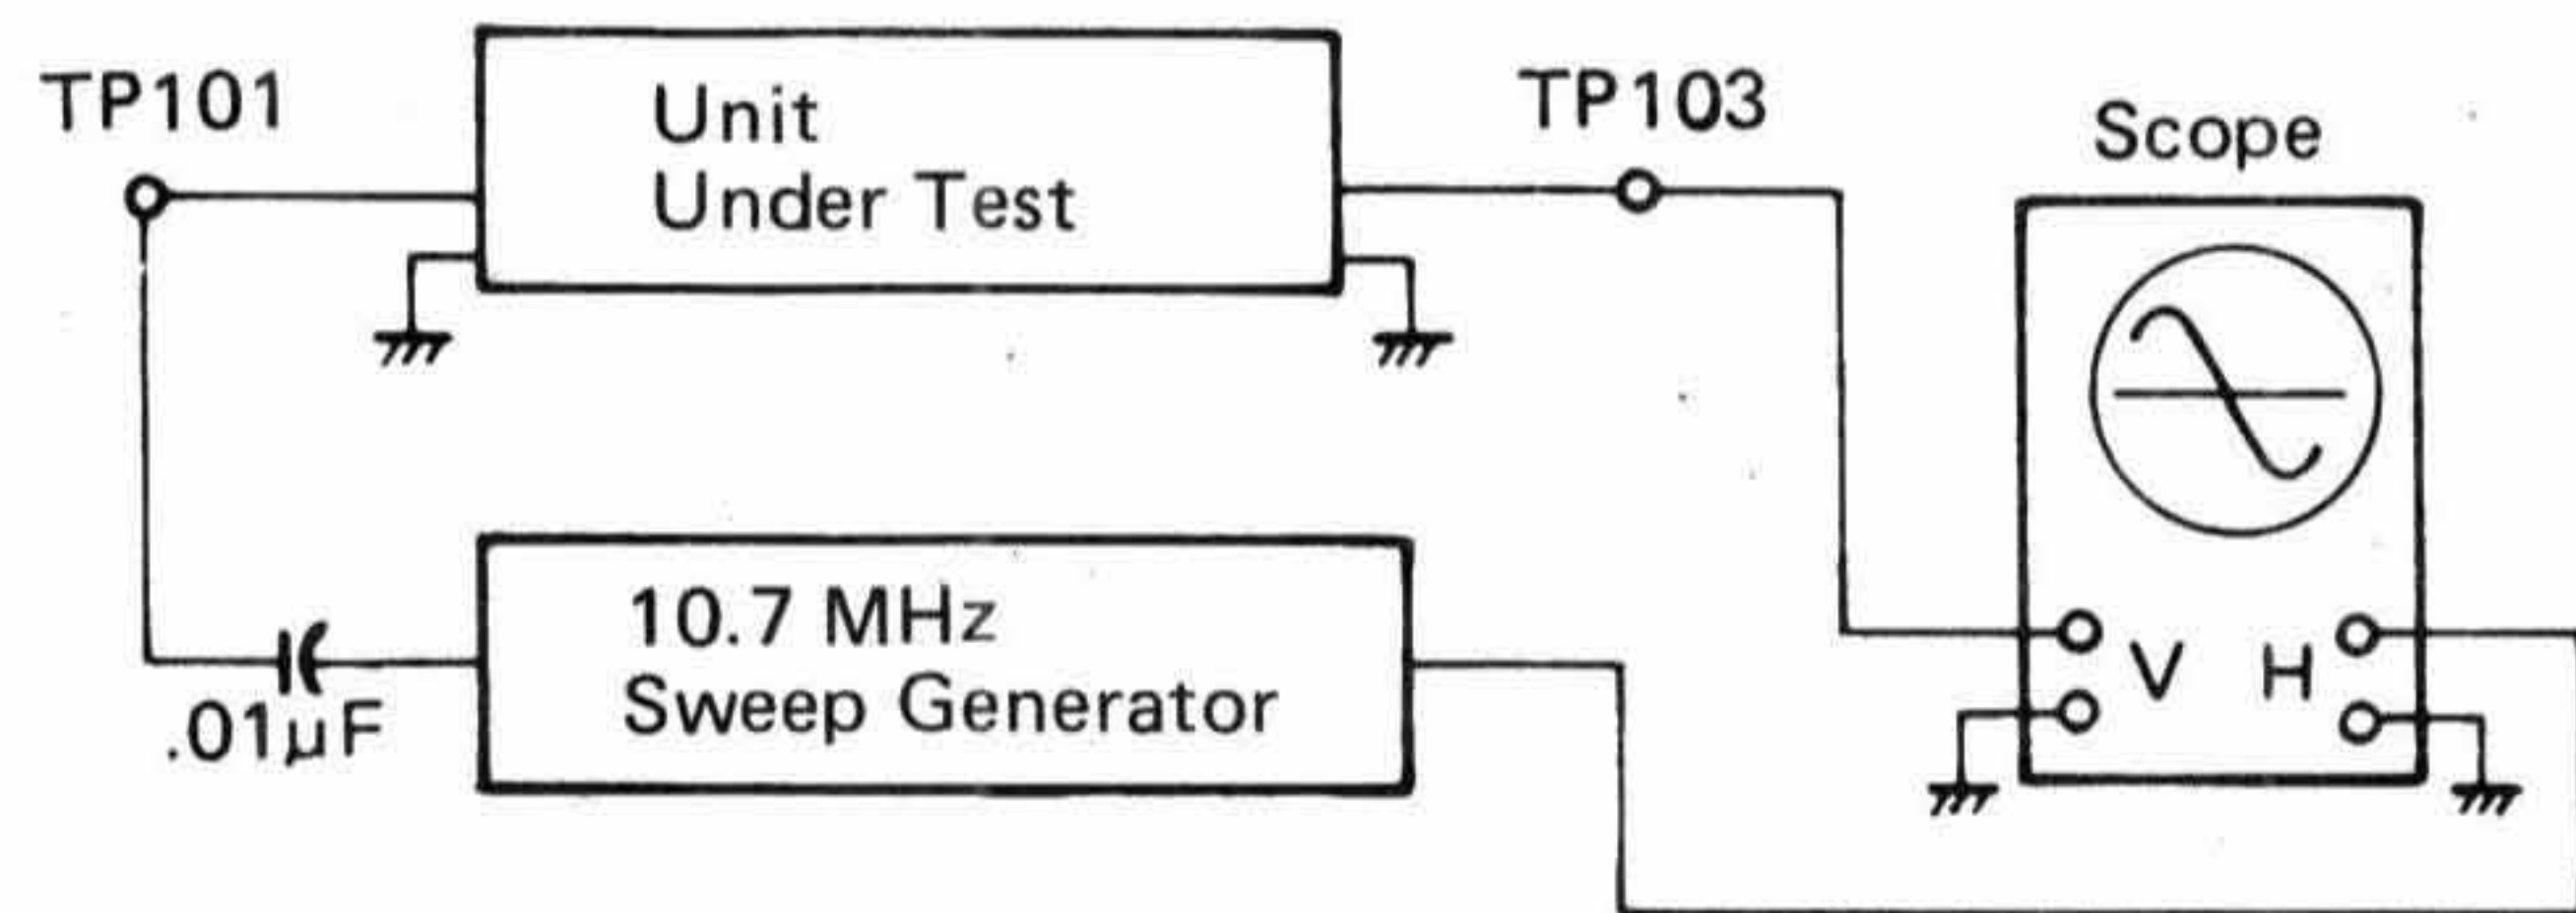

VCO Alignment

VHF LO Band

Step	Control Setting	Test Instrument Connection	Adjust	Remarks
3	OFF/VOLUME Control: ON SQUELCH Control: CCW Select channel 1 through 3.	Connect DC SSVM to TP106 and GND.	TC103 T111	1) Select channel 3 and adjust TC103 for 13V on the DC SSVM. 2) Select channel 1 and adjust T111 for 1.0 V on the DC SSVM. 3) Repeat steps 1) and 2) until no further improvement is observed. See Table 2.

CH	Frequency	Voltage
CH1	30 MHz	Voltage at TP106 0.9–1.2 V
CH2	41.005 MHz	Voltage at TP106 5.5–6.5 V
CH3	54 MHz	Voltage at TP106 12.5–13.5 V

Table 2

VHF AIR, HI and UHF LO Bands

Step	Control Setting	Test Instrument Connection	Adjust	Remarks
4	OFF/VOLUME Control: ON SQUELCH Control: CCW Select channel 4 through 12.	Connect DC SSVM to TP106 and GND.	TC105 T112	1) Select channel 12 and adjust TC105 for 13 V on the DC SSVM. 2) Select channel 4 and adjust T112 for 1.0 V on the DC SSVM. 3) Repeat steps 1) and 2) until no improvement is observed. See Table 3.

CH	Frequency	Voltage
CH4	108.0000 MHz	Voltage at TP106 0.9–1.1 V
CH5	121.0000 MHz	Voltage at TP106 2.4–3.1 V
CH6	136.0000 MHz	Voltage at TP106 5.7–6.7 V
CH7	136.0050 MHz	Voltage at TP106 1.6–1.9 V
CH8	155.0000 MHz	Voltage at TP106 4.1–5.1 V
CH9	174.0000 MHz	Voltage at TP106 11.0–11.8 V
CH10	380.0000 MHz	Voltage at TP106 1.2–1.6 V
CH11	451.0000 MHz	Voltage at TP106 5.7–6.7 V
CH12	512.0000 MHz	Voltage at TP106 12.9–13.1 V

Table 3

UHF HI Band

Step	Control Setting	Test Instrument Connection	Adjust	Remarks
5	OFF/VOLUME Control: ON SQUELCH Control: CCW Select channel 15.	Connect DC SSVM to TP106 and GND.	L114	Adjust L114 for 12 V on the DC SSVM. See Table 4.

CH	Frequency	Voltage
CH13	806.0000 MHz	Voltage at TP106 3.4–4.5 V
CH14	860.0000 MHz	Voltage at TP106 6.5–7.7 V
CH15	960.0000 MHz	Voltage at TP106 11.8–12.2 V

Table 4

RF Amp Alignment

VHF LO Band

Step	Control Setting	Test Instrument Connection	Adjust	Remarks
6	OFF/VOLUME Control: ON SQUELCH Control: CCW Select channel 1 through 3. See Table 1.	Connect instruments shown as Fig.3. SWEEP GENERATOR 30–54 MHz.	T101 T102	1) Select channel 2 and adjust T101 and T102 for maximum RF waveform. 2) Check channel 1 through 3 for maximum output. A slight deviation as Fig.4 is acceptable.

VHF AIR Band

Step	Control Setting	Test Instrument Connection	Adjust	Remarks
7	OFF/VOLUME Control: ON SQUELCH Control: CCW Select channel 5 through 6. See Table 1.	Same as Step 6 SWEEP GENERATOR 108–174 MHz.	T103 T105	1) Select channel 5 and adjust T103 and T105 for maximum RF output. 2) Check channel 4 through 6 for maximum RF output. A slight deviation as Fig.5 is acceptable.

VHF HI Band

Step	Control Setting	Test Instrument Connection	Adjust	Remarks
8	OFF/VOLUME Control: ON SQUELCH Control: CCW Select channel 7 through 9. See Table 1.	Same as Step 6. SWEEP GENERATOR 136.0005–174 MHz.	T104 T106	1) Select channel 7 and adjust T104 and T106 for maximum RF waveform. 2) Check channel 7 through 9 for maximum RF output. A slight deviation as Fig.6 is acceptable.

UHF LO Band

Step	Control Setting	Test Instrument Connection	Adjust	Remarks
9	OFF/VOLUME Control: ON SQUELCH Control: CCW Select channel 10 through 12. See Table 1.	Same as Step 6 SWEEP GENERATOR 380–512 MHz.	TC101 TC102 TC104	1) Select channel 10 and adjust TC101, TC102 and TC104 for maximum RF output. 2) Check channel 10 through 12 for maximum RF output. A slight deviation as Fig.7 is acceptable.

UHF Hi band: No adjustment required.

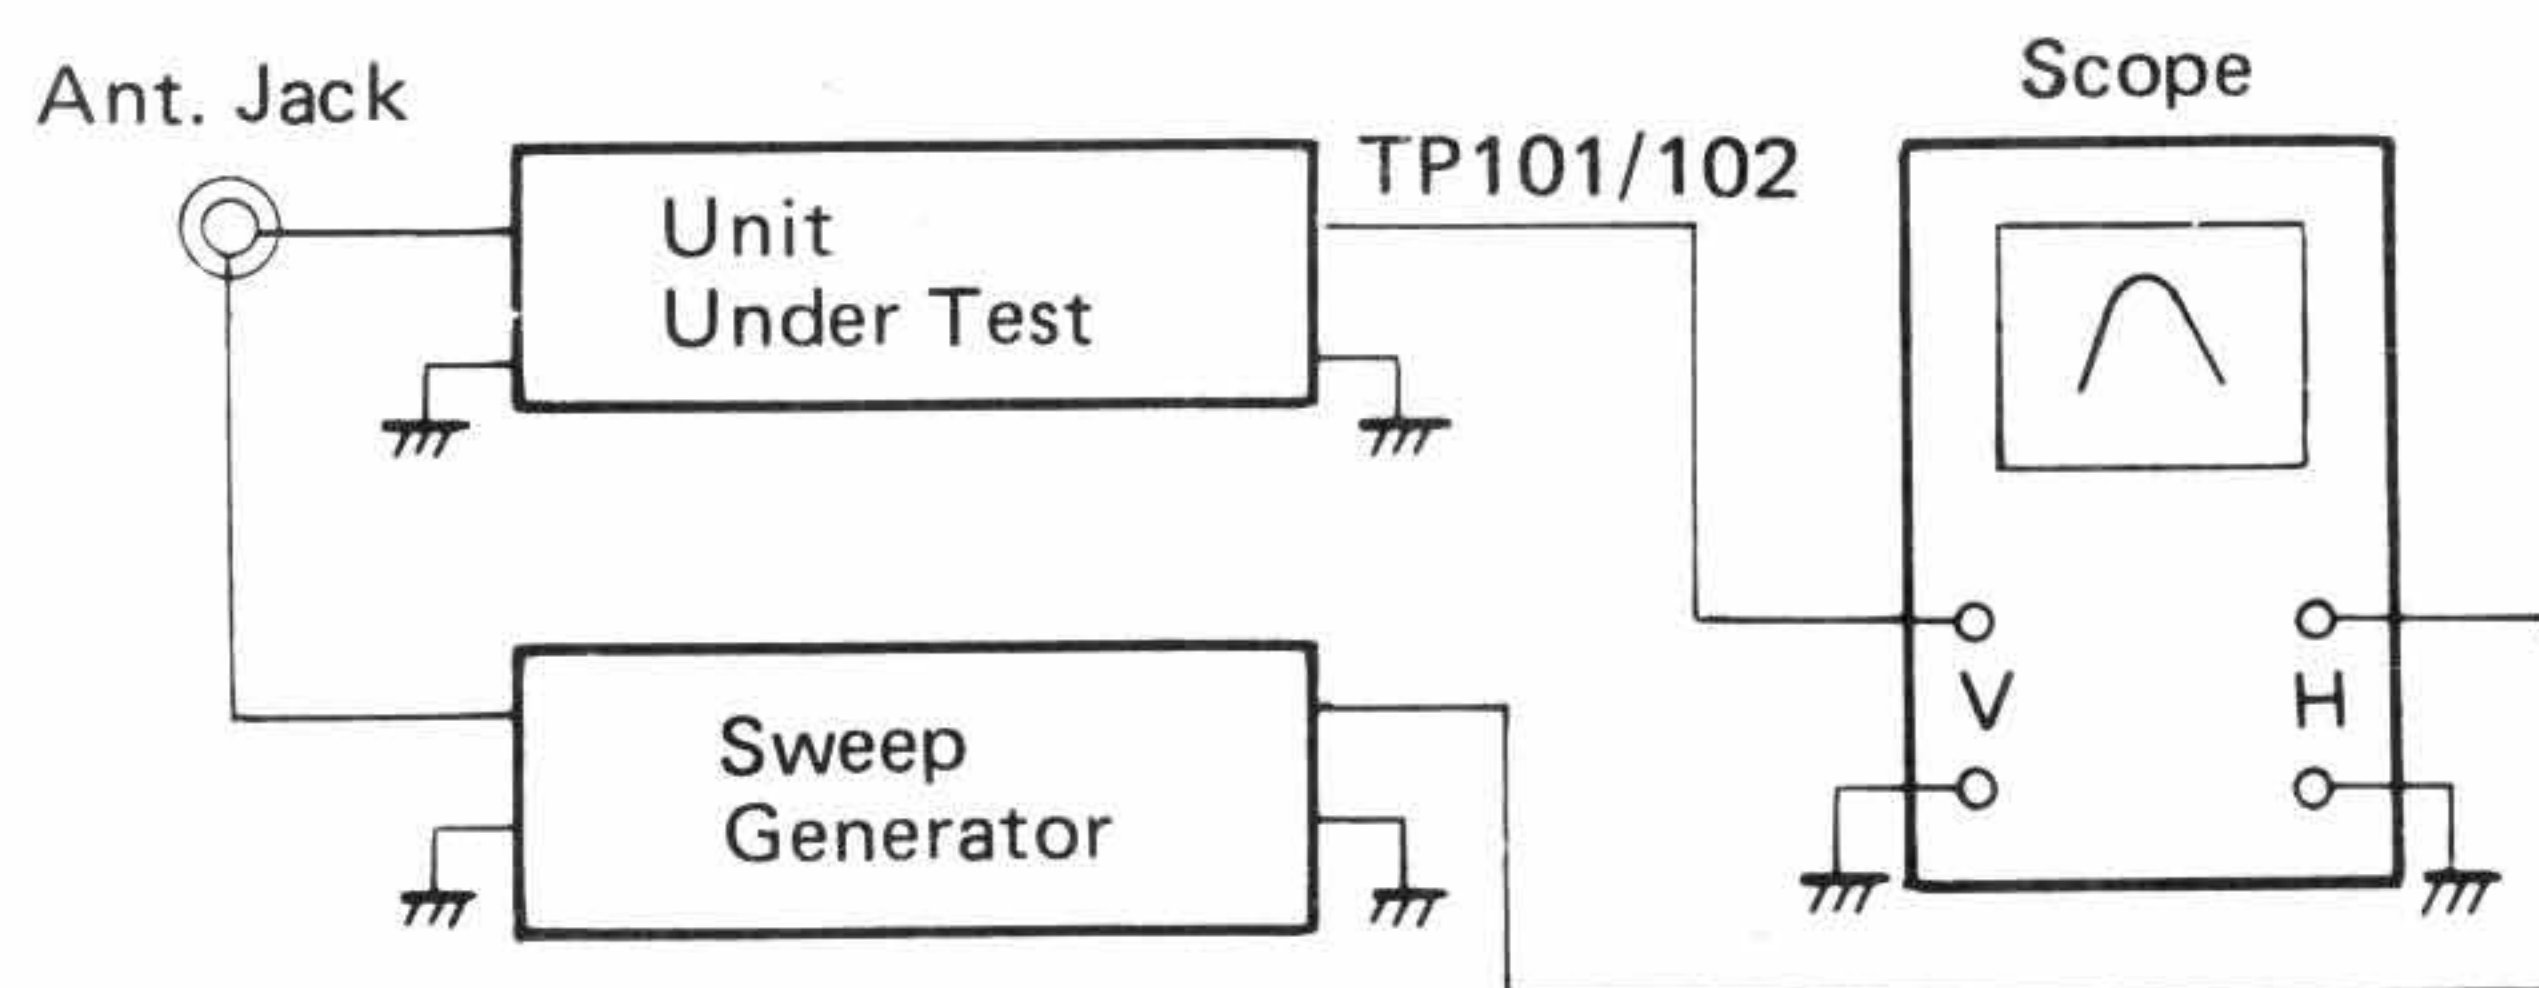


Figure 3

Notes:

- Use TP101 for VHF Lo, Air and VHF Hi band adjustment.
- Use TP102 for UHF Lo band adjustment.

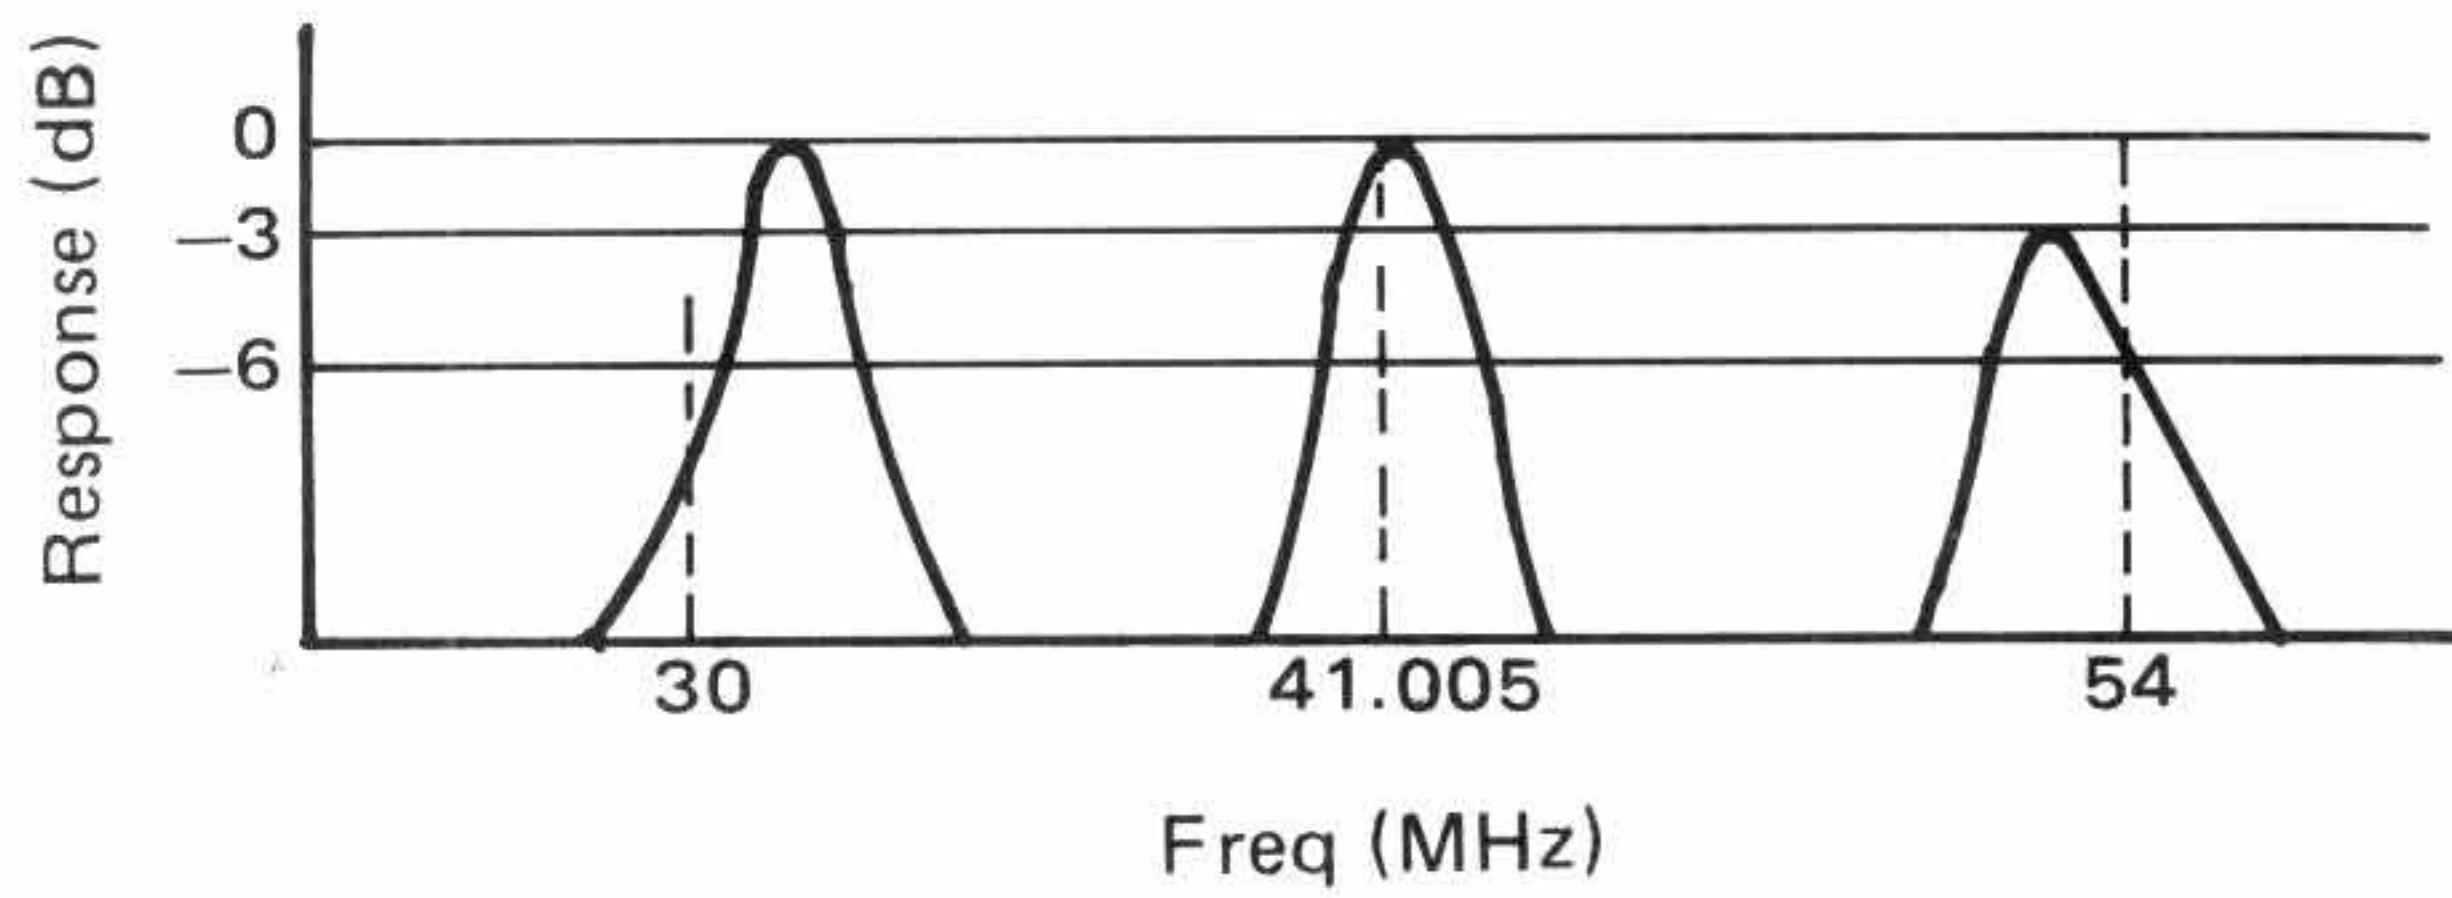


Figure 4

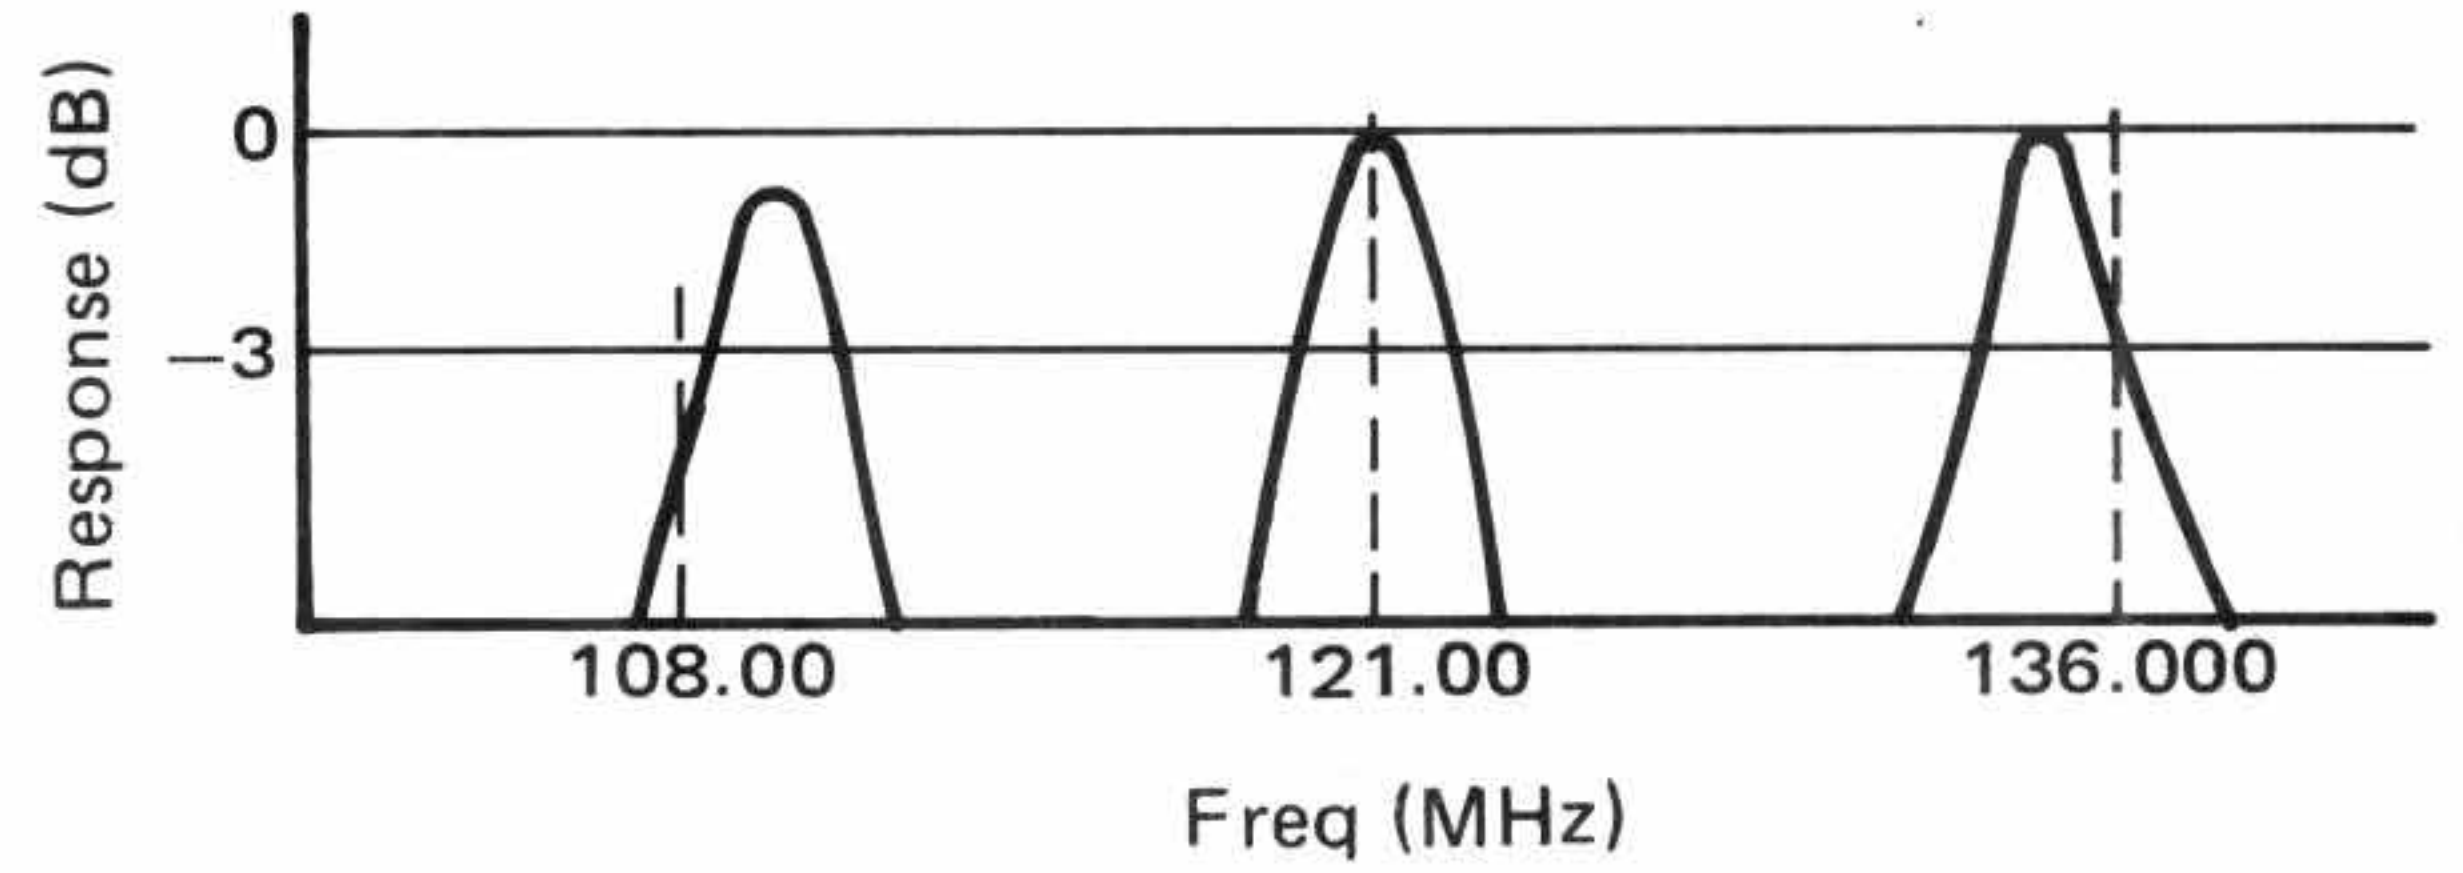


Figure 5

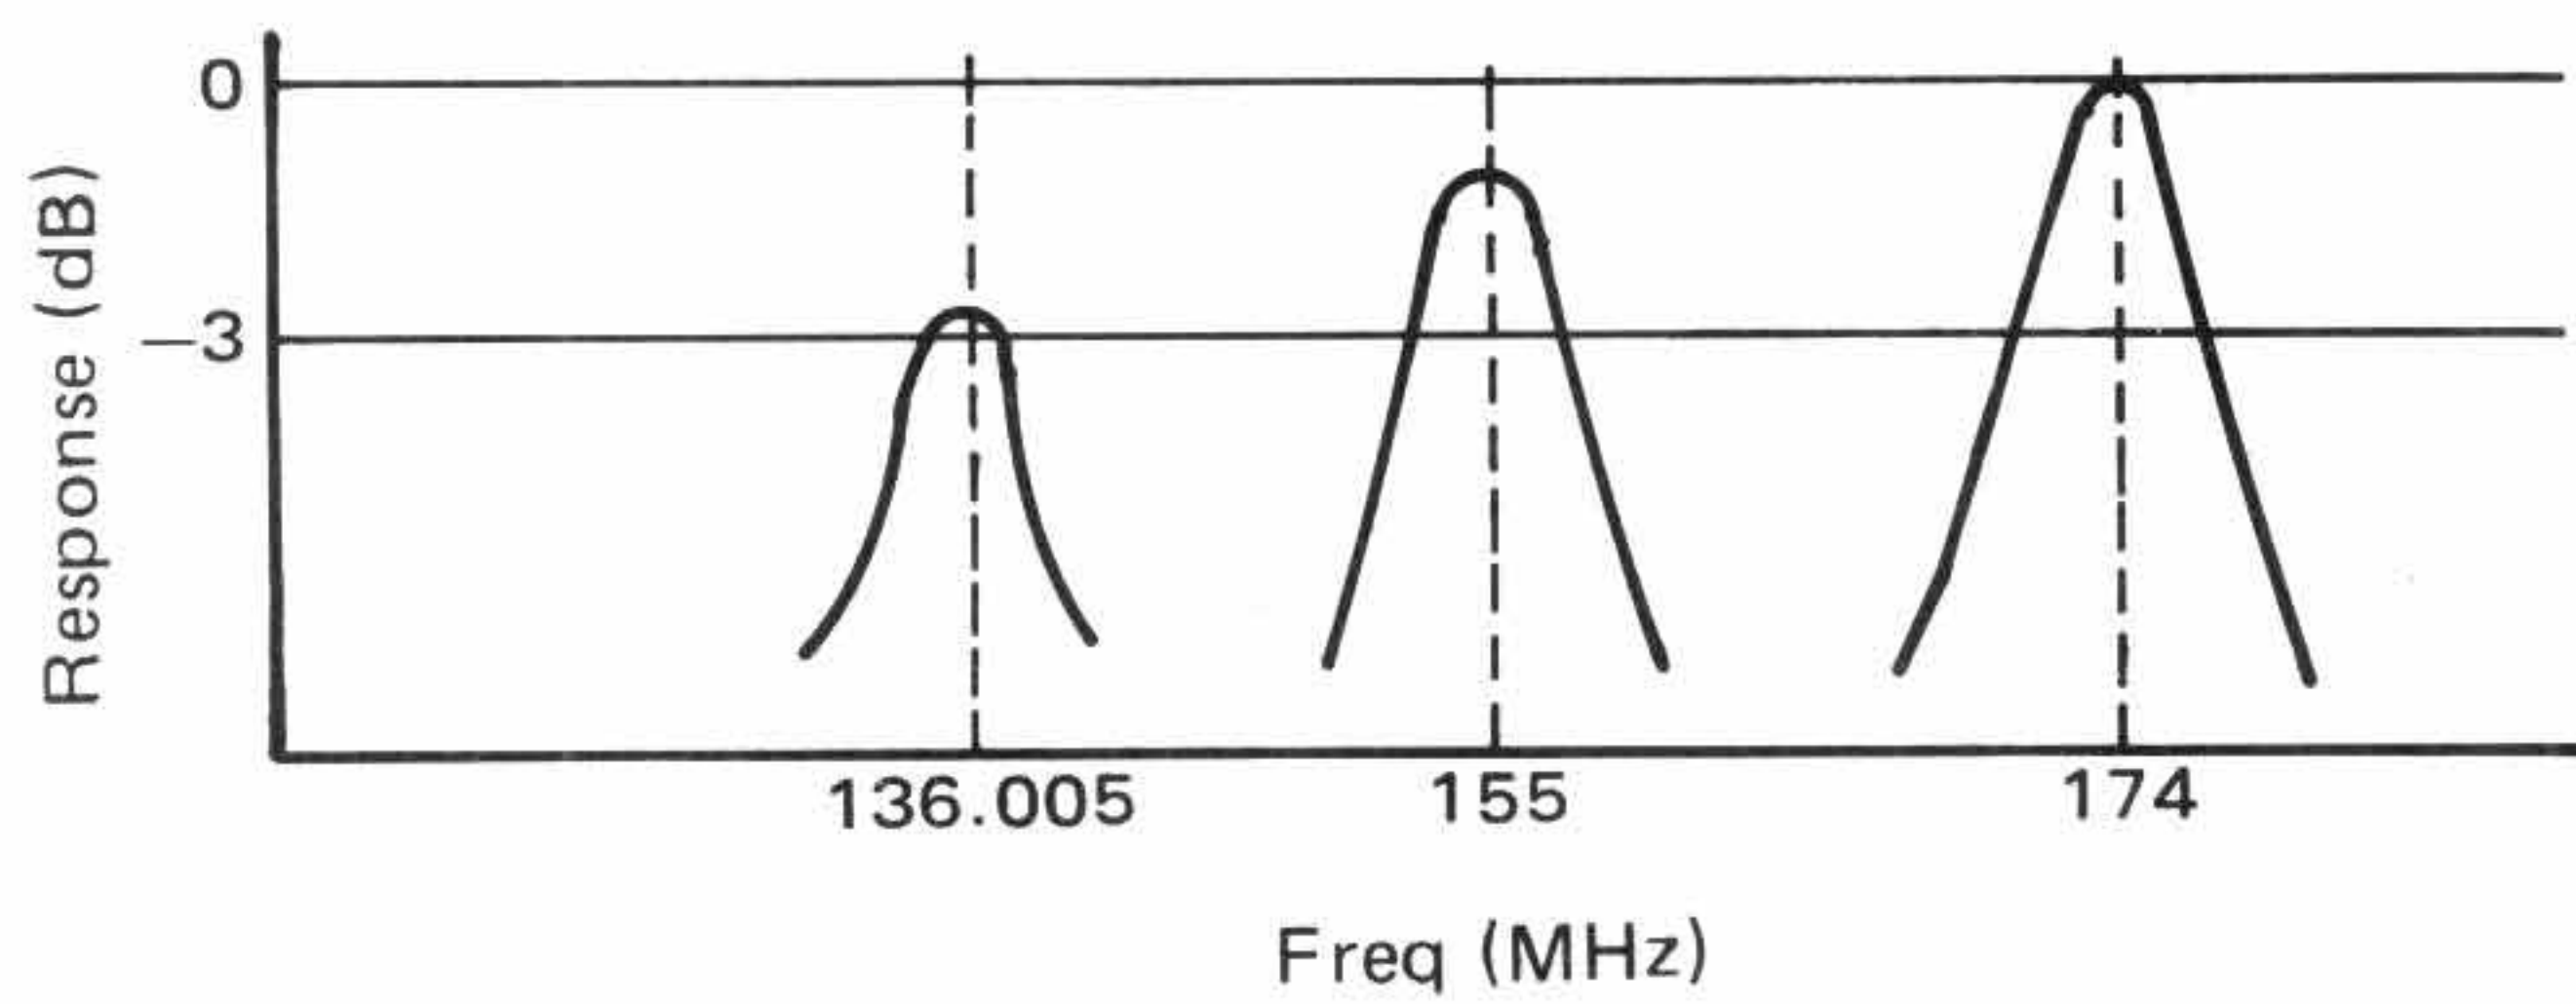


Figure 6

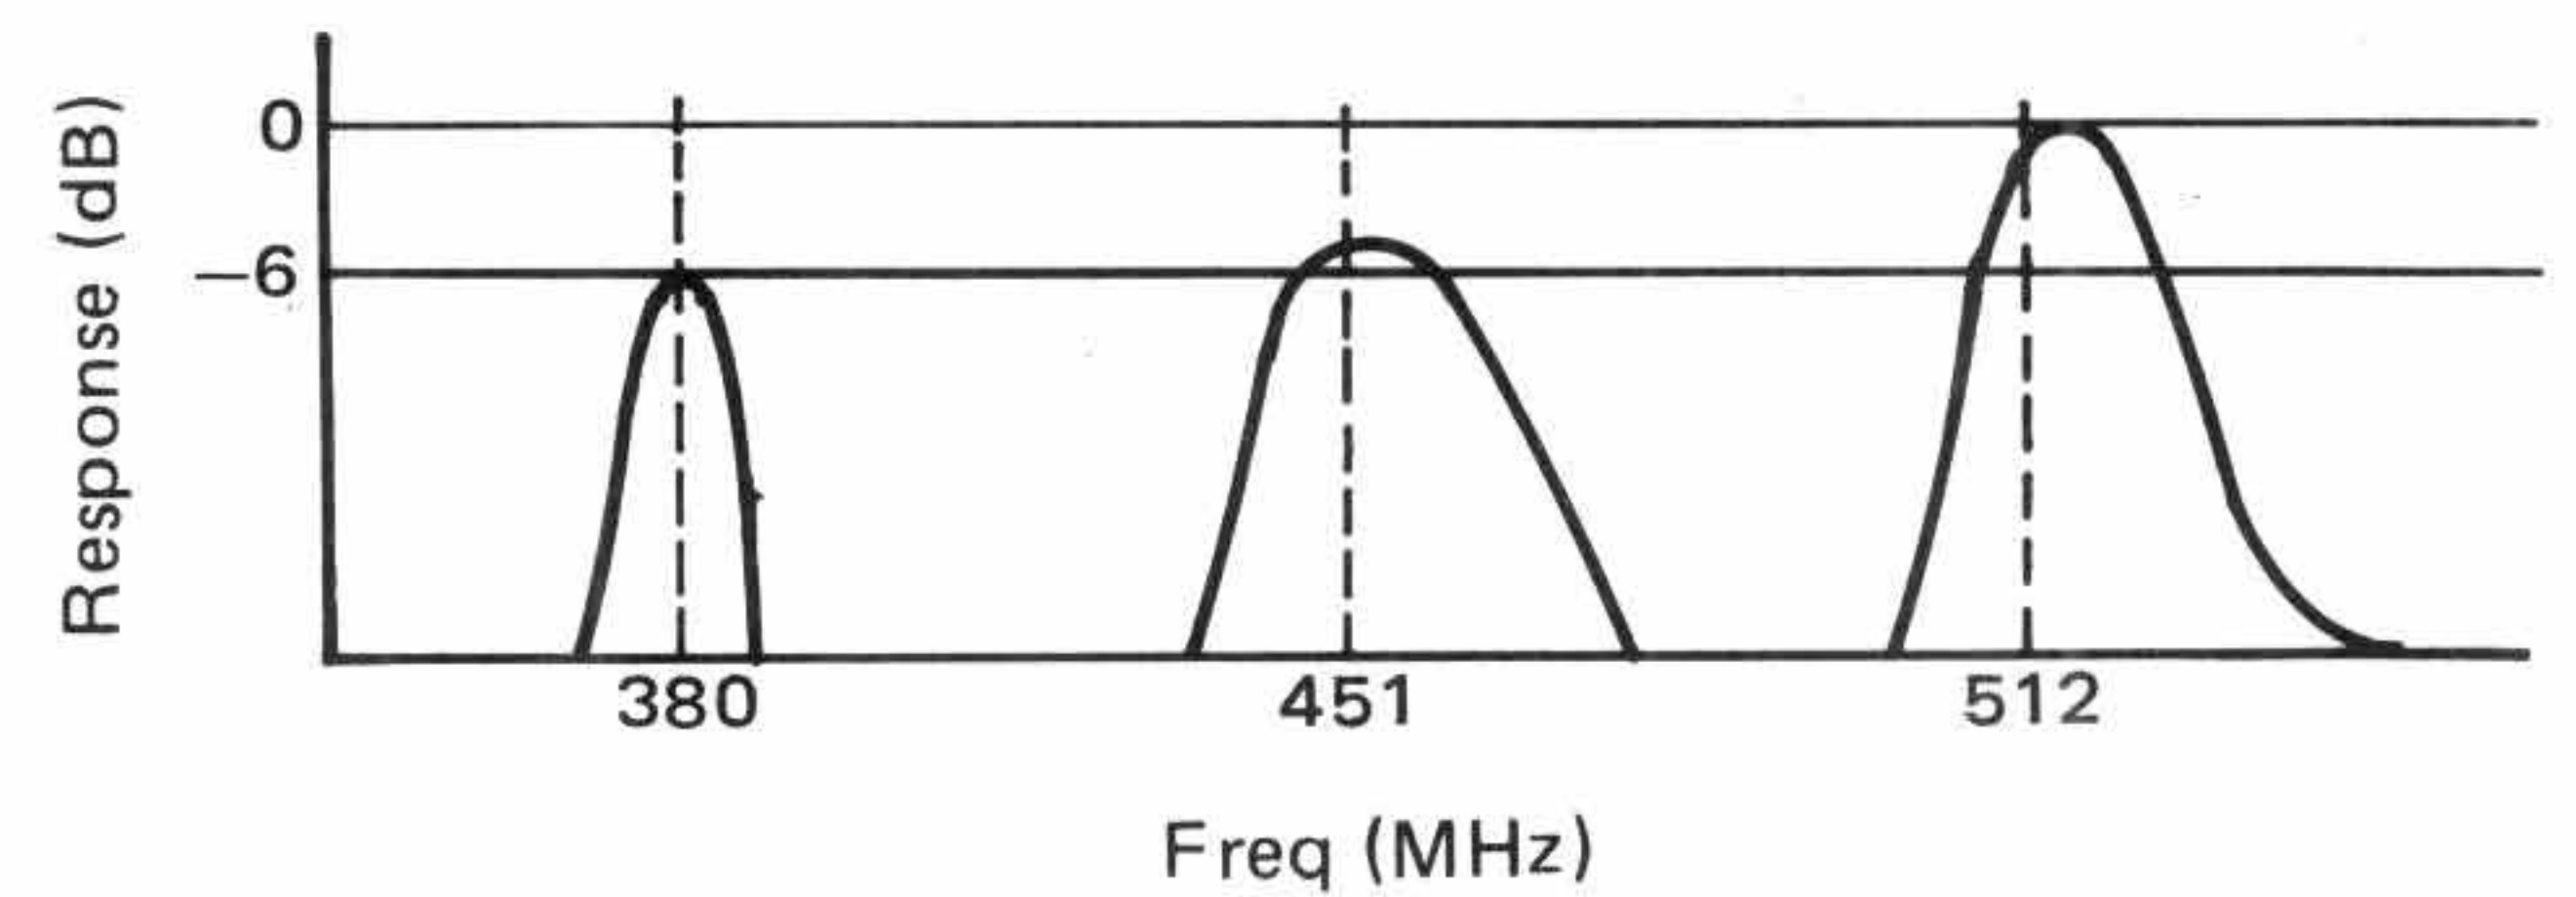


Figure 7

Overall Alignment and Sensitivity Measurement

Step	Control Setting	Test Instrument Connection	Adjust	Remarks
10	OFF/VOLUME Control: ON SQUELCH Control: CCW Select channel 10.	Connect FM signal generator to the ANT jack and AC SSVM to EAR jack across 8 ohm dummy load. Fig.8.	TC104	Readjust TC104 for maximum sensitivity.
11	OFF/VOLUME Control: ON SQUELCH Control: CCW Select channel 5.	Connect AM signal generator to the ANT jack and AC SSVM to EAR jack across 8 ohm dummy load. Fig.9.	T107 T109 T110	1) Adjust T109 for maximum sensitivity. 2) Adjust T110 for minimum THD. 3) Readjust T107 for maximum sensitivity.
12	OFF/VOLUME Control: ON SQUELCH CONTROL:CCW Select channel 13.	Same as step 10.	T106	Adjust TC106 for maximum sensitivity.

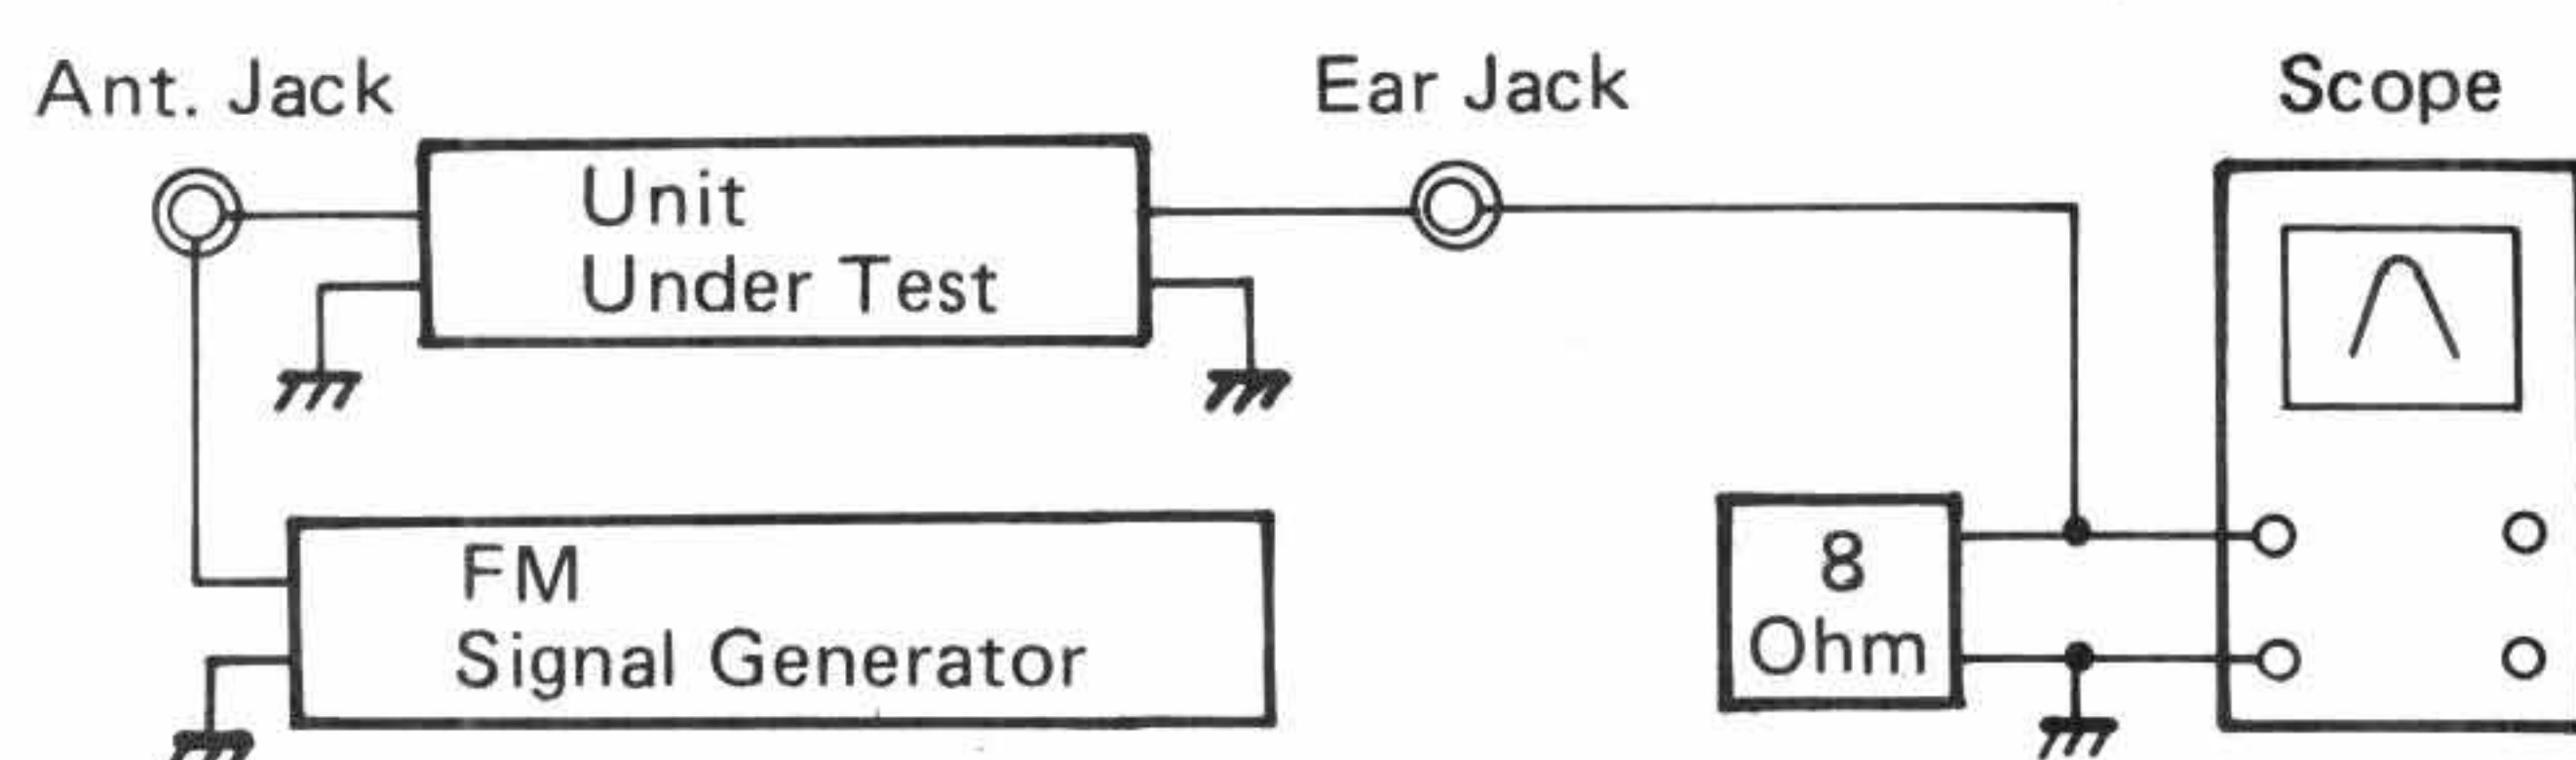


Figure 8


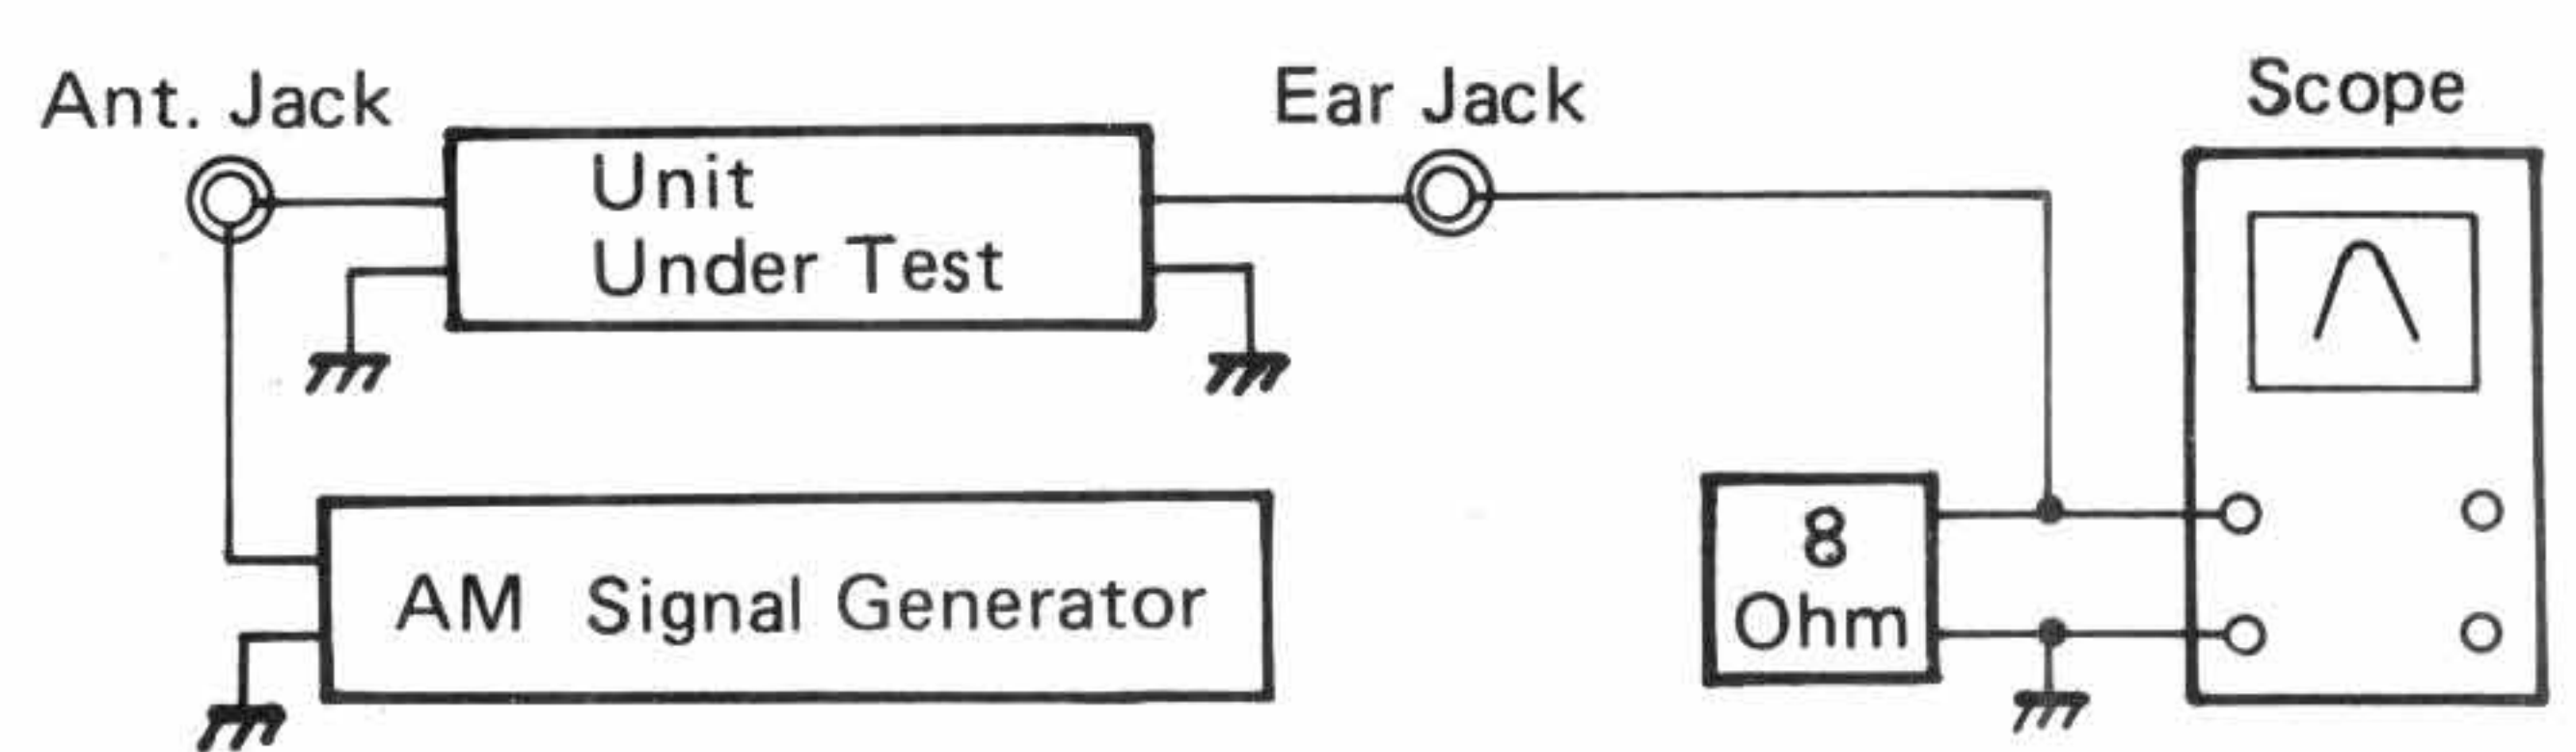


Figure 9

Step	Control Setting	Test Instrument Connection	Remarks
13	OFF/VOLUME Control: ON SQUELCH Control: CCW Channel as Table 1.	Connect FM signal generator to the ANT jack and AC SSVM to EAR jack across 8 ohm dummy load. Set the signal generator to each frequency as Table 1. Set the VOLUME control for 0 dB (0.775 V) reading on the SSVM.	Turn off the modulation and measure the (S+N)/N ratio.

Note:
TP104 is used to observe the AM band detection output.

Zeromatic Function Test Procedure

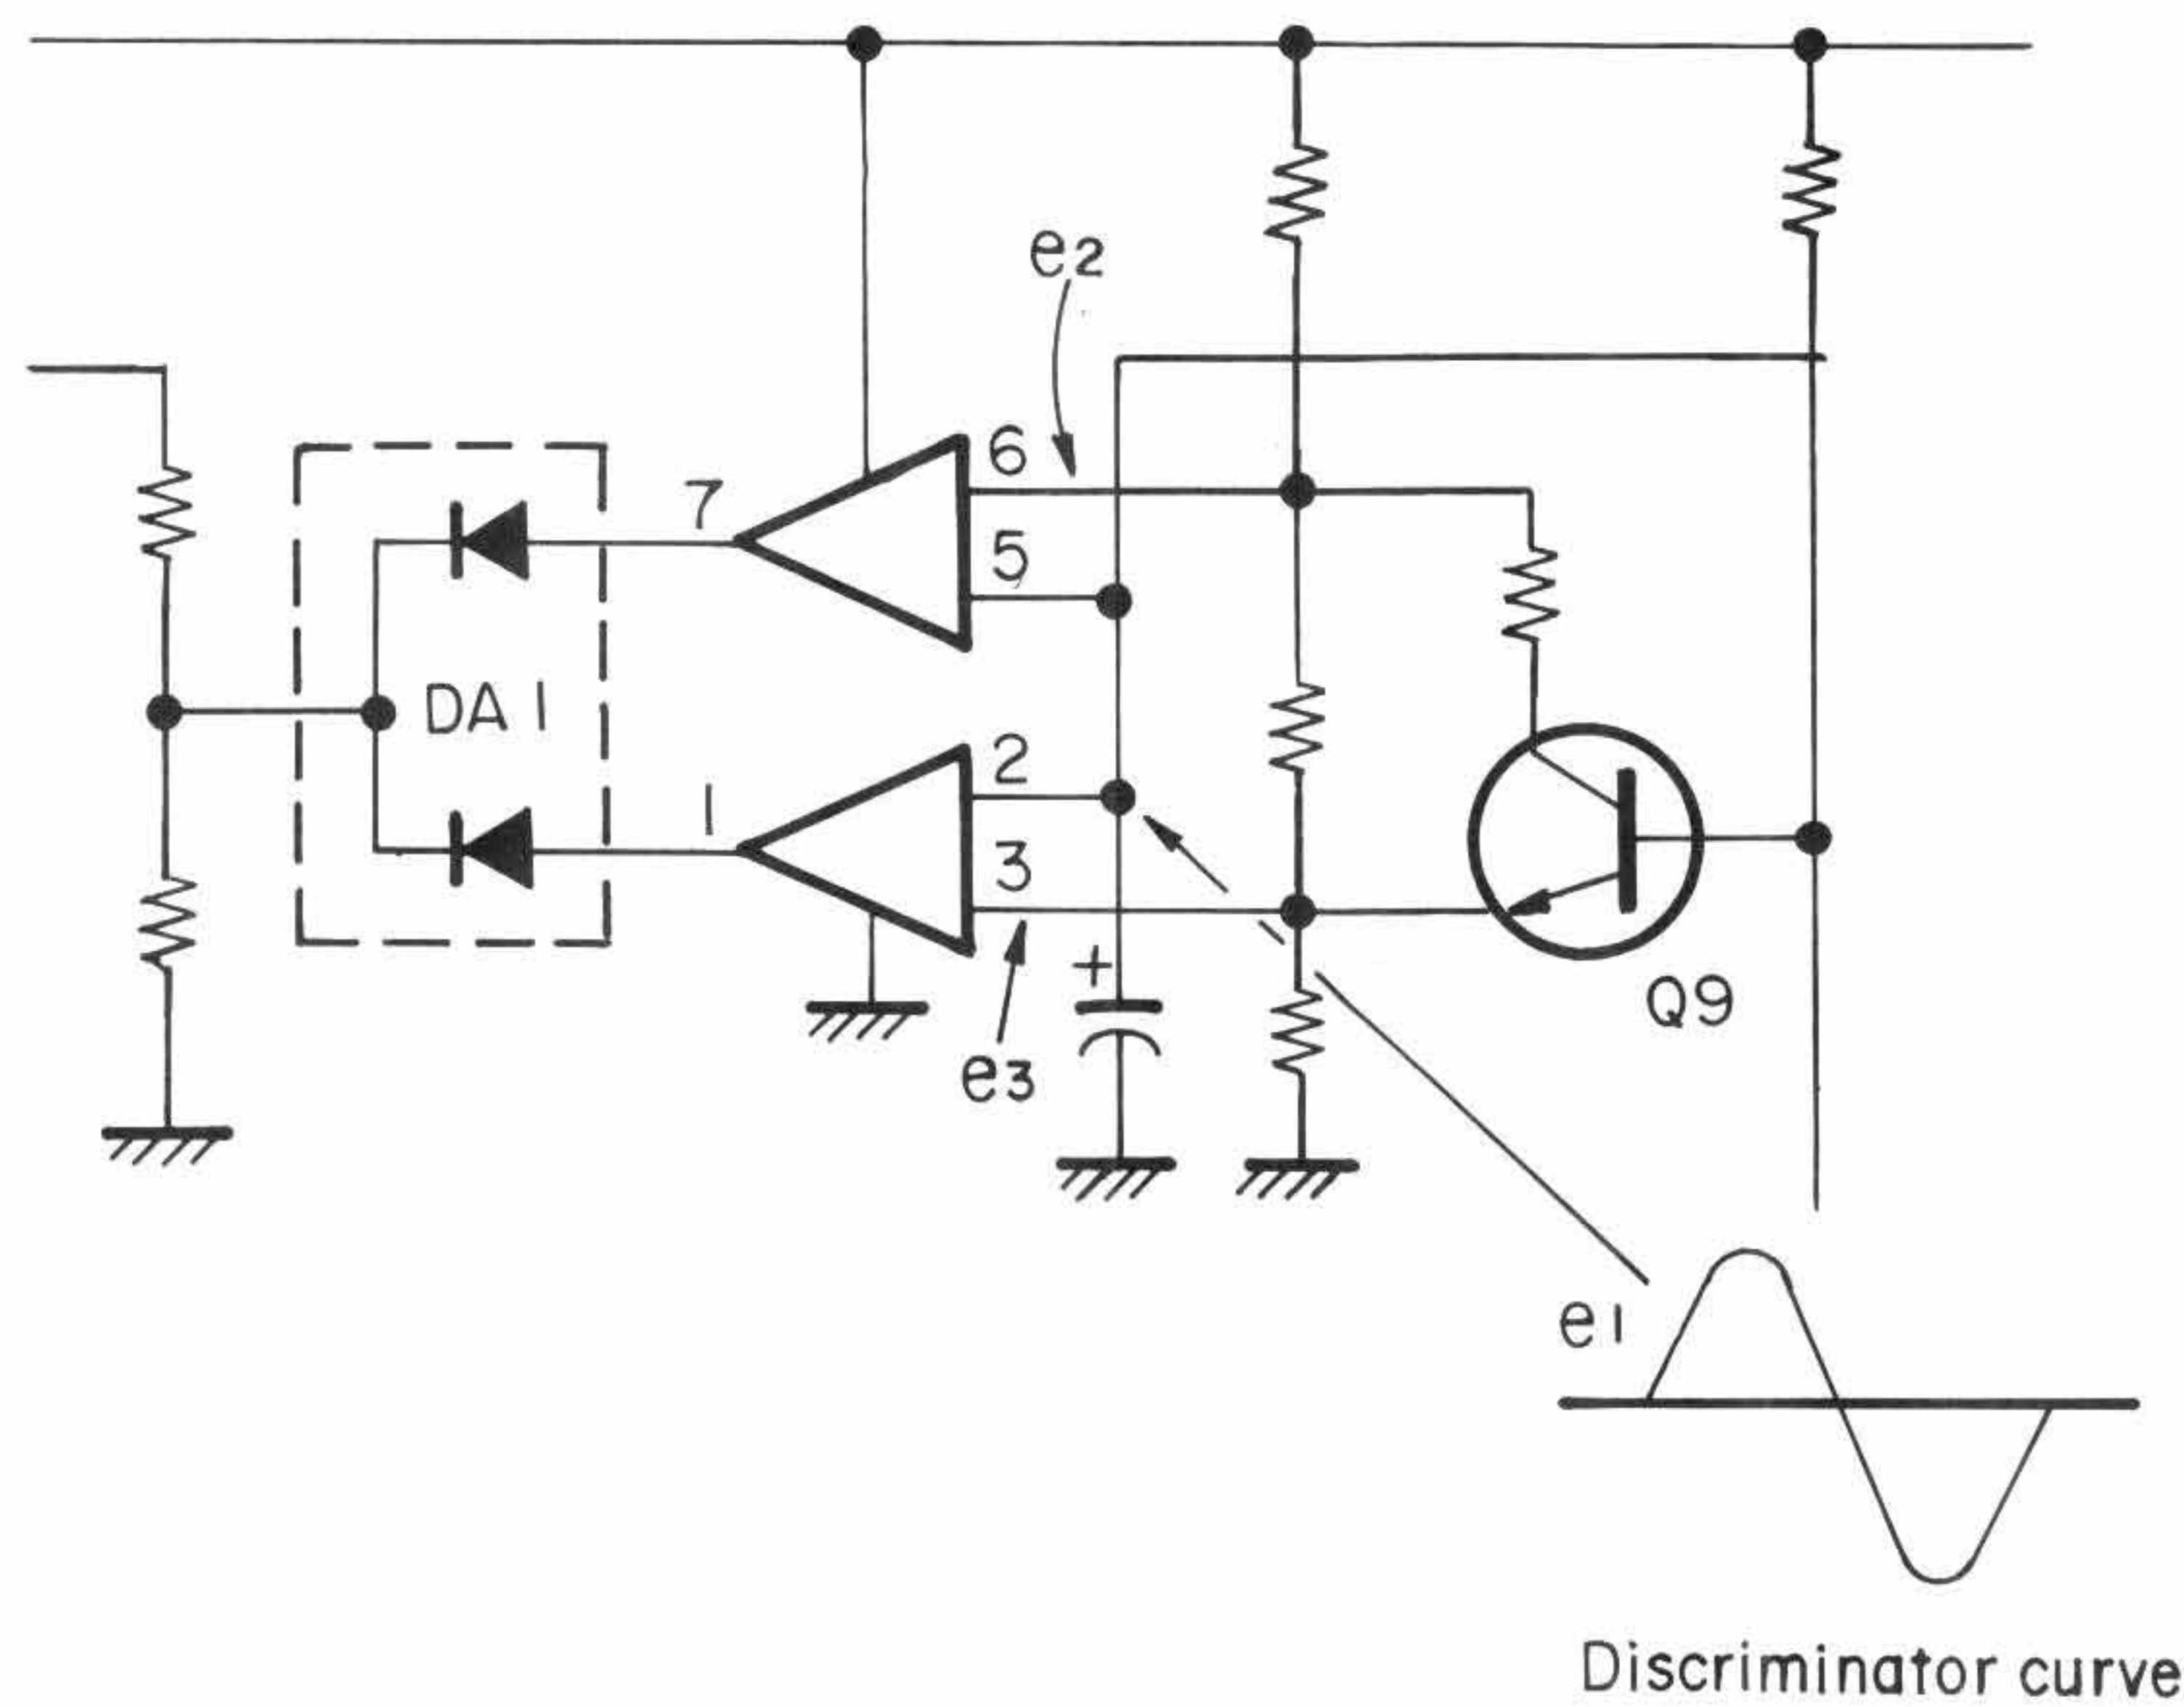


(Zeromatic functions when OUTPUT is in “L” level.)

	$0 < e_1 < e_3$	$e_3 < e_1 < e_2$	$e_2 < e_1 < V_{CC}$
OUTPUT (IC4 Pin No.8)	H	L	H


To adjust the e_1 voltage, receive a signal in the manual mode, and set T103 to obtain 2.7 V (1/2 V_{CC}) at TP-103. It is convenient to use the National Weather Service Signal for the adjustment. In the event of Zeromatic not functioning correctly, refer to “Reference Frequency OSC Alignment” (page 10), and check 118.700000 MHz $\pm$ 10 Hz, and adjust T103 again to 2.7 V DC while a signal is being received.

Key Access Pulse Output (IC1)

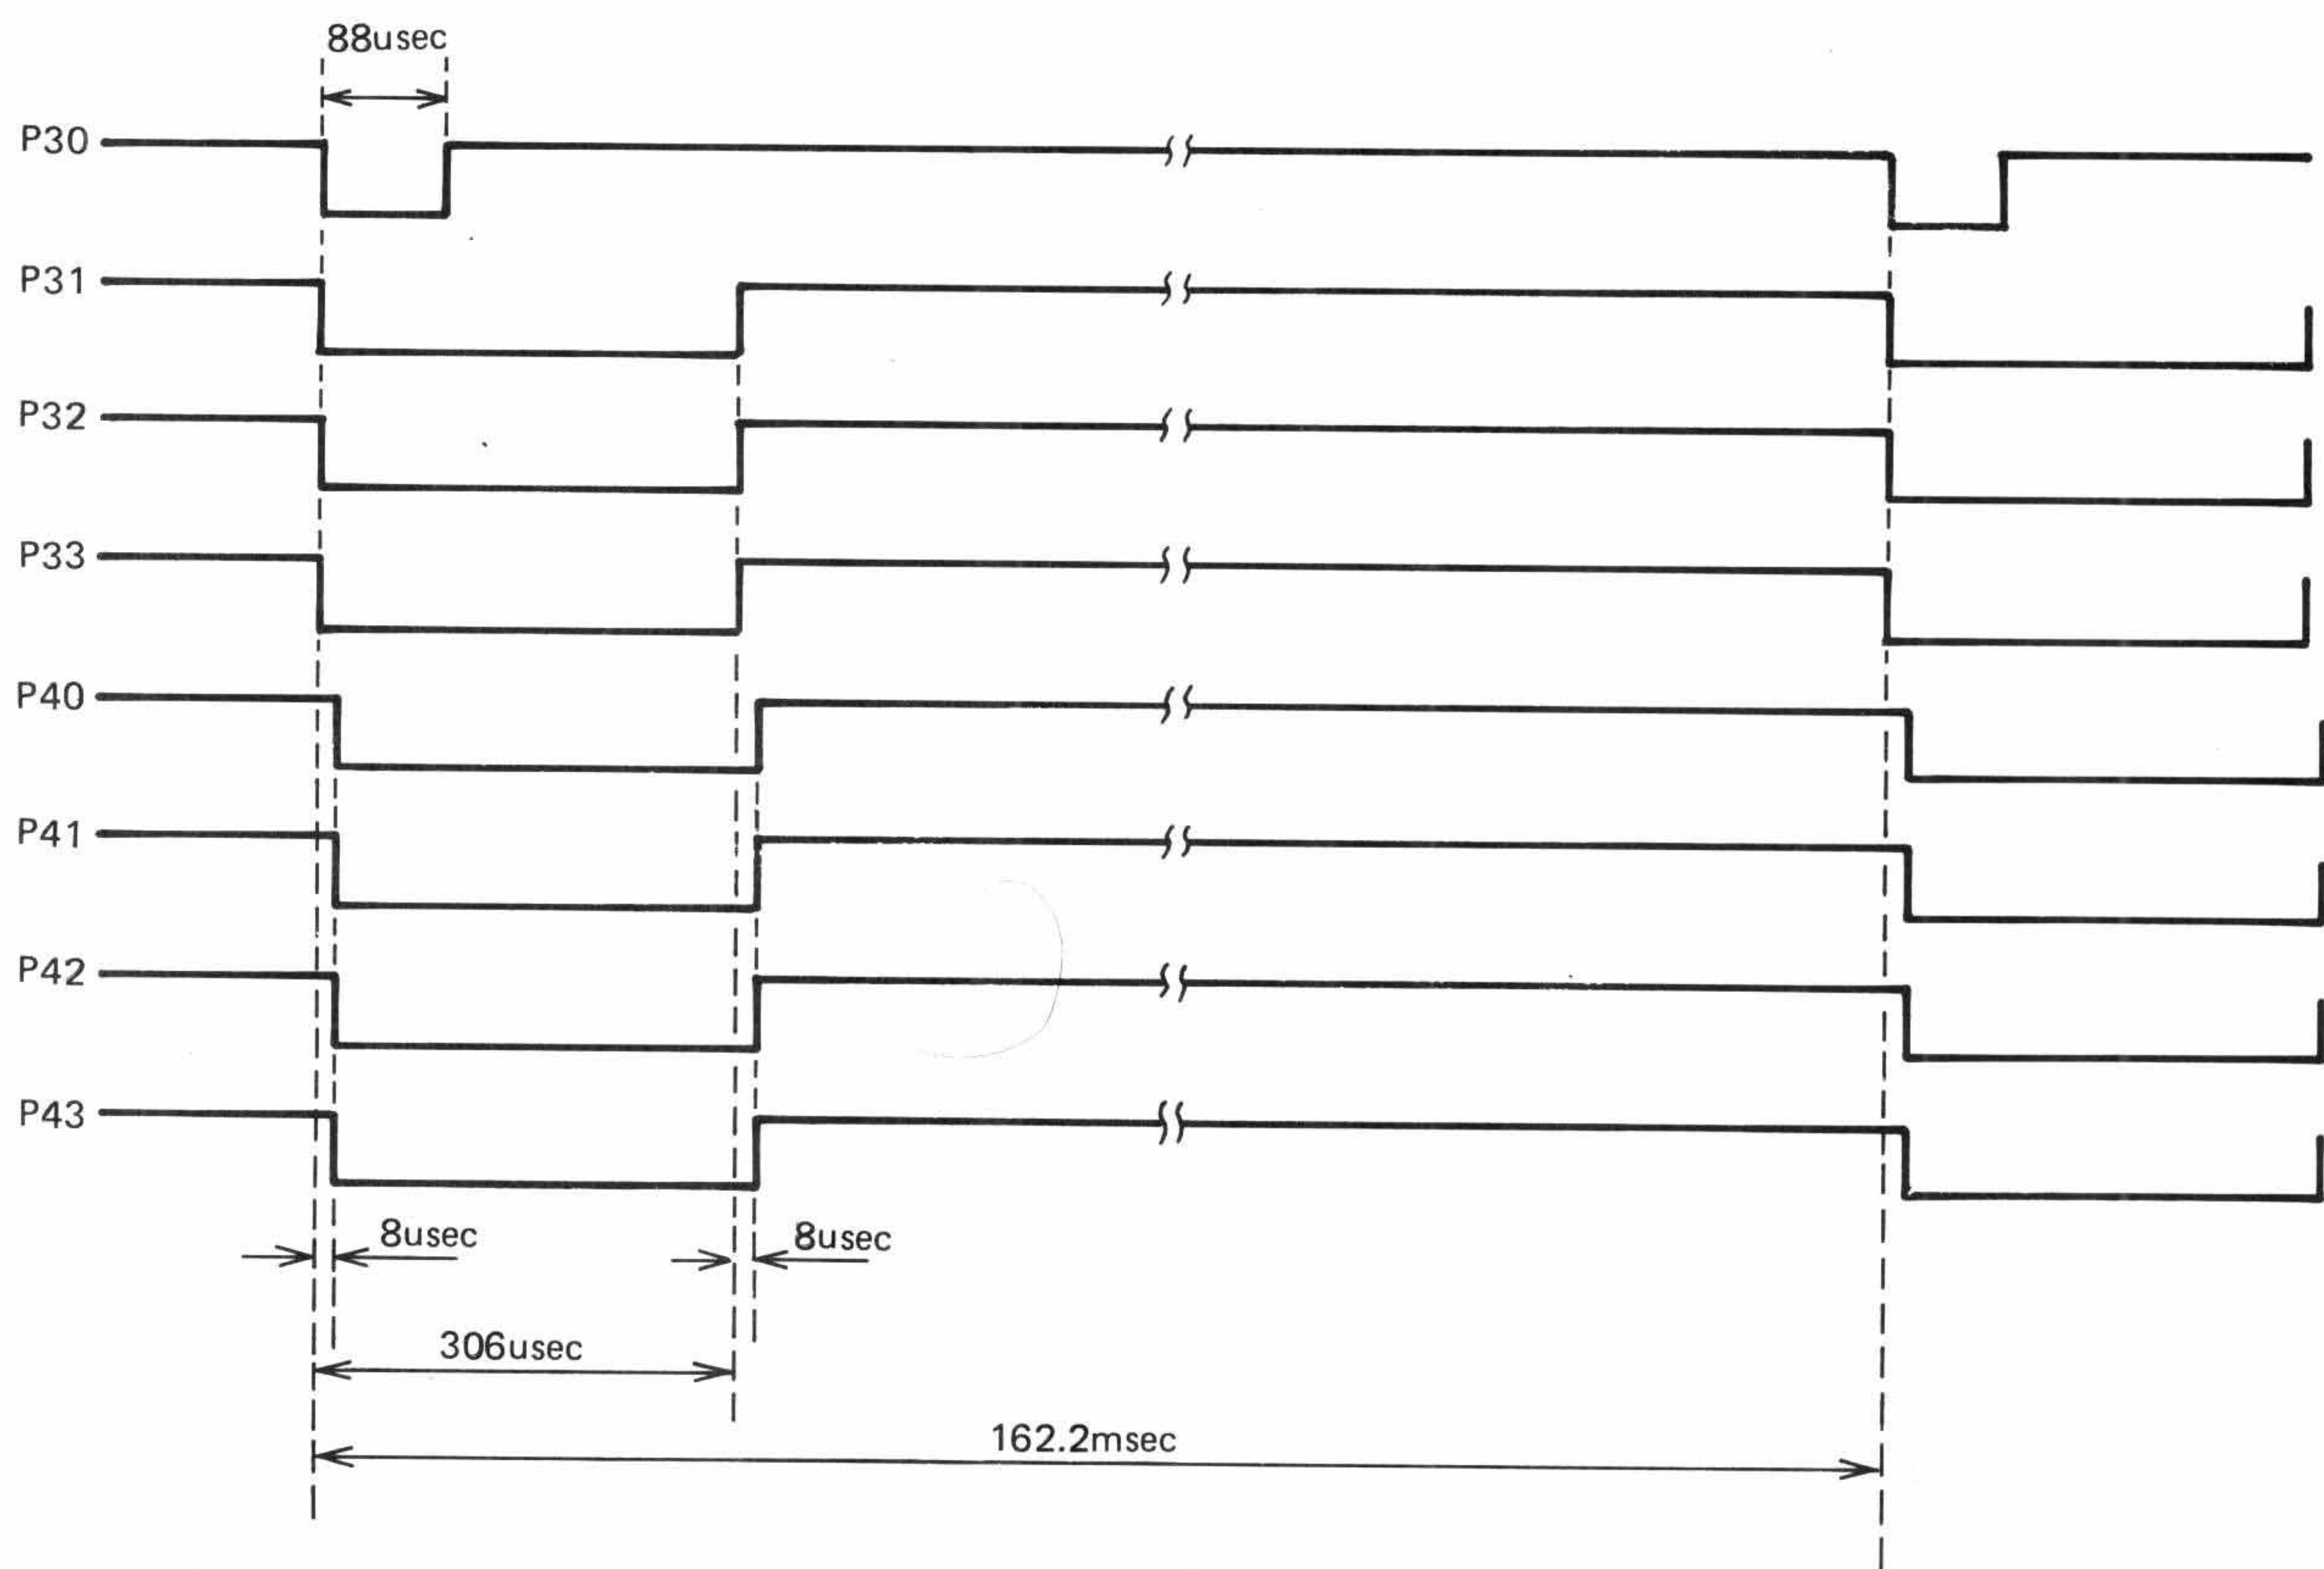


Note:
Set KEY-LOCK SW to OFF, and do not push any key in the Program Mode.

PLL Data Waveform (IC1)

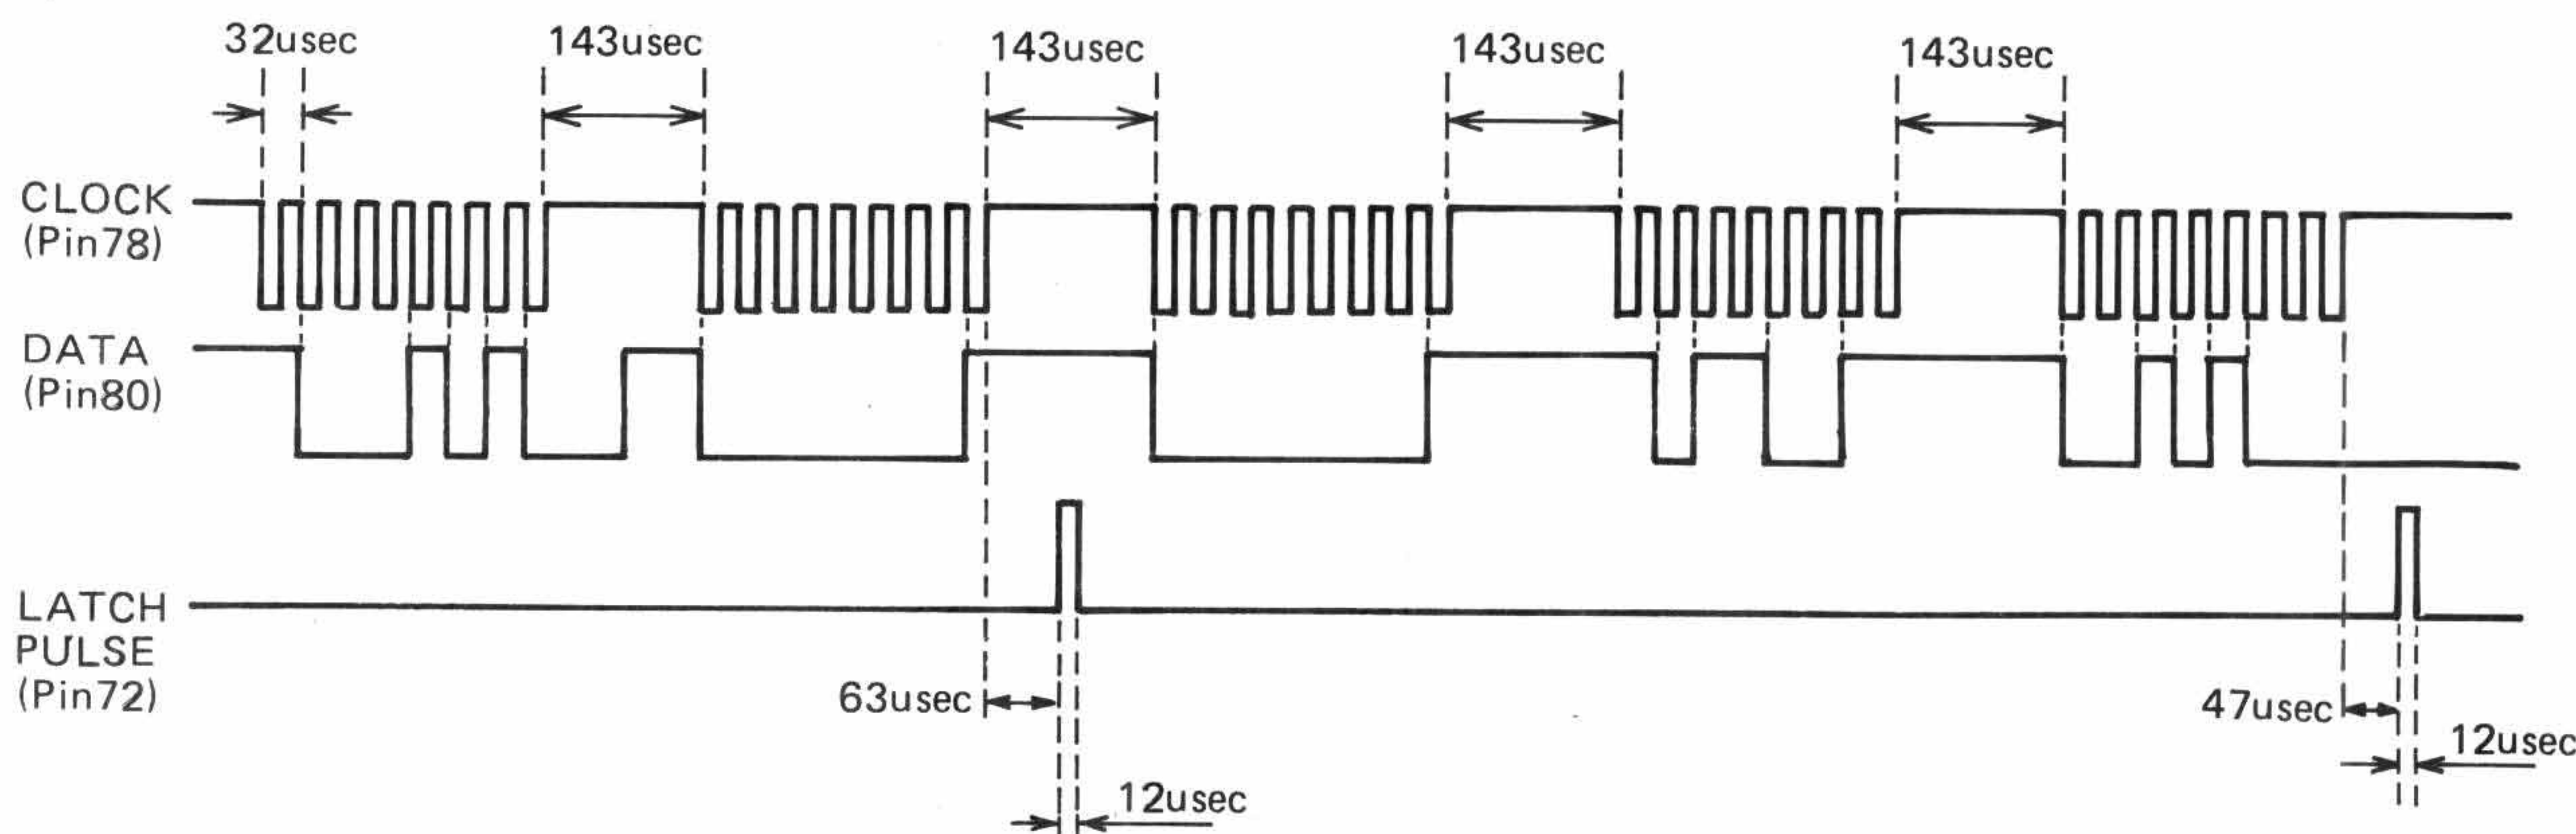


Note:
Enter 150.0000 MHz to channel 1 and lock out other channels.
Observe the waveform while scanning.

Reception Check

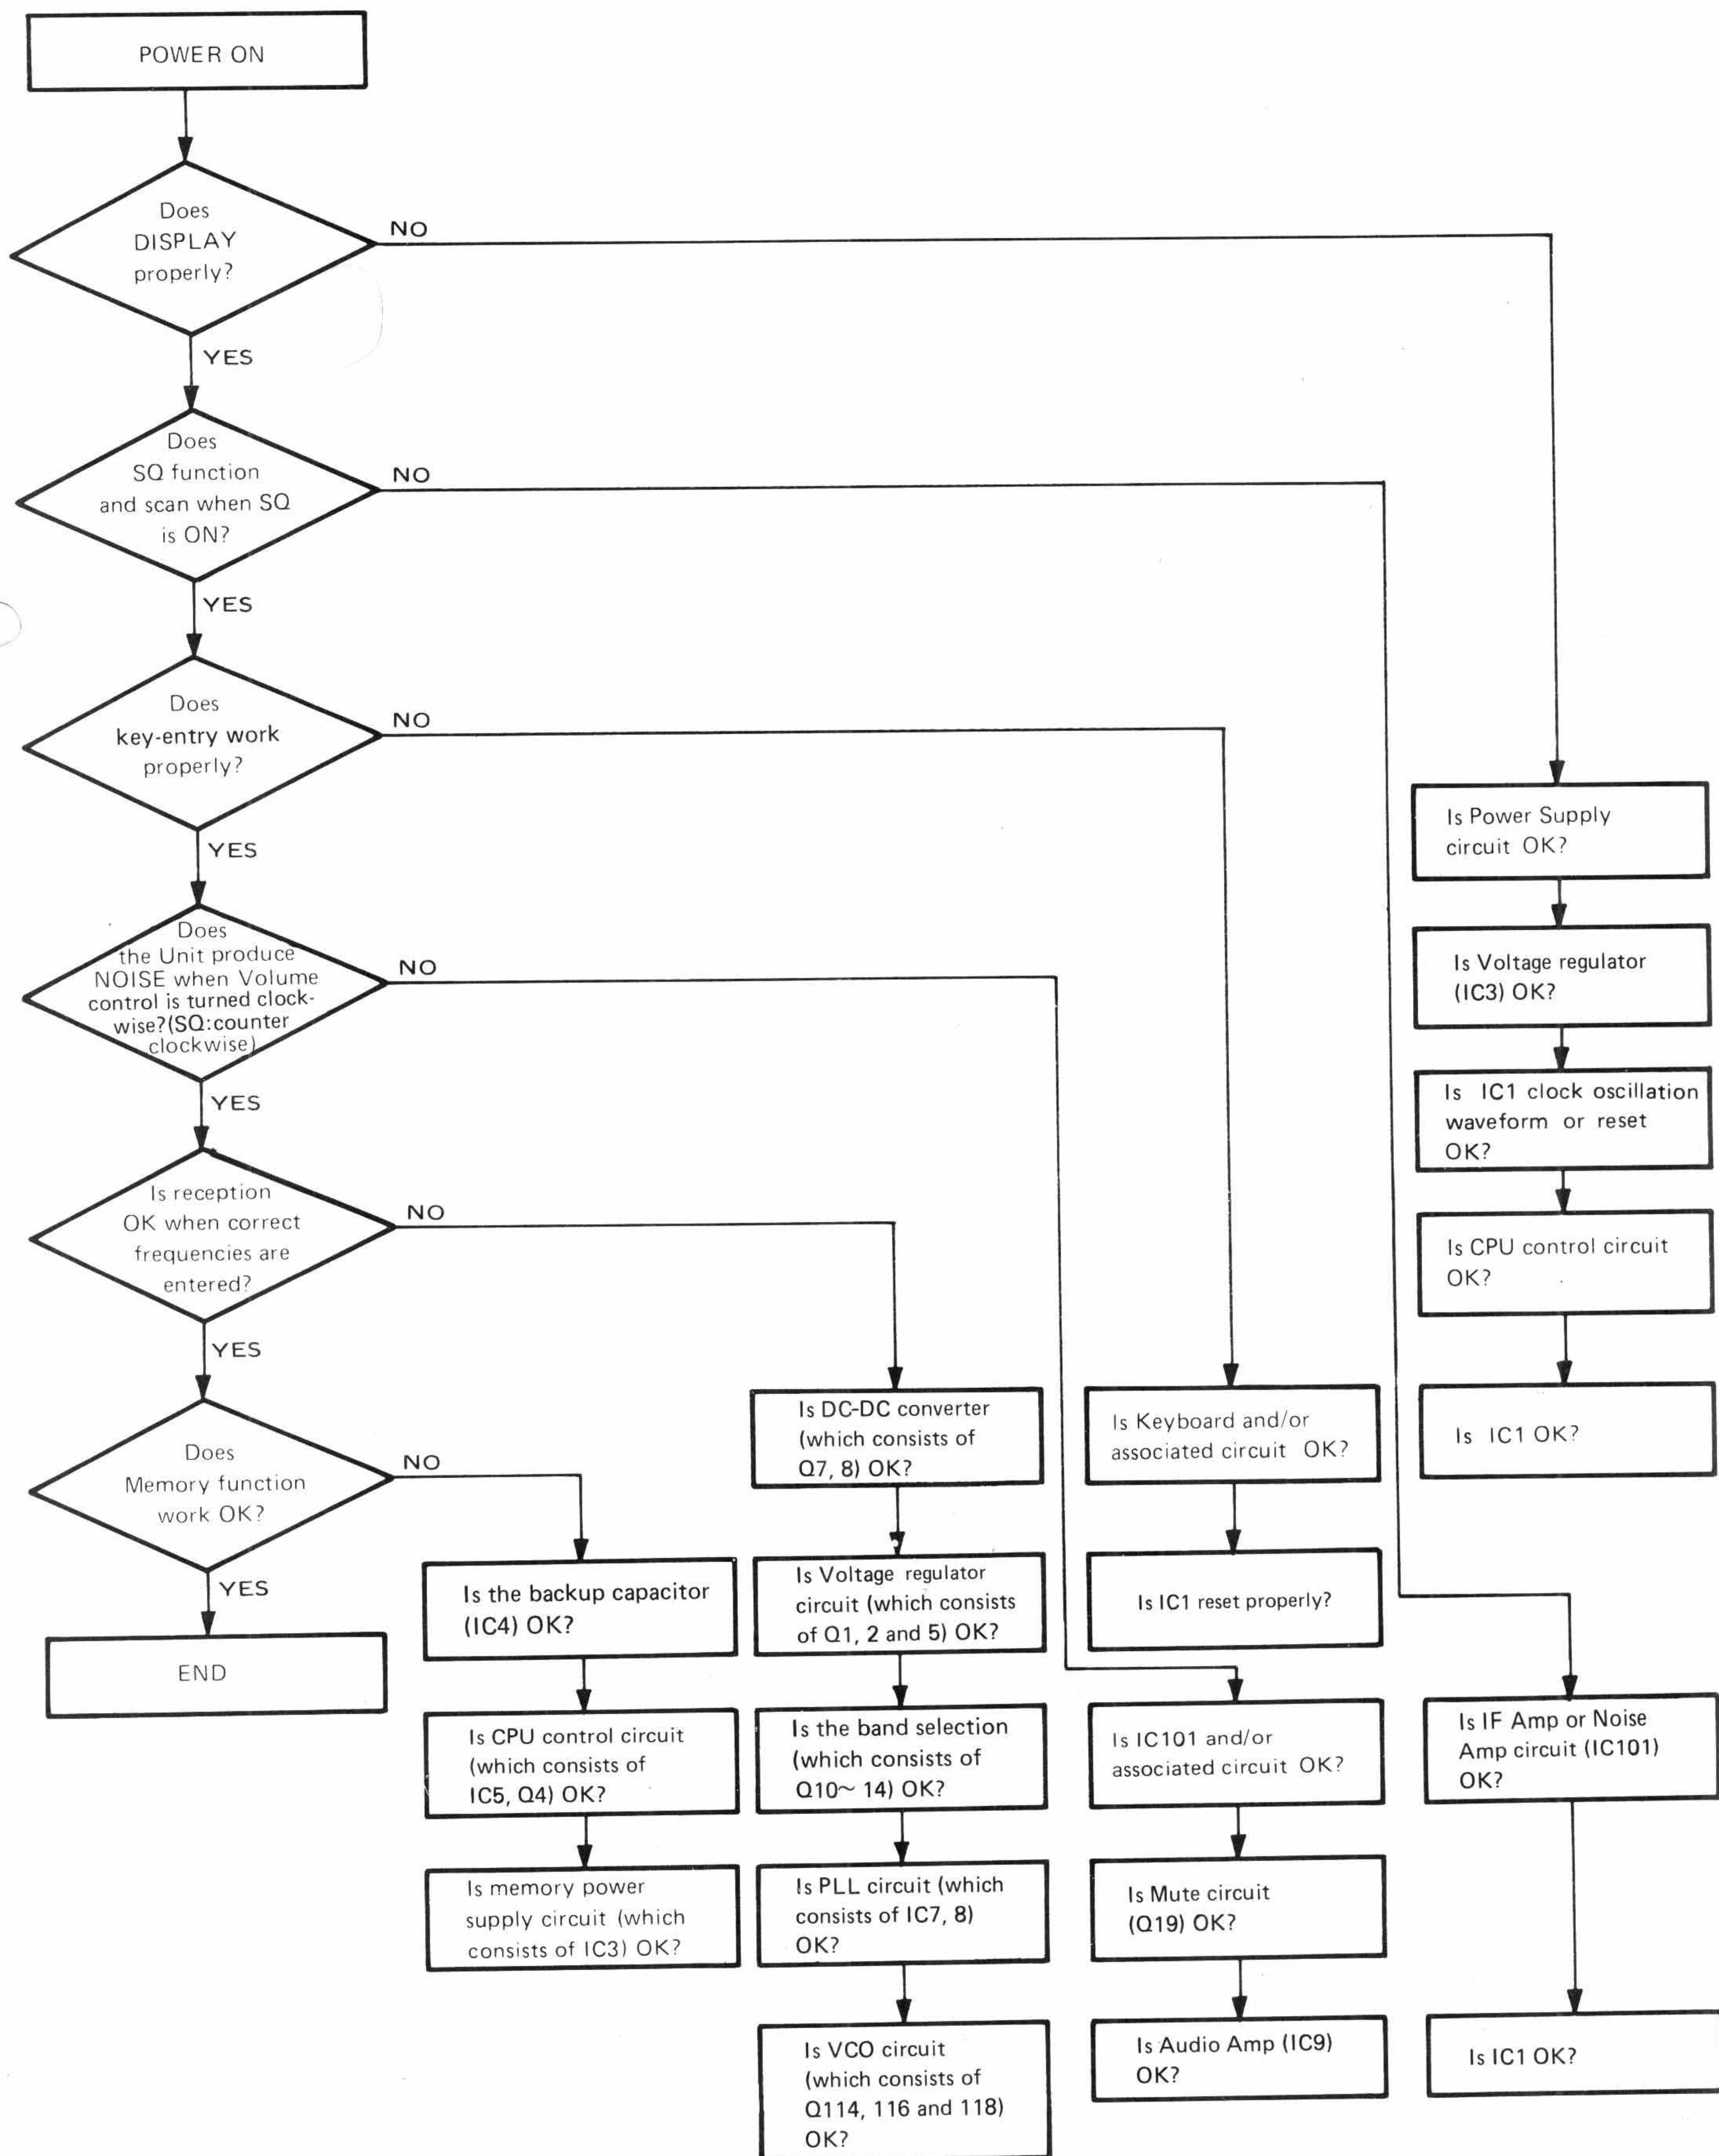

Memory Check

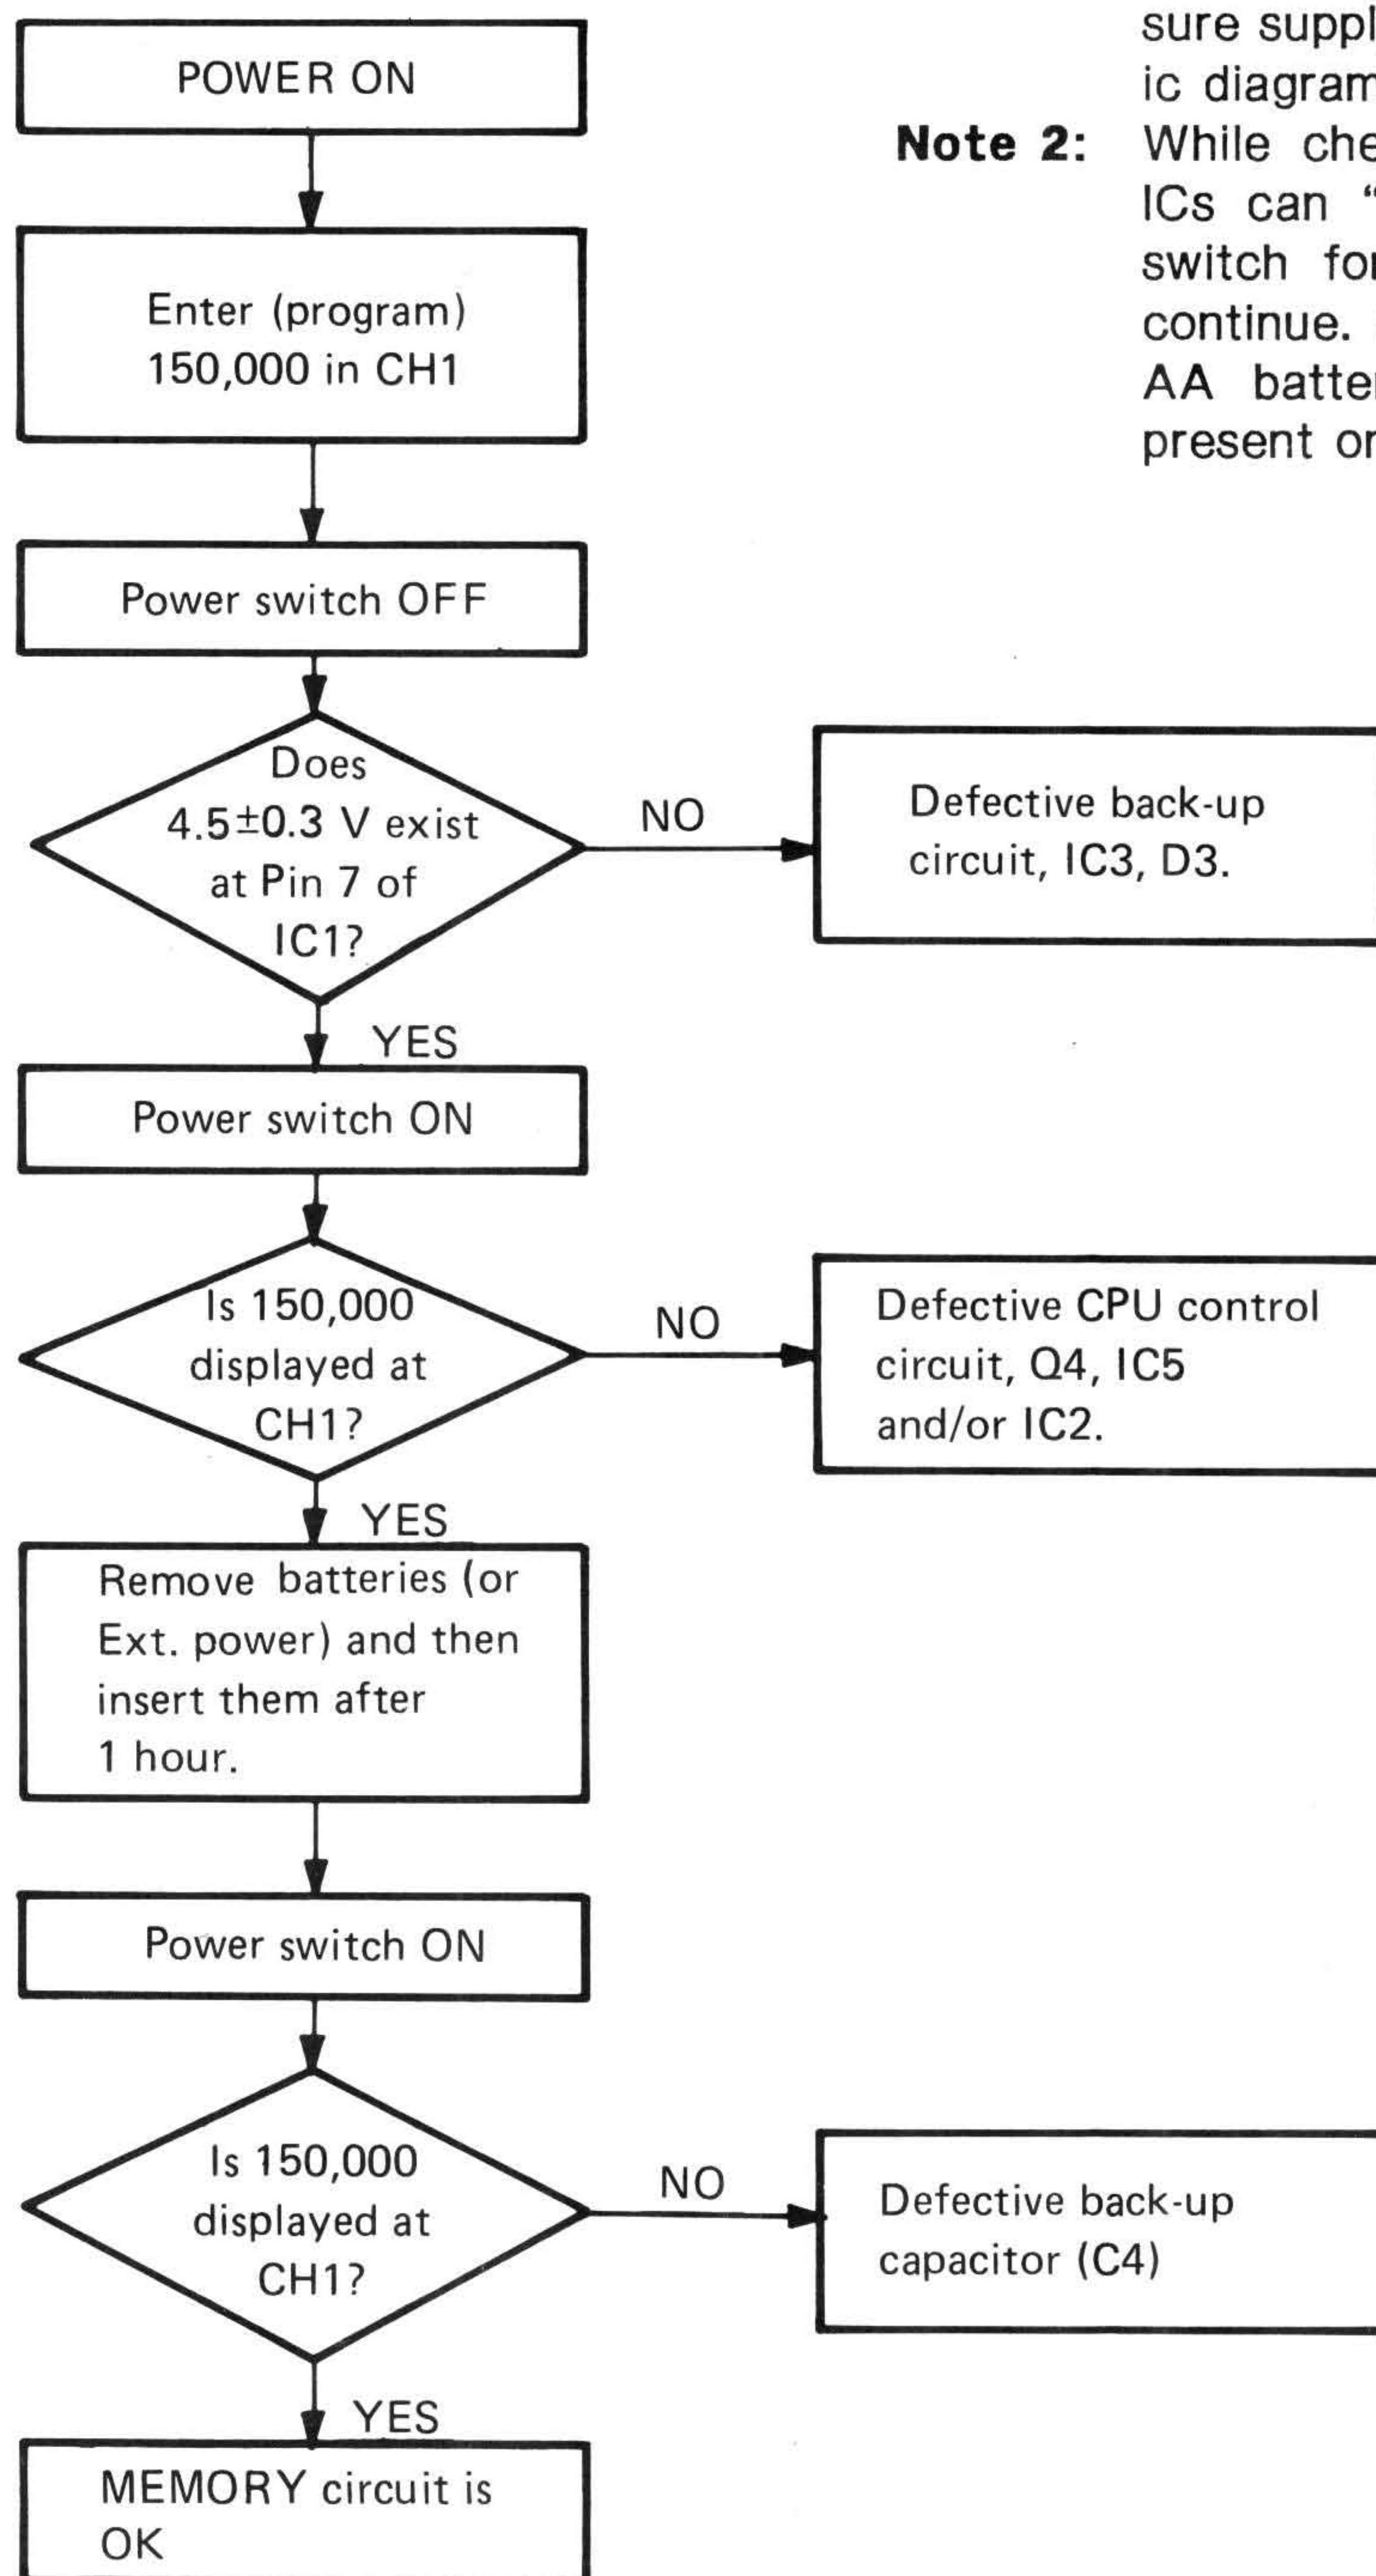

Note 1: Prior to checking the CPU System, measure supply voltage to ICs. (See schematic diagram.)

Note 2: While checking the following items, the ICs can "latch up." If so, push RESET switch for about one second and then continue. Be sure that either the built-in AA batteries or the external power is present on this check.

TROUBLESHOOTING


Symptom	Cause/Remedy
1) Display does not light and no sound when POWER is on. Volume control: MAX. Squelch control: counterclockwise (CCW)	1) Defective batteries: Change batteries. 2) Wrong polarity of batteries: Correct the polarity of batteries. 3) Defective external power jack or charge jack: Replace. 4) Defective ON—OFF switch on volume control: Replace.
2) Display lights but no sound. Volume control: MAX. Squelch control: CCW	1) Defective speaker or EXT. SPKR jack: Replace the defective parts. 2) Defective audio amplifier IC9 and/or associated circuit components: Replace the defective components. 3) Defective IF amplifier IC101 and/or associated circuit components: Replace the defective components. 4) Defective functional squelch control and/or associated circuit components: Replace the defective components. 5) Defective Q19, IC1 and/or associated circuit: Replace the defective parts.
3) Sound comes out but display does not light. Volume control: MAX. Squelch control: CCW.	1) Defective LCD or rubber connector: Replace the defective parts. 2) Defective IC1 and/or associated circuit: Replace the defective parts.
4) Does not scan and squelch does not operate.	1) Defective IC101 and/or associated circuit components: Replace the defective components. 2) Defective IC1 and/or associated circuit components: Replace the defective components.
5) Does not scan but squelch operates.	1) Defective IC1 and/or associated circuit components: Replace the defective components.
6) Displays incorrectly and/or unable to enter correctly when RESET switch is pushed.	1) Defective Keyboard and/or associated circuit: Replace the defective parts. 2) Defective CPU (IC1) and/or associated circuit: Replace the defective parts.
7) Displays correctly at the time of programming. But after scanning, it becomes faulty.	1) Defective CPU (IC1) and/or associated circuit: Replace the defective parts.
8) MANUAL select operates but SCAN does not operate.	1) Squelch control is not adjusted right: Turn squelch control clockwise.
9) All bands do not operate but display is OK.	1) Faulty connection between linear and logic PCBs: Replace the defective parts. 2) Defective Q15~18 in low-pass filter: Replace the defective parts. 3) Defective IC7, 8 and/or associated circuit: Replace the defective parts. 4) Defective Q1, 2, 5 voltage regulator and/or Q7, 8, D6, 7, 30, 31 DC—DC converter circuit and/or Q3, 6 power saving circuit: Replace the defective parts.

Symptom	Cause/Remedy
10) VHF Lo (Mid) band does not operate but Air, VHF Hi, UHF Lo and UHF Hi band operate.	1) Defective D101~104, T101, 102 Tuning circuit and/or Q114 VCO circuit: Replace the defective parts. 2) Defective Q10 and/or associated circuit: Replace the defective parts.
11) Aircraft band does not operate but VHF Lo, VHF Hi, UHF Lo and UHF Hi band operate.	1) Defective D111 and/or associated circuit: Replace the defective parts. 2) Defective AM IF Amp including Q111, 112: Replace the defective parts. 3) Defective Q11 in band switch circuit: Replace the defective parts.
12) VHF Hi band does not operate but VHF Lo, Air, UHF Lo and UHF Hi band operate.	1) Defective D105, 109, T104, 106 and/or associated circuit: Replace the defective parts. 2) Defective Q12 in band switch circuit: Replace the defective parts.
13) UHF Lo band does not operate but VHF Lo, Air, VHF Hi and UHF Hi band operate.	1) Defective Q104, 105, Q115 and/or associated circuit: Replace the defective parts. 2) Defective Q13 in band switch circuit: Replace the defective parts.
14) UHF Hi band does not operate but VHF Lo, Air, VHF Hi and UHF Lo band operate.	1) Defective Q106–108, 117 and/or associated circuit: Replace the defective parts. 2) Defective Q118 VCO circuit: Replace the defective parts. 3) Defective Q14 and/or associated circuit: Replace the defective parts.
15) Does not make beep tone.	1) Defective Q20 and/or associated circuit: Replace the defective parts. 2) Defective IC1 and/or associated circuit: Replace the defective parts.
16) LOW BATT does not indicate when battery voltage went down.	1) Defective IC4 and/or associated circuit: Replace the defective parts.
17) "Zeromatic" does not operate or holds on a drifted frequency at search operation.	1) Defective IC6, Q9 and DA1 in Zeromatic circuit: Replace the defective parts. 2) Discriminator coil is out of adjustment: TP103 shall have $1/2$ Vcc(approx. 2.7 V) in normal receiving mode. 3) Refer to "Reference Frequency OSC Alignment" on page 10.


Important Note:

Pulse, generated while checking circuits and/or certain combinations of key operation may cause improper operation. To clear the malfunction, re-initialization of CPU is necessary: Push RESET switch while pressing **CLEAR**, and then release the RESET switch. All channels (200 ch) will be cleared and frequency indicator displays 000.0000. (Be sure the power is on when doing the above.)


WIRING DIAGRAM

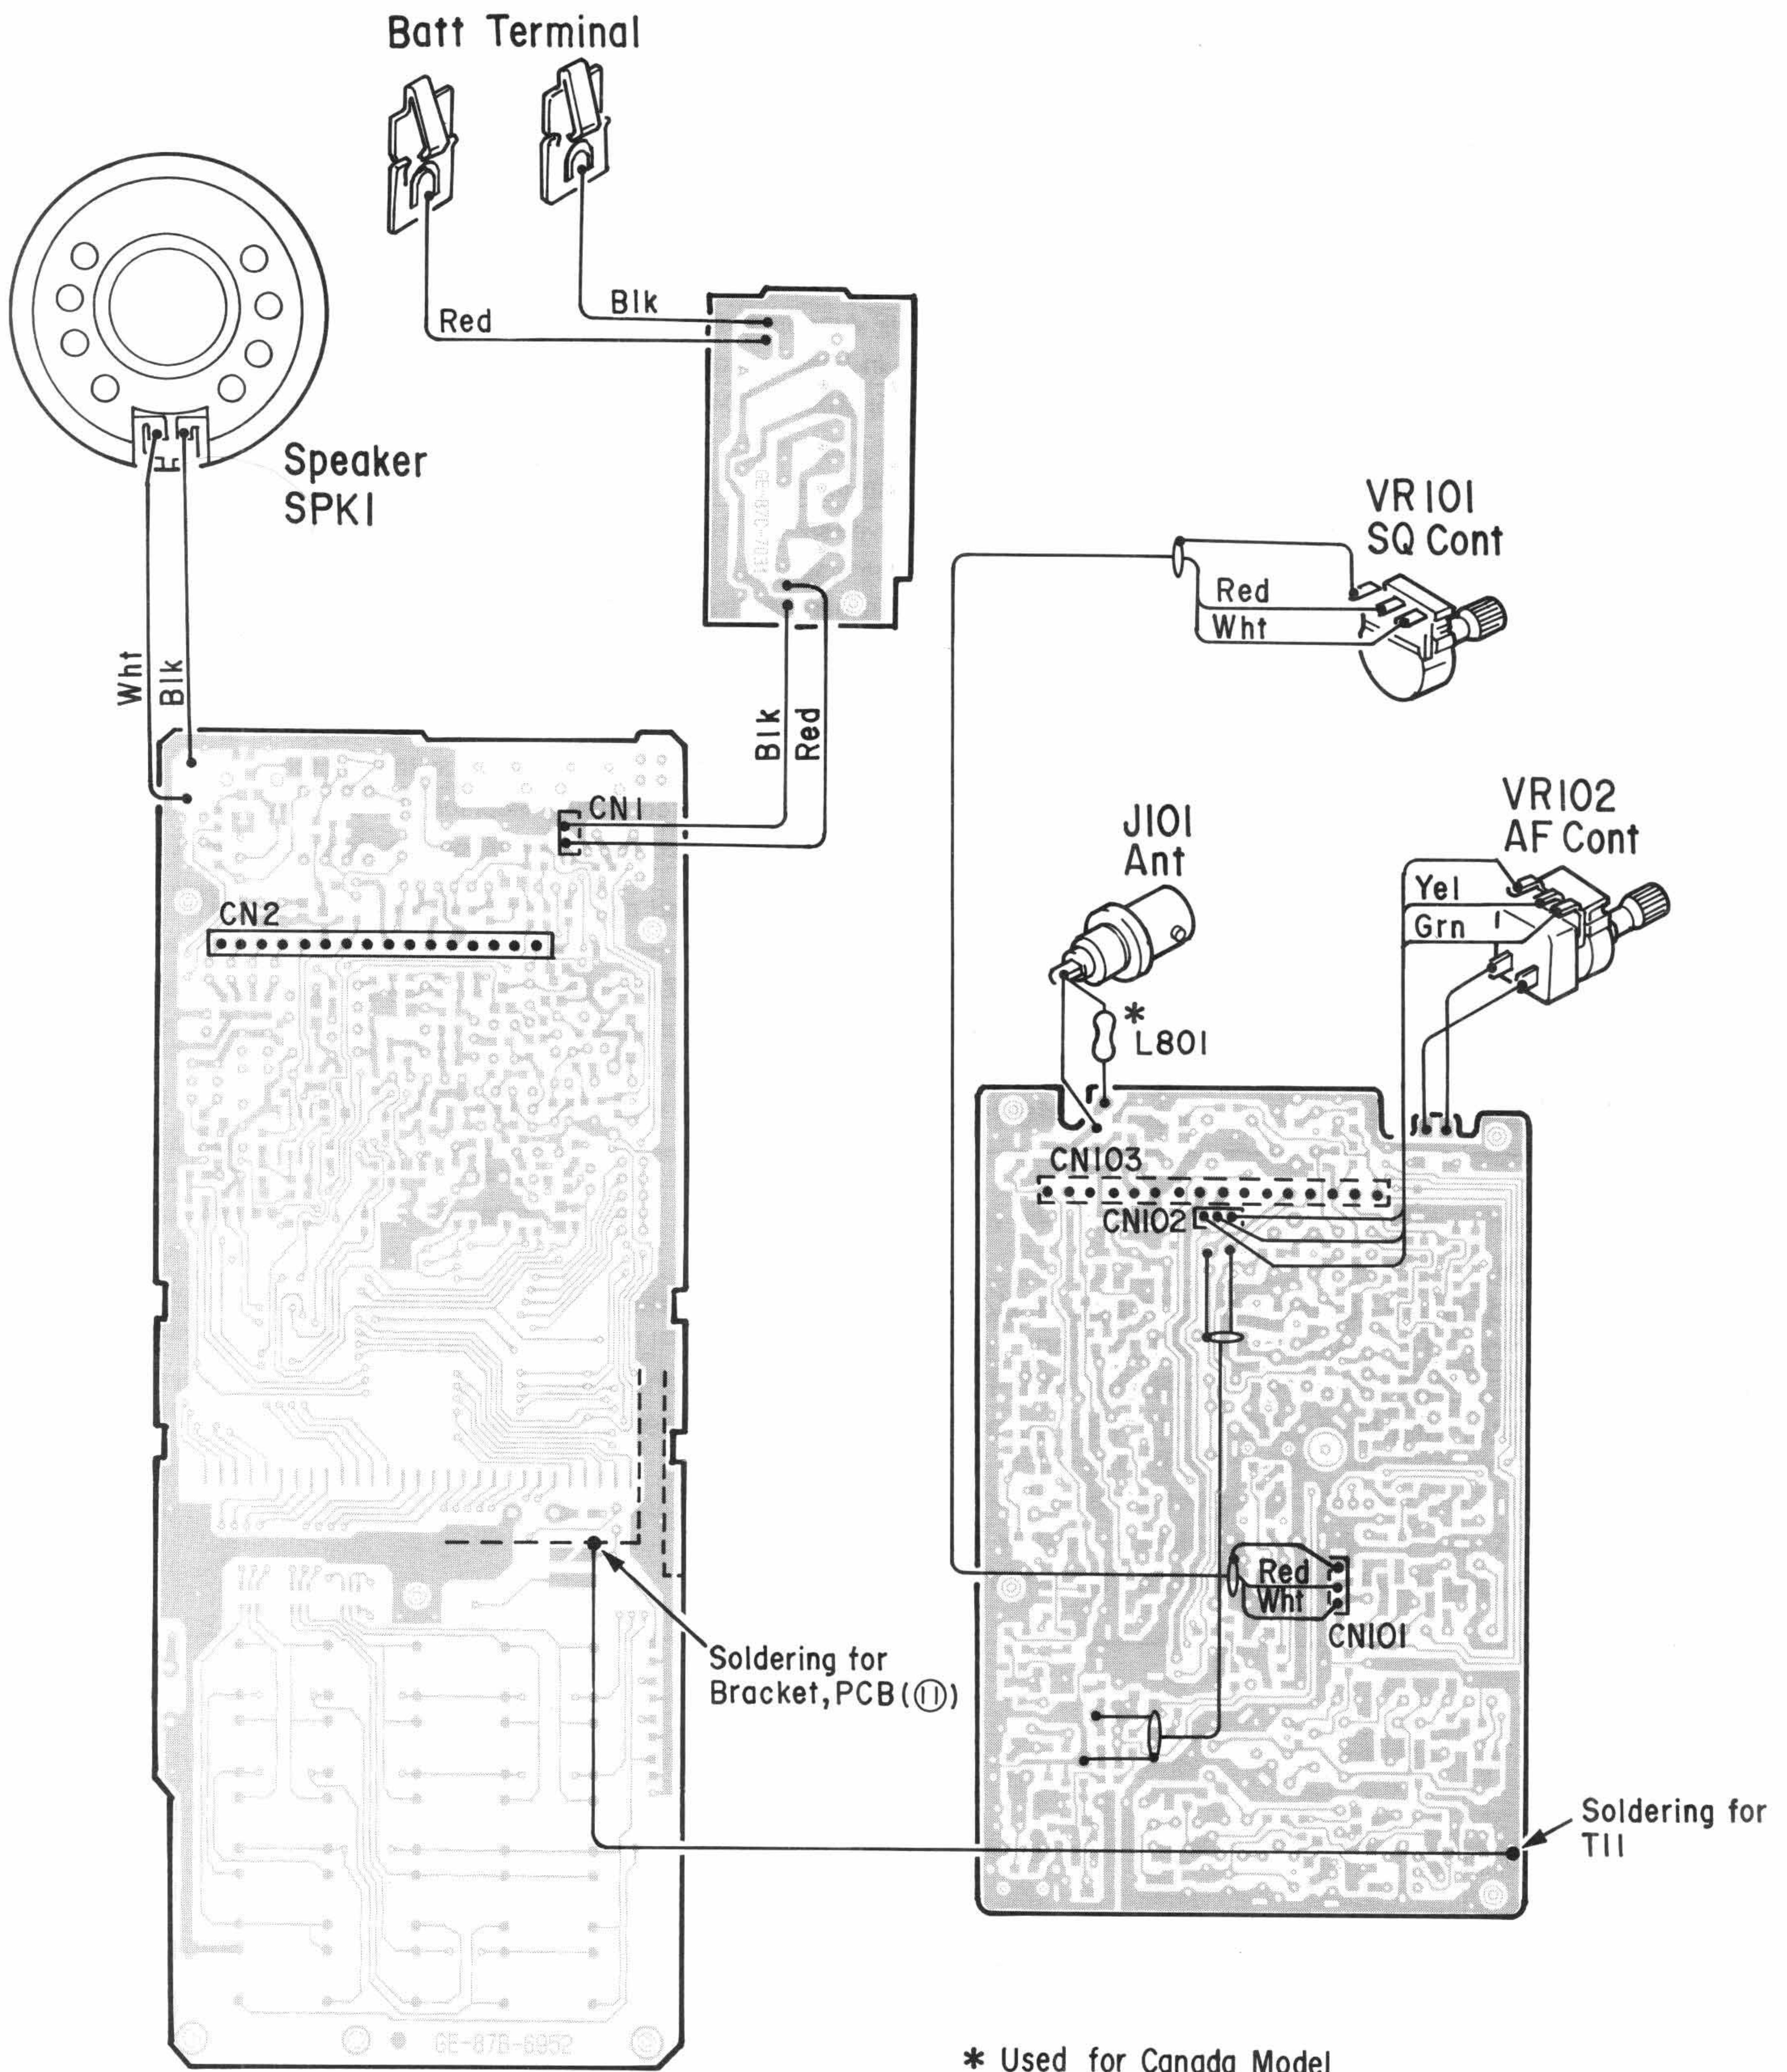


POWER JACK PCB (Top View)

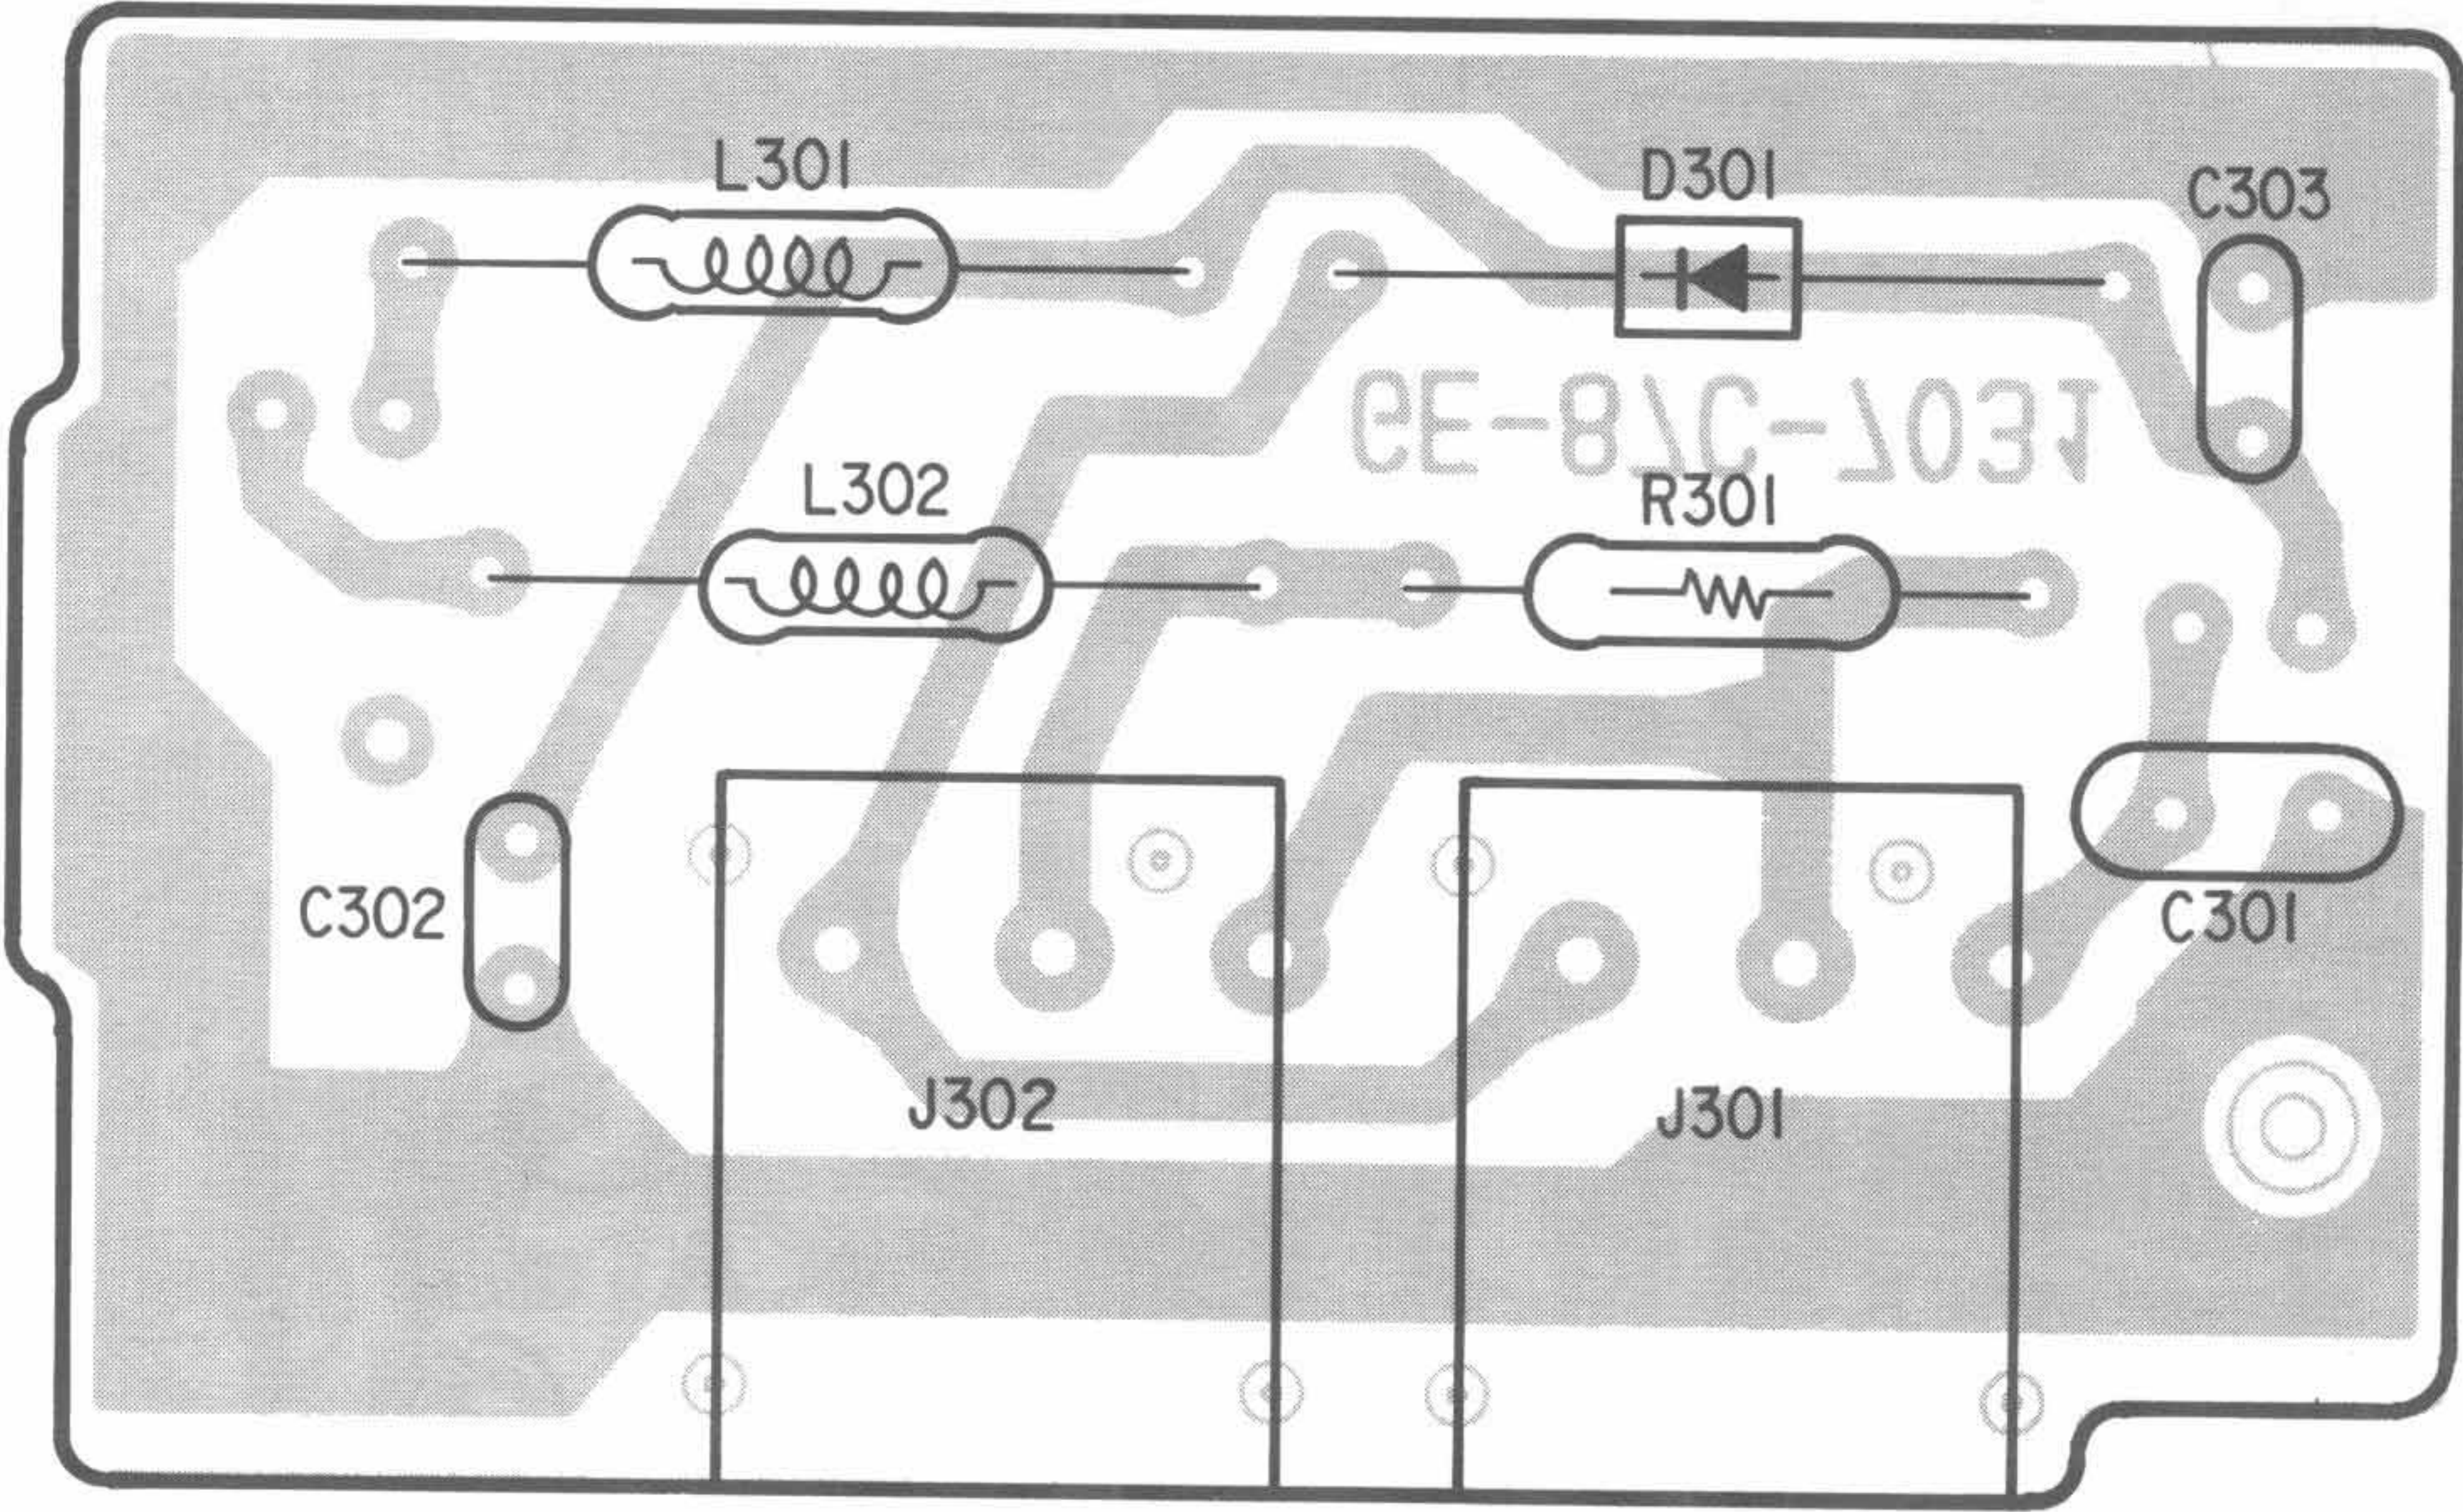


POWER JACK PCB (Bottom View)

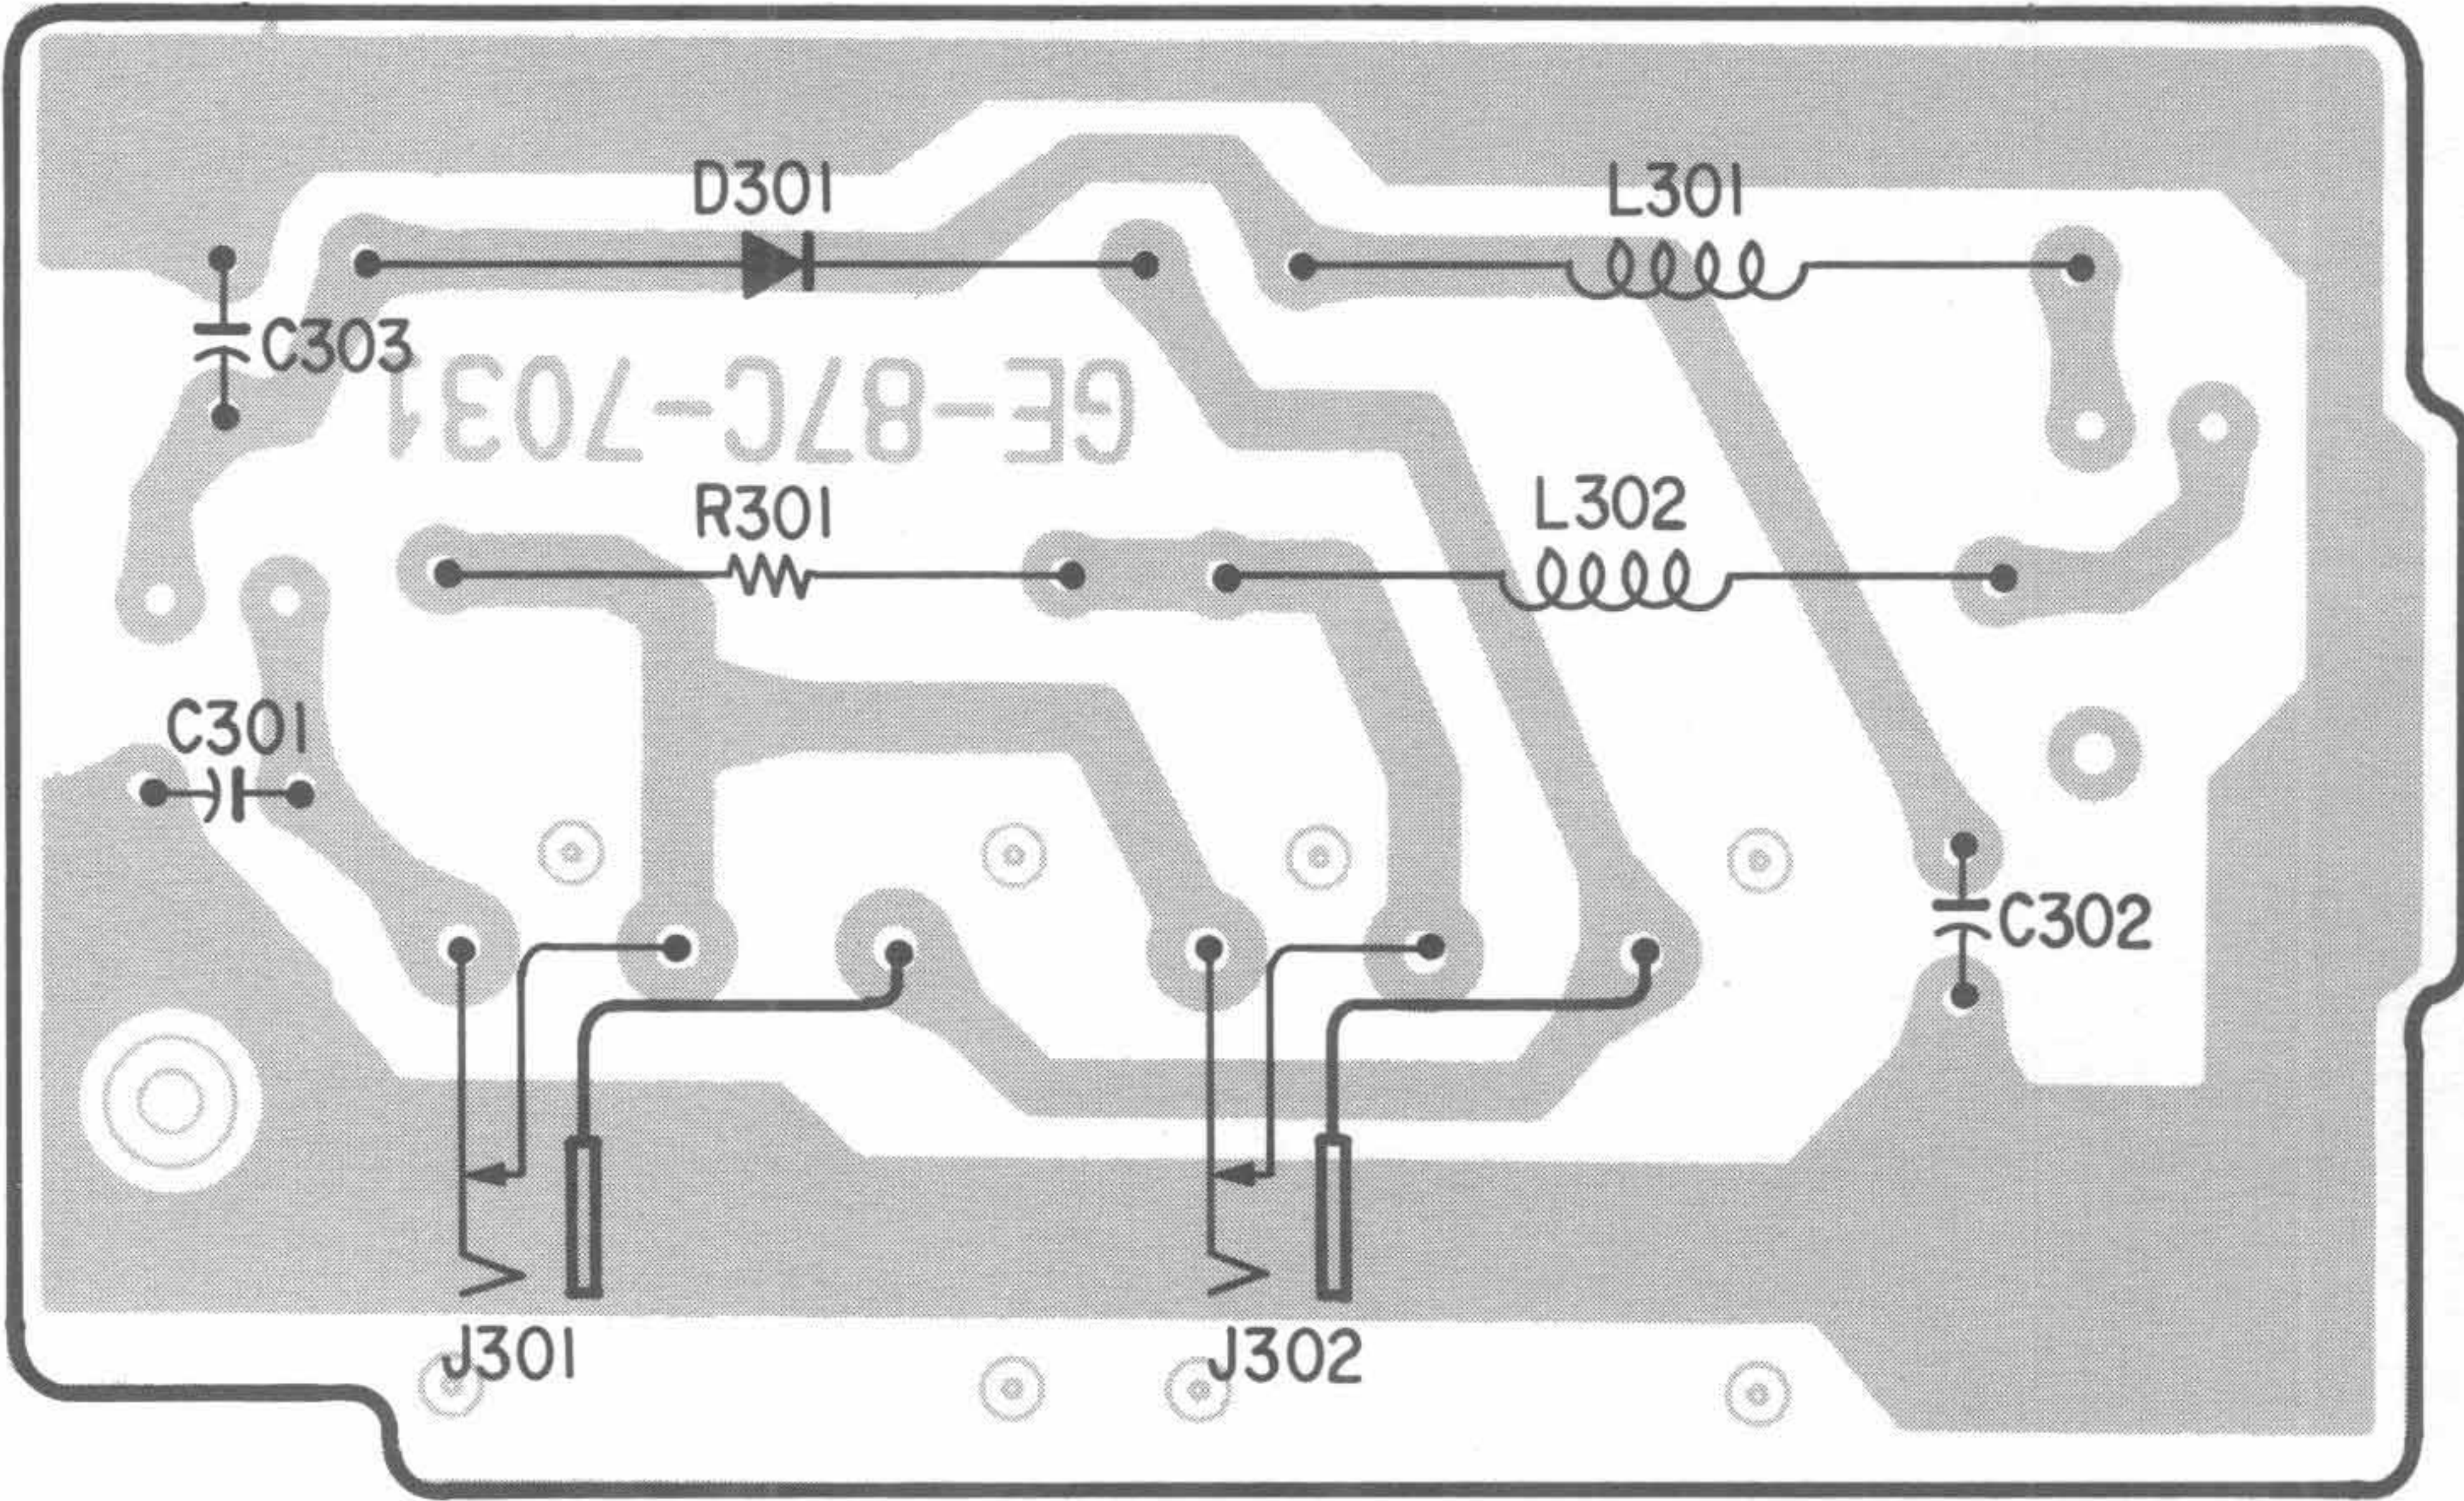


LINEAR PCB (Top View)

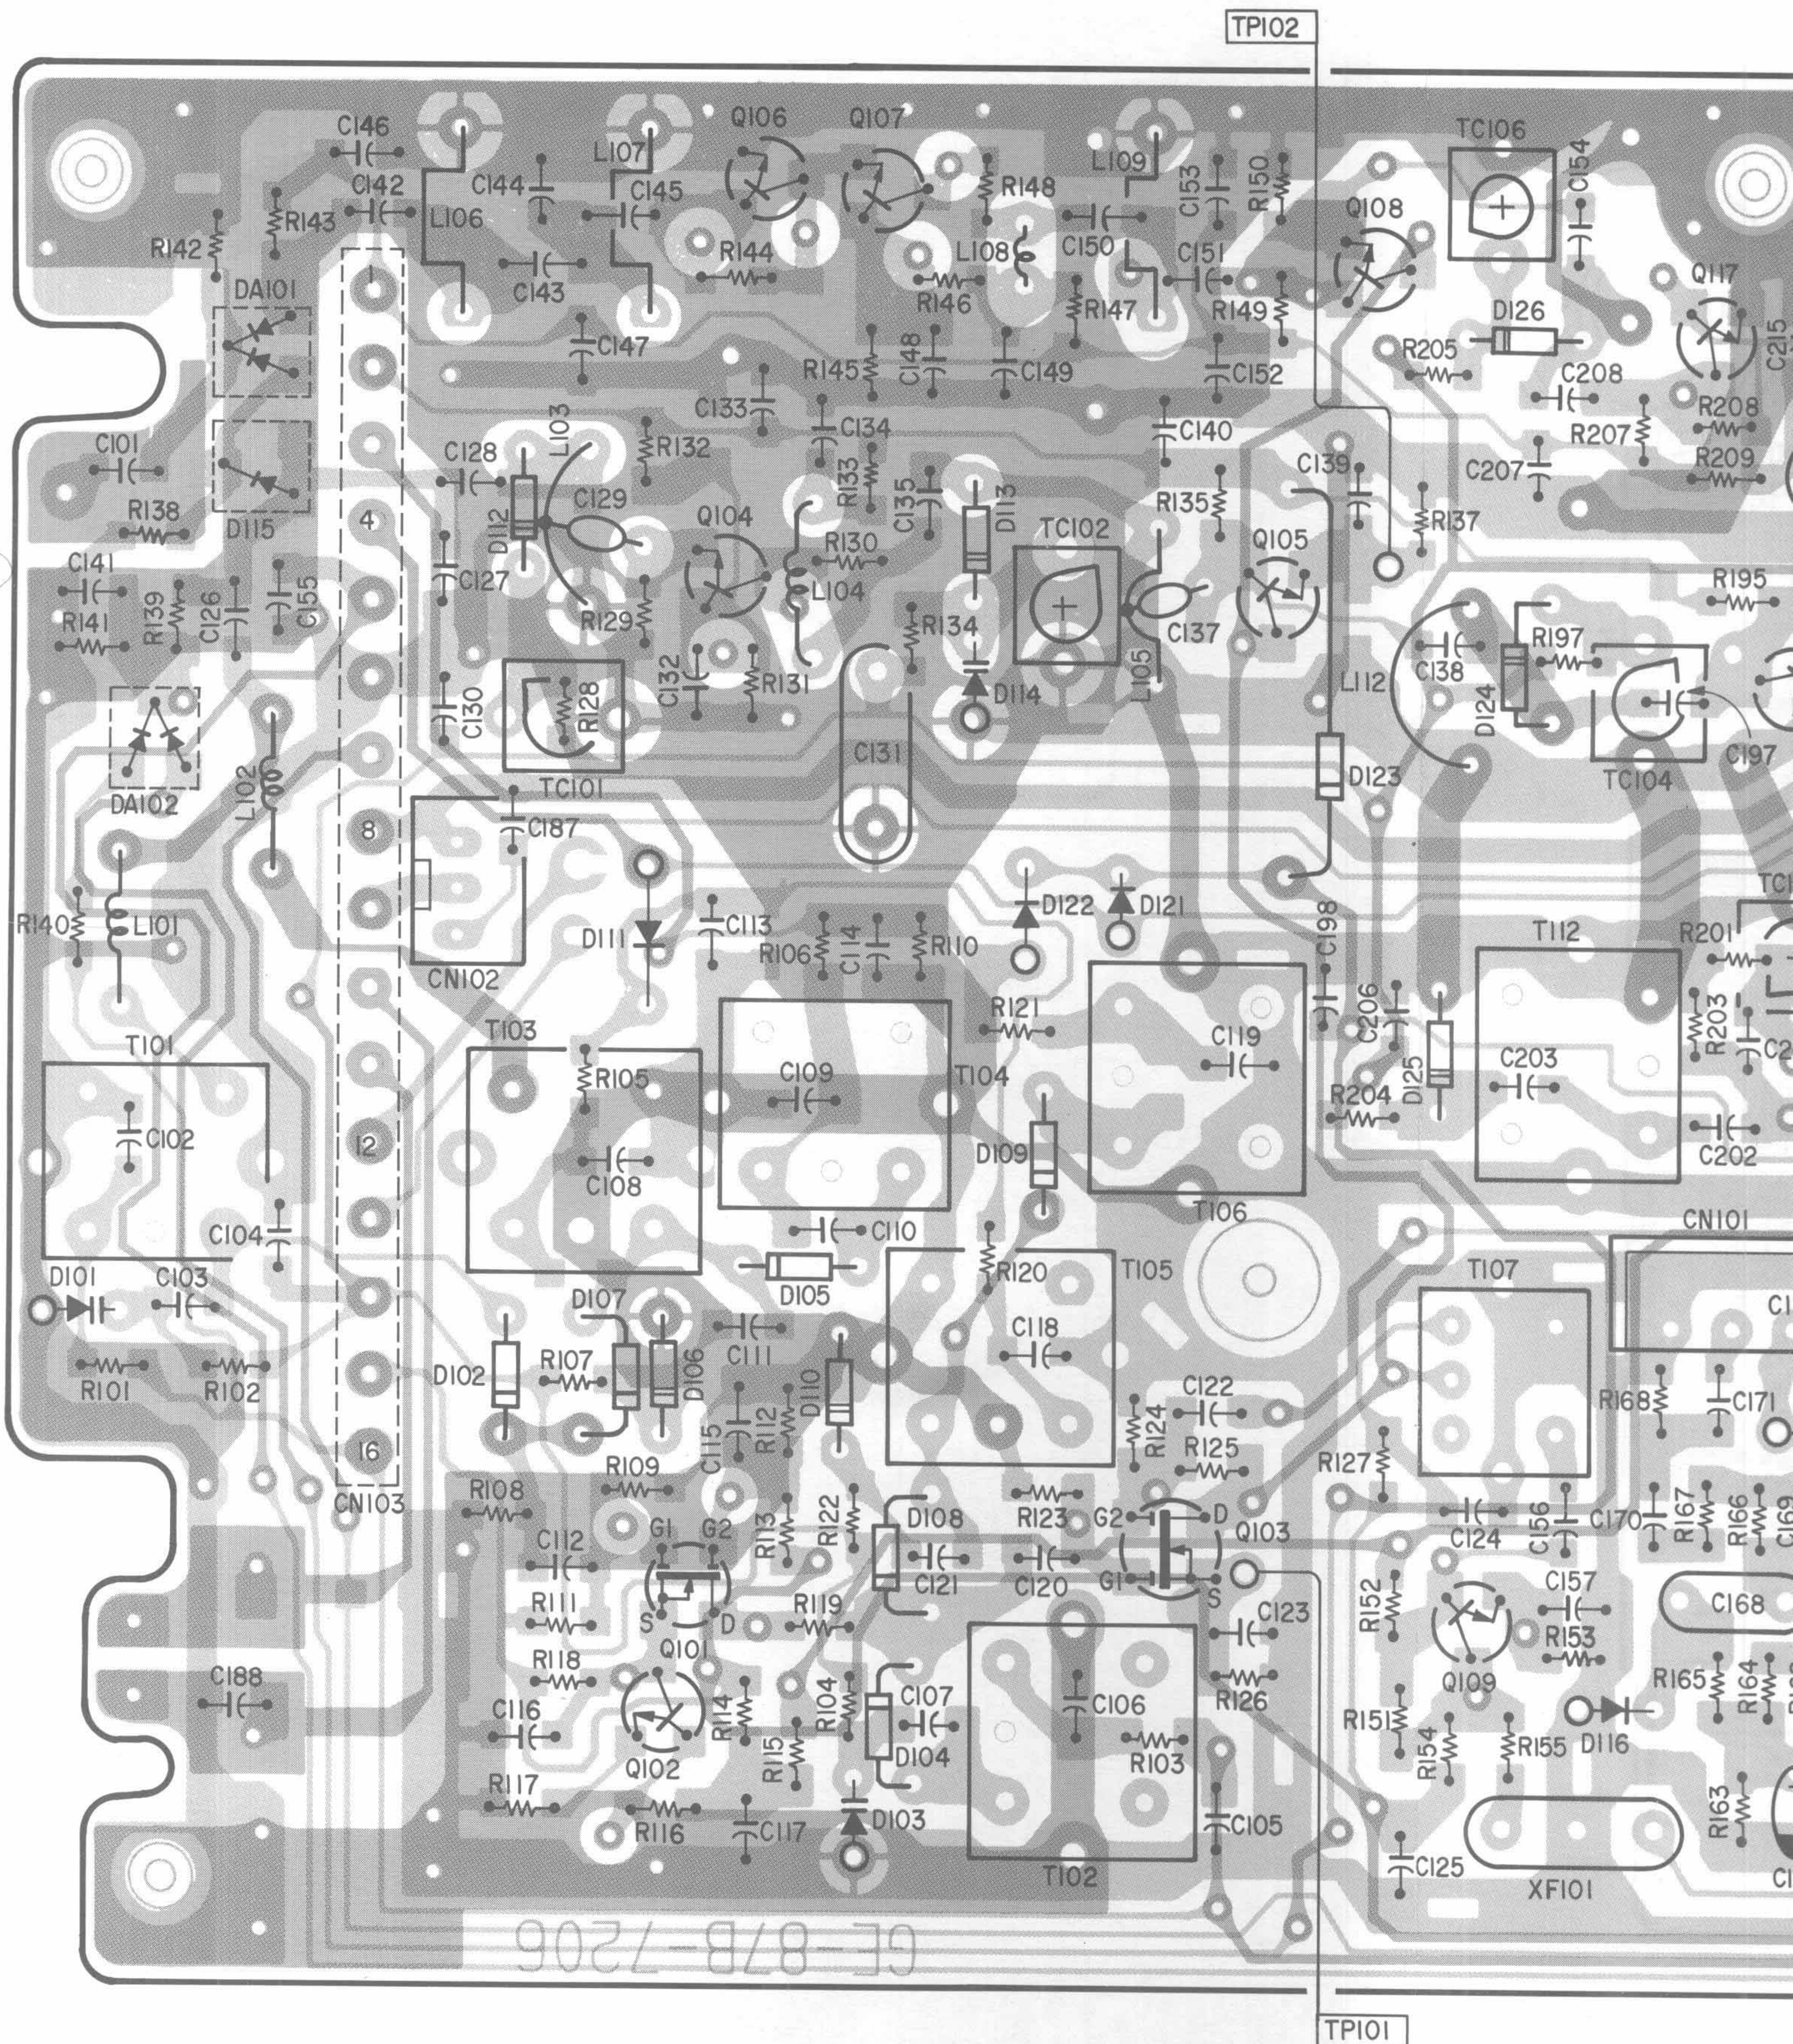


R PCB (Top View)

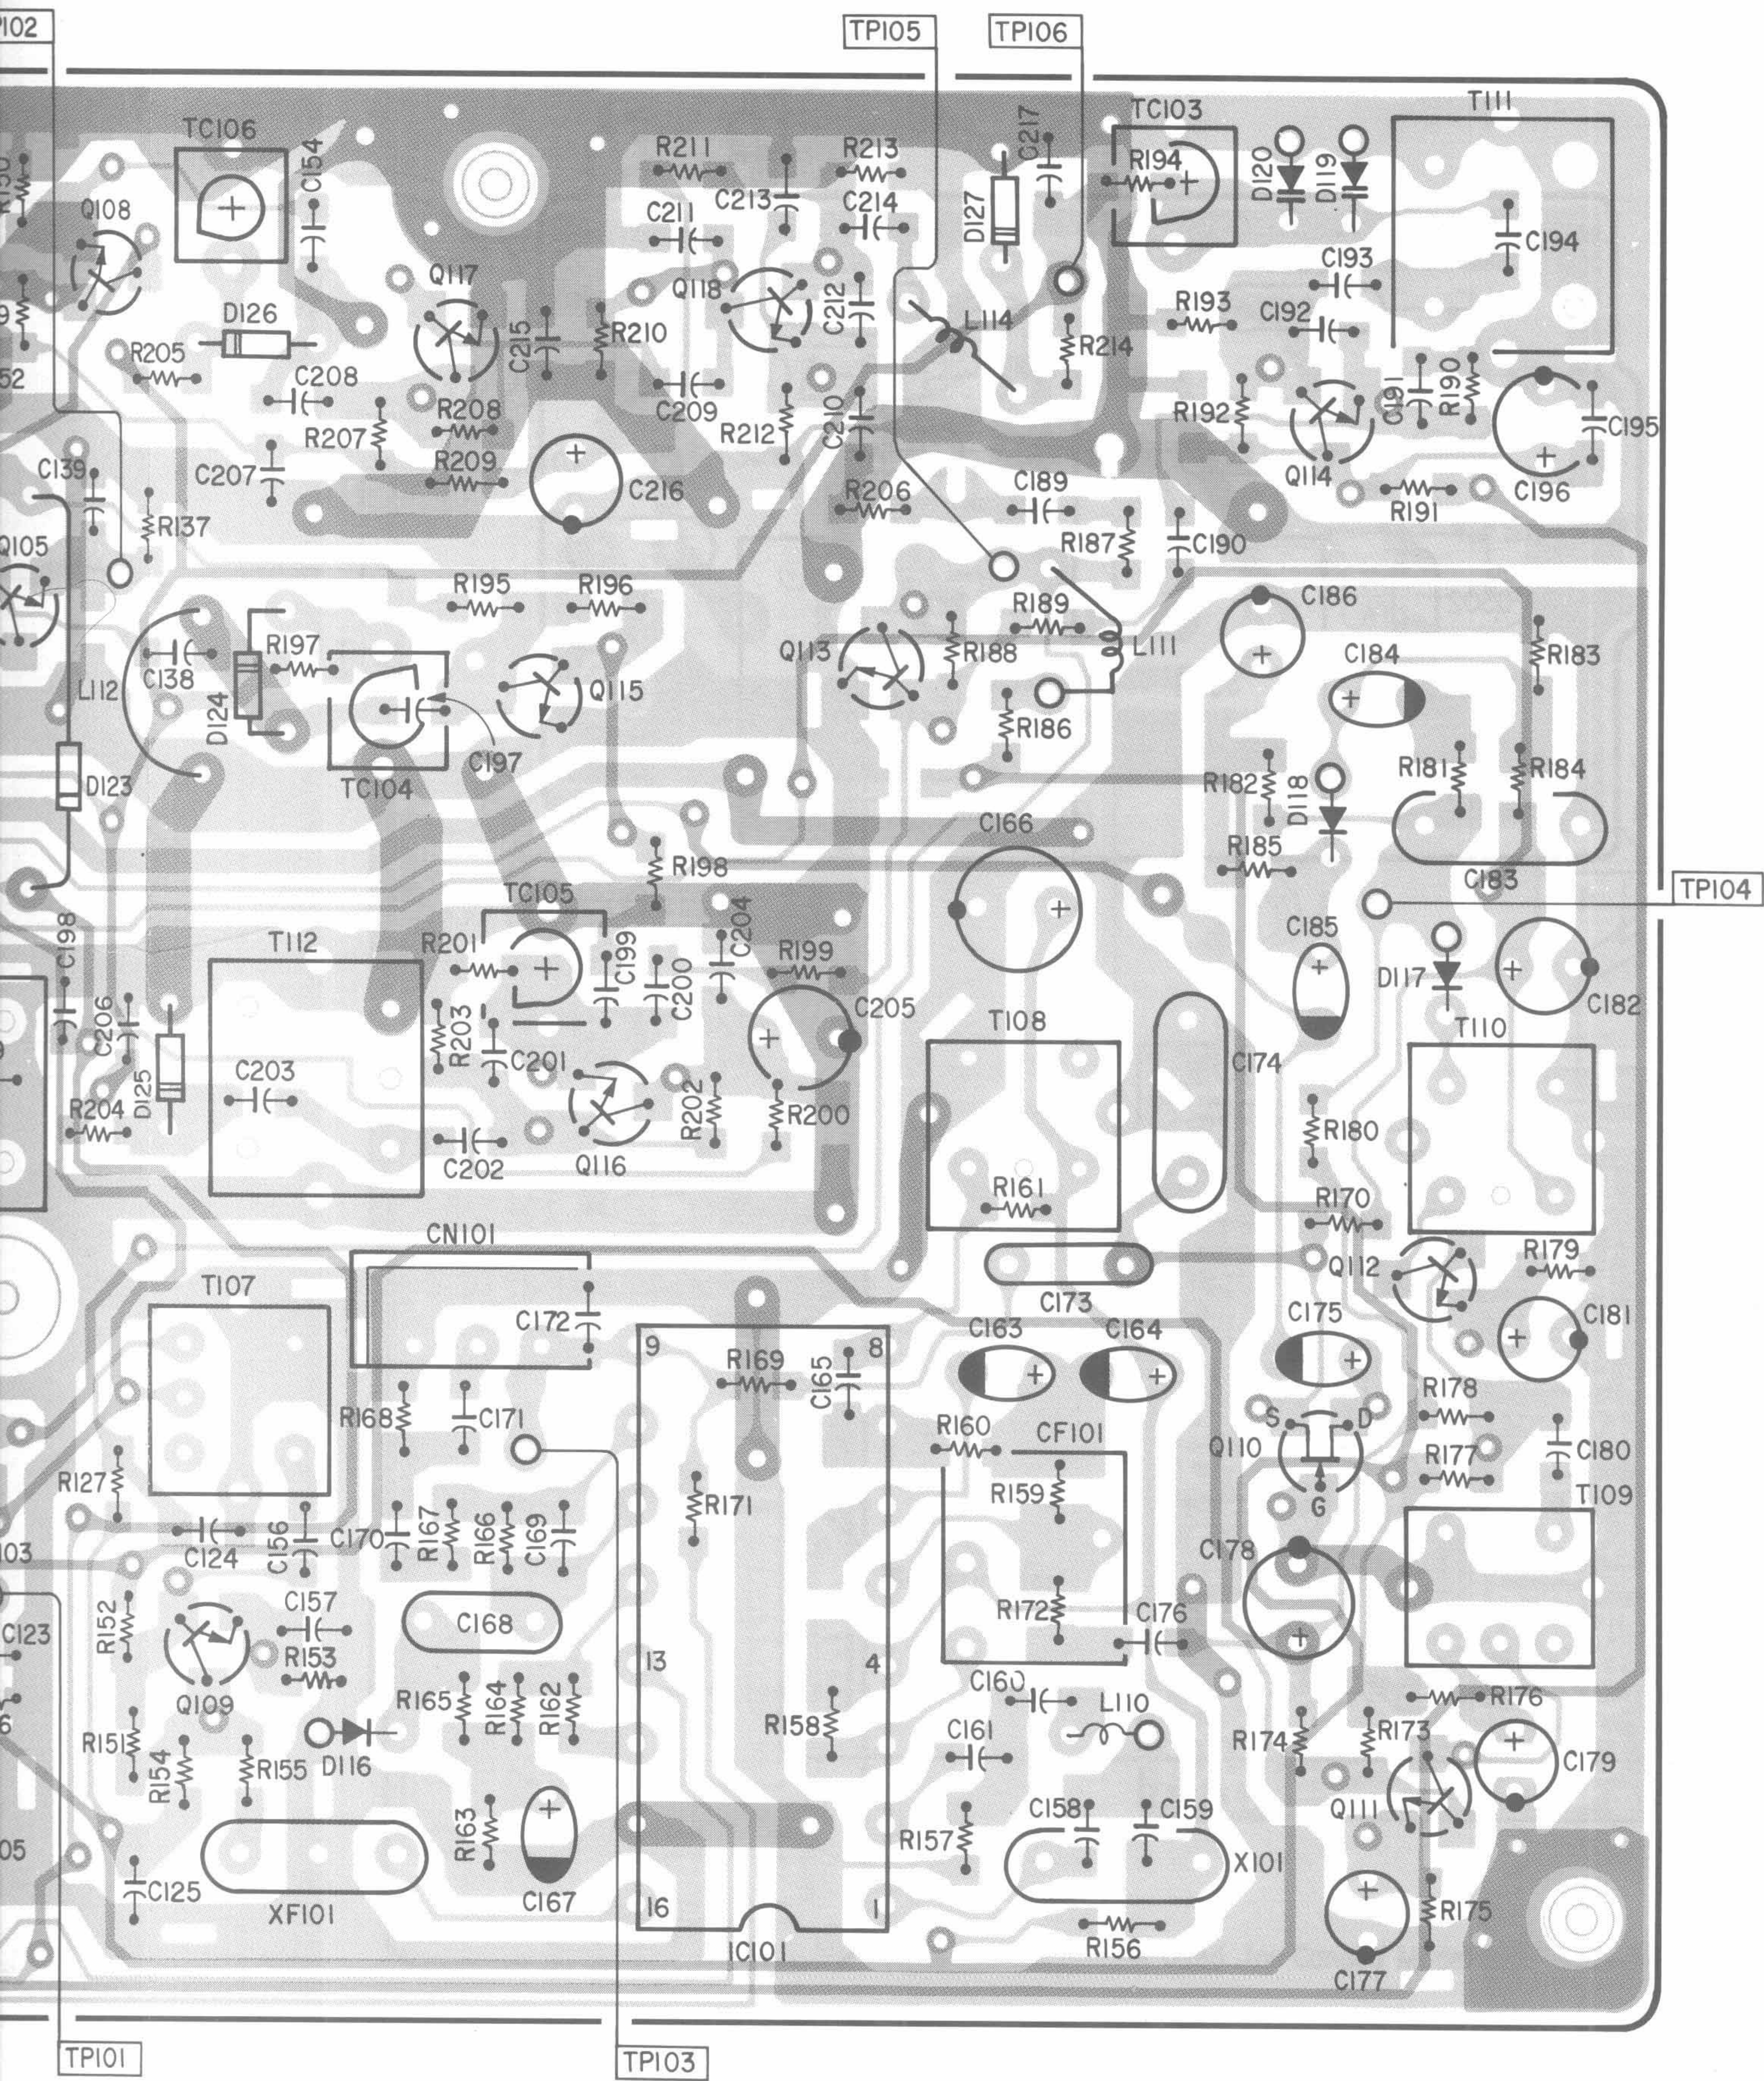


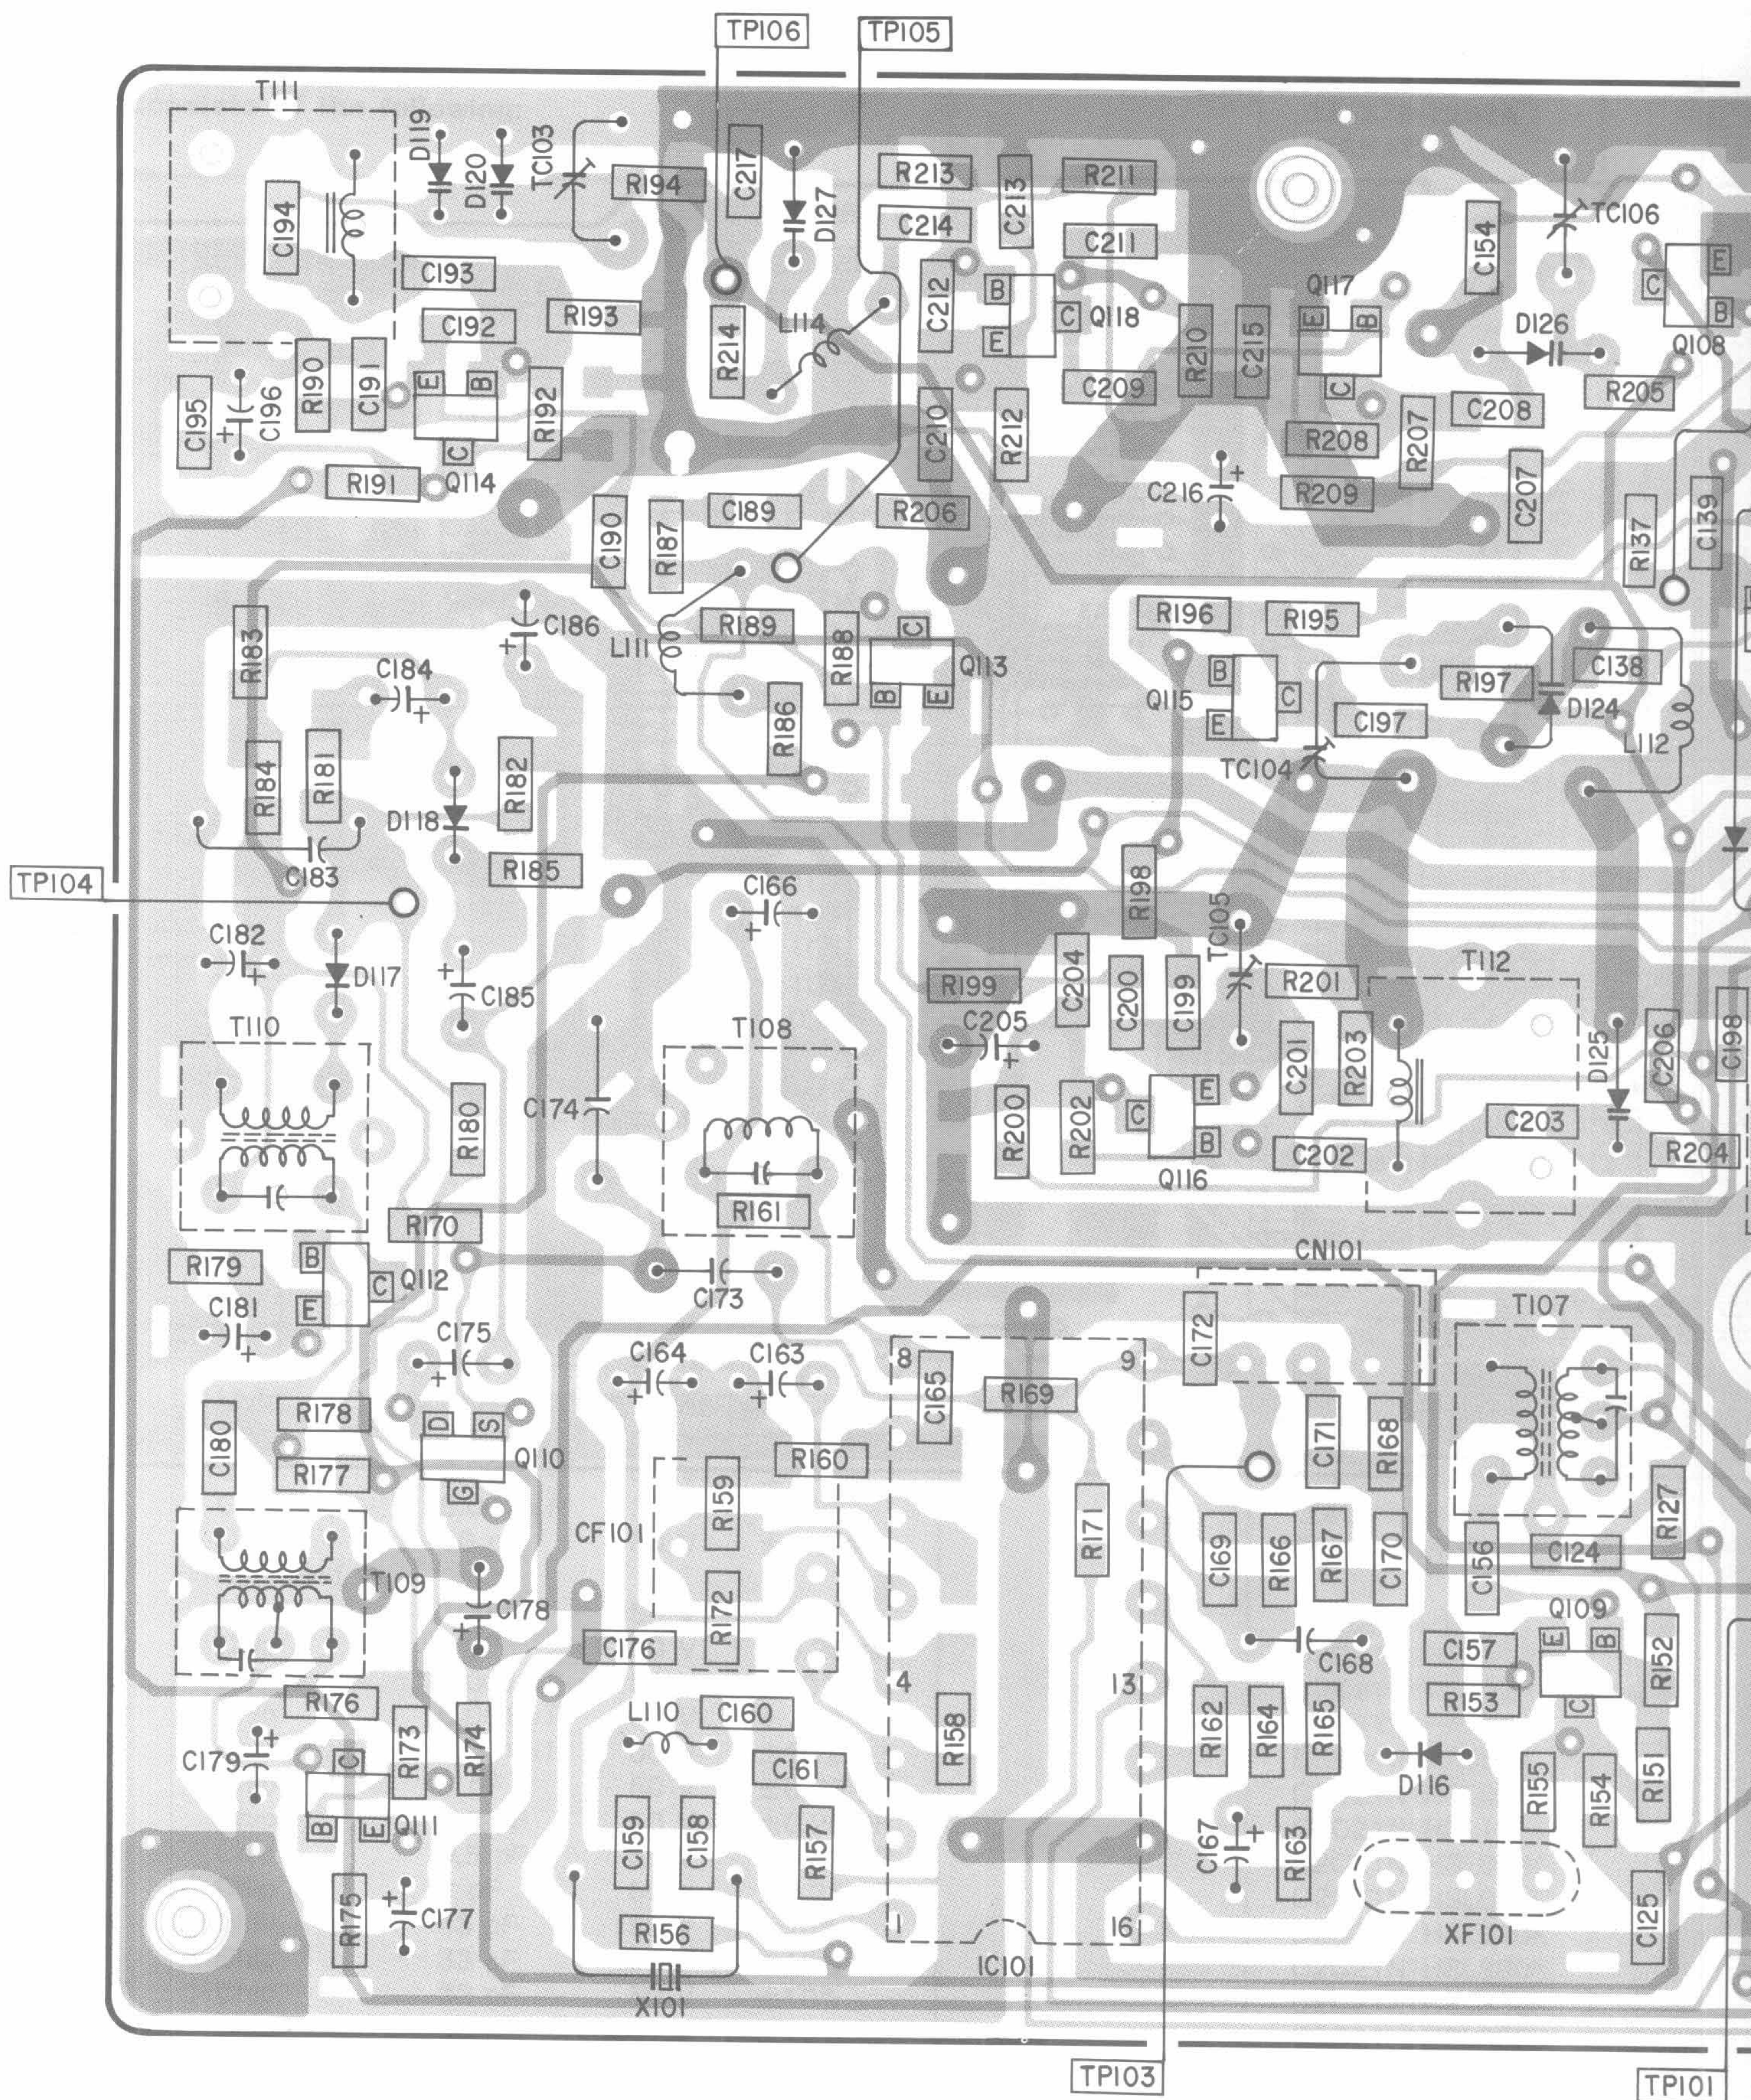


NEAR PCB (Bottom View)

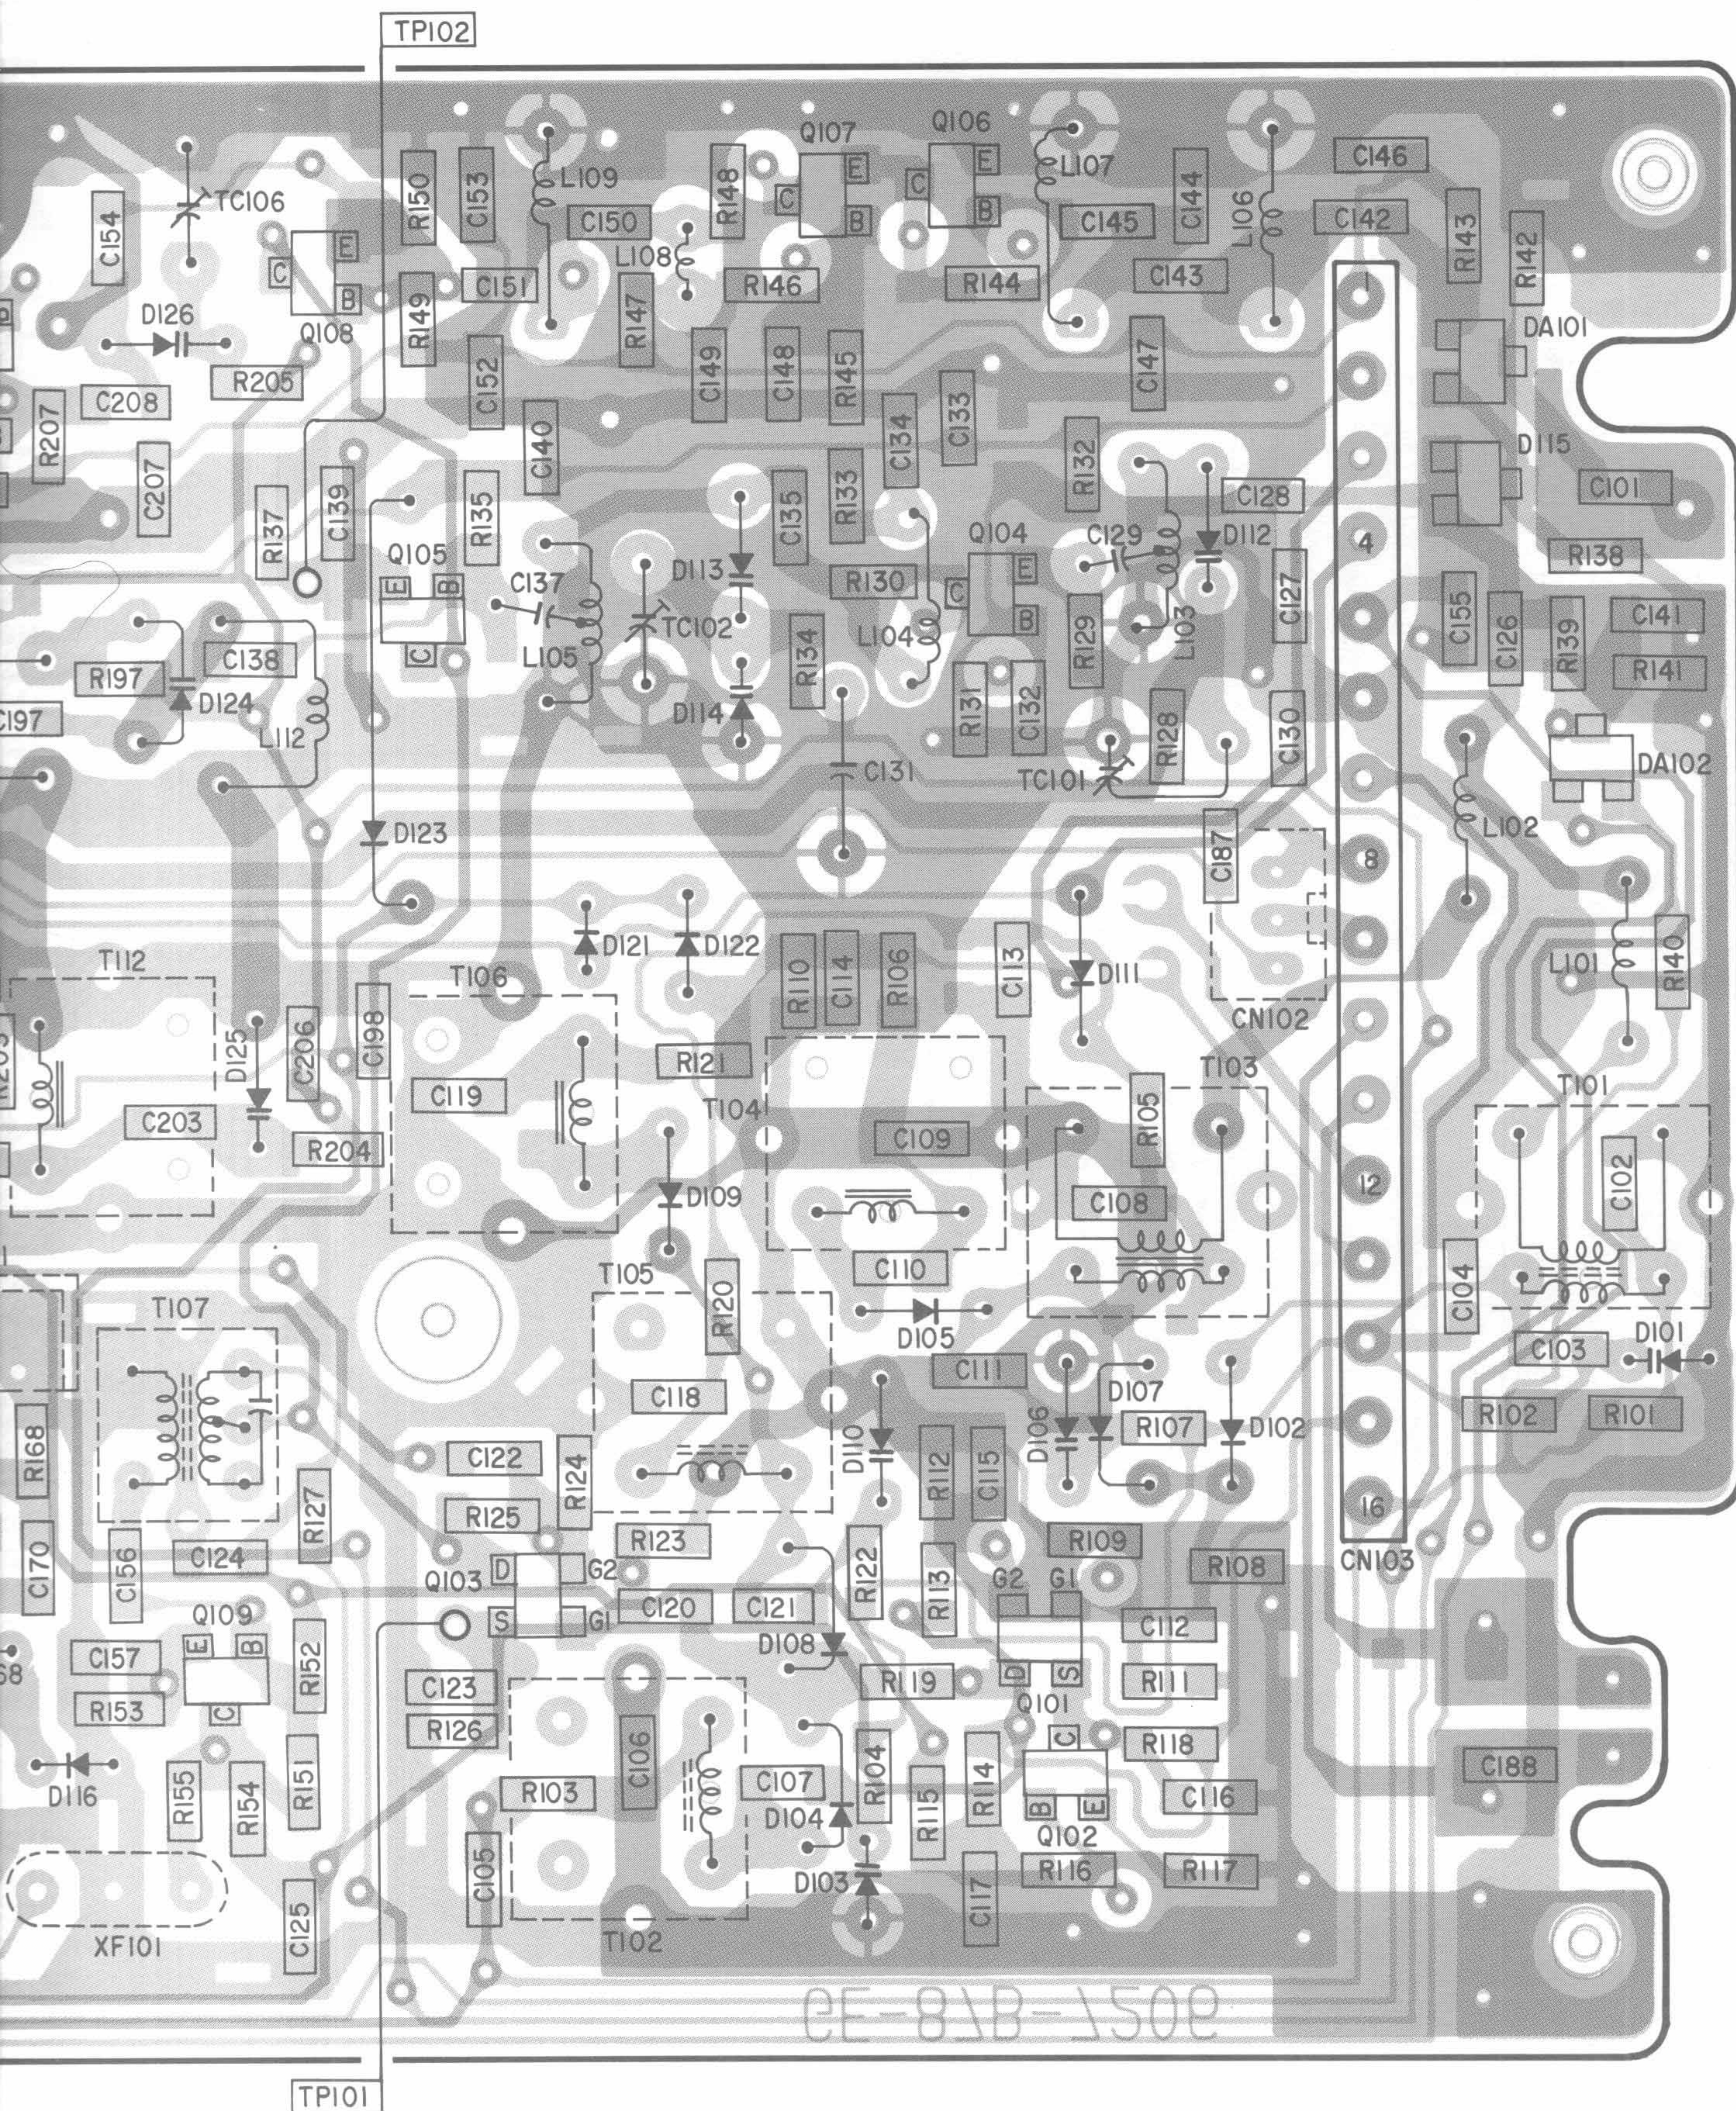


LOGIC PCB (Top View)

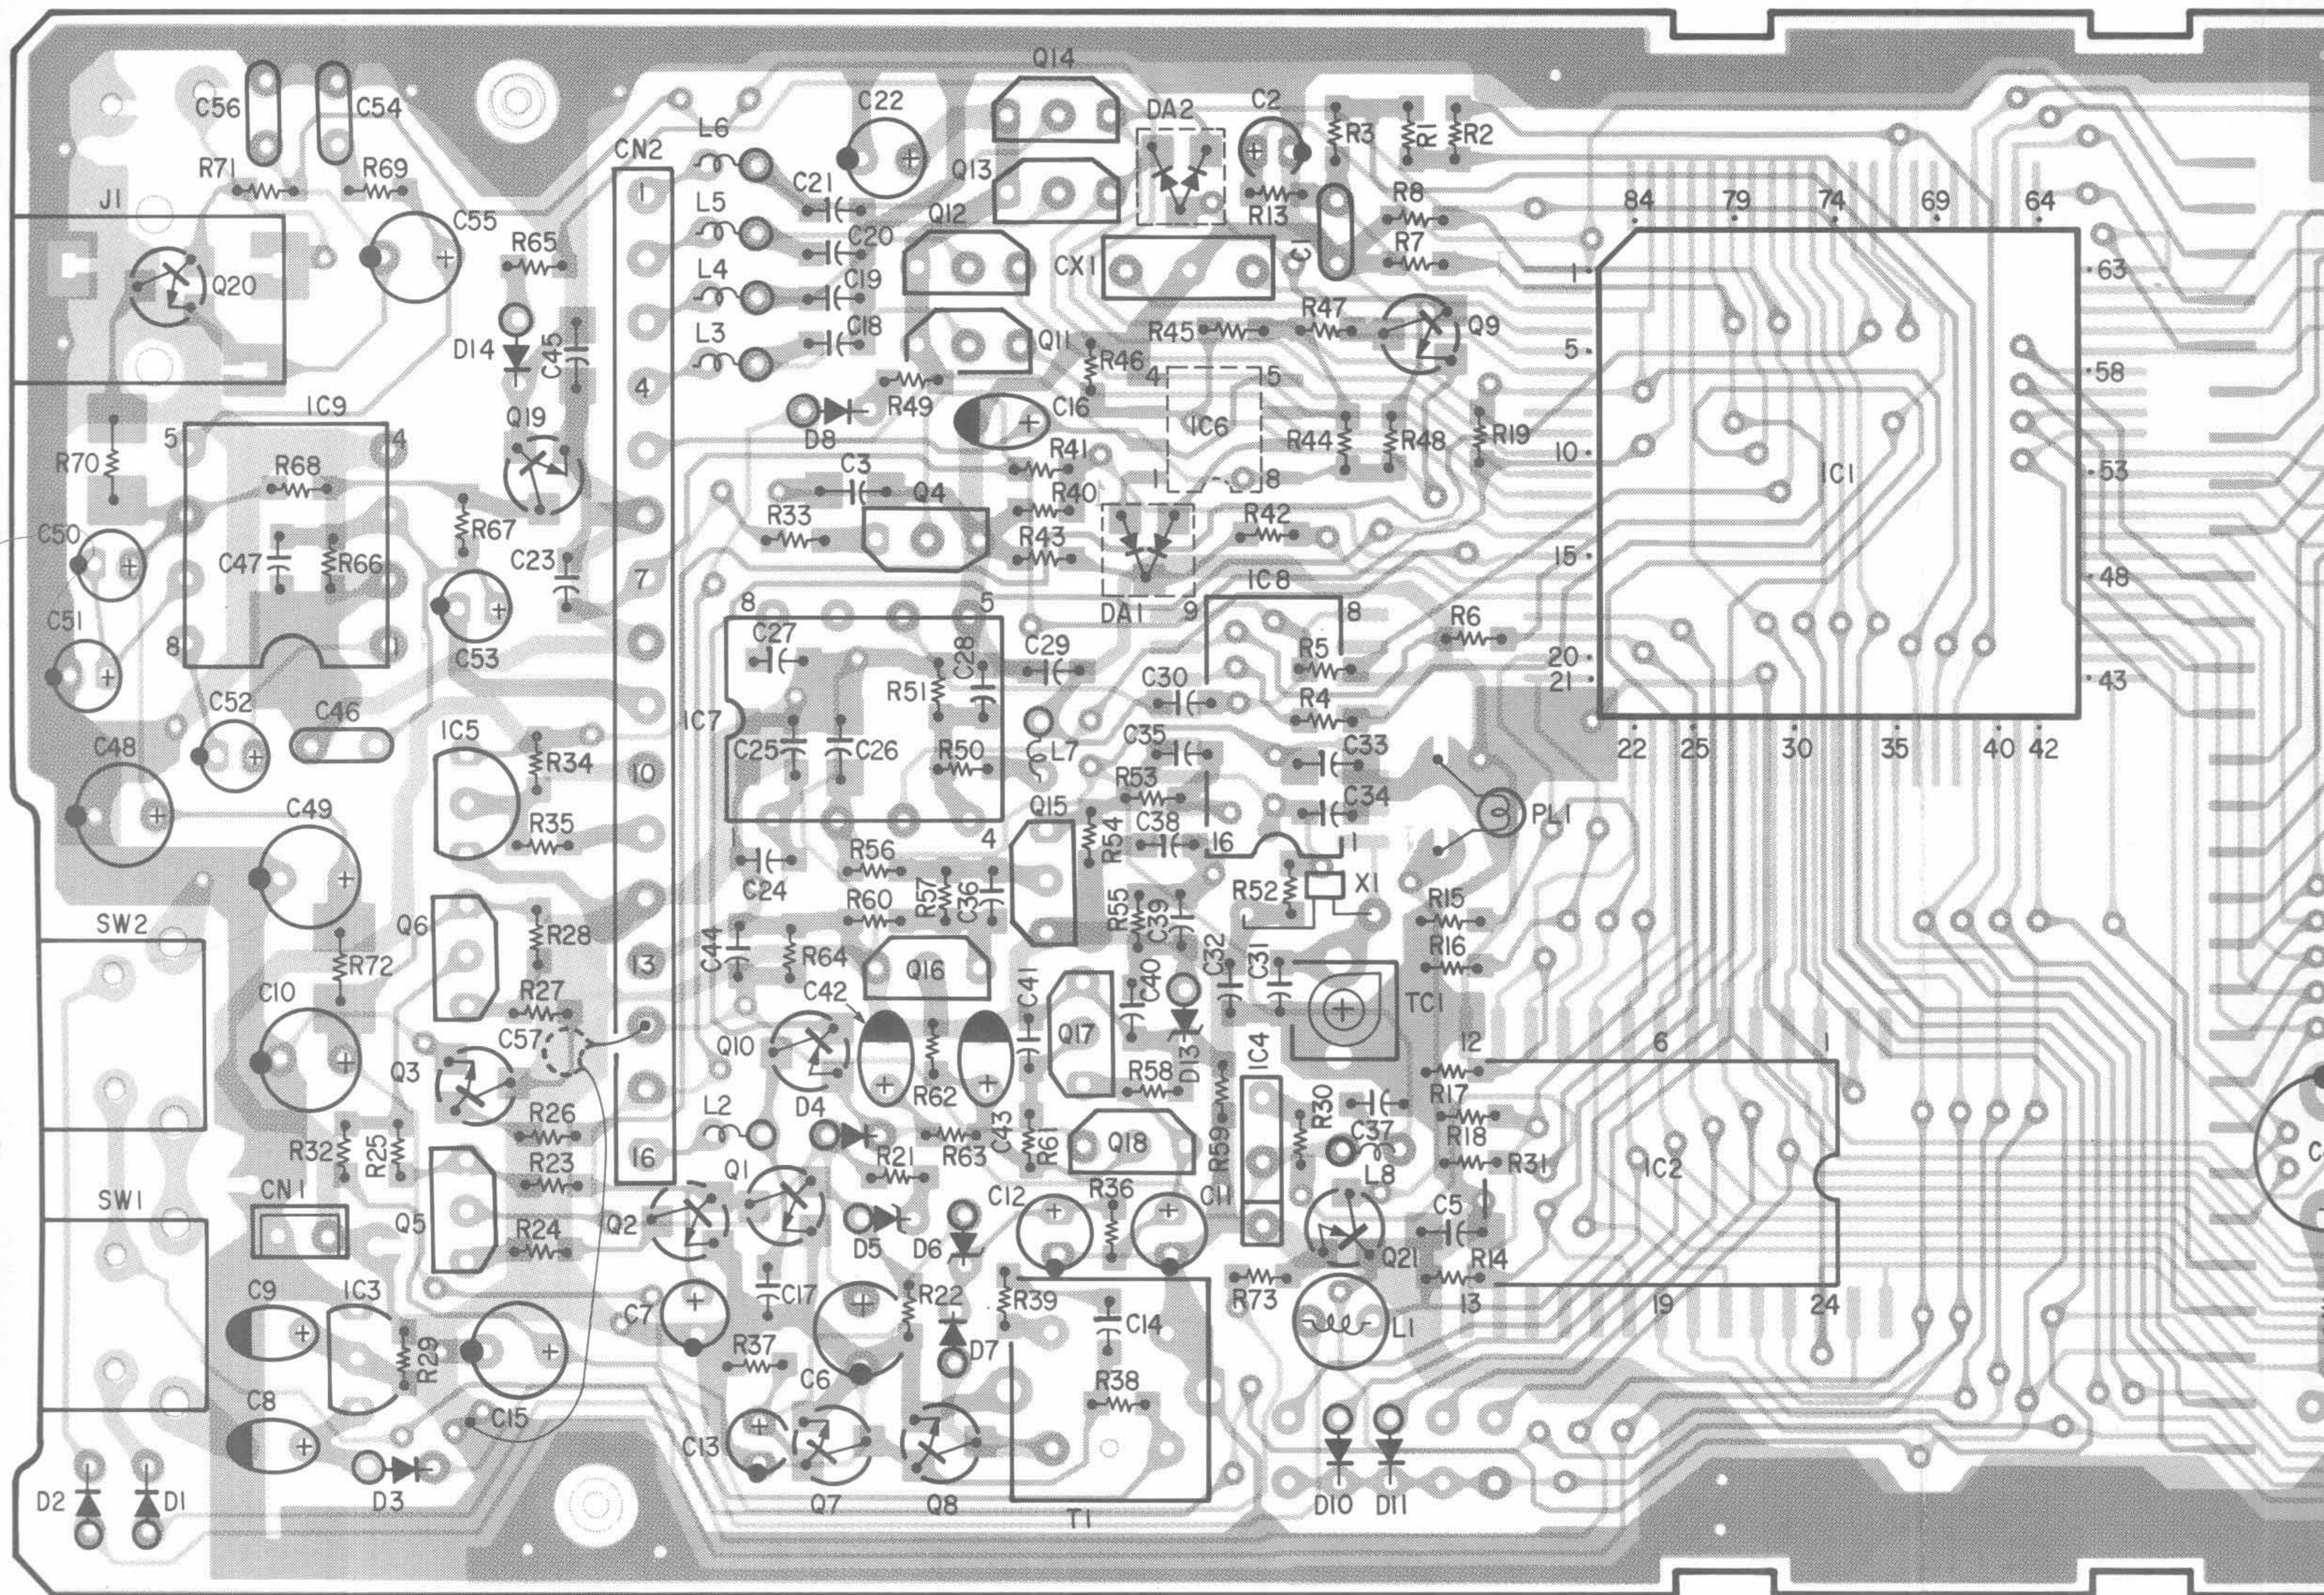


LOGIC PCB (Top View)




GIC PCB (Top View)

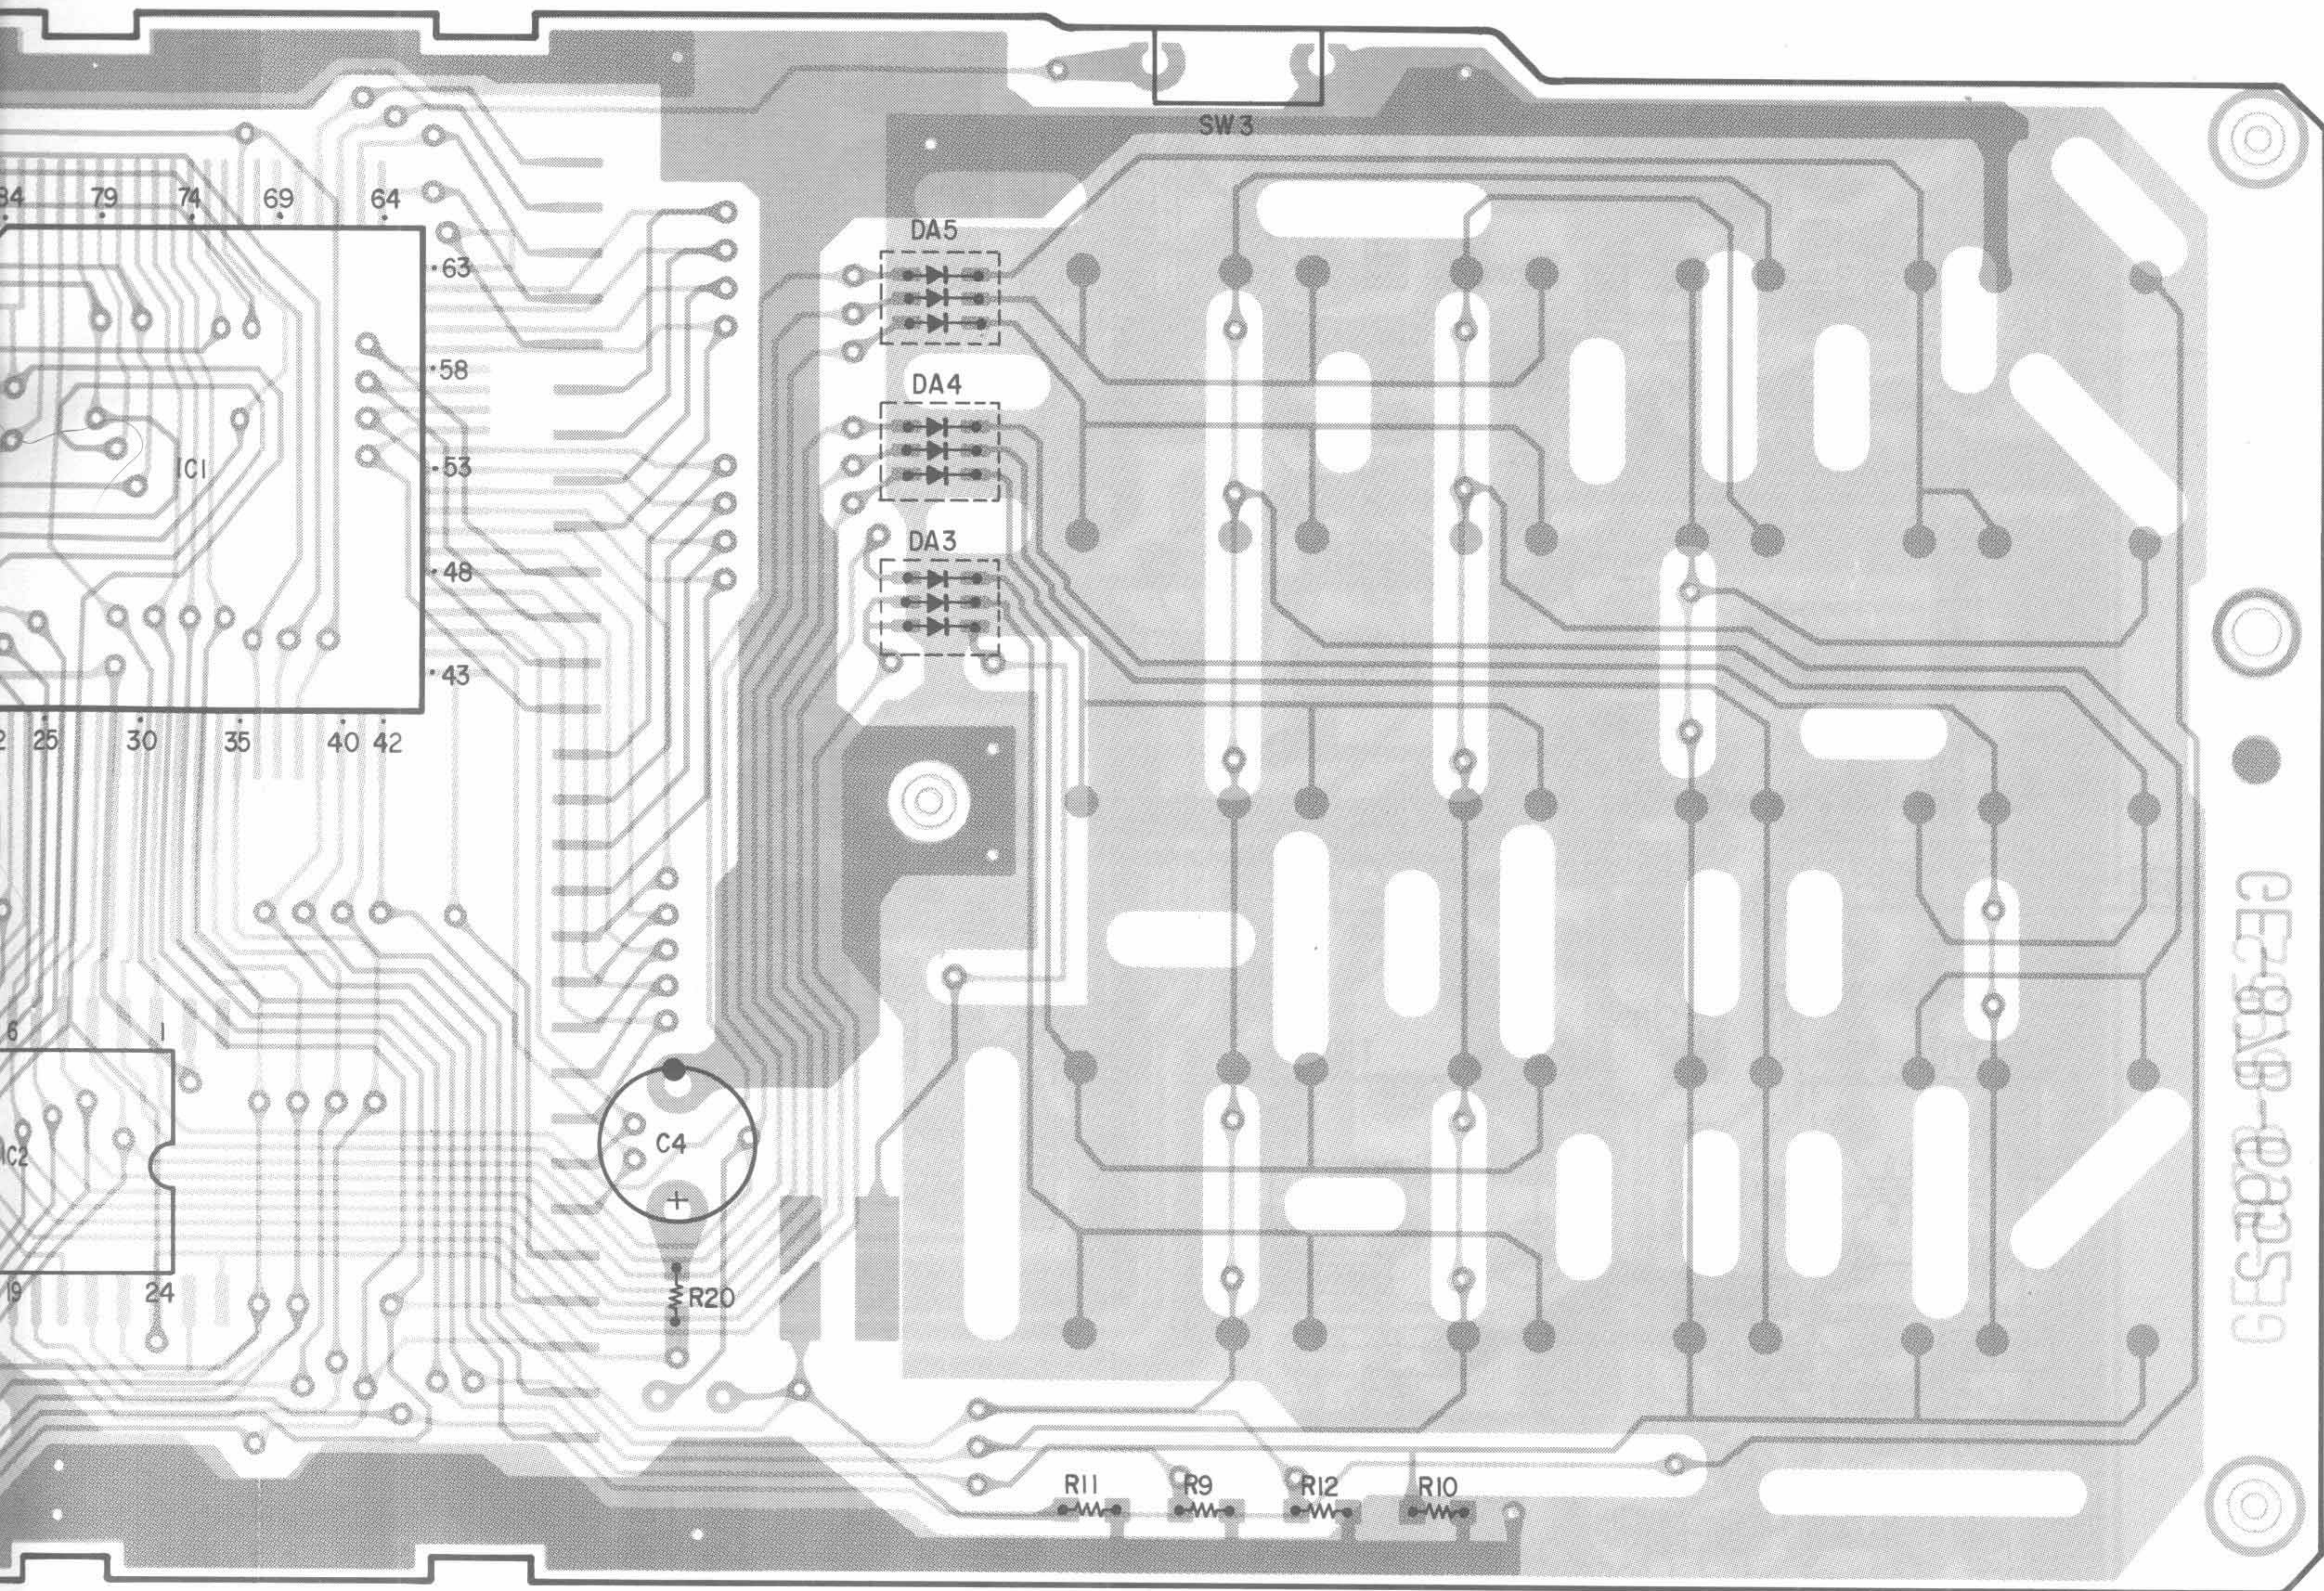

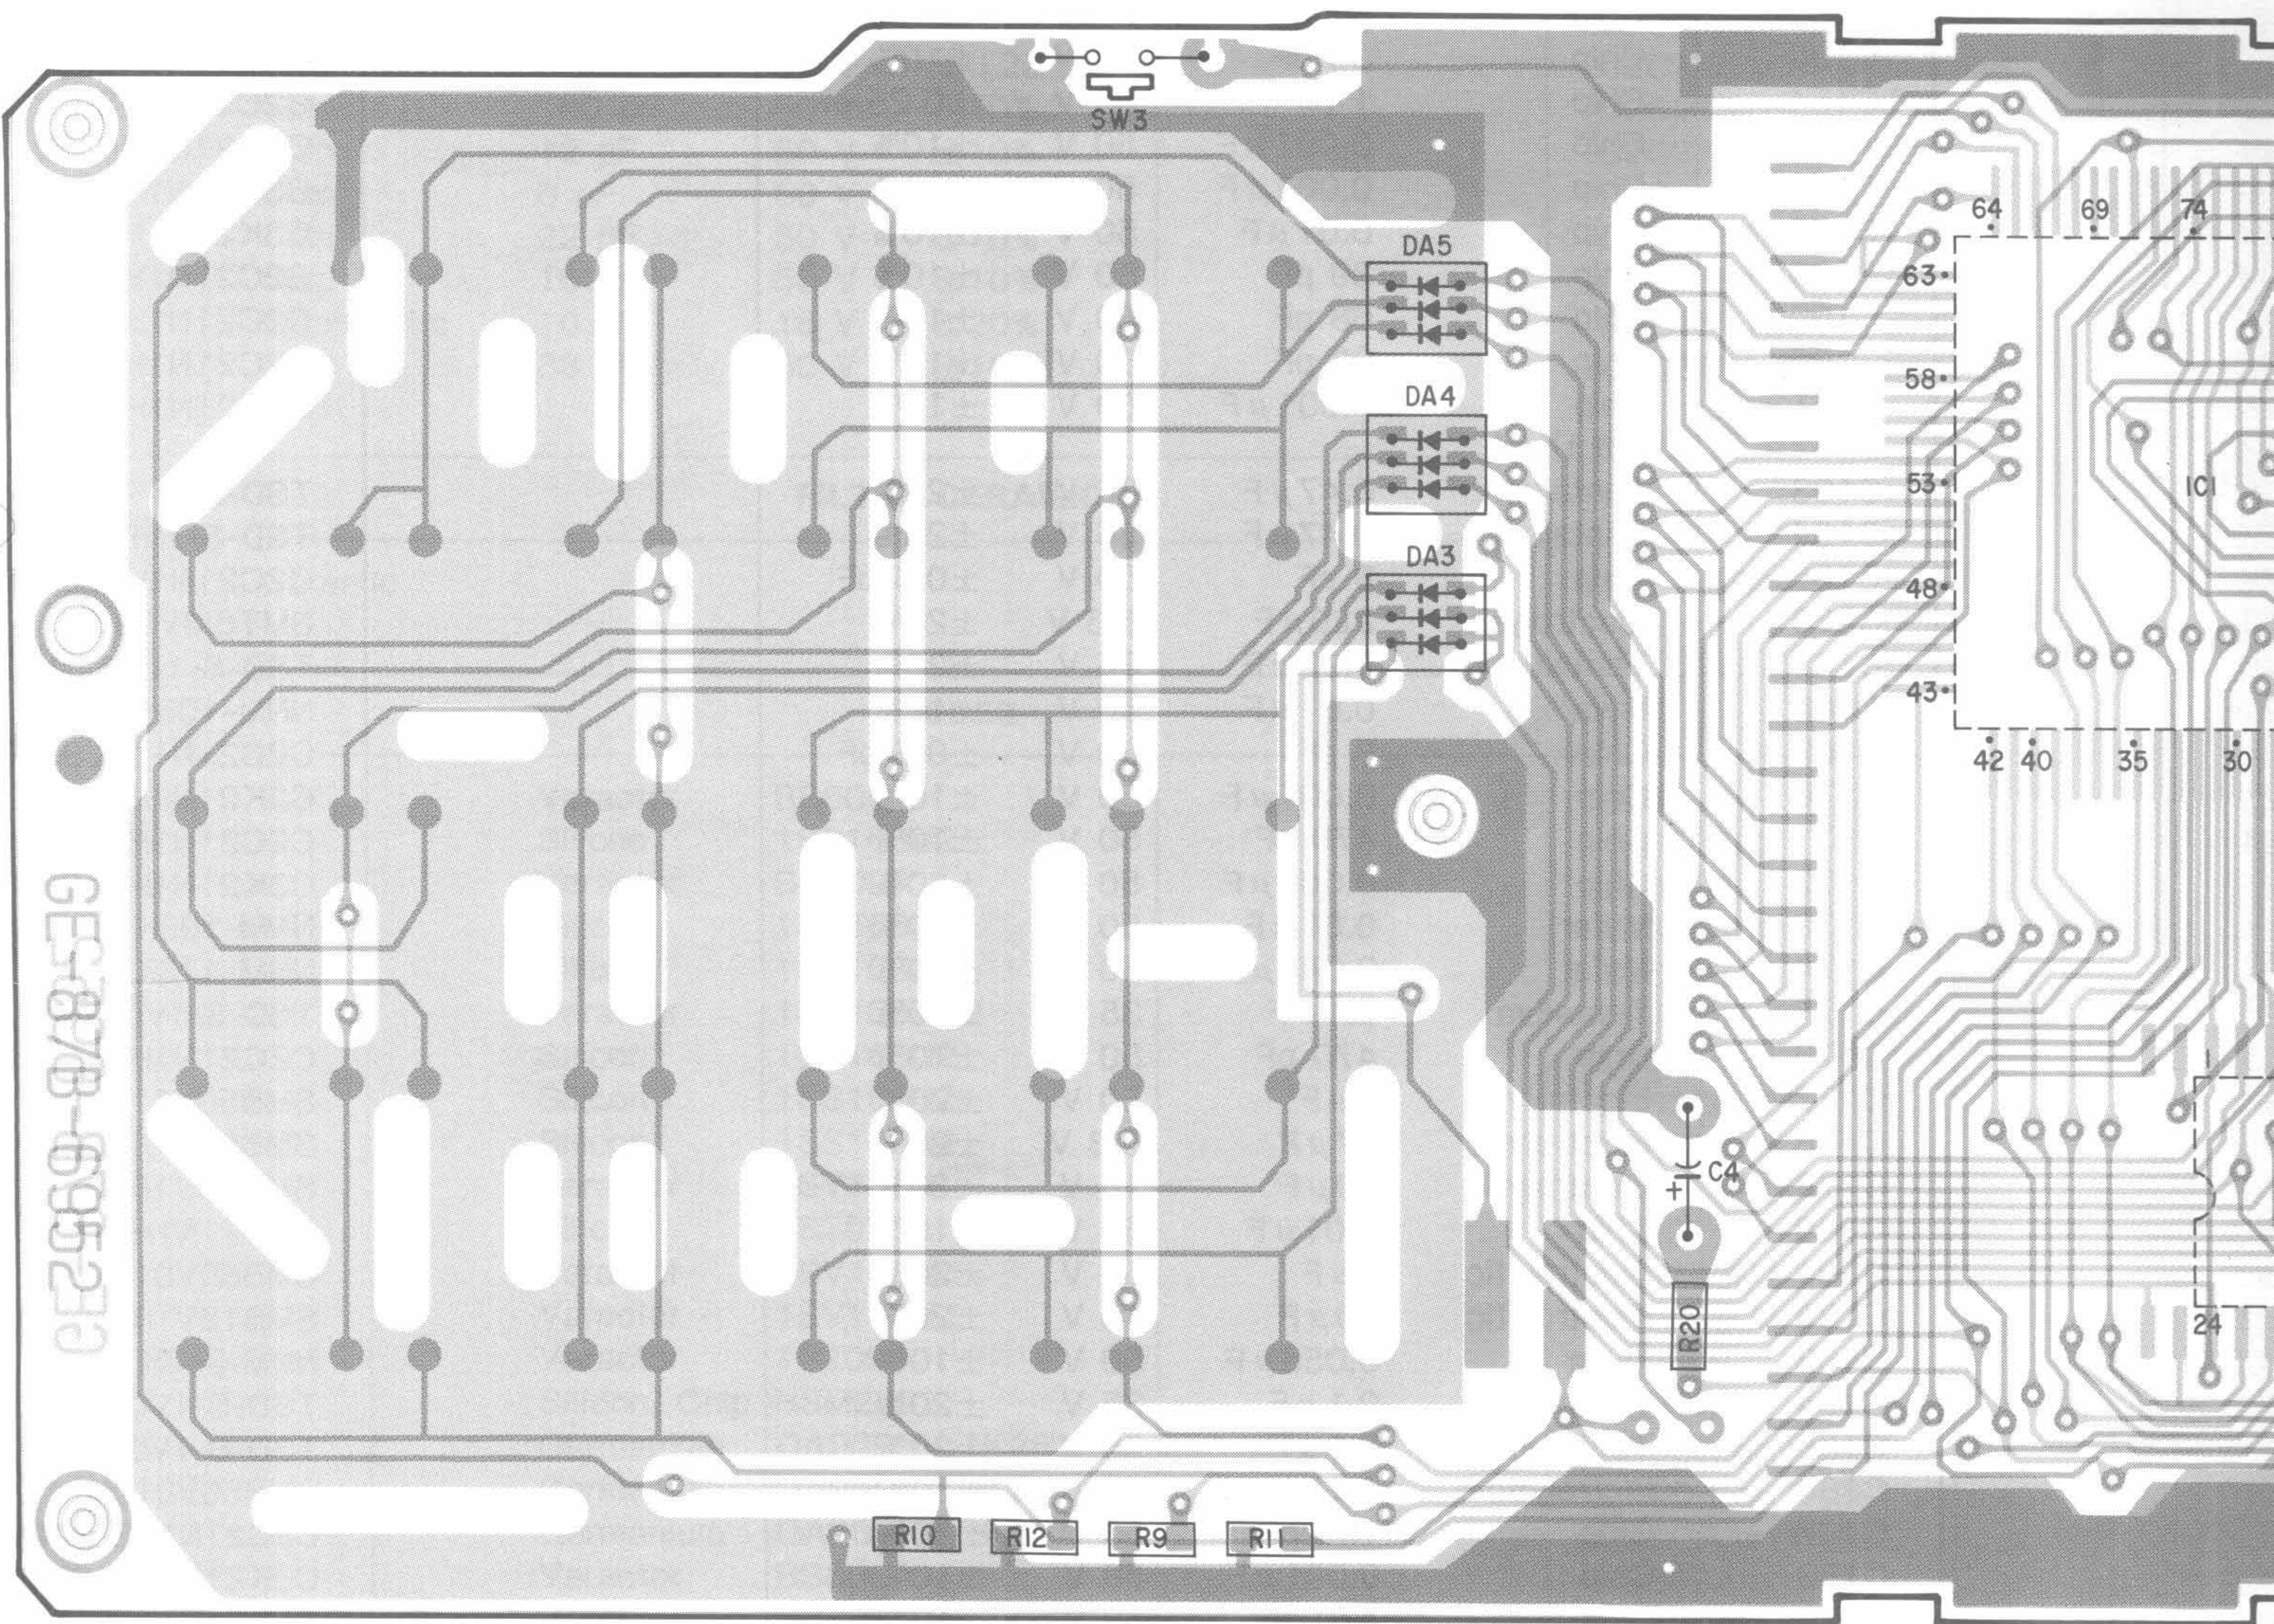

LOGIC PCB (Bottom View)

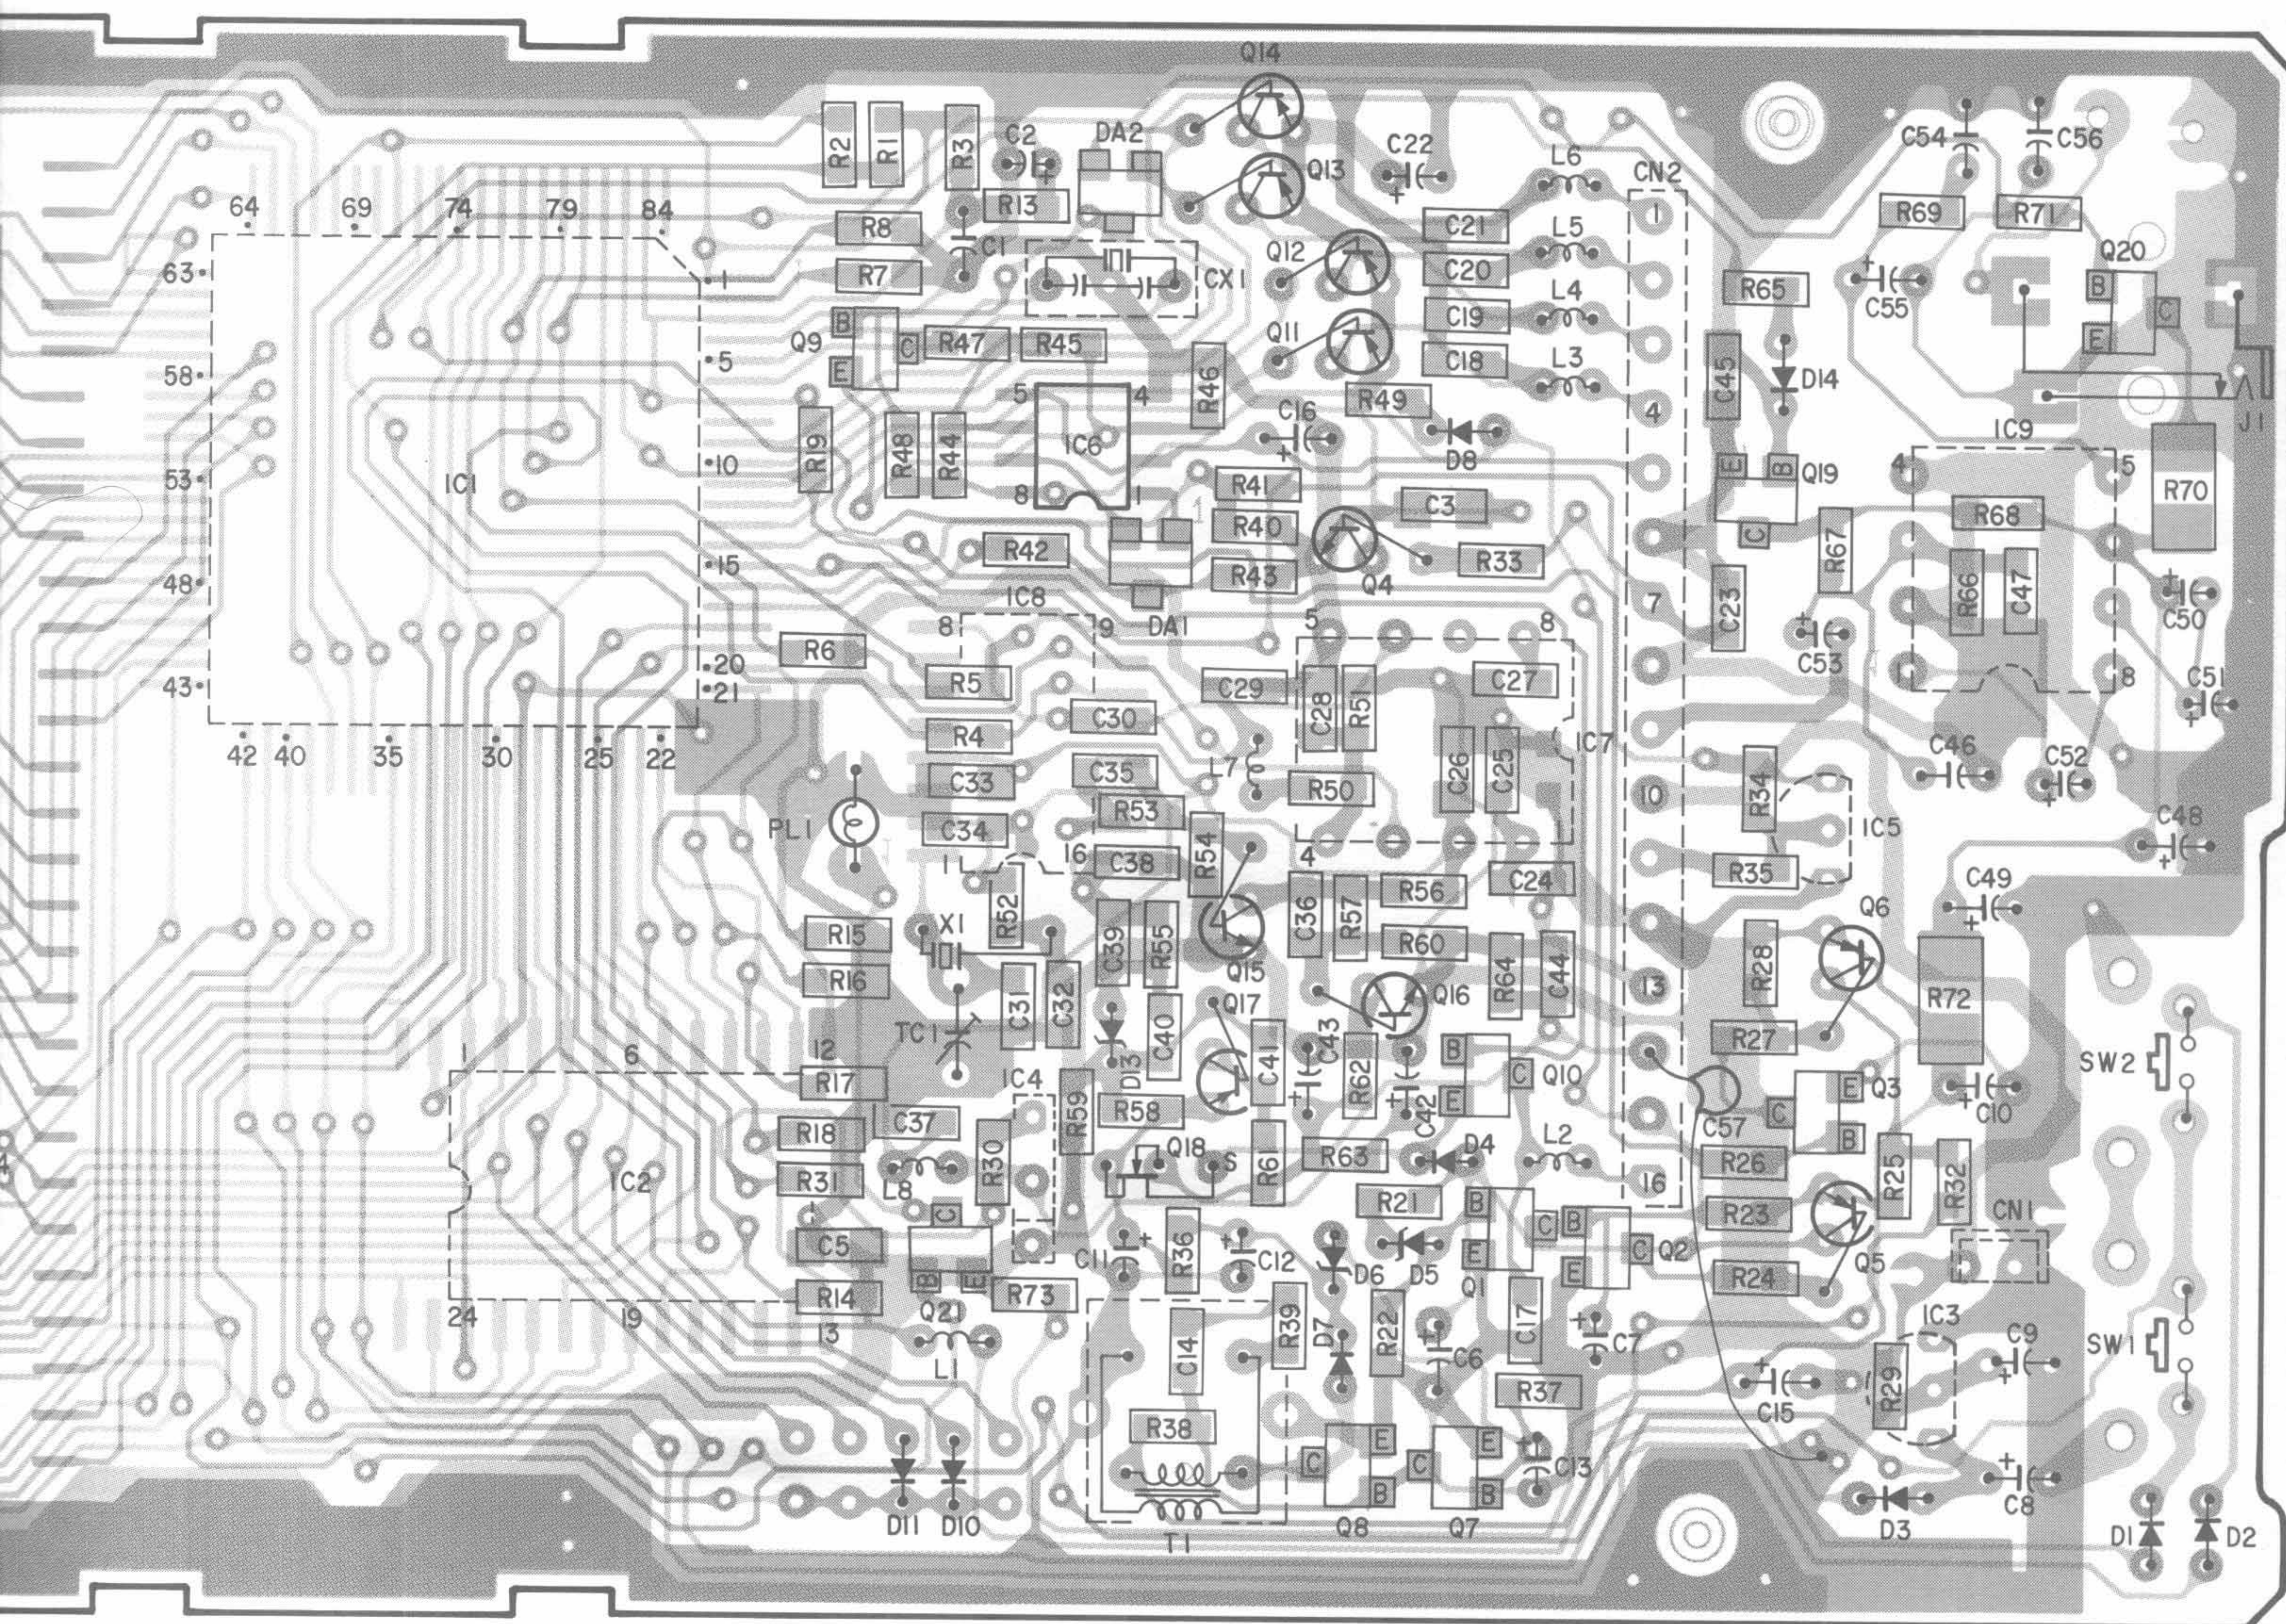

ELECTRICAL PARTS LIST

LINEAR PCB ASSEMBLY

PCB Assembly, Linear Consists of the following:					RS Part No.	MFR's Part No. GA-870-7208 GA-878-7208A (CANADA)
CAPACITORS						
Ref. No.	Description				RS Part No.	MFR's Part No.
*C101	Chip	0.001 μ F	50 V	$\pm 10\%$		C3K21N1HR102K
C102	Chip	0.01 μ F	50 V	$\pm 10\%$		C3K21N1HR103K
C103	Chip	0.001 μ F	50 V	$\pm 10\%$		C3K21N1HR102K
C104	Chip	0.001 μ F	50 V	$\pm 10\%$		C3K21N1HR102K
C105	Chip	0.001 μ F	50 V	$\pm 10\%$		C3K21N1HR102K
C106	Chip	0.01 μ F	50 V	$\pm 10\%$		C3K21N1HR103K
C107	Chip	0.001 μ F	50 V	$\pm 10\%$		C3K21N1HR102K
C108	Chip	0.001 μ F	50 V	$\pm 10\%$		C3K21N1HR102K
C109	Chip	0.001 μ F	50 V	$\pm 10\%$		C3K21N1HR102K
C110	Chip	3 pF	50 V	± 0.25 pF		C2C21N1HSL030C
C111	Chip	0.001 μ F	50 V	$\pm 10\%$		C3K21N1HR102K
C112	Chip	22 pF	50 V	$\pm 10\%$		C2C21N1HSL220K
C113	Chip	0.001 μ F	50 V	$\pm 10\%$		C3K21N1HR102K
C114	Chip	0.001 μ F	50 V	$\pm 10\%$		C3K21N1HR102K
C115	Chip	0.001 μ F	50 V	$\pm 10\%$		C3K21N1HR102K
C116	Chip	0.001 μ F	50 V	$\pm 10\%$		C3K21N1HR102K
C117	Chip	0.001 μ F	50 V	$\pm 10\%$		C3K21N1HR102K
C118	Chip	0.001 μ F	50 V	$\pm 10\%$		C3K21N1HR102K
C119	Chip	0.001 μ F	50 V	$\pm 10\%$		C3K21N1HR102K
C120	Chip	10 pF	50 V	± 0.5 pF		C2C21N1HSL100D
C121	Chip	0.001 μ F	50 V	$\pm 10\%$		C3K21N1HR102K
C122	Chip	100 pF	50 V	$\pm 10\%$		C2C21N1HSL101K
C123	Chip	0.001 μ F	50 V	$\pm 10\%$		C3K21N1HR102K
C124	Chip	0.01 μ F	50 V	$\pm 10\%$		C3K21N1HR103K
C125	Chip	0.01 μ F	50 V	$\pm 10\%$		C3K21N1HR103K
C126	Chip	0.001 μ F	50 V	$\pm 10\%$		C3K21N1HR102K
C127	Chip	2 pF	50 V	± 0.25 pF		C2C21N1HSL020C
C128	Chip	5 pF	50 V	± 0.25 pF		C2C21N1HSL050C
C129	Ceramic	100 pF	50 V	$\pm 10\%$		HE50SJSL101K
C130	Chip	100 pF	50 V	$\pm 10\%$		C2C21N1HSL101K
C131	Mylar	0.047 μ F	50 V	$\pm 10\%$		NNM-473K
C132	Chip	33 pF	50 V	$\pm 10\%$		C2C21N1HSL330K
C133	Chip	0.001 μ F	50 V	$\pm 10\%$		C3K21N1HR102K
C134	Chip	0.001 μ F	50 V	$\pm 10\%$		C3K21N1HR102K
C135	Chip	10 pF	50 V	± 0.5 pF		C2C21N1HSL100D
C136	Not Used					
C137	Ceramic	100 pF	50 V	$\pm 10\%$		HE50SJSL101K
C138	Chip	1 pF	50 V	± 0.25 pF		C2C21N1HSL010C
C139	Chip	0.001 μ F	50 V	$\pm 10\%$		C3K21N1HR102K
C140	Chip	0.001 μ F	50 V	$\pm 10\%$		C3K21N1HR102K
C141	Chip	0.001 μ F	50 V	$\pm 10\%$		C3K21N1HR102K
C142	Chip	3 pF	50 V	± 0.25 pF		C2C21N1HSL030C
C143	Chip	1.5 pF	50 V	± 0.25 pF		C2C21N1HSL1R5C
C144	Chip	0.5 pF	50 V	± 0.25 pF		C2C21N1HSL0R5C
C145	Chip	2 pF	50 V	± 0.25 pF		C2C21N1HSL020C
C146	Chip	33 pF	50 V	$\pm 10\%$		C2C21N1HSL330K
C147	Chip	33 pF	50 V	$\pm 10\%$		C2C21N1HSL330K
C148	Chip	33 pF	50 V	$\pm 10\%$		C2C21N1HSL330K
C149	Chip	33 pF	50 V	$\pm 10\%$		C2C21N1HSL330K

Ref. No.	Description				RS Part No.	MFR's Part No.
C150	Chip	1.5 pF	50 V	±0.25 pF		C2C21N1HSL1R5C
C151	Chip	4 pF	50 V	±0.25 pF		C2C21N1HSL040C
C152	Chip	33 pF	50 V	±10%		C2C21N1HSL330K
C153	Chip	33 pF	50 V	±10%		C2C21N1HSL330K
*C154	Chip	1 pF	50 V	±0.25 pF		C2C21N1HSL010C
C155	Chip	0.001 μ F	50 V	±10%		C3K21N1HR102K
C156	Chip	0.001 μ F	50 V	±10%		C3K21N1HR102K
C157	Chip	0.01 μ F	50 V	±10%		C3K21N1HR103K
C158	Chip	39 pF	50 V	±10%		C2C21N1HSL390K
C159	Chip	68 pF	50 V	±10%		C2C21N1HSL680K
C160	Chip	22 pF	50 V	±10%		C2C21N1HSL220K
C161	Chip	0.001 μ F	50 V	±10%		C3K21N1HR102K
C162	Not Used					
C163	Tantalum	0.47 μ F	35 V	±20%		TSD-S-1VR47M
C164	Tantalum	0.47 μ F	35 V	±20%		TSD-S-1VR47M
C165	Chip	8 pF	50 V	±0.5 pF		C2C21N1HSL080D
C166	Electrolytic	220 μ F	6.3 V	±20%		SMT6.3V221M
C167	Tantalum	0.22 μ F	35 V	±20%		TSD-S-1VR22M
C168	Mylar	0.01 μ F	50 V	±10%		NNM-103K
C169	Chip	8 pF	50 V	±0.5 pF		C2C21N1HSL080D
C170	Chip	0.001 μ F	50 V	±10%		C3K21N1HR102K
C171	Chip	470 pF	50 V	±10%		C2C21N1HSL471K
C172	Chip	0.001 μ F	50 V	±10%		C3K21N1HR102K
C173	Mylar	0.01 μ F	50 V	±10%		NNM-103K
C174	Mylar	0.047 μ F	50 V	±10%		NNM-473K
C175	Tantalum	0.1 μ F	35 V	±20%		TSD-S-1V0R1M
C176	Chip	470 pF	50 V	±10%		C2C21N1HSL471K
C177	Electrolytic	1 μ F	50 V	±20%		SMB50V010M
C178	Electrolytic	47 μ F	6.3 V	±20%		SMB6.3V470M
C179	Electrolytic	10 μ F	16 V	±20%		SMB16V100M
C180	Chip	0.01 μ F	50 V	±10%		C3K21N1HR103K
C181	Electrolytic	1 μ F	50 V	±20%		SMB50V010M
C182	Electrolytic	10 μ F	16 V	±20%		SMB16V100M
C183	Mylar	0.056 μ F	50 V	±10%		NNM-563K
C184	Tantalum	0.1 μ F	35 V	±20%		TSD-S-1V0R1M
C185	Tantalum	0.1 μ F	35 V	±20%		TSD-S-1V0R1M
C186	Electrolytic	1 μ F	50 V	±20%		SMB50V010M
C187	Chip	100 pF	50 V	±10%		C2C21N1HSL101K
C188	Chip	0.001 μ F	50 V	±10%		C3K21N1HR102K
C189	Chip	470 pF	50 V	±10%		C2C21N1HSL471K
C190	Chip	5 pF	50 V	±0.25 pF		C2C21N1HSL050C
C191	Chip	47 pF	50 V	±10%		C2C21N1HSL470K
C192	Chip	33 pF	50 V	±10%		C2C21N1HSL330K
C193	Chip	33 pF	50 V	±10%		C2C21N1HSL330K
C194	Chip	0.001 μ F	50 V	±10%		C3K21N1HR102K
C195	Chip	0.001 μ F	50 V	±10%		C3K21N1HR102K
C196	Electrolytic	10 μ F	16 V	±20%		SMB16V100M
C197	Chip	5 pF	50 V	±0.25 pF		C2C21N1HSL050C
C198	Chip	0.001 μ F	50 V	±10%		C3K21N1HR102K
C199	Chip	10 pF	50 V	±0.5 pF		C2C21N1HSL100D
C200	Chip	5 pF	50 V	±0.25 pF		C2C21N1HSL050C
C201	Chip	15 pF	50 V	±10%		C2C21N1HSL150K
C202	Chip	47 pF	50 V	±10%		C2C21N1HSL470K
C203	Chip	470 pF	50 V	±10%		C2C21N1HSL471K
C204	Chip	0.001 μ F	50 V	±10%		C3K21N1HR102K
C205	Electrolytic	10 μ F	16 V	±20%		SMB16V100M
C206	Chip	0.001 μ F	50 V	±10%		C3K21N1HR102K

Ref. No.	Description					RS Part No.	MFR's Part No.
C207	Chip	0.001 μ F	50 V	$\pm$ 10%		C3K21N1HR102K	
*C208	Chip	3 pF	50 V	$\pm$ 0.25 pF		C2C21N1HSL030C	
*C209	Chip	5 pF	50 V	$\pm$ 0.25 pF		C2C21N1HSL050C	
C210	Chip	5 pF	50 V	$\pm$ 0.25 pF		C2C21N1HSL050C	
C211	Chip	100 pF	50 V	$\pm$ 10%		C2C21N1HSL101K	
C212	Chip	12 pF	50 V	$\pm$ 10%		C2C21N1HSL120K	
C213	Chip	6 pF	50 V	$\pm$ 0.5 pF		C2C21N1HSL060D	
C214	Chip	22 pF	50 V	$\pm$ 10%		C2C21N1HSL220K	
C215	Chip	100 pF	50 V	$\pm$ 10%		C2C21N1HSL101K	
C216	Electrolytic	10 μ F	16 V	$\pm$ 20%		SMB16V100M	
C217	Chip	33 pF	50 V	$\pm$ 10%		C2C21N1HSL330K	
FILTER CERAMIC							
CF101	Ceramic						KBF-455P-15A
DIODES							
D101	Varactor	BB609A				BB609A	
D102	Silicon	1SS168U2				1SS168U2	
D103	Varactor	BB609A				BB609A	
D104	Silicon	1SS168U2				1SS168U2	
D105	Silicon	1SS168U2				1SS168U2	
D106	Varactor	1SV136AU2				1SV136AU2	
D107	Silicon	1SS168U2				1SS168U2	
D108	Silicon	1SS168U2				1SS168U2	
D109	Silicon	1SS168U2				1SS168U2	
D110	Varactor	1SV136AU2				1SV136AU2	
D111	Silicon	1S2076A				1S2076A	
D112	Varactor	1SV146U2				1SV146U2	
D113	Varactor	1SV146U2				1SV146U2	
D114	Varactor	1S2090				1S2090	
D115	Silicon, Chip	HSM2692				HSM2692	
D116	Germanium	OA90R or 1K261				OA90R or 1K261	
D117	Germanium	OA90R or 1K261				OA90R or 1K261	
D118	Germanium	OA90R or 1K261				OA90R or 1K261	
D119	Varactor	BB609A				BB609A	
D120	Varactor	BB609A				BB609A	
D121	Silicon	1S2076A				1S2076A	
D122	Silicon	1S2076A				1S2076A	
D123	Silicon	1S2076A				1S2076A	
D124	Varactor	1SV146U2				1SV146U2	
D125	Varactor	1SV146U2				1SV146U2	
D126	Varactor	1SV146U2				1SV146U2	
D127	Varactor	1SV146U2				1SV146U2	
DA101	Silicon, Chip	HSM2693				HSM2693	
DA102	Silicon, Chip	DAN202K				DAN202K	
IC							
IC101	TK10420	Linear, Quad.				TK10420	

Ref. No.	Description	RS Part No.	MFR's Part No.
COILS & INDUCTORS			
L101 L102 L103 L104 L105 L106 L107 L108 L109 L110 L111 L112 L113 L114	RFC RFC Coil RF (UHF Lo) RFC Coil RF (UHF Lo) Coil RF (UHF Hi) Coil RF (UHF Hi) RFC Coil RF (UHF Hi) Coil choke 10 μ H Coil choke 0.22 μ H Coil RF (UHF Lo) Stripline on PCB Coil VCO (UHF Hi)		4LNC-092 4LNC-122 8LNR-093 4LNC-122 8LNR-093 GE-87D-7120 GE-87D-7120 2LNB-253 GE-87D-7120 LAL03NA100K LAL03NAR22M 8LNR-093 2LNB-252
TRANSISTORS			
Q101 Q102 Q103 Q104 Q105 Q106 Q107 Q108 Q109 Q110 Q111 Q112 Q113 Q114 Q115 Q116 Q117 Q118	FET, Chip 3SK126(O) MOS Chip 2SC2712(Y) NPN FET, Chip 3SK136(IV) MOS Chip 2SC3356 NPN Chip 2SC2732 NPN Chip 2SC3356 NPN Chip 2SC3356 NPN Chip 2SC3356 NPN Chip 2SC3356 NPN Chip 2SC2714(O) NPN FET, Chip 2SK208(O) MOS Chip 2SC2712(O) NPN Chip 2SC2712(O) NPN Chip 2SC2714(O) NPN Chip 2SC2714(O) NPN Chip 2SC3356 NPN Chip 2SC2714(O) NPN Chip 2SC3356 NPN Chip 2SC2734 NPN		3SK126(O) 2SC2712(Y) 3SK136(IV) 2SC3356 2SC2732 2SC3356 2SC3356 2SC3356 2SC3356 2SC2714(O) 2SK208(O) 2SC2712(O) 2SC2712(O) 2SC2714(O) 2SC2714(O) 2SC3356 2SC2714(O) 2SC3356 2SC2734
RESISTORS			
R101 R102 R103 R104 R105 R106 R107 R108 R109 R110 R111 R112 R113 R114 R115	Chip 100 ohm 1/10 W $\pm$ 5% Chip 100 kohm 1/10 W $\pm$ 5% Chip 100 ohm 1/10 W $\pm$ 5% Chip 100 kohm 1/10 W $\pm$ 5% Chip 100 ohm 1/10 W $\pm$ 5% Chip 100 ohm 1/10 W $\pm$ 5% Chip 47 kohm 1/10 W $\pm$ 5% Chip 4.7 kohm 1/10 W $\pm$ 5% Chip 47 kohm 1/10 W $\pm$ 5% Chip 10 kohm 1/10 W $\pm$ 5% Chip 470 kohm 1/10 W $\pm$ 5% Chip 47 kohm 1/10 W $\pm$ 5% Chip 47 kohm 1/10 W $\pm$ 5% Chip 100 kohm 1/10 W $\pm$ 5% Chip 220 ohm 1/10 W $\pm$ 5%		RCM101J55 RCM104J55 RCM101J55 RCM104J55 RCM101J55 RCM101J55 RCM473J55 RCM472J55 RCM473J55 RCM103J55 RCM474J55 RCM473J55 RCM473J55 RCM104J55 RCM221J55

Ref. No.	Description			RS Part No.	MFR's Part No.
R116	Chip	10 ohm	1/10 W $\pm 5\%$		RCM100J55
R117	Chip	10 ohm	1/10 W $\pm 5\%$		RCM100J55
R118	Chip	100 kohm	1/10 W $\pm 5\%$		RCM104J55
R119	Chip	10 ohm	1/10 W $\pm 5\%$		RCM100J55
R120	Chip	100 ohm	1/10 W $\pm 5\%$		RCM101J55
R121	Chip	100 ohm	1/10 W $\pm 5\%$		RCM101J55
R122	Chip	47 kohm	1/10 W $\pm 5\%$		RCM473J55
R123	Chip	100 kohm	1/10 W $\pm 5\%$		RCM104J55
R124	Chip	47 kohm	1/10 W $\pm 5\%$		RCM473J55
R125	Chip	470 kohm	1/10 W $\pm 5\%$		RCM474J55
R126	Chip	2.2 kohm	1/10 W $\pm 5\%$		RCM222J55
R127	Chip	100 ohm	1/10 W $\pm 5\%$		RCM101J55
R128	Chip	47 kohm	1/10 W $\pm 5\%$		RCM473J55
R129	Chip	470 ohm	1/10 W $\pm 5\%$		RCM471J55
R130	Chip	10 ohm	1/10 W $\pm 5\%$		RCM100J55
R131	Chip	4.7 kohm	1/10 W $\pm 5\%$		RCM472J55
R132	Chip	10 kohm	1/10 W $\pm 5\%$		RCM103J55
R133	Chip	100 ohm	1/10 W $\pm 5\%$		RCM101J55
R134	Chip	47 kohm	1/10 W $\pm 5\%$		RCM473J55
R135	Chip	1 Mohm	1/10 W $\pm 5\%$		RCM105J55
R136	Not Used				
R137	Chip	2.2 kohm	1/10 W $\pm 5\%$		RCM222J55
R138	Chip	100 kohm	1/10 W $\pm 5\%$		RCM104J55
R139	Chip	1 kohm	1/10 W $\pm 5\%$		RCM102J55
R140	Chip	100 ohm	1/10 W $\pm 5\%$		RCM101J55
R141	Chip	47 kohm	1/10 W $\pm 5\%$		RCM473J55
R142	Chip	3.3 kohm	1/10 W $\pm 5\%$		RCM332J55
R143	Chip	1 kohm	1/10 W $\pm 5\%$		RCM102J55
R144	Chip	10 kohm	1/10 W $\pm 5\%$		RCM103J55
R145	Chip	10 kohm	1/10 W $\pm 5\%$		RCM103J55
R146	Chip	4.7 kohm	1/10 W $\pm 5\%$		RCM472J55
R147	Chip	100 ohm	1/10 W $\pm 5\%$		RCM101J55
R148	Chip	47 ohm	1/10 W $\pm 5\%$		RCM470J55
R149	Chip	1 Mohm	1/10 W $\pm 5\%$		RCM105J55
* R150	Chip	100 ohm	1/10 W $\pm 5\%$		RCM101J55
R151	Chip	220 kohm	1/10 W $\pm 5\%$		RCM224J55
R152	Chip	3.9 kohm	1/10 W $\pm 5\%$		RCM392J55
R153	Chip	1 kohm	1/10 W $\pm 5\%$		RCM102J55
R154	Chip	2.2 kohm	1/10 W $\pm 5\%$		RCM222J55
R155	Chip	2.2 kohm	1/10 W $\pm 5\%$		RCM222J55
R156	Chip	47 ohm	1/10 W $\pm 5\%$		RCM470J55
R157	Chip	1 kohm	1/10 W $\pm 5\%$		RCM102J55
R158	Chip	1.8 kohm	1/10 W $\pm 5\%$		RCM182J55
R159	Chip	1.8 kohm	1/10 W $\pm 5\%$		RCM182J55
R160	Chip	47 kohm	1/10 W $\pm 5\%$		RCM473J55
R161	Chip	22 kohm	1/10 W $\pm 5\%$		RCM223J55
R162	Chip	27 kohm	1/10 W $\pm 5\%$		RCM273J55
R163	Chip	100 kohm	1/10 W $\pm 5\%$		RCM104J55
R164	Chip	2.2 kohm	1/10 W $\pm 5\%$		RCM222J55
R165	Chip	4.7 kohm	1/10 W $\pm 5\%$		RCM472J55
R166	Chip	1 Mohm	1/10 W $\pm 5\%$		RCM105J55
R167	Chip	2.2 kohm	1/10 W $\pm 5\%$		RCM222J55
R168	Chip	10 kohm	1/10 W $\pm 5\%$		RCM103J55
R169	Chip	10 kohm	1/10 W $\pm 5\%$		RCM103J55
R170	Chip	47 kohm	1/10 W $\pm 5\%$		RCM473J55
R171	Chip	100 kohm	1/10 W $\pm 5\%$		RCM104J55
R172	Chip	3.3 kohm	1/10 W $\pm 5\%$		RCM332J55

Ref. No.	Description	RS Part No.	MFR's Part No.
R173	Chip 270 kohm 1/10 W $\pm 5\%$		RCM274J55
R174	Chip 5.6 kohm 1/10 W $\pm 5\%$		RCM562J55
R175	Chip 470 ohm 1/10 W $\pm 5\%$		RCM471J55
R176	Chip 100 ohm 1/10 W $\pm 5\%$		RCM101J55
R177	Chip 270 kohm 1/10 W $\pm 5\%$		RCM274J55
R178	Chip 5.6 kohm 1/10 W $\pm 5\%$		RCM562J55
R179	Chip 47 ohm 1/10 W $\pm 5\%$		RCM470J55
R180	Chip 10 kohm 1/10 W $\pm 5\%$		RCM103J55
R181	Chip 4.7 kohm 1/10 W $\pm 5\%$		RCM472J55
R182	Chip 10 kohm 1/10 W $\pm 5\%$		RCM103J55
R183	Chip 10 kohm 1/10 W $\pm 5\%$		RCM103J55
R184	Chip 100 kohm 1/10 W $\pm 5\%$		RCM104J55
R185	Chip 10 kohm 1/10 W $\pm 5\%$		RCM103J55
R186	Chip 100 ohm 1/10 W $\pm 5\%$		RCM101J55
R187	Chip 47 ohm 1/10 W $\pm 5\%$		RCM470J55
R188	Chip 100 kohm 1/10 W $\pm 5\%$		RCM104J55
*R189	Chip 470 ohm 1/10 W $\pm 5\%$		RCM471J55
*R190	Chip 1 kohm 1/10 W $\pm 5\%$		RCM102J55
R191	Chip 100 ohm 1/10 W $\pm 5\%$		RCM101J55
R192	Chip 15 kohm 1/10 W $\pm 5\%$		RCM153J55
R193	Chip 22 kohm 1/10 W $\pm 5\%$		RCM223J55
R194	Chip 47 kohm 1/10 W $\pm 5\%$		RCM473J55
R195	Chip 1 kohm 1/10 W $\pm 5\%$		RCM102J55
R196	Chip 470 kohm 1/10 W $\pm 5\%$		RCM474J55
R197	Chip 47 kohm 1/10 W $\pm 5\%$		RCM473J55
R198	Chip 1 kohm 1/10 W $\pm 5\%$		RCM102J55
R199	Chip 220 ohm 1/10 W $\pm 5\%$		RCM221J55
R200	Chip 100 ohm 1/10 W $\pm 5\%$		RCM101J55
*R201	ChiP 1 kohm 1/10 W $\pm 5\%$		RCM102J55
R202	Chip 15 kohm 1/10 W $\pm 5\%$		RCM153J55
R203	Chip 22 kohm 1/10 W $\pm 5\%$		RCM223J55
R204	Chip 47 kohm 1/10 W $\pm 5\%$		RCM473J55
R205	Chip 47 kohm 1/10 W $\pm 5\%$		RCM473J55
R206	ChiP 470 ohm 1/10 W $\pm 5\%$		RCM471J55
R207	Chip 1 kohm 1/10 W $\pm 5\%$		RCM102J55
R208	Chip 100 kohm 1/10 W $\pm 5\%$		RCM104J55
R209	Chip 100 ohm 1/10 W $\pm 5\%$		RCM101J55
R210	Chip 100 ohm 1/10 W $\pm 5\%$		RCM101J55
R211	Chip 15 kohm 1/10 W $\pm 5\%$		RCM153J55
*R212	Chip 470 ohm 1/10 W $\pm 5\%$		RCM471J55
R213	ChiP 22 kohm 1/10 W $\pm 5\%$		RCM223J55
R214	Chip 10 kohm 1/10 W $\pm 5\%$		RCM103J55
TRANSFORMERS			
T101	Coil, RF (VHF Lo)		7SSR-278
T102	Coil, RF (VHF Lo)		7SSR-278
T103	Coil, RF (Air)		7SSR-294
T104	Coil, RF (VHF Hi)		7SSR-290
T105	Coil, RF (Air)		7SSR-289
T106	Coil, RF (VHF Hi)		7SSR-290
T107	Coil, IF (10.7 MHz)		5SSI-291
T108	Coil, DET. (455 kHz)		GR-E823
T109	Coil, IF (455 kHz)		5SSI-292

Ref. No.	Description	RS Part No.	MFR's Part No.
T110 T111 T112	Coil, DET. (455 kHz) Coil, VCO (VHF Lo) Coil, VCO(Air, VHF Hi, UHF Lo)		5SSI-293 7SSO-281 7SSO-282
TRIMMERS			
TC101 TC102 TC103 TC104 TC105 TC106	Cap. trimmer 10 pF Cap. trimmer 20 pF Cap. trimmer 10 pF Cap. trimmer 20 pF Cap. trimmer 10 pF Cap. trimmer 6 pF		ECR-LA010A12 ECR-LA020E12 ECR-LA010A12 ECR-LA020E12 ECR-LA010A12 ECR-LA006A12
CRYSTAL			
X101	H5717 (10.245 MHz)		H5717
FILTER CRYSTAL			
XF101	H5718 (10.7 MHz)		H5718
MISCELLANEOUS			
CN101 CN102 CN103 ②② ②③ ②④ ②⑤	Connector, Pin (3 Pin Male) Connector, Pin (3 Pin Male) Connector, Pin (16 Pin Male) Plate, VCO Shield Plate, VCO Shield (800 MHz) Fiber, VCO Shield Fiber, VCO Shield (800 MHz)		PI22A03M IL-Y-3P-S15T2-EF SD-5040-16D GE-87D-7237 GE-87D-7238 GE-87D-7255 GE-87D-7259
Parts below are only for CANADA version. (* denotes changes)			
* C101 * C154 * C208 * C209 L801 * R150 * R189 * R190 * R201 * R212 R801 R802 R803 ③⑤	Chip 100 pF 50 V ±10% Chip 3 pF 50 V ±0.25 pF Chip 1 pF 50 V ±0.25 pF Chip 2 pF 50 V ±0.25 pF Coil, Choke 0.22 μH Chip 47 ohm 1/10 W ±5% Chip 1 kohm 1/10 W ±5% Chip 1.5 kohm 1/10 W ±5% Chip 1.5 kohm 1/10 W ±5% Chip 1 kohm 1/10 W ±5% Chip 4.7 kohm 1/10 W ±5% Chip 4.7 kohm 1/10 W ±5% Chip 4.7 kohm 1/10 W ±5% UHF Hi Shield Plate		C2C21N1HSL101K C2C21N1HSL030C C2C21N1HSL010C C2C21N1HSL020C LAL03NAR22M RCM470J55 RCM102J55 RCM152J55 RCM152J55 RCM102J55 RCM472J55 RCM472J55 RCM472J55 GE-88D-7665

LOGIC PCB ASSEMBLY

PCB Assembly, Logic Consists of the following:					RS Part No.	MFR's Part No. GA-87B-6954
CAPACITORS						
Ref. No.	Description				RS Part No.	MFR's Part No.
C1	Multilayer	0.1 μ F	50 V	+80%—20%		RPE131F104Z50
C2	Electrolytic	4.7 μ F	35 V	$\pm$ 20%		SMB35V4R7M
C3	Chip	0.1 μ F	25 V	+80%—20%		C3K21N1EF104Z
C4	Electrolytic	0.047F	5.5 V	+80%—20%		AC206201G473 Z5R5
C5	Chip	0.1 μ F	25 V	+80%—20%		C3K21N1EF104Z
C6	Electrolytic	220 μ F	6.3 V	$\pm$ 20%		SMT6.3V221M
C7	Electrolytic	10 μ F	16 V	$\pm$ 20%		SMB16V100M
C8	Tantalum	0.1 μ F	35 V	$\pm$ 20%		TSD-S-1V0R1M
C9	Tantalum	0.1 μ F	35 V	$\pm$ 20%		TSD-S-1V0R1M
C10	Electrolytic	220 μ F	10 V	$\pm$ 20%		SM10V221M
C11	Electrolytic	4.7 μ F	35 V	$\pm$ 20%		SMB35V4R7M
C12	Electrolytic	0.47 μ F	50 V	$\pm$ 20%		SMB50VR47M
C13	Electrolytic	10 μ F	16 V	$\pm$ 20%		SMB16V100M
C14	Chip	0.001 μ F	50 V	$\pm$ 10%		C3K21N1HR102K
C15	Electrolytic	47 μ F	10 V	$\pm$ 20%		SMB10V470M
C16	Tantalum	0.1 μ F	35 V	$\pm$ 20%		TSD-S-1V0R1M
C17	Chip	0.001 μ F	50 V	$\pm$ 10%		C3K21N1HR102K
C18	Chip	0.001 μ F	50 V	$\pm$ 10%		C3K21N1HR102K
C19	Chip	0.001 μ F	50 V	$\pm$ 10%		C3K21N1HR102K
C20	Chip	0.001 μ F	50 V	$\pm$ 10%		C3K21N1HR102K
C21	Chip	0.001 μ F	50 V	$\pm$ 10%		C3K21N1HR102K
C22	Electrolytic	220 μ F	6.3 V	$\pm$ 20%		SMT6.3V221M
C23	Chip	0.001 μ F	50 V	$\pm$ 10%		C3K21N1HR102K
C24	Chip	470pF	50 V	$\pm$ 10%		C2C21N1HSL471K
C25	Chip	10pF	50 V	$\pm$ 0.5pF		C2C21N1HSL100D
C26	Chip	0.1 μ F	25 V	+80%—20%		C3K21N1EF104Z
C27	Chip	0.001 μ F	50 V	$\pm$ 10%		C3K21N1HR102K
C28	Chip	47 pF	50 V	$\pm$ 10%		C2C21N1HSL470K
C29	Chip	220 pF	50 V	$\pm$ 10%		C2C21N1HSL221K
C30	Chip	0.001 μ F	50 V	$\pm$ 10%		C3K21N1HR102K
C31	Chip	47 pF	50 V	$\pm$ 10%		C2C21N1HSL470K
C32	Chip	56 pF	50 V	$\pm$ 10%		C2C21N1HSL560K
C33	Chip	0.1 μ F	25 V	+80%—20%		C3K21N1EF104Z
C34	Chip	0.001 μ F	50 V	$\pm$ 10%		C3K21N1HR102K
C35	Chip	470 pF	50 V	$\pm$ 10%		C2C21N1HSL471K
C36	Chip	220 pF	50 V	$\pm$ 10%		C2C21N1HSL221K
C37	Chip	0.01 μ F	50 V	$\pm$ 20%		C3K21N1HR103M
C38	Chip	220 pF	50 V	$\pm$ 10%		C2C21N1HSL221K
C39	Chip	22 pF	50 V	$\pm$ 10%		C2C21N1HSL220K
C40	Chip	0.0047 μ F	50 V	$\pm$ 10%		C3K21N1HR472K
C41	Chip	56 pF	50 V	$\pm$ 10%		C2C21N1HSL560K
C42	Tantalum	1 μ F	35 V	$\pm$ 20%		TSD-S-1V010M
C43	Tantalum	0.33 μ F	35 V	$\pm$ 20%		TSD-S-1VR33M
C44	Chip	10 pF	50 V	$\pm$ 0.5 pF		C2C21N1HSL100D
C45	Chip	0.1 μ F	25 V	+80%—20%		C3K21N1EF104Z
C46	Multilayer	0.1 μ F	50 V	+80%—20%		RPE131F104Z50
C47	Chip	0.001 μ F	50 V	$\pm$ 10%		C3K21N1HR102K
C48	Electrolytic	220 μ F	10 V	$\pm$ 20%		SM10V221M
C49	Electrolytic	220 μ F	10 V	$\pm$ 20%		SM10V221M
C50	Electrolytic	4.7 μ F	35 V	$\pm$ 20%		SMB35V4R7M
C51	Electrolytic	10 μ F	16 V	$\pm$ 20%		SMB16V100M

Ref. No.	Description					RS Part No.	MFR's Part No.
C52	Electrolytic	2.2 μ F	50 V	$\pm 20\%$		SMB50V2R2M	
C53	Electrolytic	1 μ F	50 V	$\pm 20\%$		SMB50V010M	
C54	Multilayer	0.1 μ F	50 V	+80%—20%		RPE131F104Z50	
C55	Electrolytic	100 μ F	10 V	$\pm 20\%$		SMB10V101M	
C56	Multilayer	0.1 μ F	50 V	+80%—20%		RPE131F104Z50	
RESONATOR CERAMIC							
CX1	Ceramic Resonator (2 MHz)						EFO-FC2004A4
DIODES							
D1		1S2076A		Silicon		1S2076A	
D2		1S2076A		Silicon		1S2076A	
D3		SD-103		Silicon		SD-103	
D4		1S2076A		Silicon		1S2076A	
D5		HZ6A1L		Zener		HZ6A1L	
D6		HZ16-3L		Zener		HZ16-3L	
D7		1S2076A		Silicon		1S2076A	
D8		1S2076A		Silicon		1S2076A	
D9	Not Used						
D10		1S2076A		Silicon		1S2076A	
D11		1S2076A		Silicon		1S2076A	
D12	Not Used						
D13		HZ12B2L		Zener		HZ12B2L	
D14		1S2076A		Silicon		1S2076A	
DA1	Chip	DAN202K		Silicon		DAN202K	
DA2	Chip	DAP202K		Silicon		DAP202K	
DA3	Chip	IMN10		Silicon		IMN10	
DA4	Chip	IMN10		Silicon		IMN10	
DA5	Chip	IMN10		Silicon		IMN10	
IC's							
IC1	CPU		C-MOS			GRE-0620A	
IC2	RAM 16K		C-MOS			TC5517CF-20	
IC3	Regulator		C-MOS			S-81250HG	
IC4	DET./Low Batt.		C-MOS			MN1280S	
IC5	DET. Voltage Regulator		BIPOLAR			S-8054HN	
IC6	Zeromatic Cont.		BIPOLAR			μ PC358G	
IC7	Pre-Scaler		BIPOLAR			MB501LVP-G	
IC8	PLL		C-MOS			MB87006APF-G-BND	
IC9	Audio Amp.		BIPOLAR			LM386N-1	
INDUCTORS							
L1	Coil, choke 1 mH					FL5H102K	
L2	Coil, choke 100 μ H					LAL03NA101K	
L3	Coil, choke 100 μ H					LAL03NA101K	
L4	Coil, choke 100 μ H					LAL03NA101K	
L5	Coil, choke 100 μ H					LAL03NA101K	
L6	Coil, choke 100 μ H					LAL03NA101K	

Ref. No.	Description			RS Part No.	MFR's Part No.
L7 L8	Coil, choke 10 μ H Coil, choke 100 μ H				LAL03NA100K LAL03NA101K
LCD					
LCD1 ②⑥	LCD				EDD063ZA8A4H
LAMP					
PL1	Lamp (6 V-35 mA)				TI-6V35MA-WT
TRANSISTORS					
Q1	Chip	2SC2712(Y)	NPN		2SC2712(Y)
Q2	Chip	2SC2712(Y)	NPN		2SC2712(Y)
Q3	Chip	2SC2712(Y)	NPN		2SC2712(Y)
Q4		2SC2458(GR)	NPN		2SC2458(GR)
Q5		2SA1150(Y)	PNP		2SA1150(Y)
Q6		2SA1150(Y)	PNP		2SA1150(Y)
Q7	Chip	2SC2712(GR)	NPN		2SC2712(GR)
Q8	Chip	2SC2712(GR)	NPN		2SC2712(GR)
Q9	Chip	2SC2712(GR)	NPN		2SC2712(GR)
Q10	Chip	RN2402 or UN2111	PNP		RN2402 or UN2111
Q11		RN2202 or UN4111	PNP		RN2202 or UN4111
Q12		RN2202 or UN4111	PNP		RN2202 or UN4111
Q13		RN2202 or UN4111	PNP		RN2202 or UN4111
Q14		RN2202 or UN4111	PNP		RN2202 or UN4111
Q15		2SC2458(GR)	NPN		2SC2458(GR)
Q16		2SC2458(GR)	NPN		2SC2458(GR)
Q17		2SA1150(Y)	PNP		2SA1150(Y)
Q18	F.E.T.	2SK118(O)or(R)	MOS		2SK118(O)or(R)
Q19	Chip	2SC2712(Y)	NPN		2SC2712(Y)
Q20	Chip	2SC2712(Y)	NPN		2SC2712(Y)
Q21	Chip	RN2402 or UN2111	PNP		RN2402 or UN2111
RESISTORS					
R1	ChiP	10 kohm	1/10 W $\pm$ 5%		RCM103J55
R2	Chip	10 kohm	1/10 W $\pm$ 5%		RCM103J55
R3	Chip	10 kohm	1/10 W $\pm$ 5%		RCM103J55
R4	Chip	4.7 kohm	1/10 W $\pm$ 5%		RCM472J55
R5	Chip	10 kohm	1/10 W $\pm$ 5%		RCM103J55
R6	Chip	10 kohm	1/10 W $\pm$ 5%		RCM103J55
R7	Chip	47 kohm	1/10 W $\pm$ 5%		RCM473J55
R8	ChiP	47 kohm	1/10 W $\pm$ 5%		RCM473J55
R9	Chip	47 kohm	1/10 W $\pm$ 5%		RCM473J55
R10	Chip	47 kohm	1/10 W $\pm$ 5%		RCM473J55
R11	Chip	47 kohm	1/10 W $\pm$ 5%		RCM473J55

Ref. No.	Description			RS Part No.	MFR's Part No.
R12	Chip	47 kohm	1/10 W $\pm 5\%$		RCM473J55
R13	Chip	100 kohm	1/10 W $\pm 5\%$		RCM104J55
R14	Chip	47 kohm	1/10 W $\pm 5\%$		RCM473J55
R15	Chip	47 kohm	1/10 W $\pm 5\%$		RCM473J55
R16	Chip	47 kohm	1/10 W $\pm 5\%$		RCM473J55
R17	Chip	47 kohm	1/10 W $\pm 5\%$		RCM473J55
R18	Chip	47 kohm	1/10 W $\pm 5\%$		RCM473J55
R19	Chip	100 kohm	1/10 W $\pm 5\%$		RCM104J55
R20	Chip	470 ohm	1/10 W $\pm 5\%$		RCM471J55
R21	Chip	1 kohm	1/10 W $\pm 5\%$		RCM102J55
R22	Chip	22 kohm	1/10 W $\pm 5\%$		RCM223J55
R23	Chip	47 kohm	1/10 W $\pm 5\%$		RCM473J55
R24	Chip	2.2 kohm	1/10 W $\pm 5\%$		RCM222J55
R25	Chip	10 ohm	1/10 W $\pm 5\%$		RCM100J55
R26	Chip	47 kohm	1/10 W $\pm 5\%$		RCM473J55
R27	Chip	10 kohm	1/10 W $\pm 5\%$		RCM103J55
R28	Chip	47 kohm	1/10 W $\pm 5\%$		RCM473J55
R29	Chip	47 ohm	1/10 W $\pm 5\%$		RCM470J55
R30	Chip	15 kohm	1/10 W $\pm 5\%$		RCM153J55
R31	Chip	100 kohm	1/10 W $\pm 5\%$		RCM104J55
R32	Chip	10 ohm	1/10 W $\pm 5\%$		RCM100J55
R33	Chip	47 kohm	1/10 W $\pm 5\%$		RCM473J55
R34	Chip	150 kohm	1/10 W $\pm 5\%$		RCM154J55
R35	Chip	10 kohm	1/10 W $\pm 5\%$		RCM103J55
R36	Chip	100 ohm	1/10 W $\pm 5\%$		RCM101J55
R37	Chip	22 kohm	1/10 W $\pm 5\%$		RCM223J55
R38	Chip	33 kohm	1/10 W $\pm 5\%$		RCM333J55
R39	Chip	220 ohm	1/10 W $\pm 5\%$		RCM221J55
R40	Chip	100 kohm	1/10 W $\pm 5\%$		RCM104J55
R41	Chip	10 kohm	1/10 W $\pm 5\%$		RCM103J55
R42	Chip	10 kohm	1/10 W $\pm 5\%$		RCM103J55
R43	Chip	47 kohm	1/10 W $\pm 5\%$		RCM473J55
R44	Chip	3.3 kohm	1/10 W $\pm 5\%$		RCM332J55
R45	Chip	2.7 kohm	1/10 W $\pm 5\%$		RCM272J55
R46	Chip	1.5 kohm	1/10 W $\pm 5\%$		RCM152J55
R47	Chip	2.2 kohm	1/10 W $\pm 5\%$		RCM222J55
R48	Chip	10 kohm	1/10 W $\pm 5\%$		RCM103J55
R49	Chip	10 ohm	1/10 W $\pm 5\%$		RCM100J55
R50	Chip	220 ohm	1/10 W $\pm 5\%$		RCM221J55
R51	Chip	2.2 kohm	1/10 W $\pm 5\%$		RCM222J55
R52	Chip	8.2 kohm	1/10 W $\pm 5\%$		RCM822J55
R53	Chip	4.7 kohm	1/10 W $\pm 5\%$		RCM472J55
R54	Chip	10 kohm	1/10 W $\pm 5\%$		RCM103J55
R55	Chip	4.7 kohm	1/10 W $\pm 5\%$		RCM472J55
R56	Chip	1 kohm	1/10 W $\pm 5\%$		RCM102J55
R57	Chip	4.7 kohm	1/10 W $\pm 5\%$		RCM472J55
R58	Chip	4.7 kohm	1/10 W $\pm 5\%$		RCM472J55
R59	Chip	470 kohm	1/10 W $\pm 5\%$		RCM474J55
R60	Chip	4.7 kohm	1/10 W $\pm 5\%$		RCM472J55
R61	Chip	560 ohm	1/10 W $\pm 5\%$		RCM561J55
R62	Chip	560 ohm	1/10 W $\pm 5\%$		RCM561J55
R63	Chip	2.2 kohm	1/10 W $\pm 5\%$		RCM222J55
R64	Chip	22 kohm	1/10 W $\pm 5\%$		RCM223J55
R65	Chip	10 kohm	1/10 W $\pm 5\%$		RCM103J55
R66	Chip	47 kohm	1/10 W $\pm 5\%$		RCM473J55
R67	Chip	220 kohm	1/10 W $\pm 5\%$		RCM224J55
R68	Chip	47 kohm	1/10 W $\pm 5\%$		RCM473J55

Ref. No.	Description	RS Part No.	MFR's Part No.
R69	Chip 10 ohm 1/10 W $\pm 5\%$		RCM100J55
R70	Chip 470 ohm 1/4 W $\pm 5\%$		RCP471J55
R71	Chip 10 kohm 1/10 W $\pm 5\%$		RCM103J55
R72	Chip 33 ohm 1/4 W $\pm 5\%$		RCP330J55
R73	Chip 82 ohm 1/10 W $\pm 5\%$		RCM820J55
TRANSFORMER			
T1	DC/DC transformer		7PSO-244
TRIMMER			
TC1	Cap. trimmer 20 pF		ECR-LA020E12
CRYSTAL			
X1	Crystal (6.4 MHz)		GE-87D-7232
MISCELLANEOUS			
CN1	Connector, Pin (2 Pin Male)		PI22A02M
CN2	Connector, Housing (16 Pin Female)		5224-16CHPB
J1	Jack, Earphone		HSJ0836-01-500
SW1	Switch, Push (Remote) (Manual)		SKHHLM
SW2	Switch, Push (Remote) (Scan)		SKHHLM
SW3	Switch, Push (Reset)		SKHLAC
②⑦	Connector, LCD		GE-87D-7017
②⑧	Reflector, LCD		GE-87D-7006
②⑨	Holder, LCD		GE-87D-7013
③①	Plate, Logic Shield		GE-87D-7236
③②	Fiber, Logic Shield		GE-87D-7235

POWER JACK PCB ASSEMBLY


PCB Assembly, Jack, Power Consists of the following:					RS Part No.	MFR's Part No. GA-87C-7003
CAPACITORS						
Ref. No.	Description				RS Part No.	MFR's Part No.
C301	Multilayer	0.1 μ F	50 V	+80%—20%		RPE131F104Z50
C302	Ceramic	0.001 μ F	50 V	$\pm$ 10%		HE50SJYB102K
C303	Ceramic	0.001 μ F	50 V	$\pm$ 10%		HE50SJYB102K
DIODE						
D301	Silicon	S5566B				S5566B
INDUCTORS						
L301	Coil, choke	47 μ H				LAL04NA470K
L302	Coil, choke	47 μ H				LAL04NA470K
RESISTOR						
R301	Carbon Film	39 ohm	1/4 W	$\pm$ 5%		ERD25PJ390
MISCELLANEOUS						
J301	JACK, Power (PWR)					HEC0779-01-030
J302	JACK, Power (CHG)					HEC0779-01-030
③②	Plate, Power Jack Shield					GE-87D-7300
③③	Fiber, Power Jack Shield					GE-87D-7301

MECHANICAL PARTS LIST

Ref.No.	Description	RS Part No.	MFR's Part No.
VR102 ①	Pot., Volume W/Switch 10 kohm (A)		RL126N00B10k (A)-15
VR101 ②	Pot., Squelch 10 kohm (C)		RL126N0010k(C)-15
③	Jack, Antenna		GE-85D-5383
SPK1 ④	Speaker		SP-455H
⑤	Assy PCB, Linear for U.S.A.		GA-87D-7208
⑤	Assy PCB, Linear for CANADA		GA-87B-7208-A
⑥	Assy PCB, Logic		GA-87B-6954
⑦	Assy PCB, Jack Power		GA-87C-7033
⑧	Case, Battery (Black)		GE-82D-3490
⑨	Terminal, Battery		GE-87D-7015
⑩	Contact, KEY Lock Switch		GE-82D-3395
⑪	Assy, Bracket PCB for U.S.A.		GA-87D-7012
⑪	Assy, Bracket PCB for CANADA		GA-88D-7662
⑫	Assy, Front Case (Non Repairable) (Black)		GA-87D-7242
⑬	Assy, Rear Case (Non Repairable) (Black)		GA-87D-7243
⑭	Cover, Battery (Black)		GE-87C-7003
⑮	Clip, Belt (Black)		GE-82D-3369
⑯	Key, Top (Black)		GE-84D-5283
⑰	Knob, Key Lock (Black)		GE-85D-5462
⑱	Knob, Volume/Squelch (Black)		GE-87D-7005
⑳	Antenna, Rubber (Black)		GE-85D-5376
	Pan Head Machine Blk + 2×4		
	Pan Head Machine + 2×5		
	Pan Head Machine Blk + 2×8		
	Bind Blk + 3×5		
	Pan Head TP Tapping Blk + 2×4		
㉑	Stud		GE-87D-7016
㉒	See page 38		
㉓	See page 38		
㉔	See page 38		
㉕	See page 38		
㉖	See page 41		
㉗	See page 44		
㉘	See page 44		
㉙	See page 44		
㉚	See page 44		
㉛	See page 44		
㉜	See page 45		
㉝	See page 45		

DISASSEMBLY DIAGRAM/EXPLODED VIEW



- Step 1: Remove 4 screws **A**.
 Step 2: Open the front and rear case.

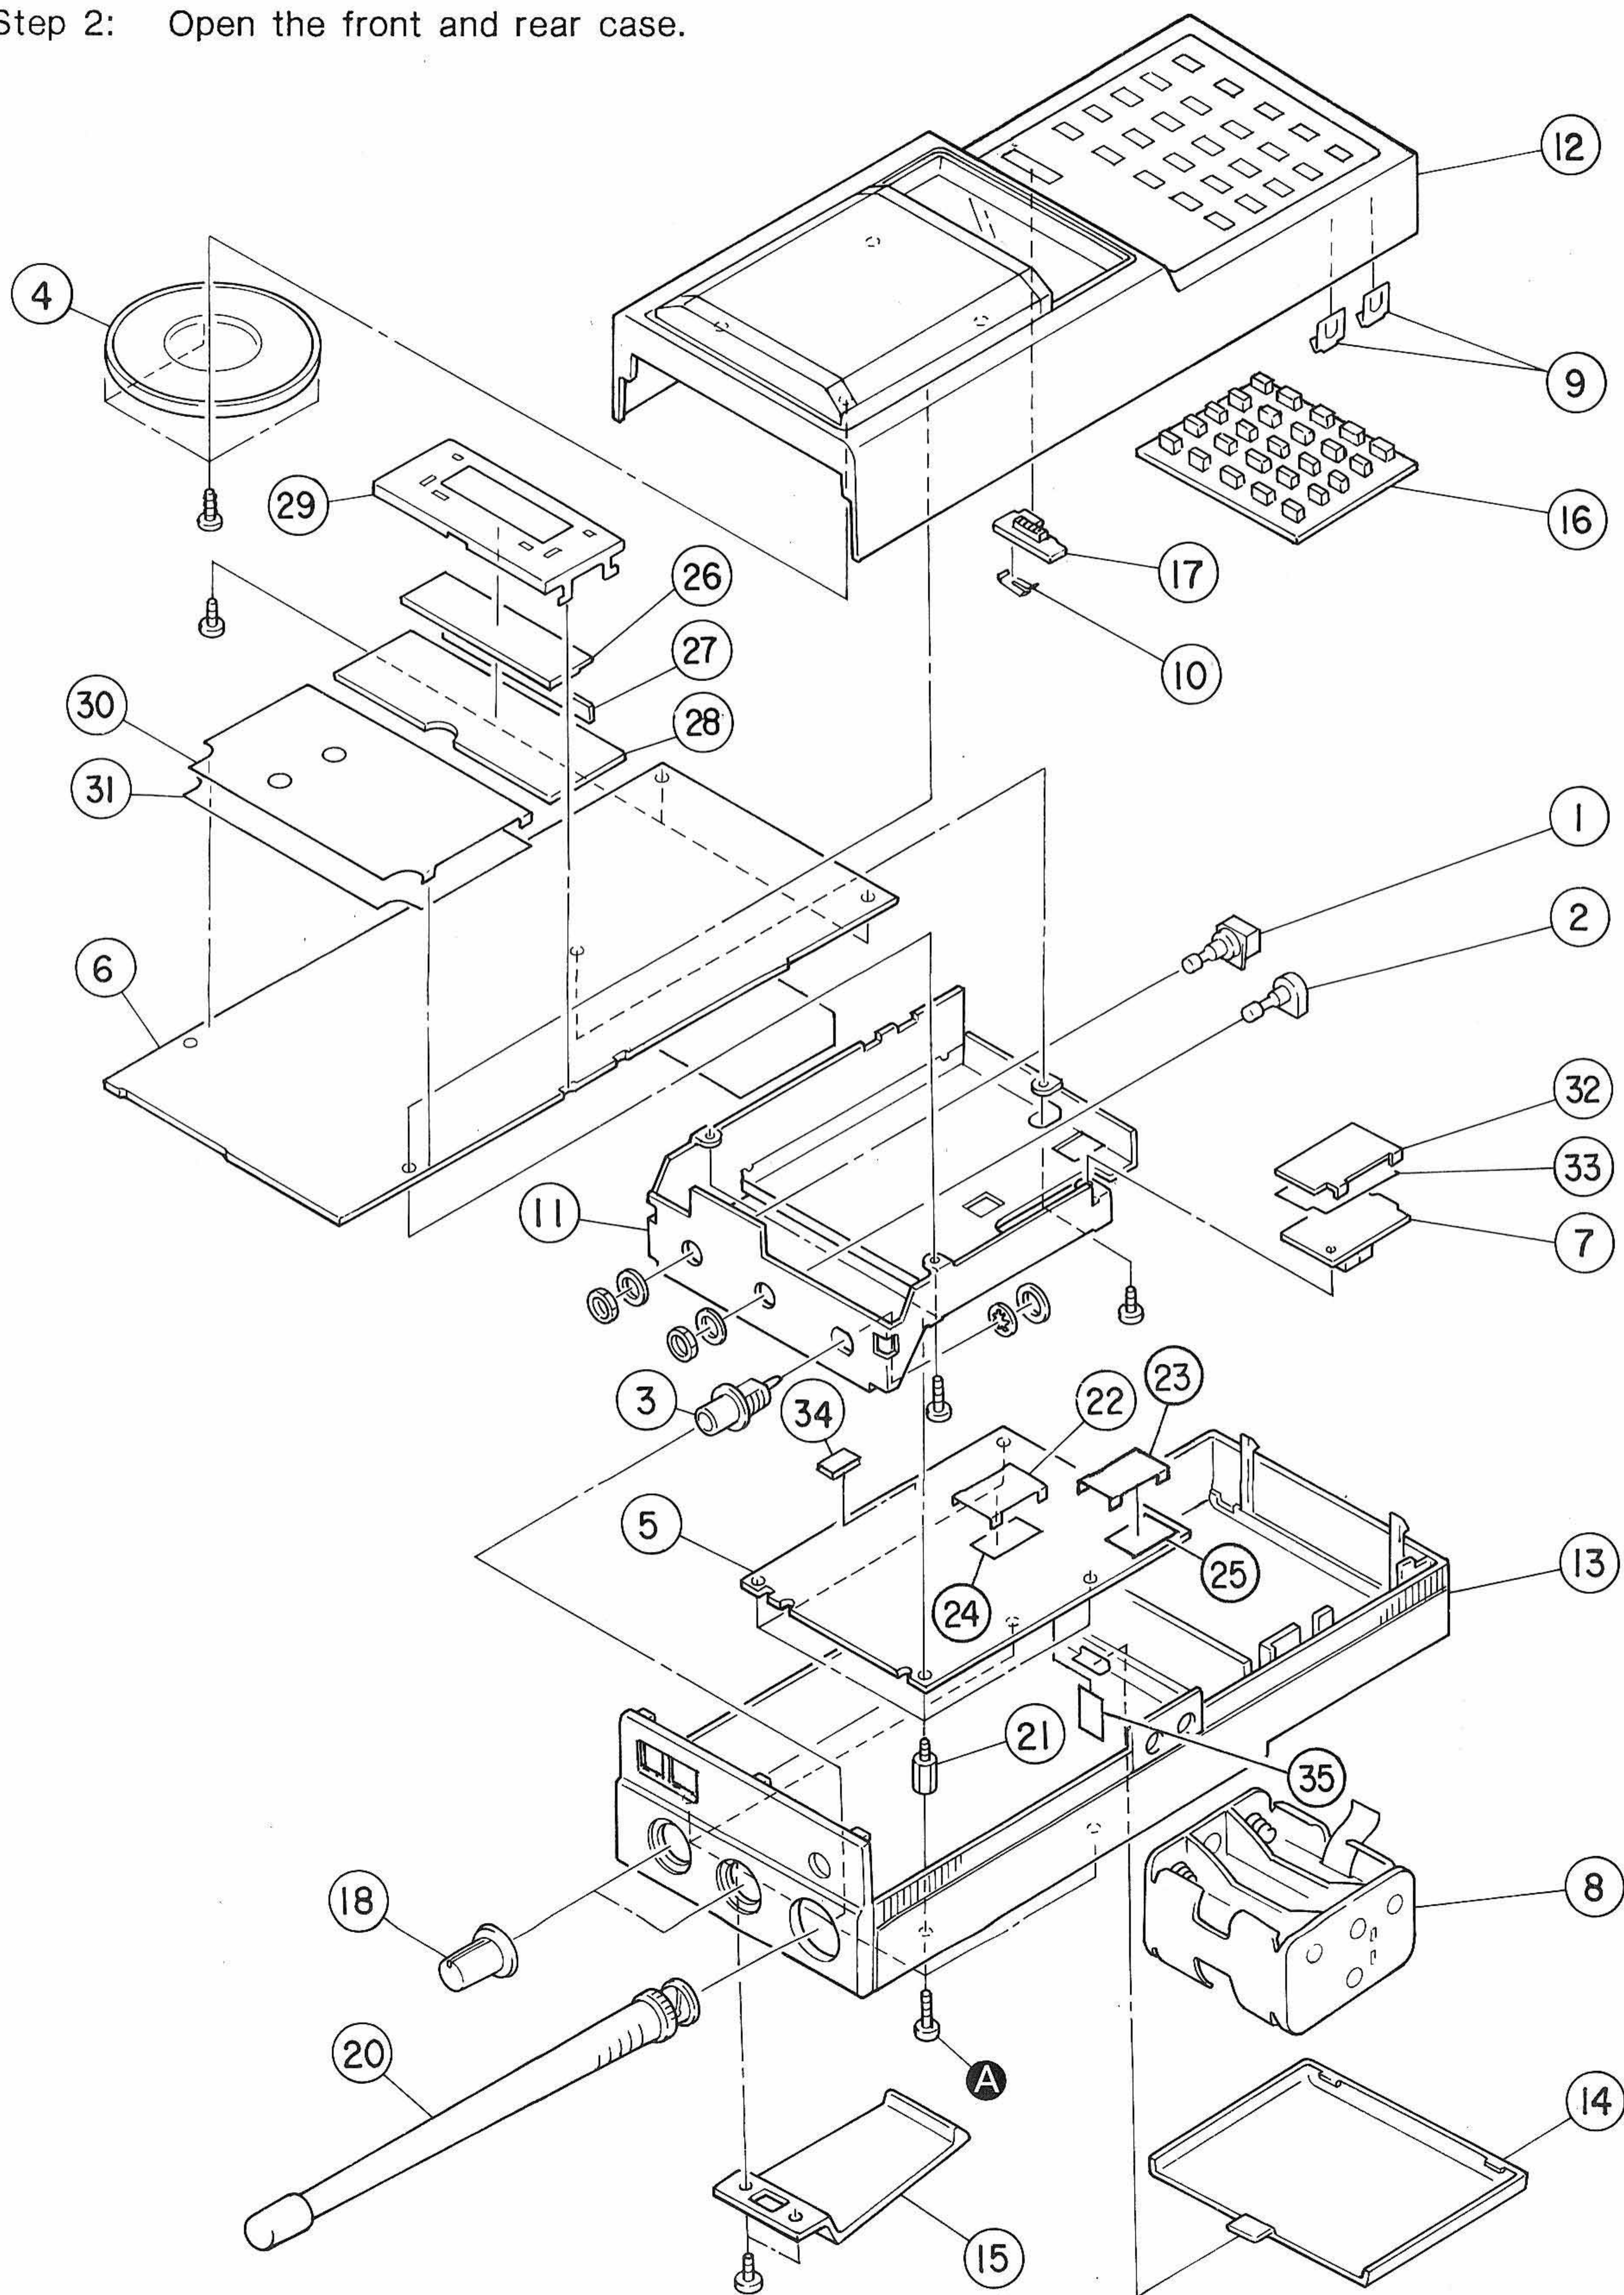



SEMICONDUCTOR LEAD IDENTIFICATION AND IC CIRCUIT DIAGRAM

Integrated Circuit Lead Identification


IC1 GRE-0620A

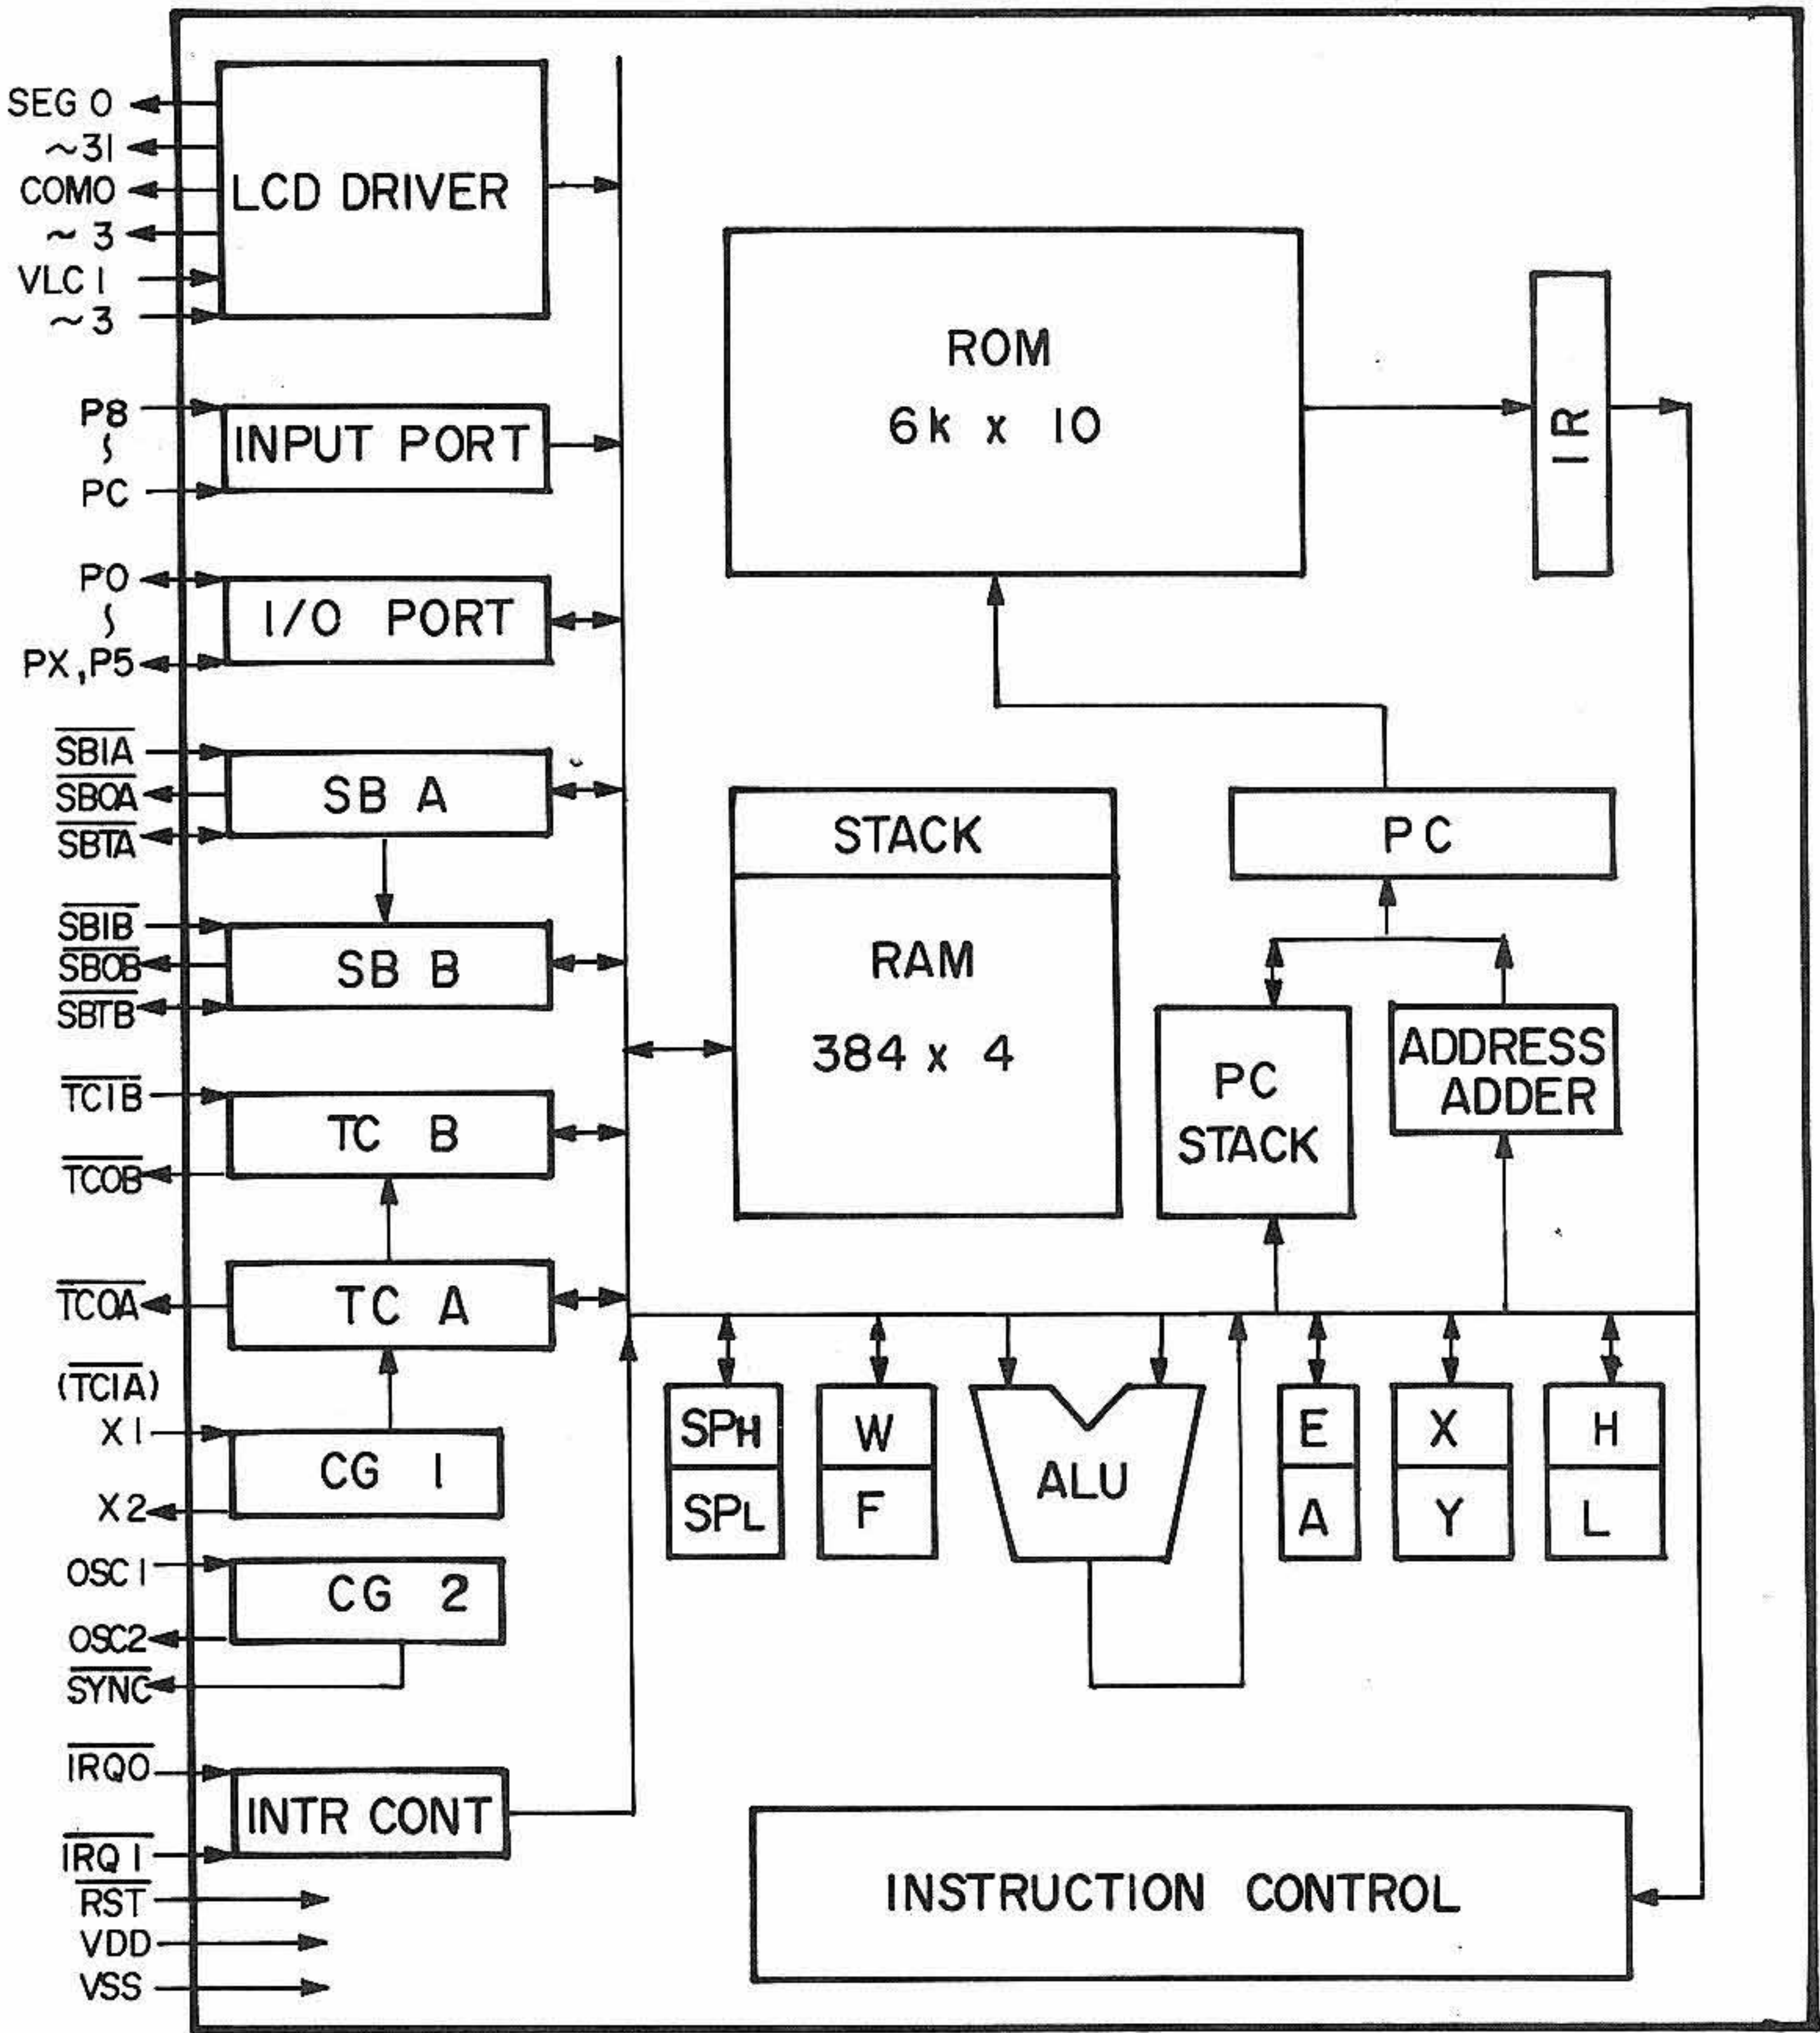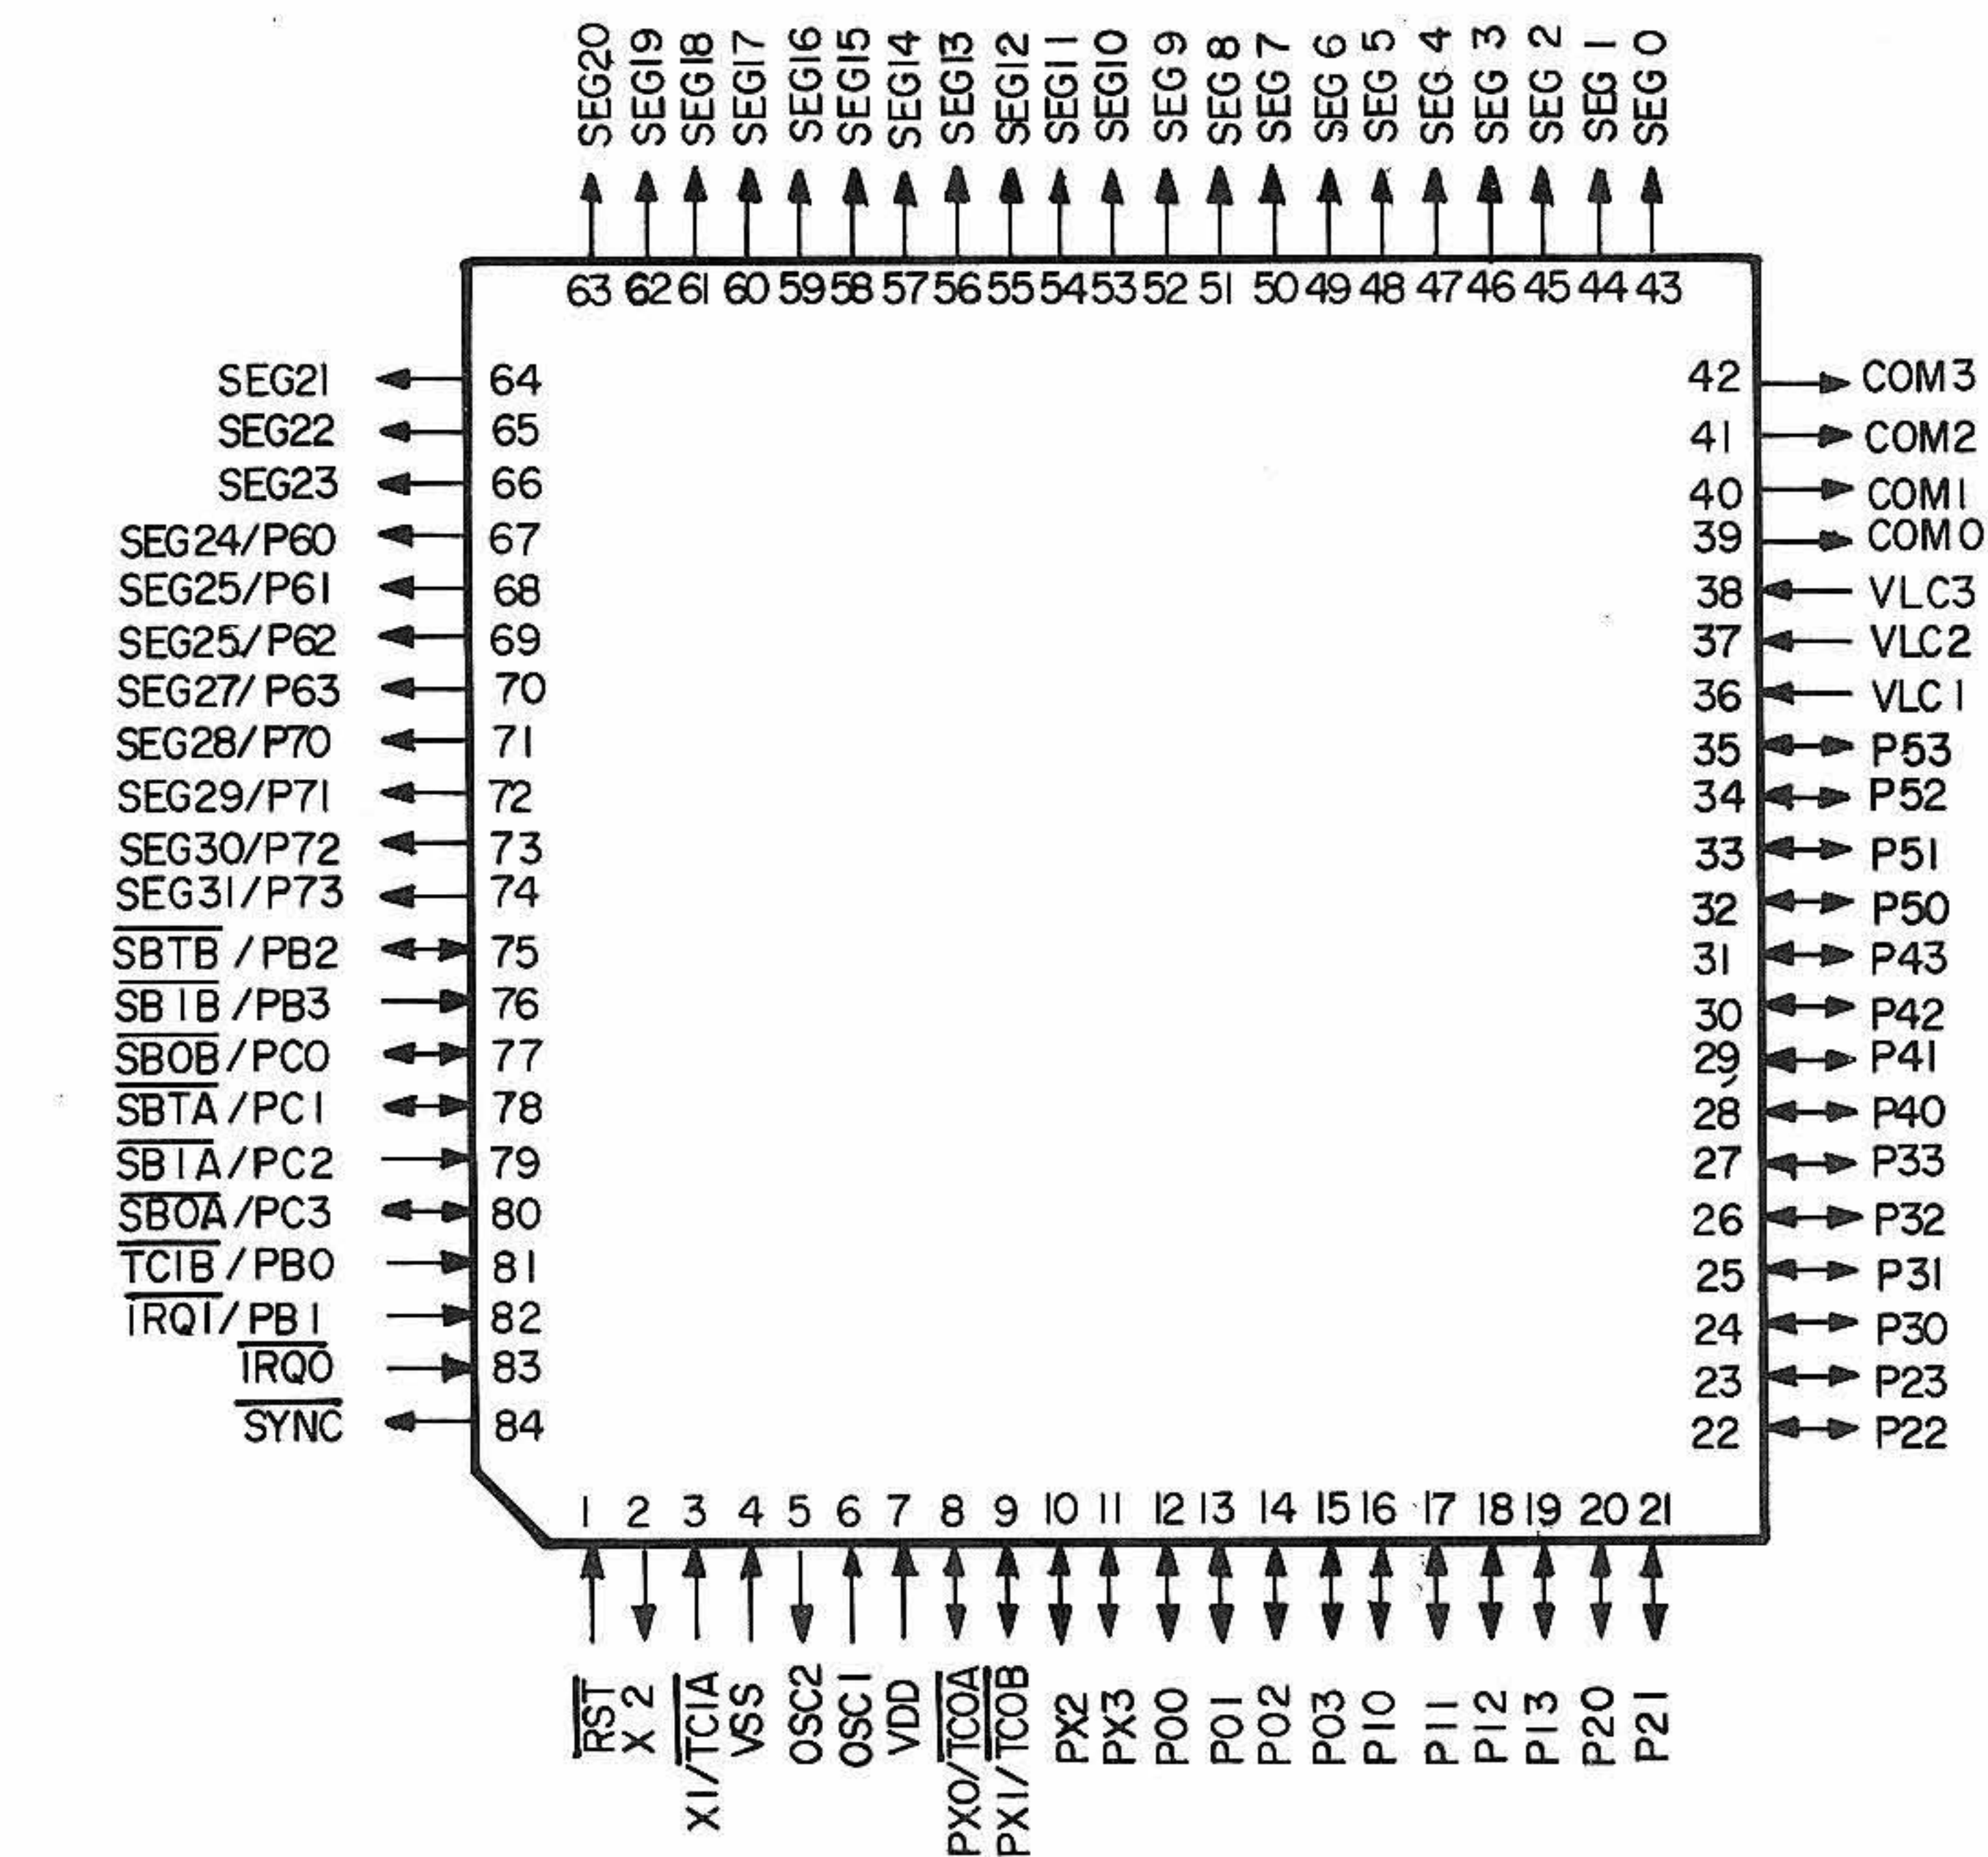



Pin	Signal
1	A7
2	A6
3	A5
4	A4
5	A3
6	A2
7	A1
8	A0
9	I/O 1
10	I/O 2
11	I/O 3
12	GND
13	I/O 4
14	I/O 5
15	I/O 6
16	I/O 7
17	I/O 8
18	$\overline{CE}$
19	A10
20	$\overline{OE}$
21	R/W
22	A9
23	A8
24	VDD

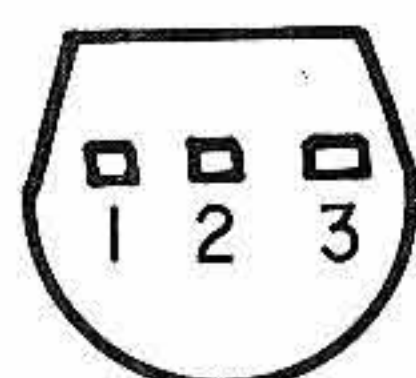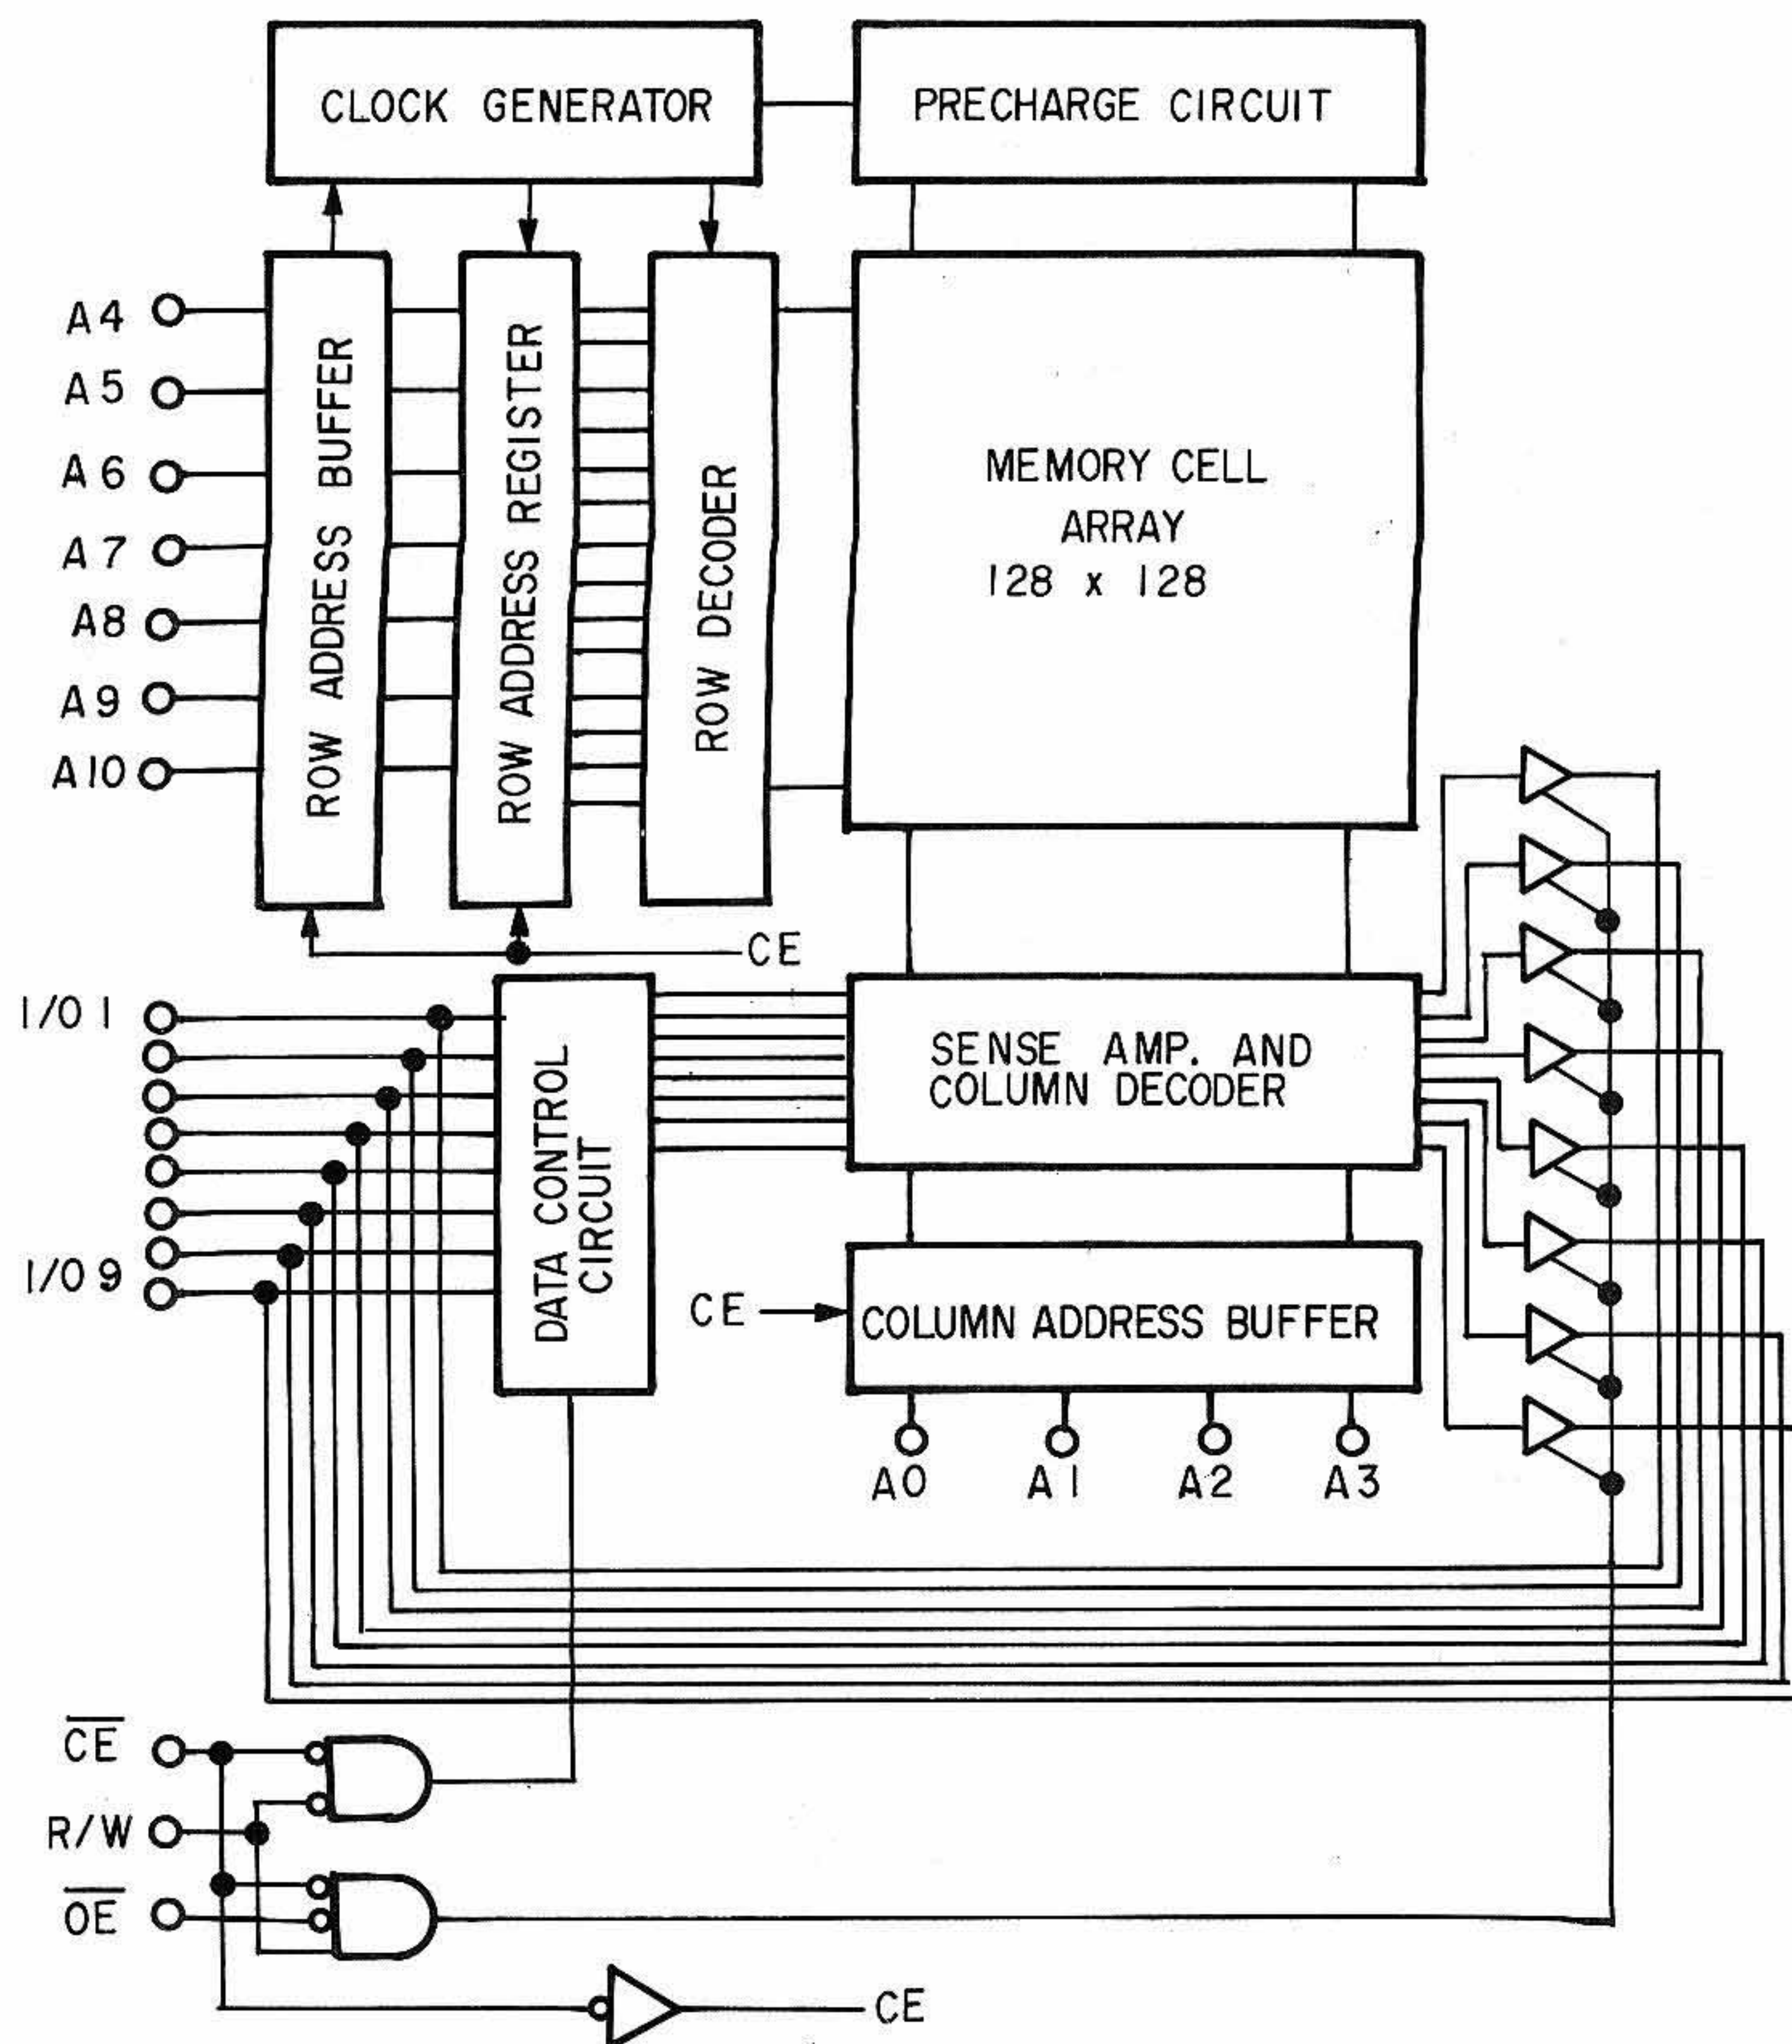



1: GND
2: V IN
3: V OUT

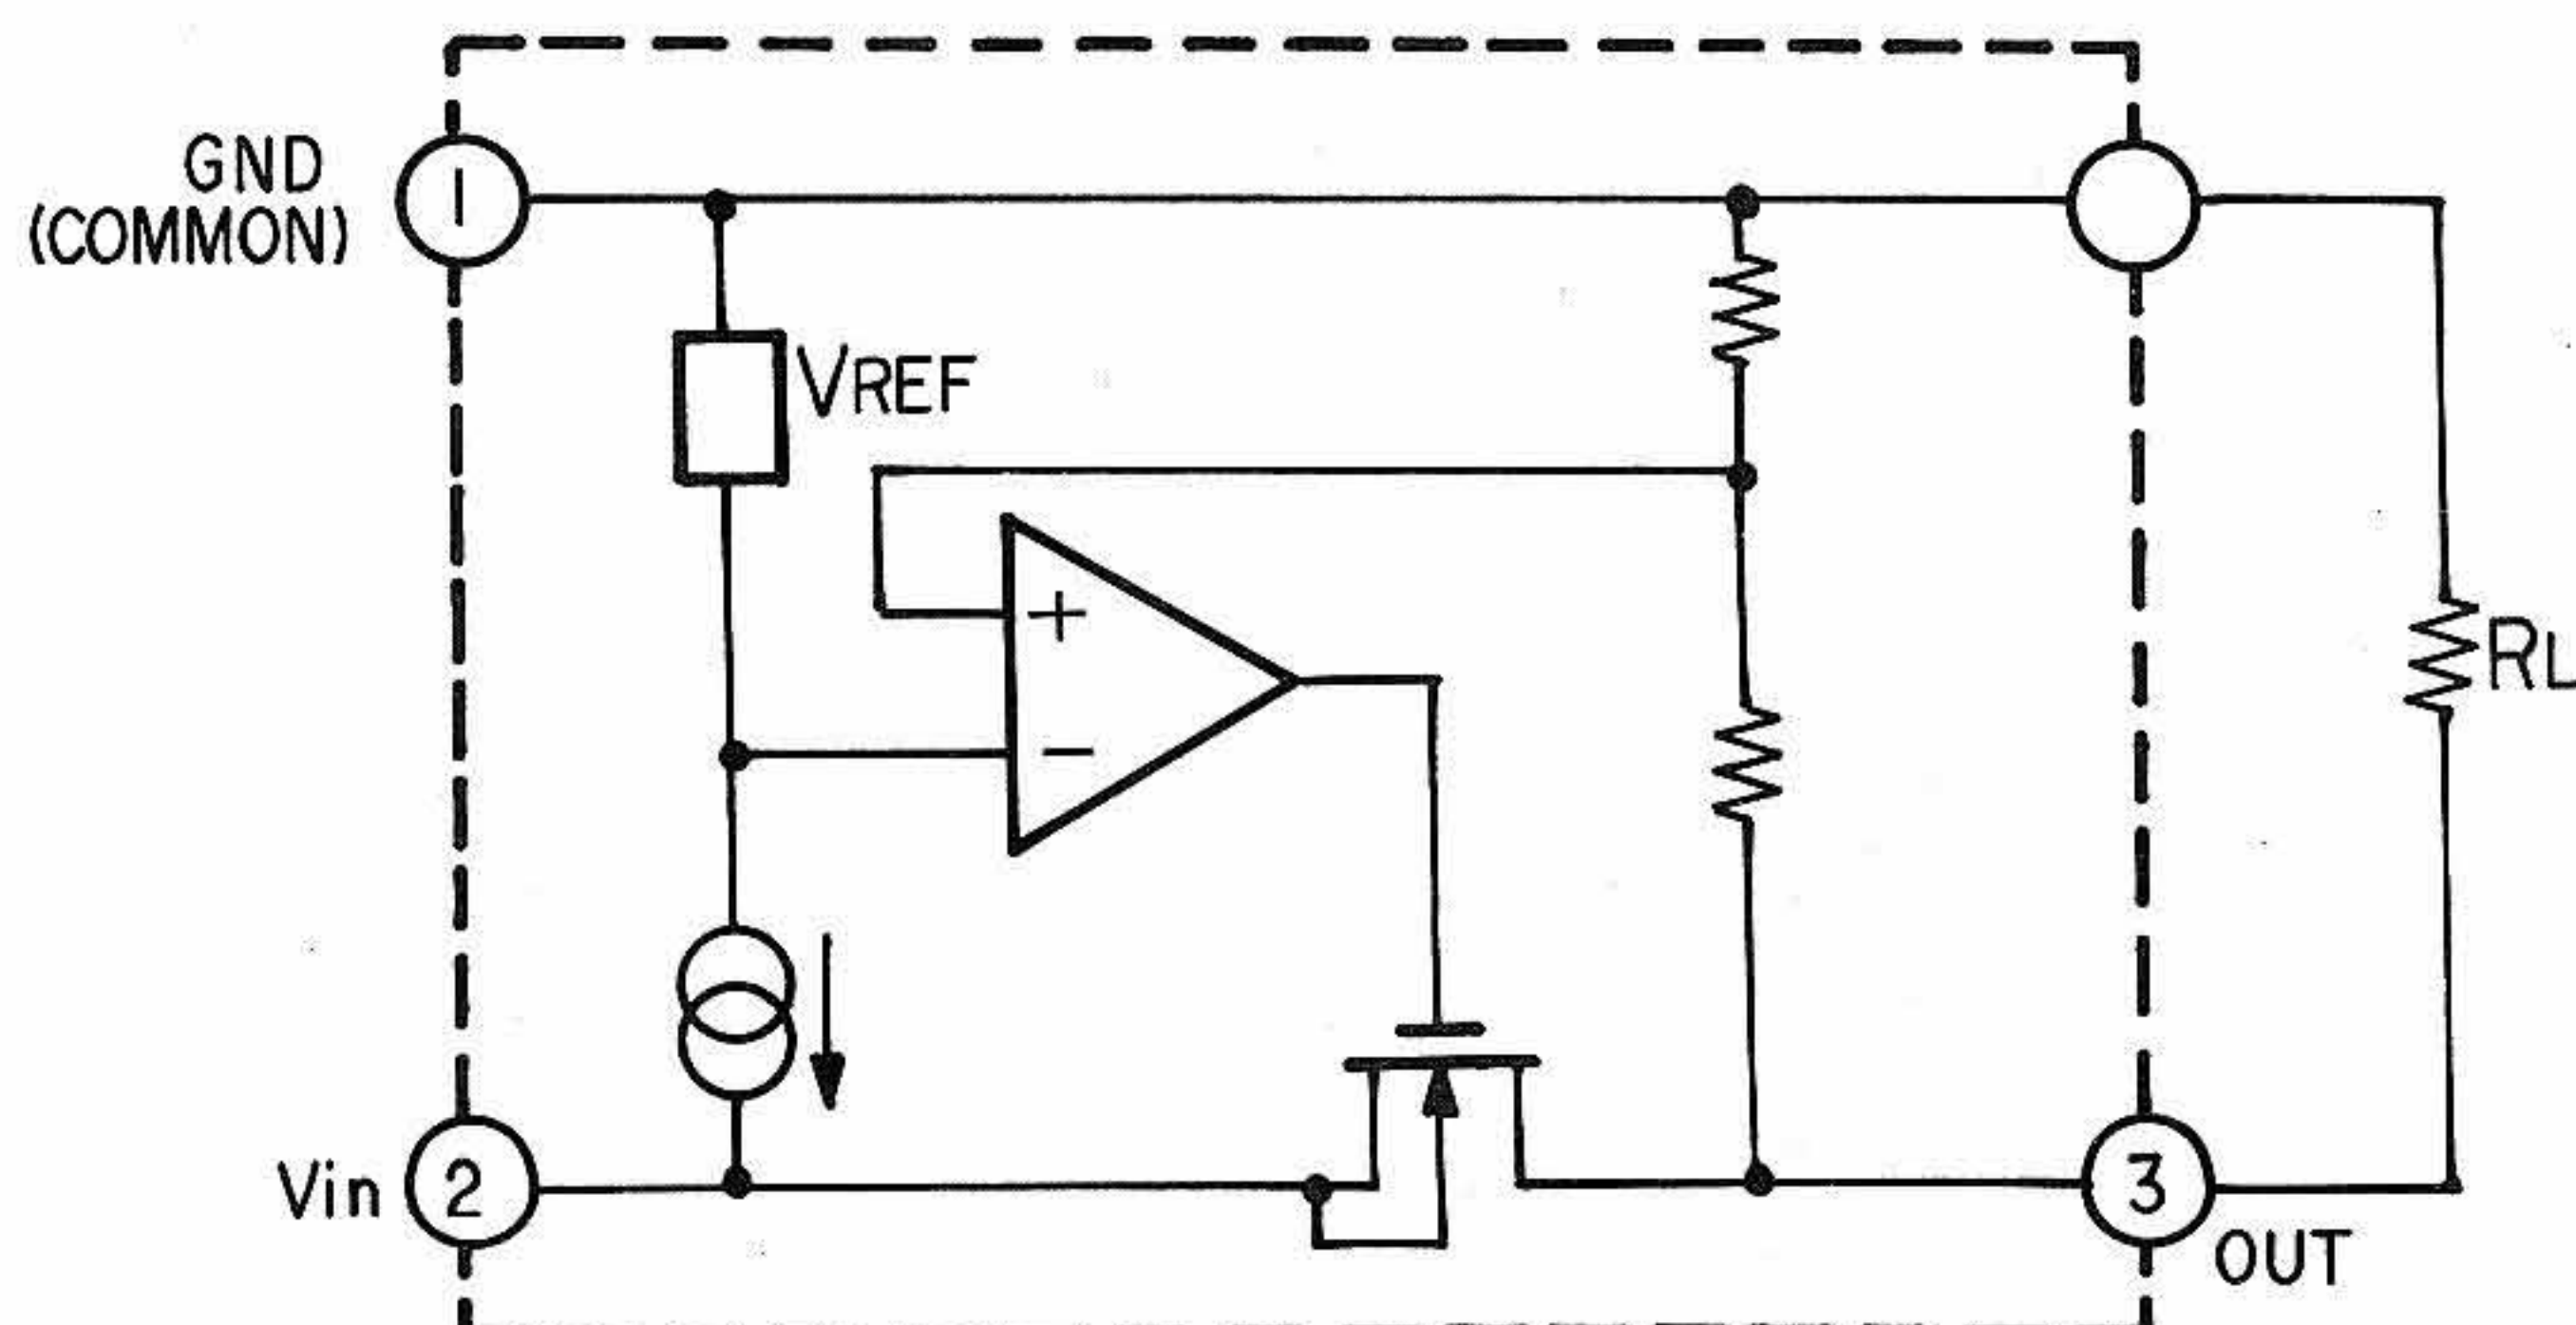



IC4 MN1280S

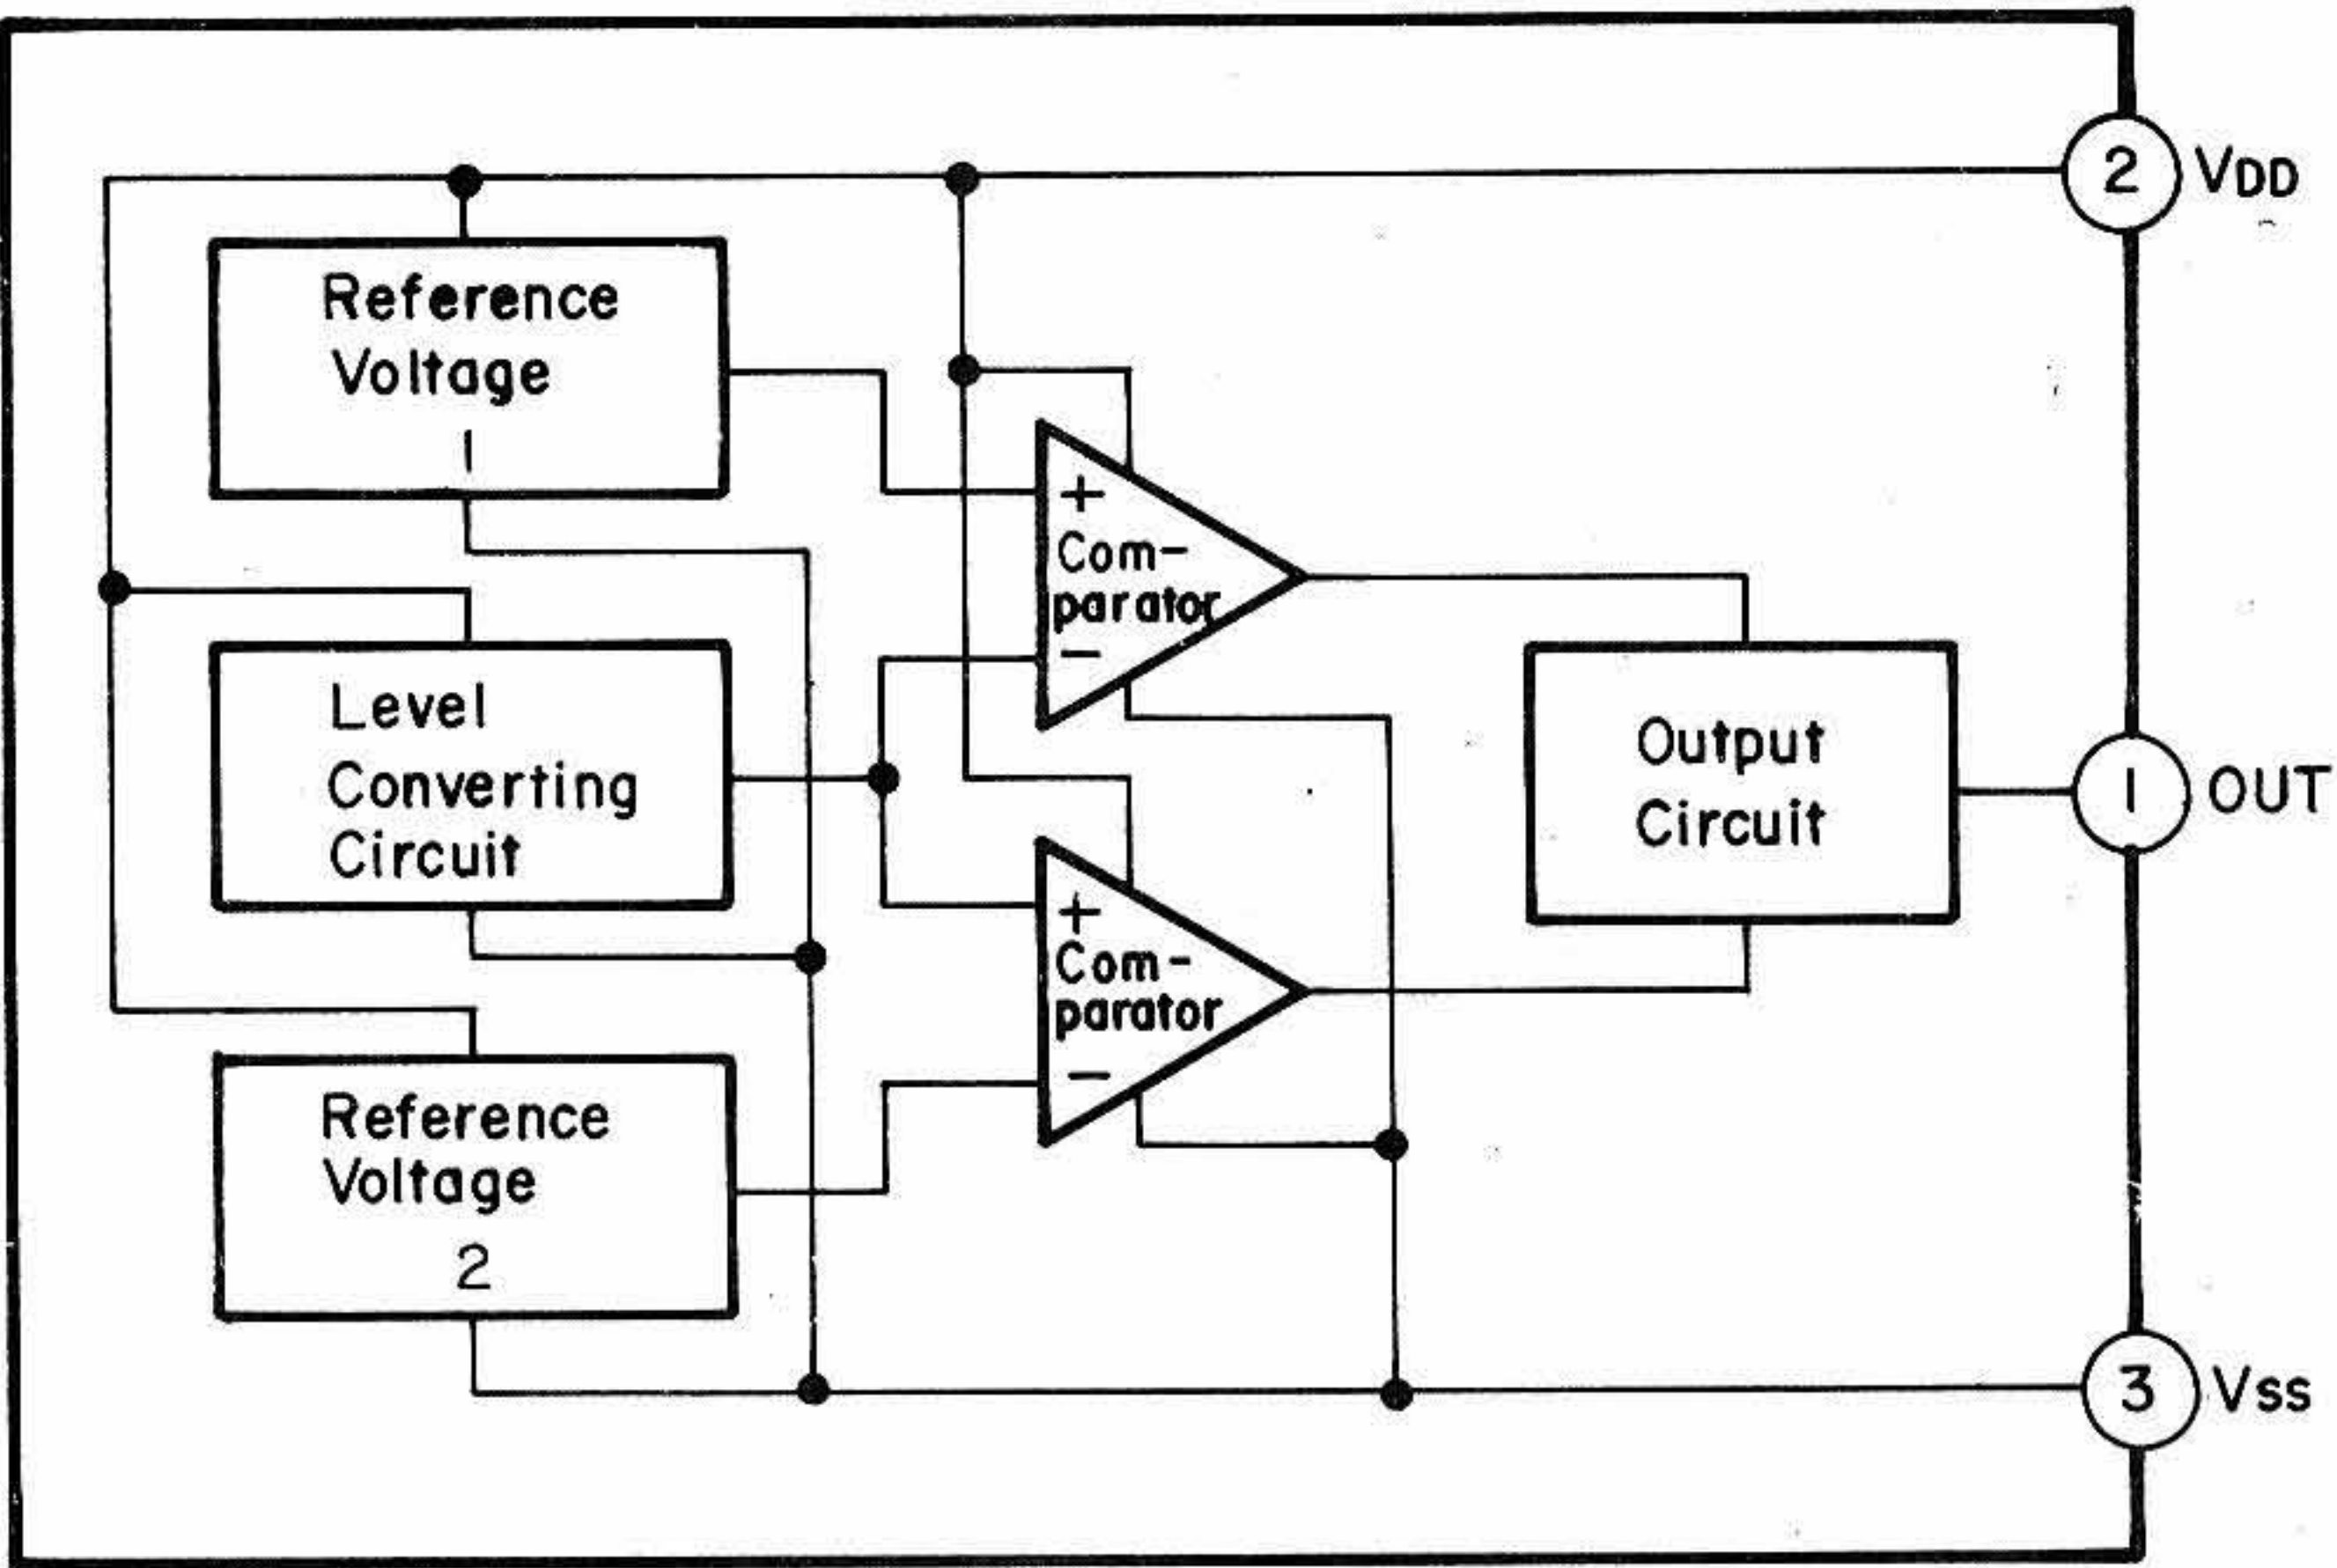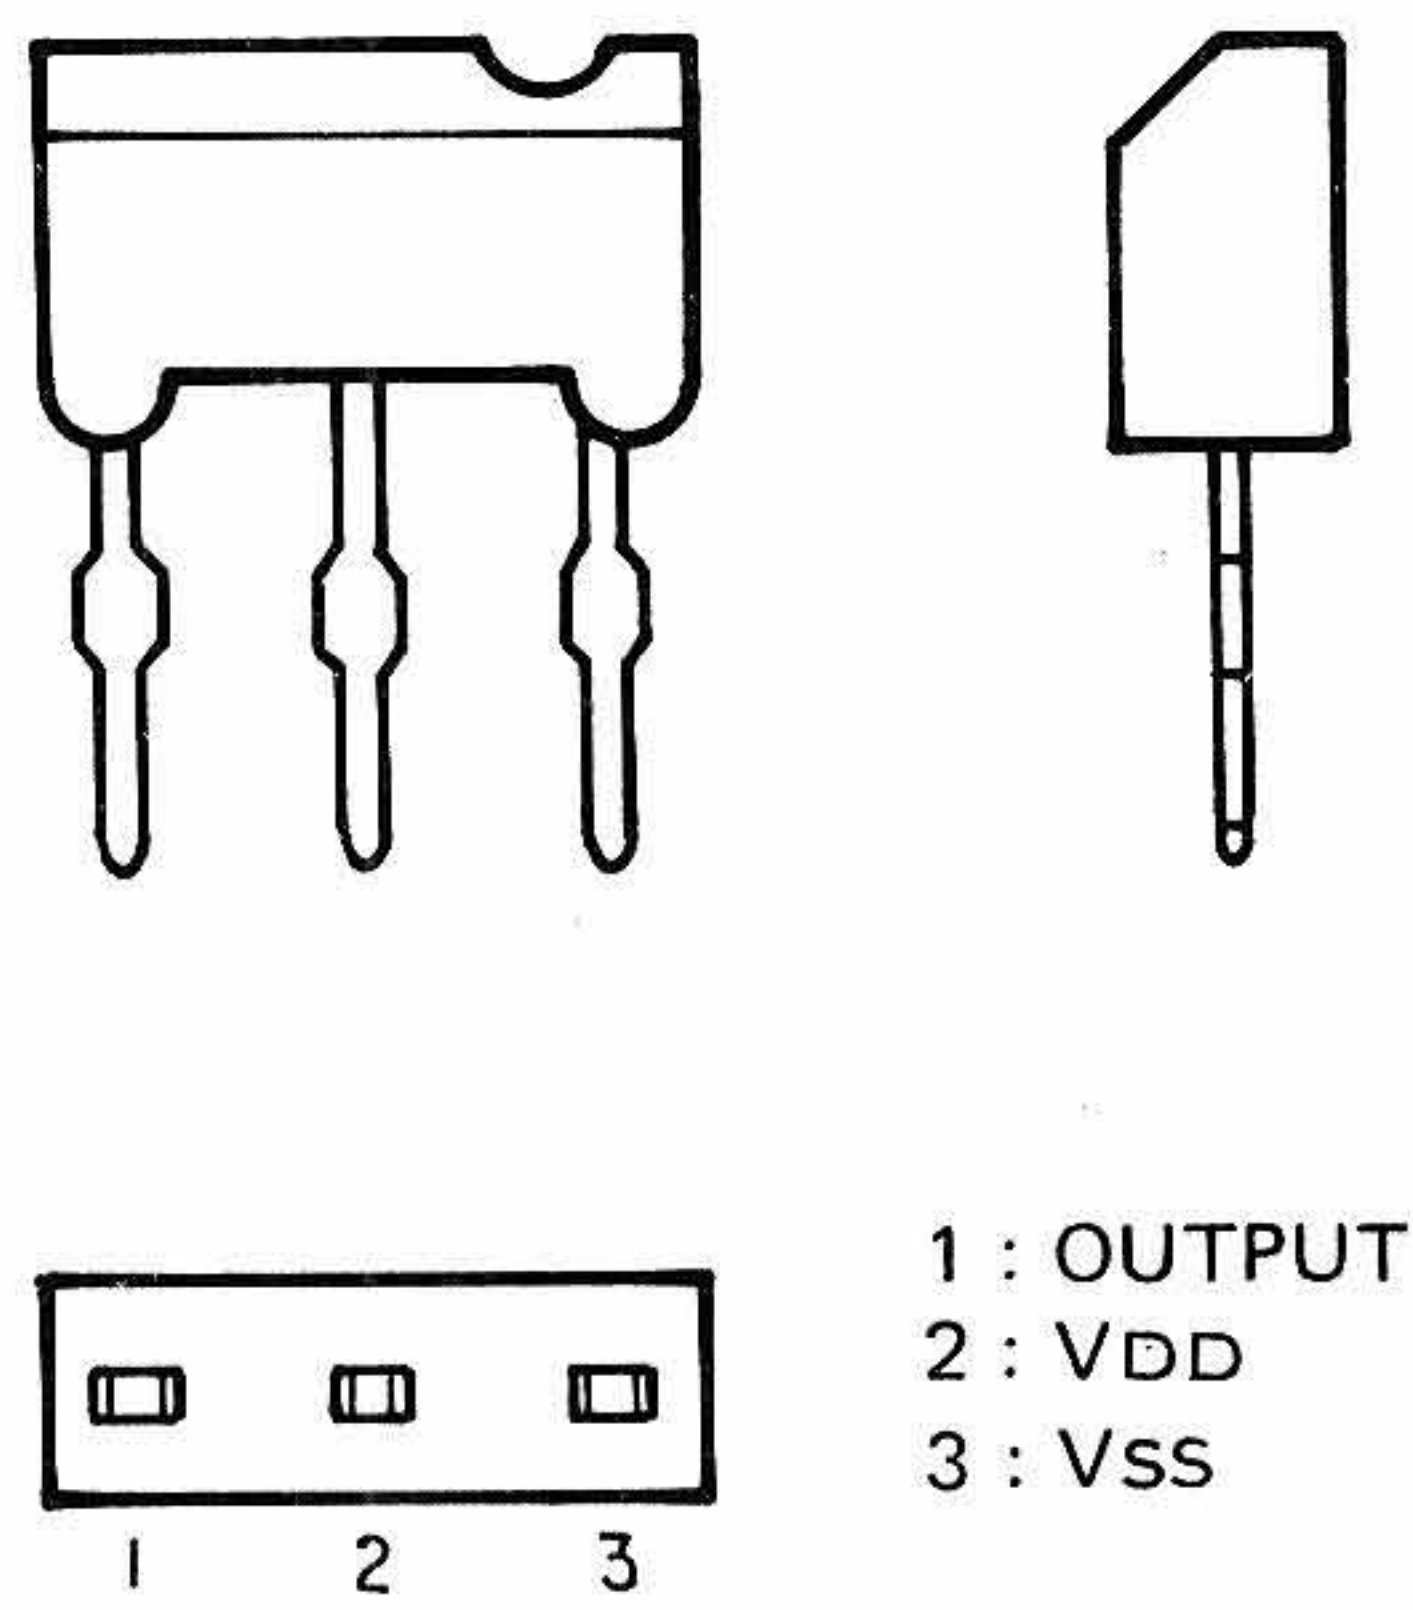



IC5 S-8054HN

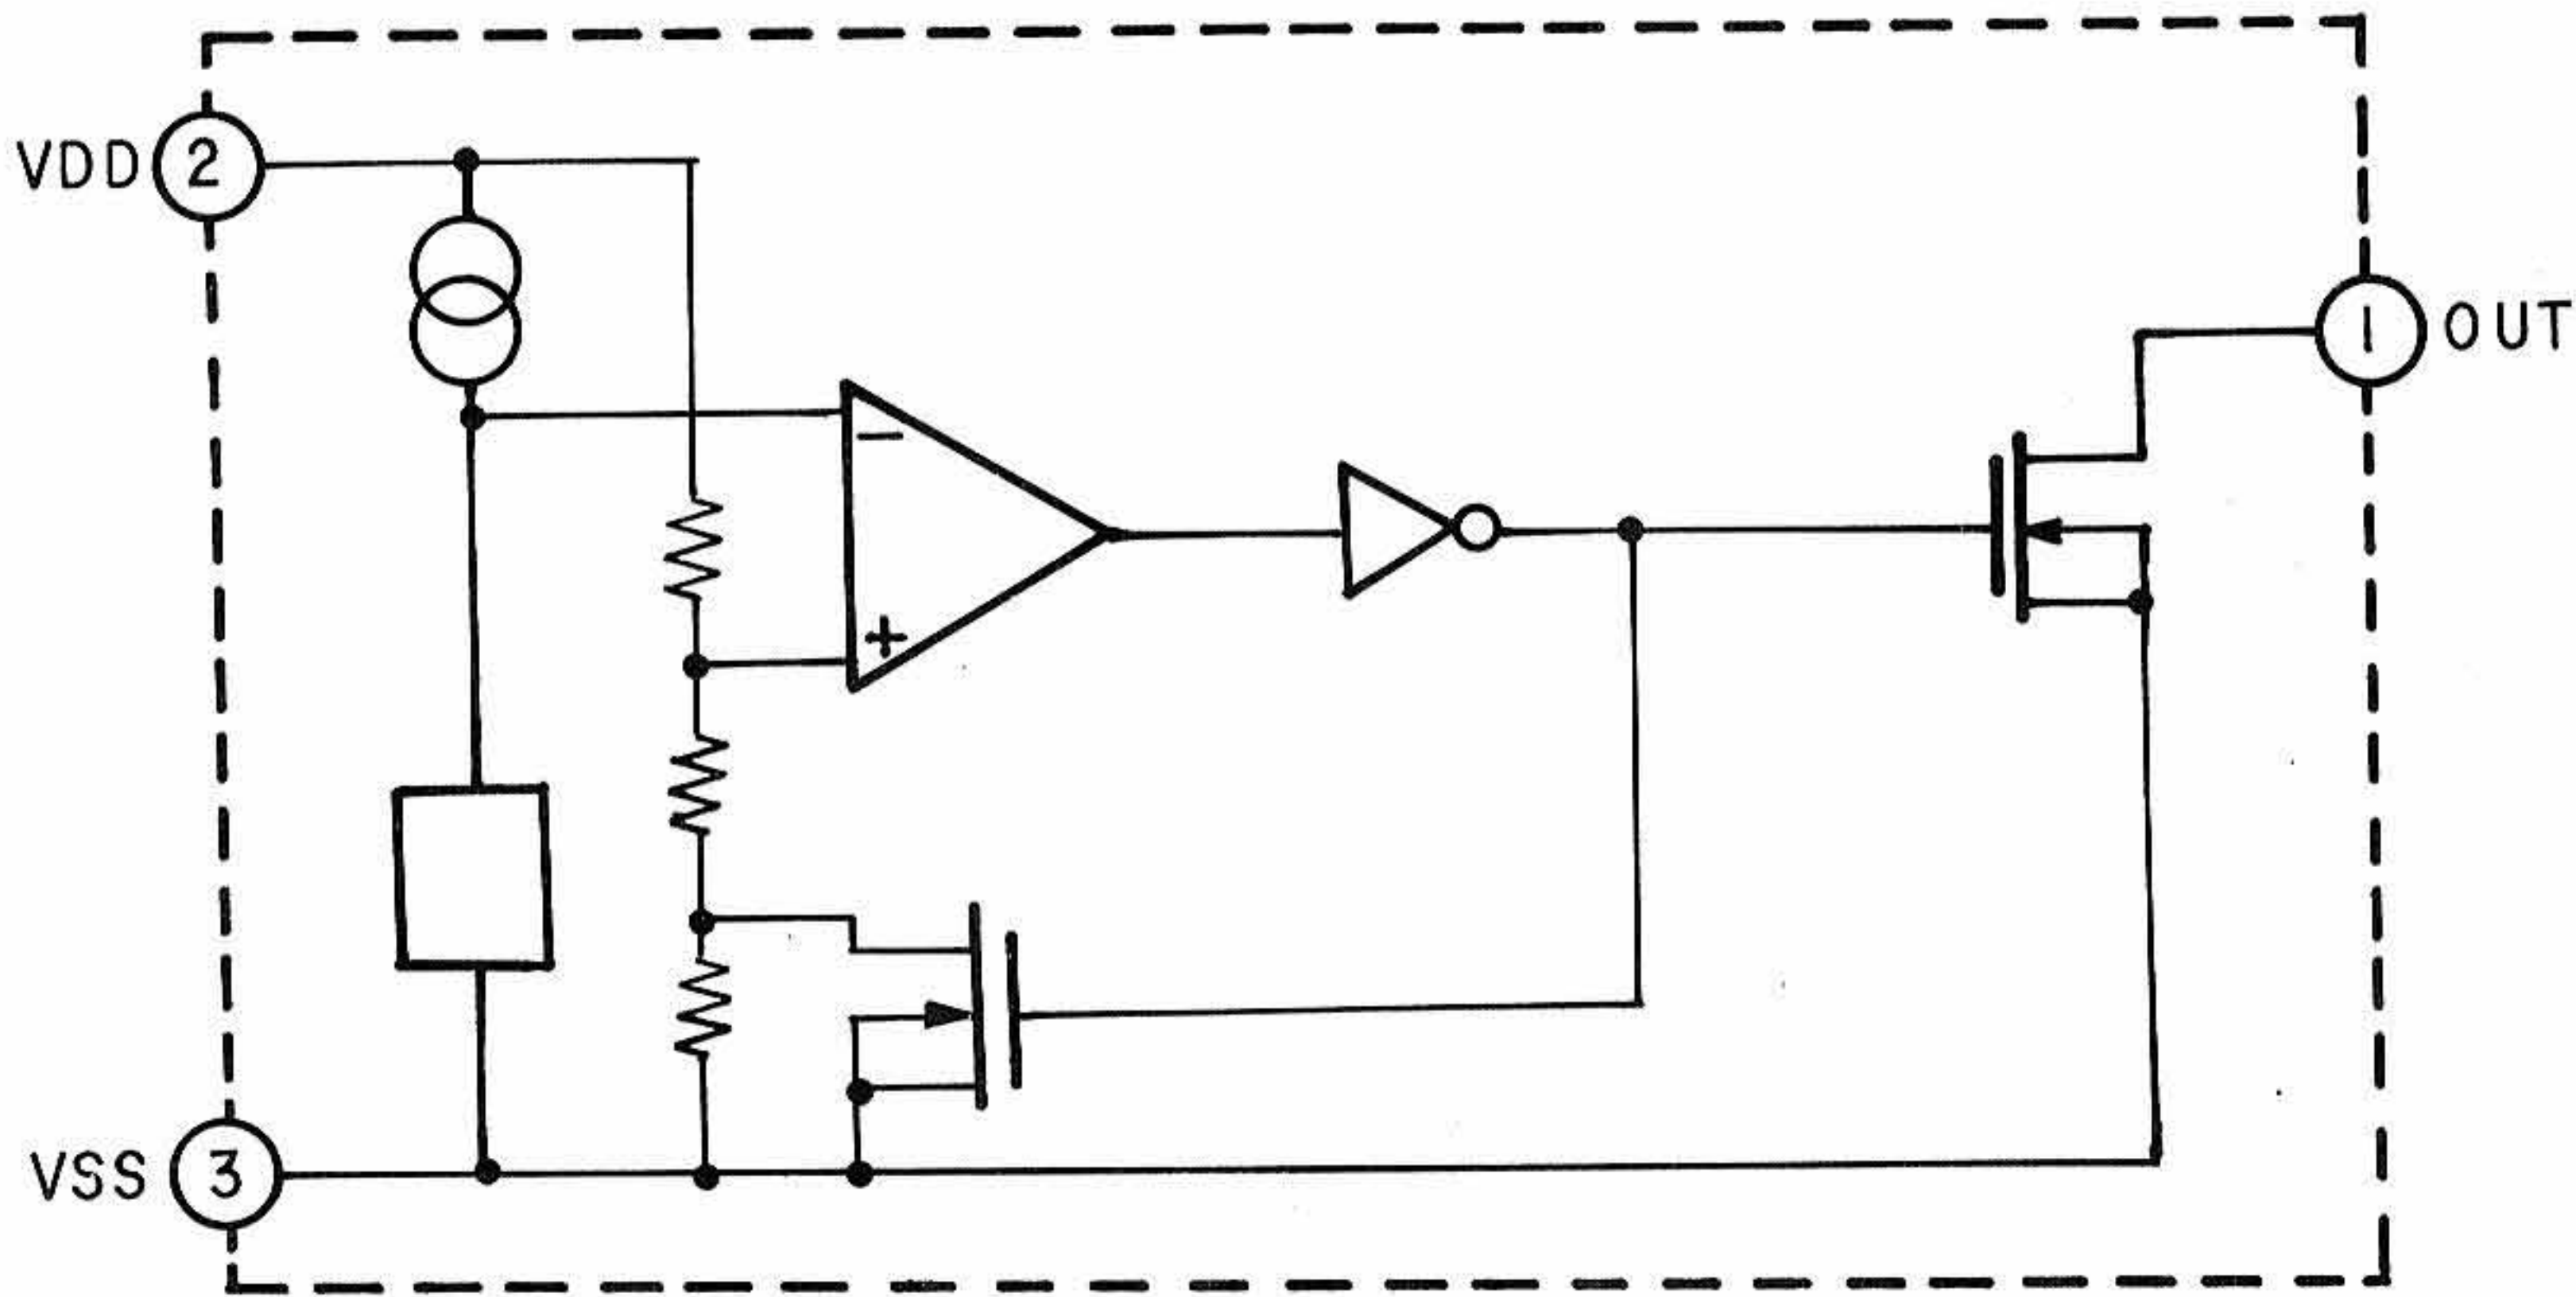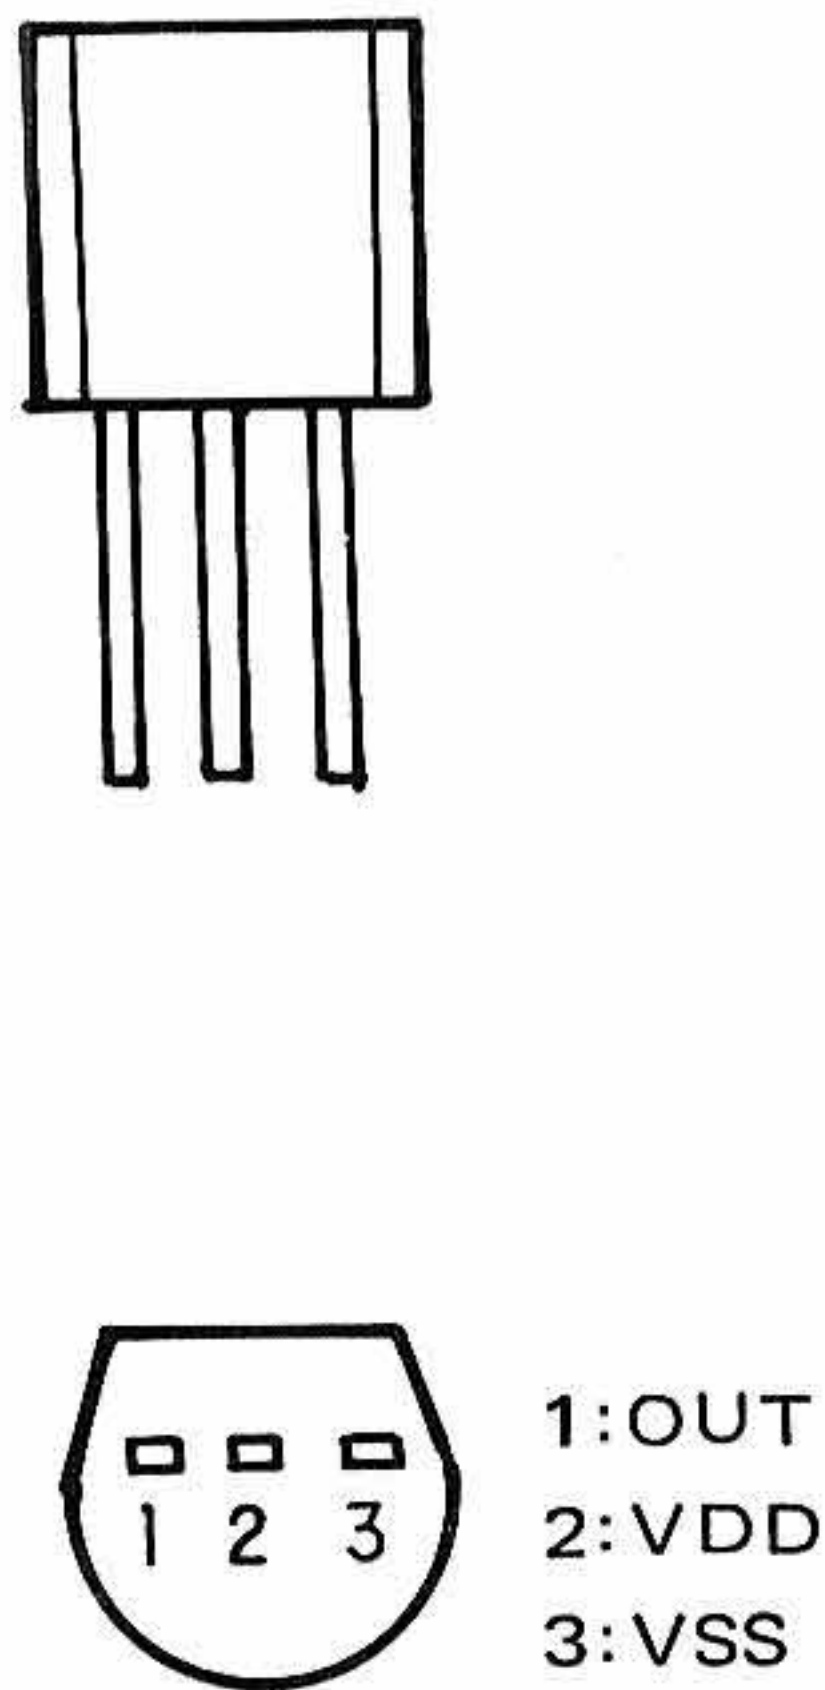



IC6 μ PC358G

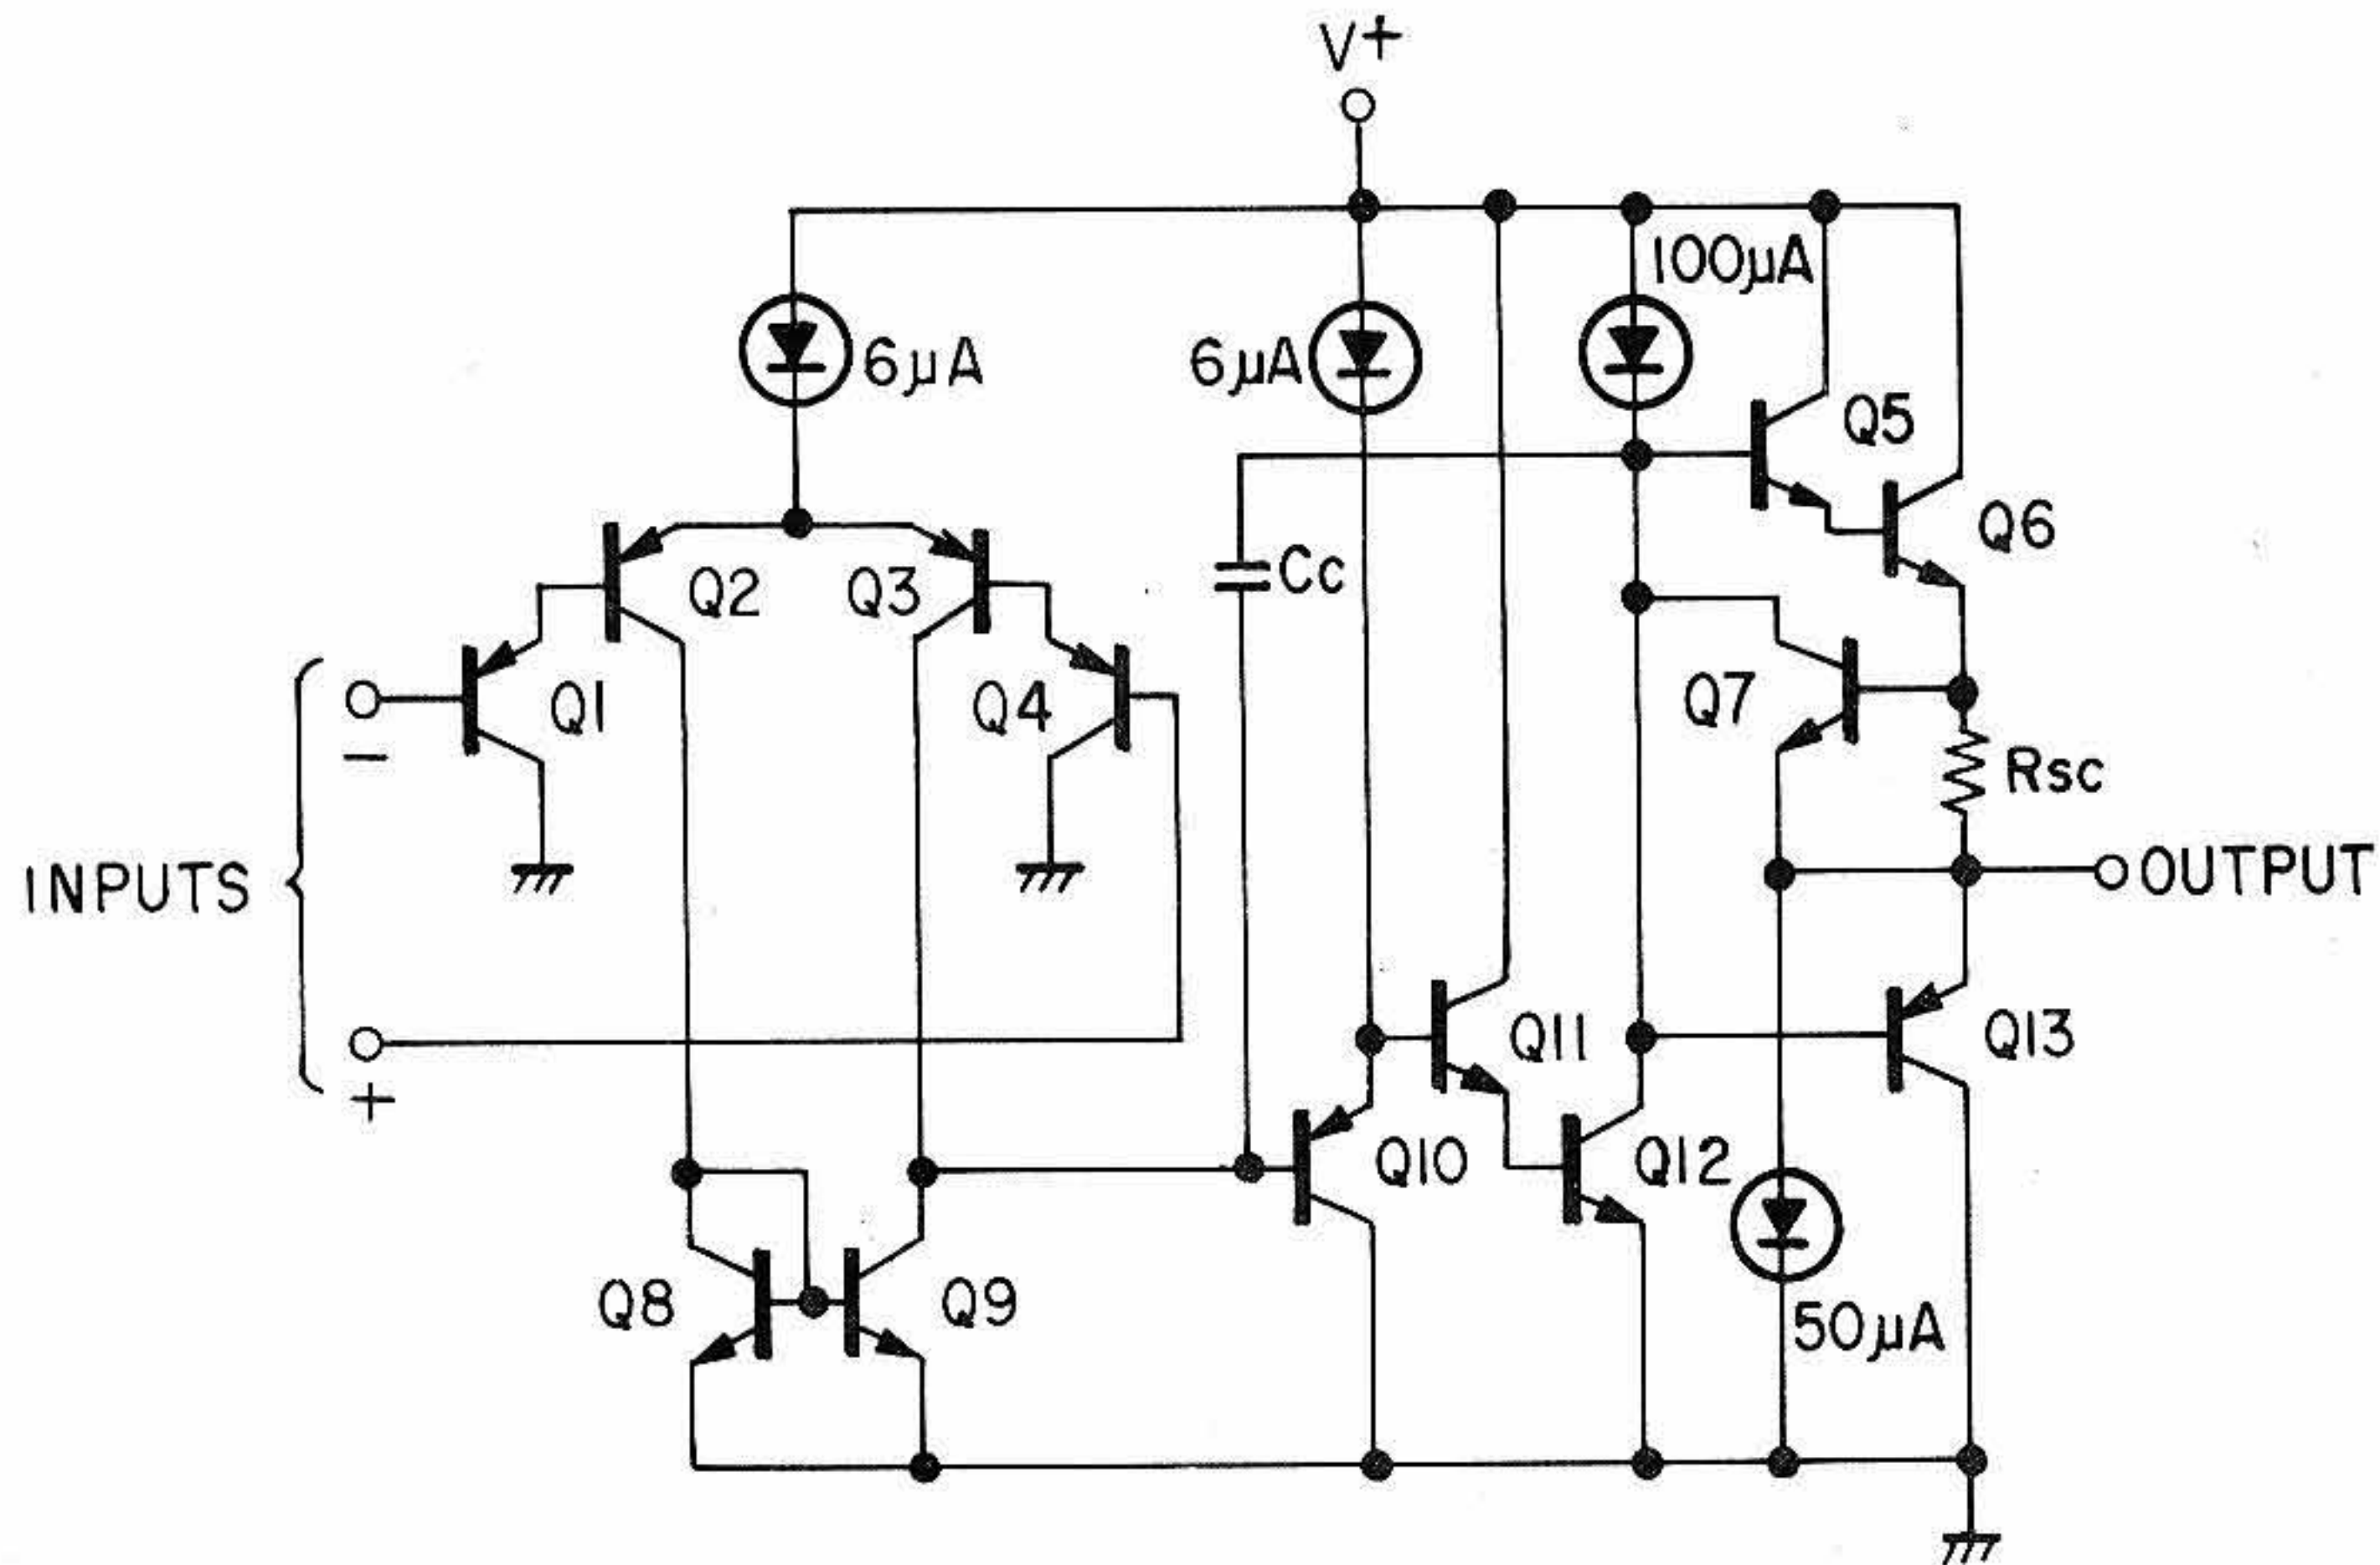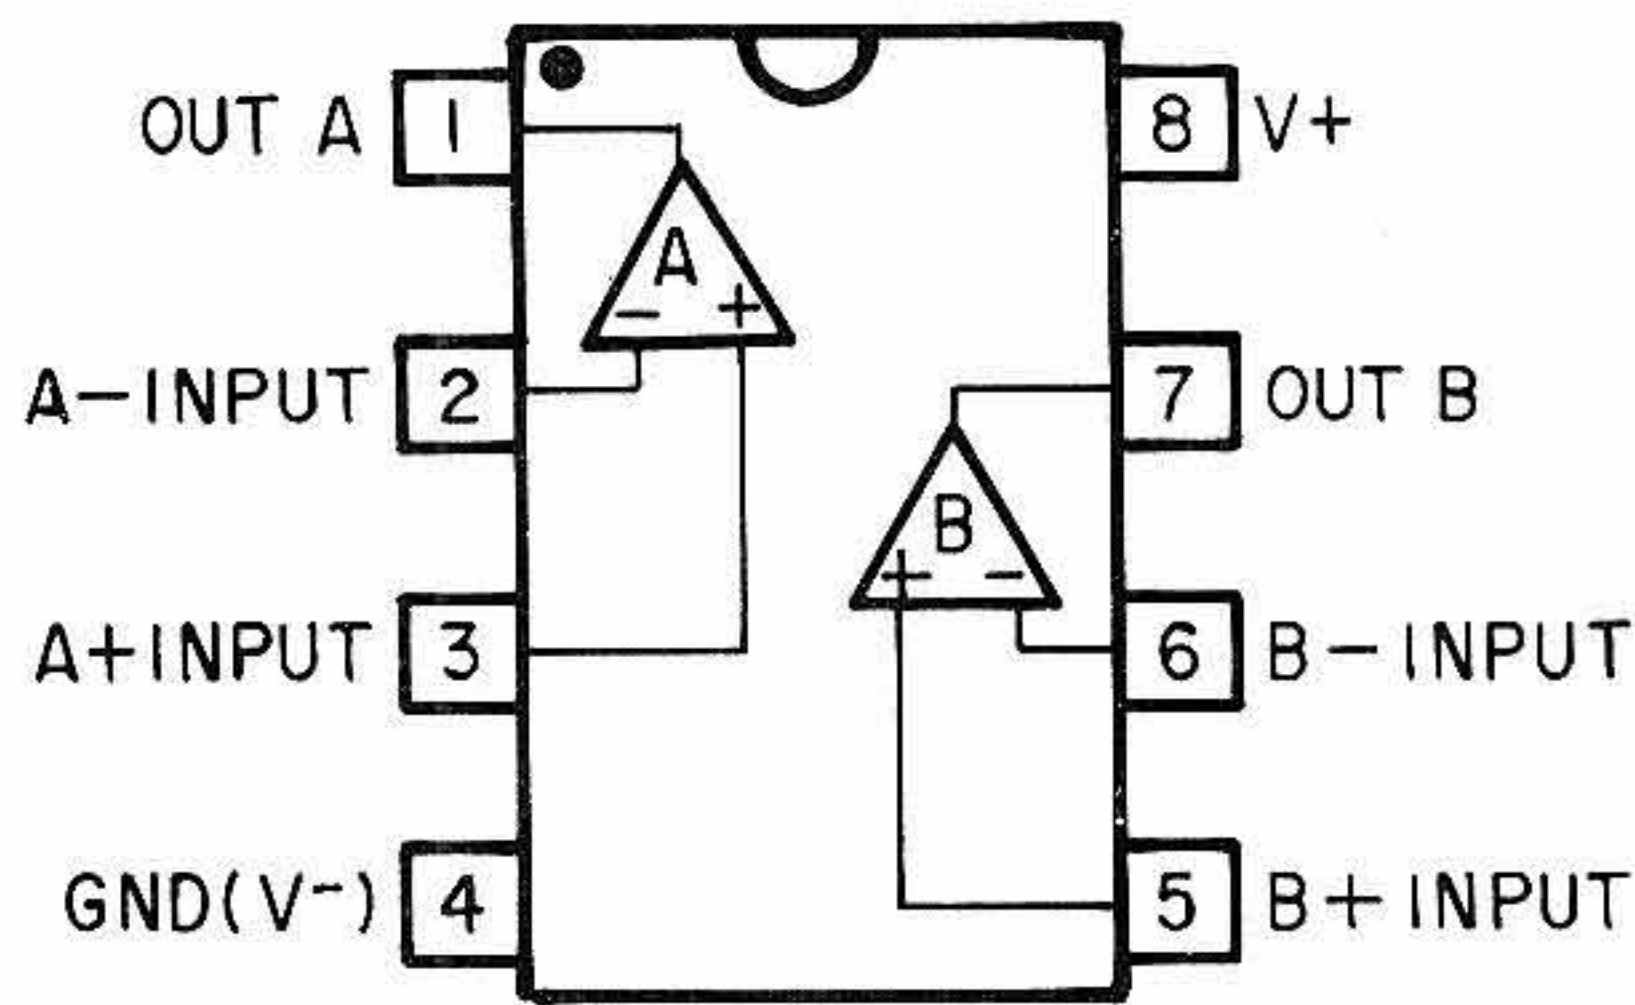



IC7 MB50ILVP-G

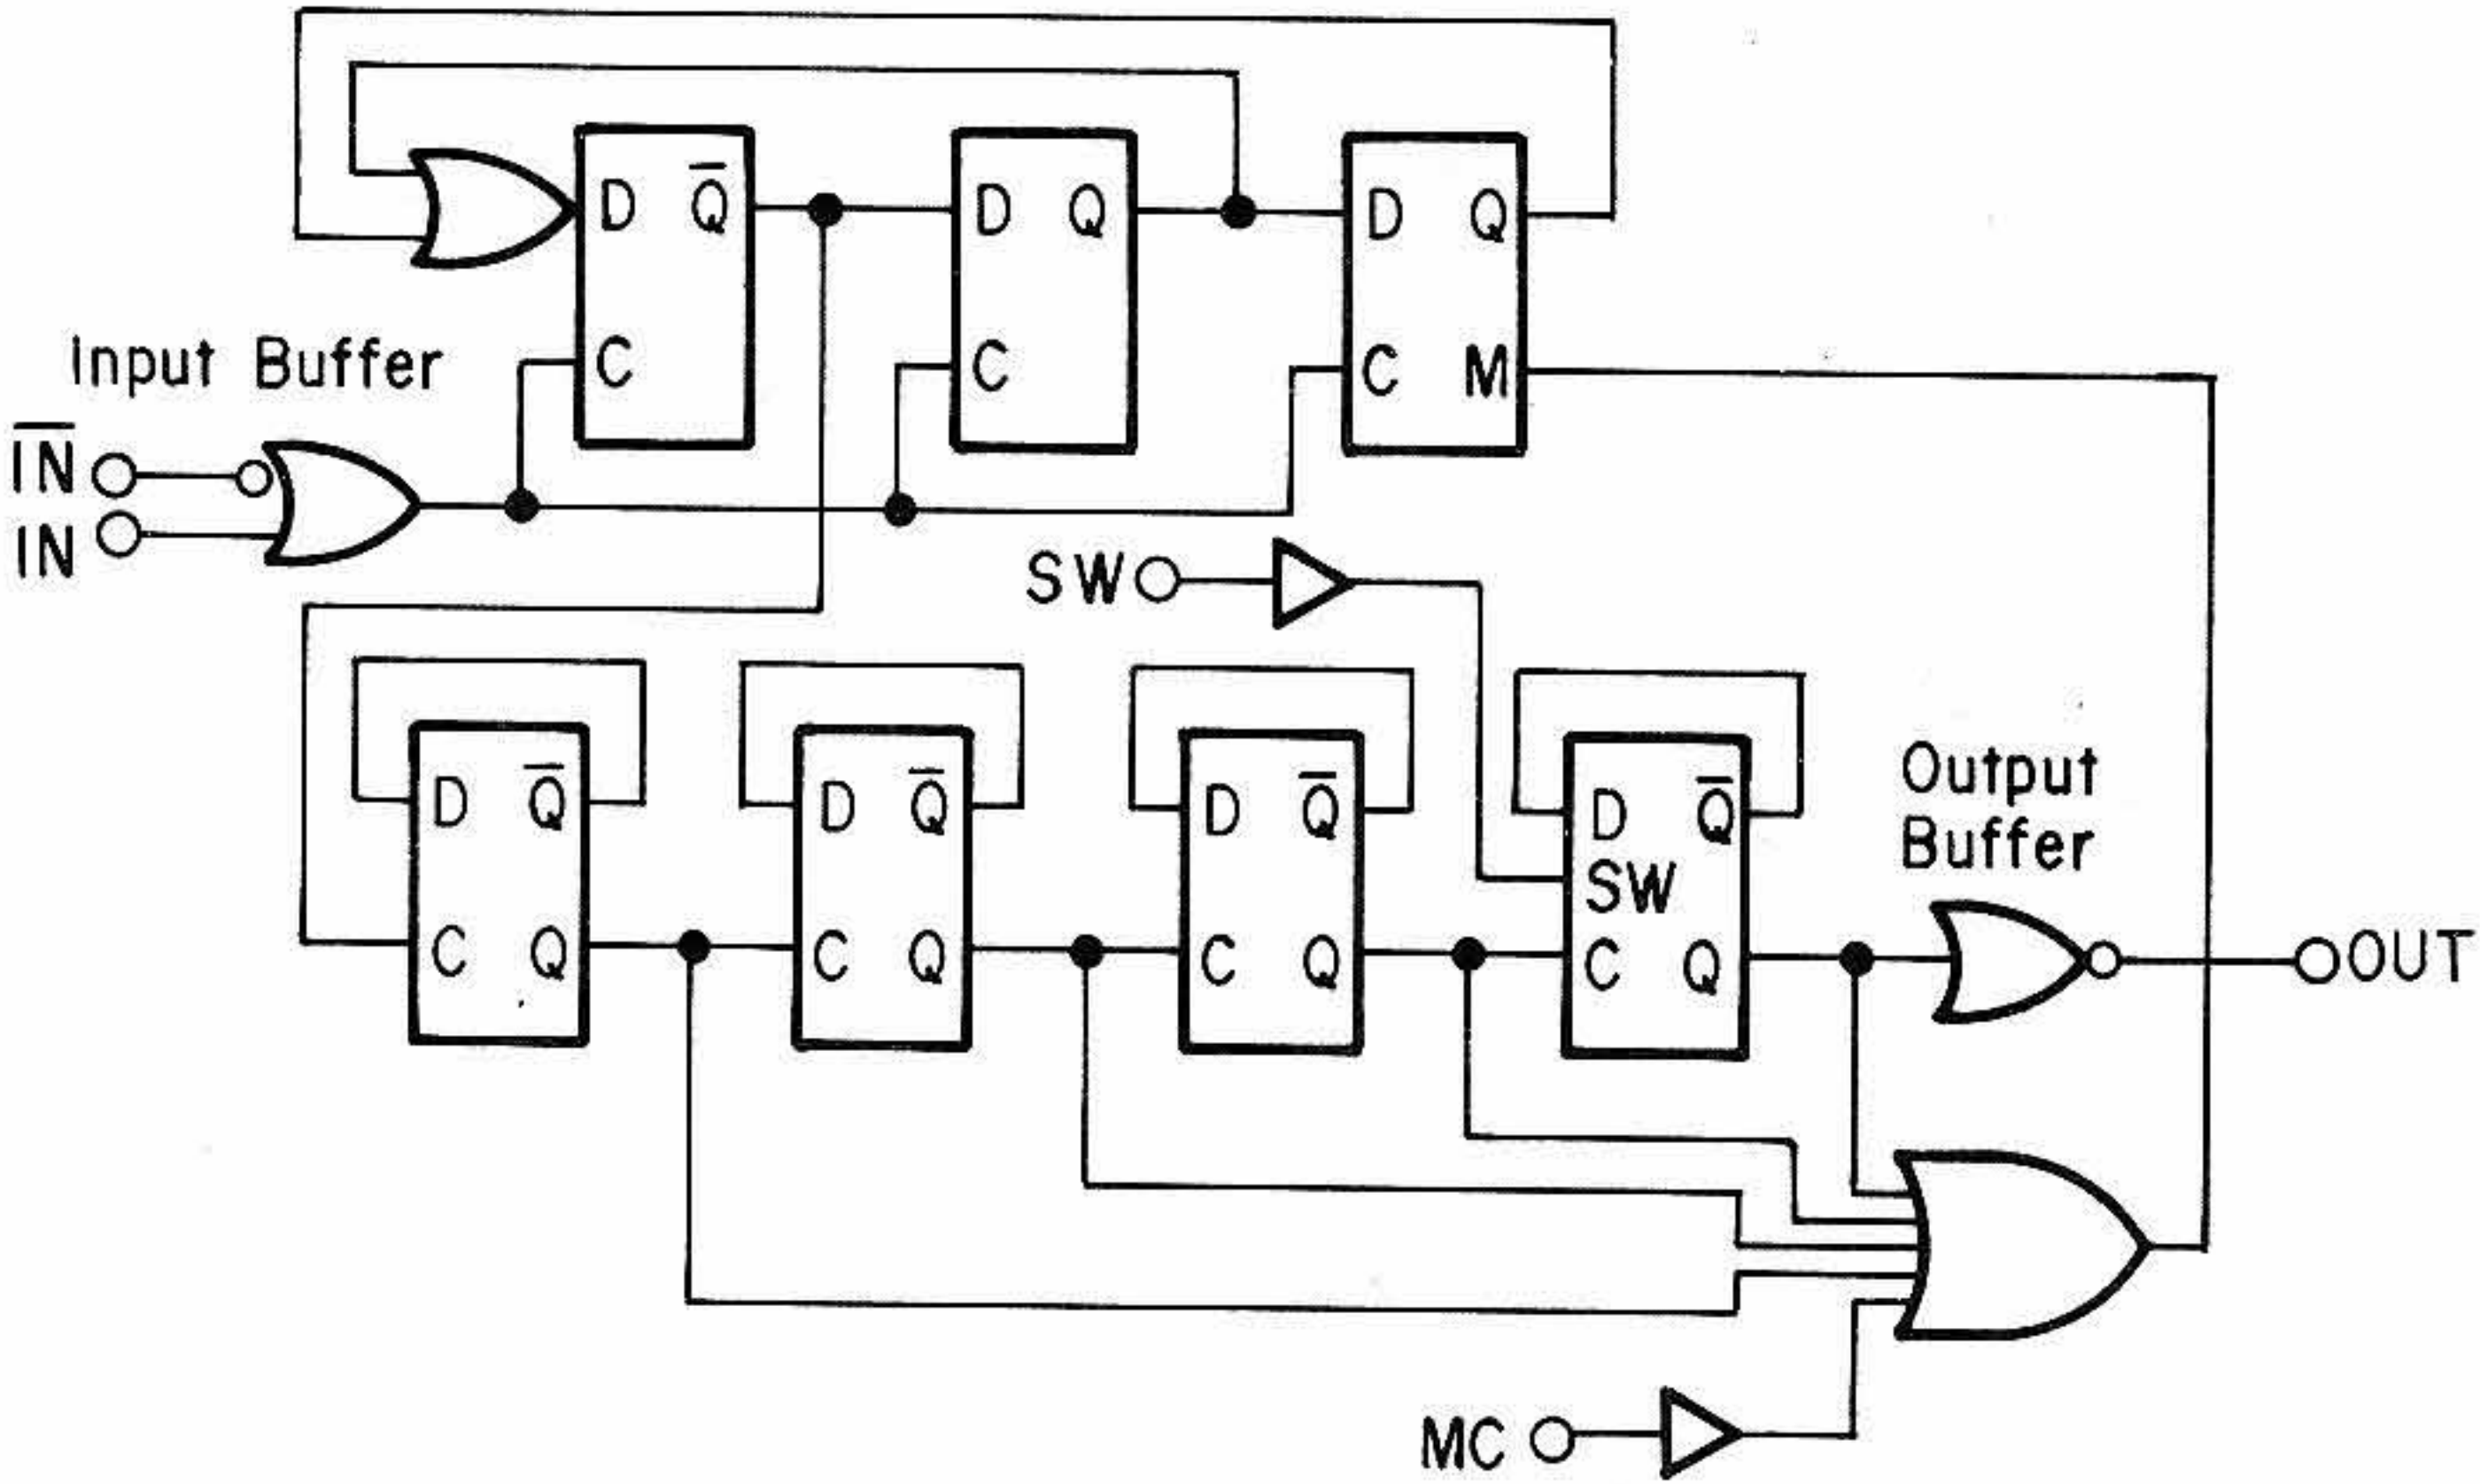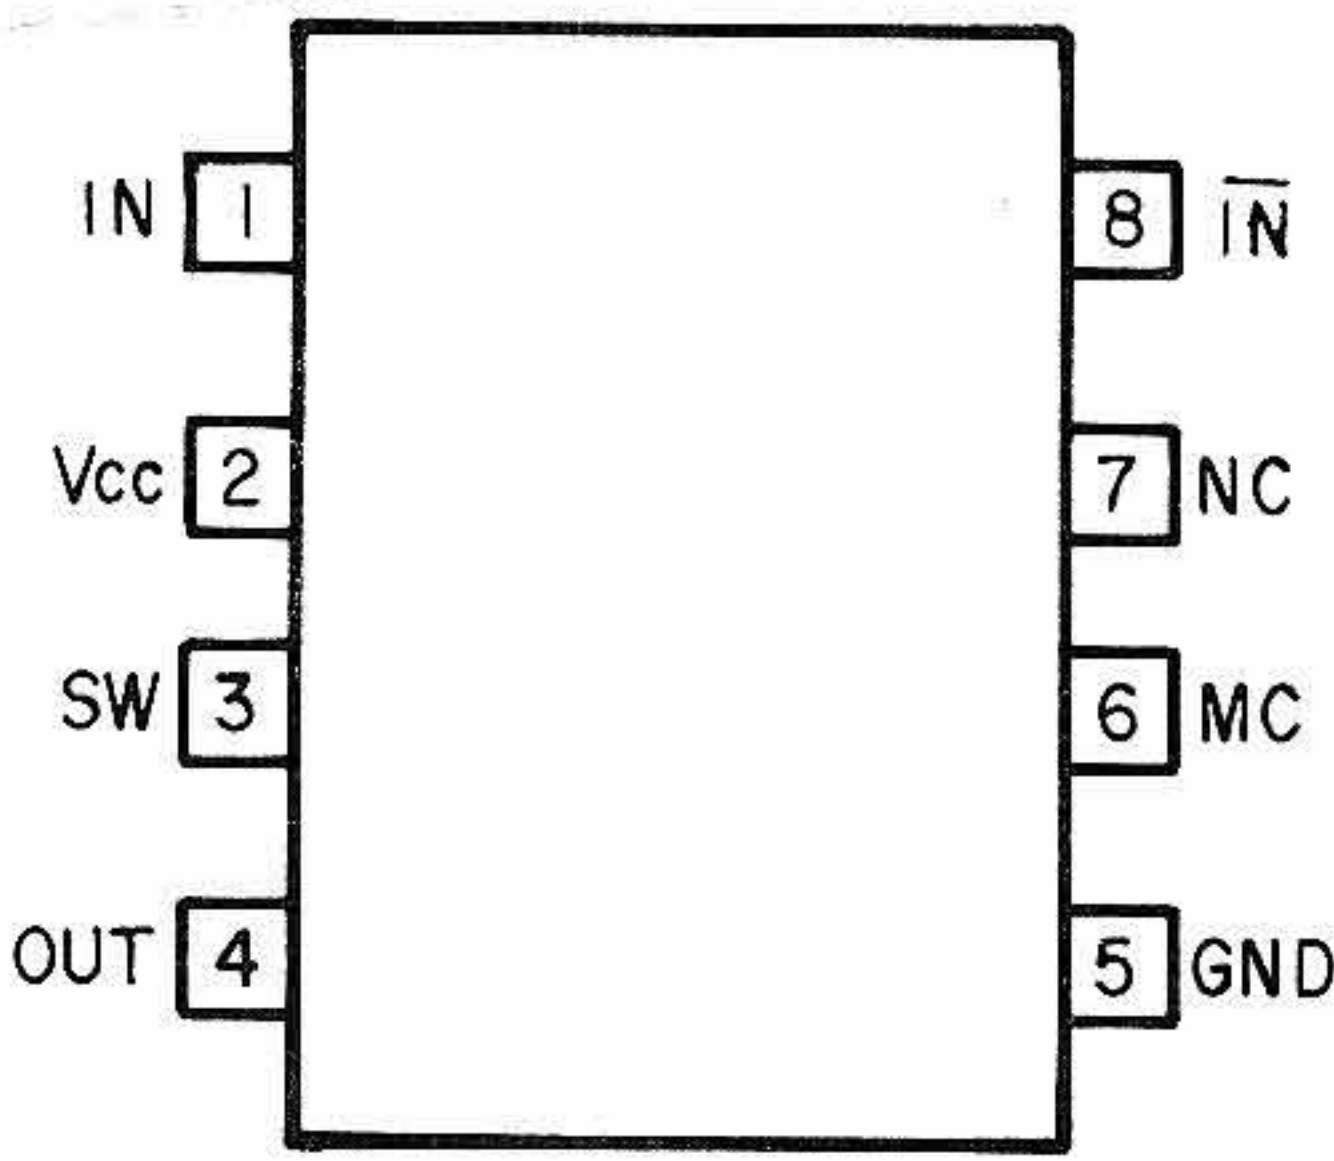



IC8 MB87006APF-G-BND

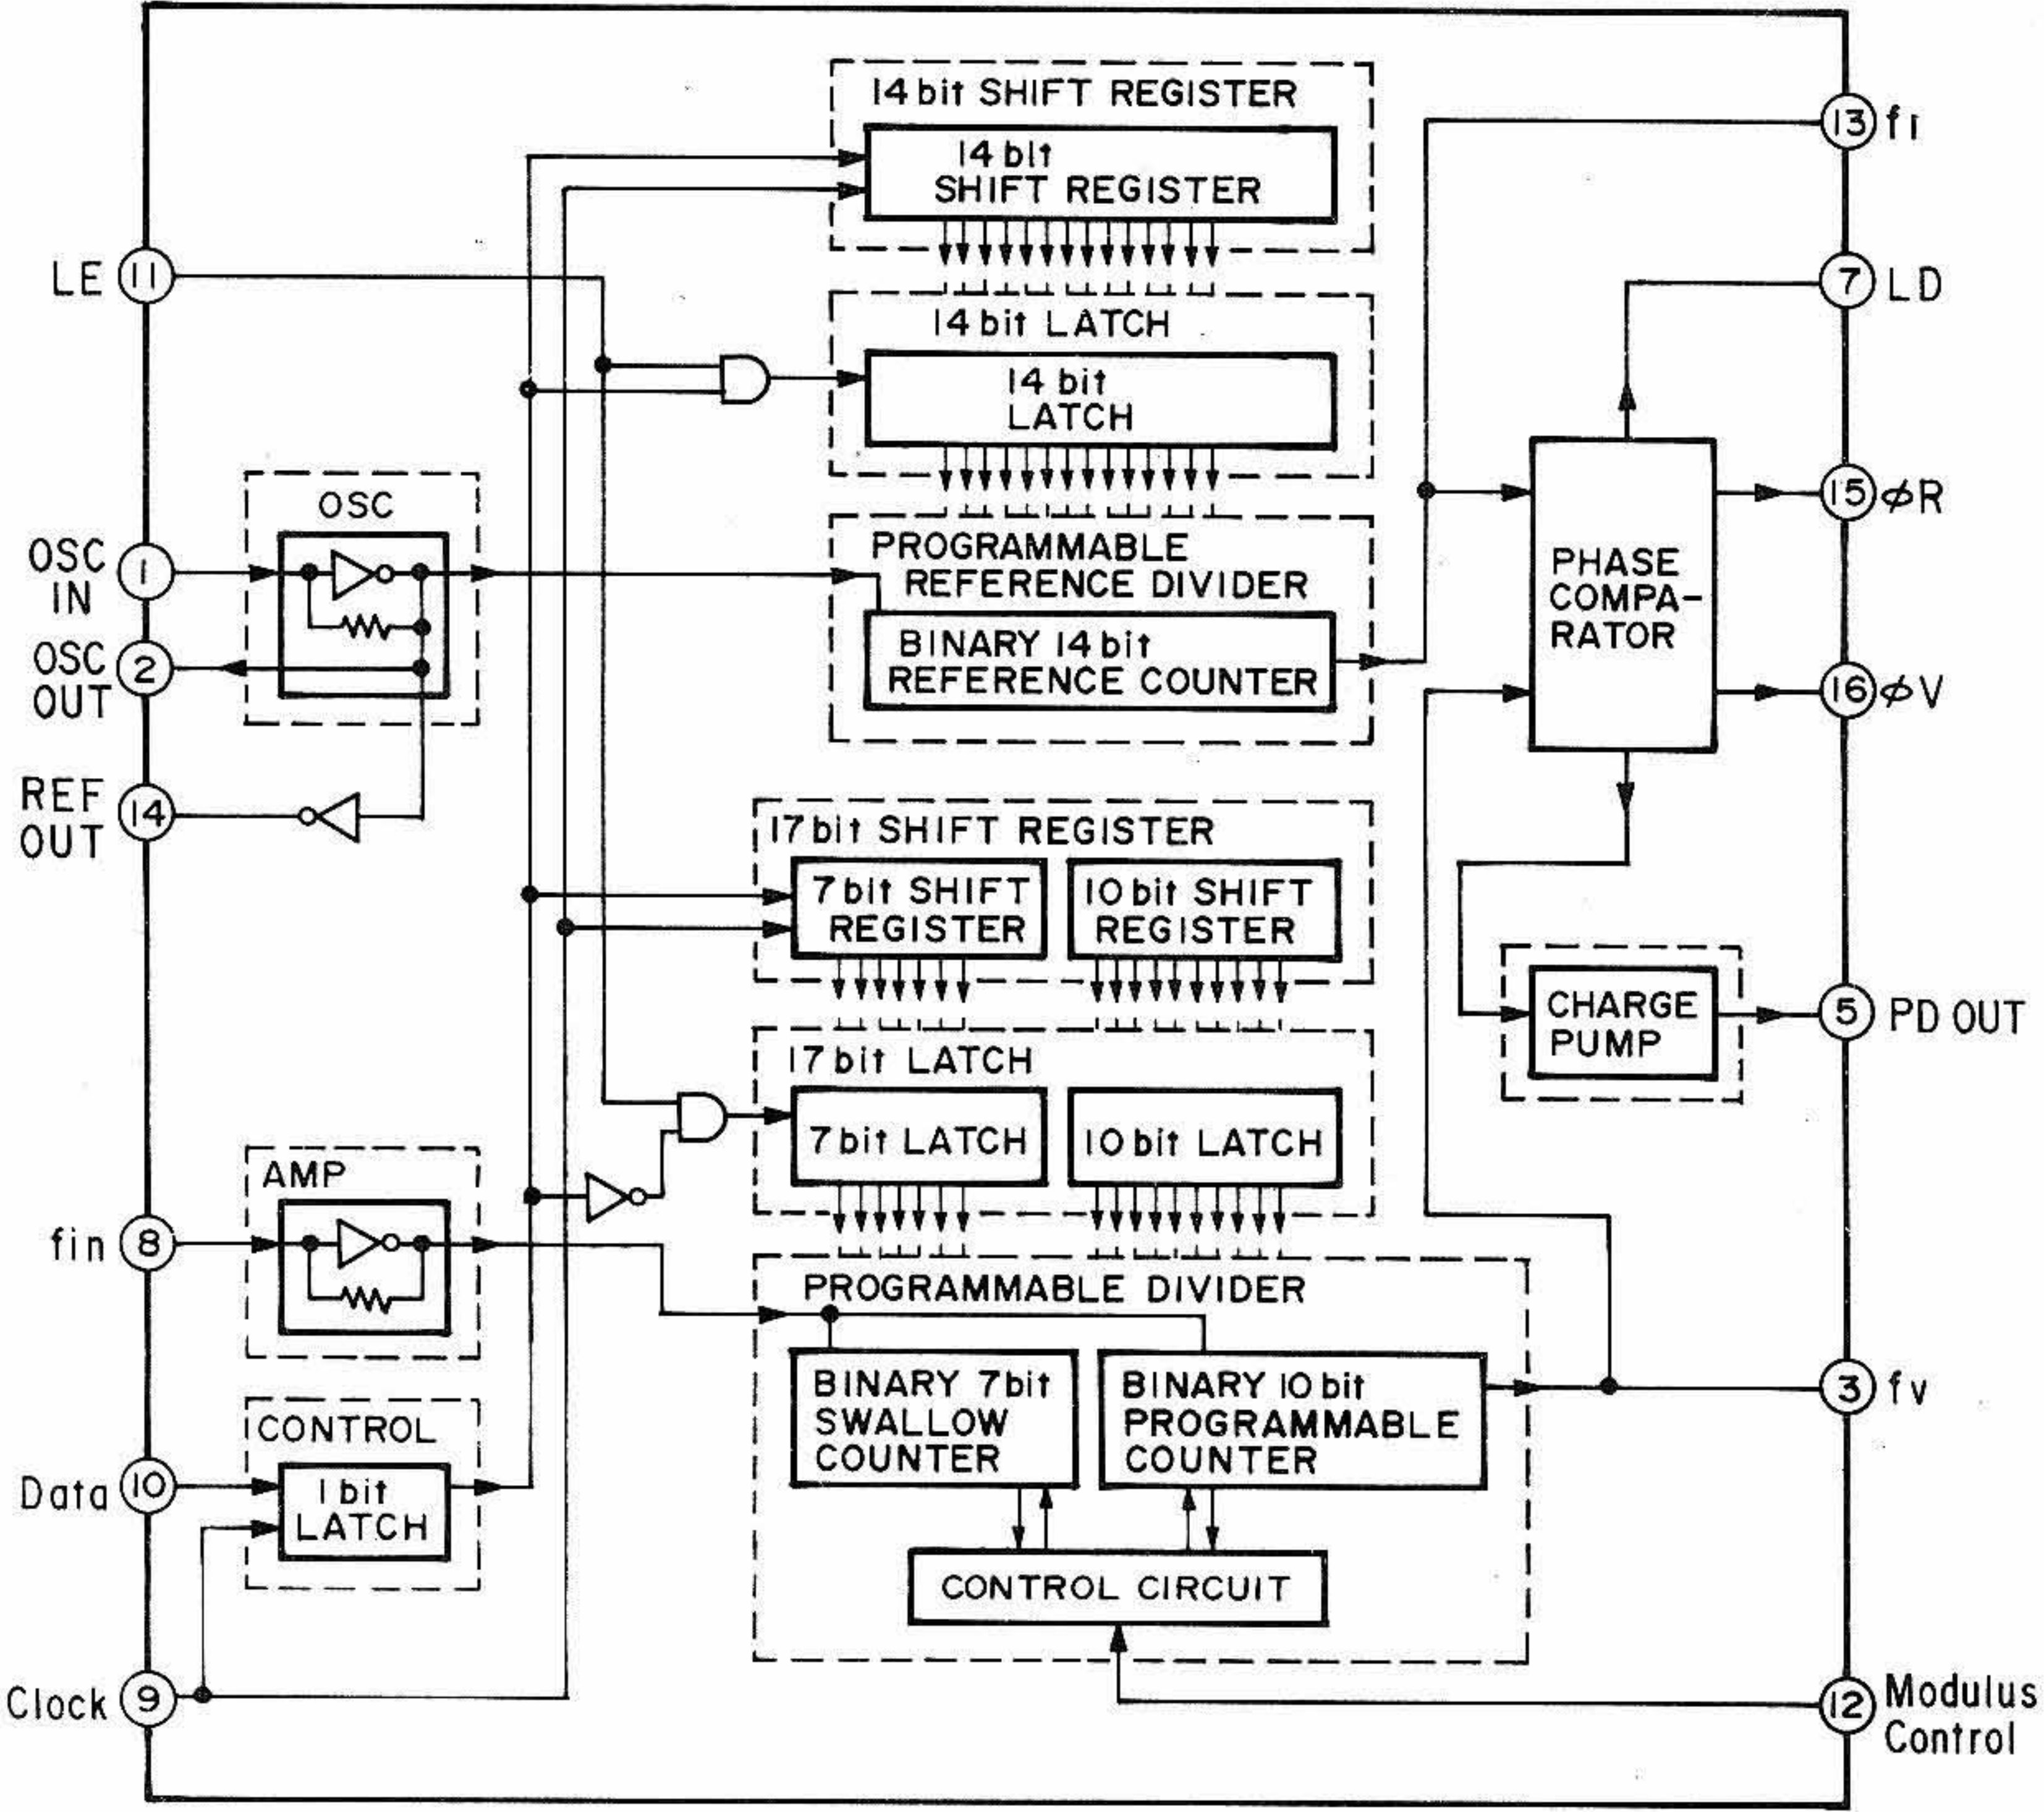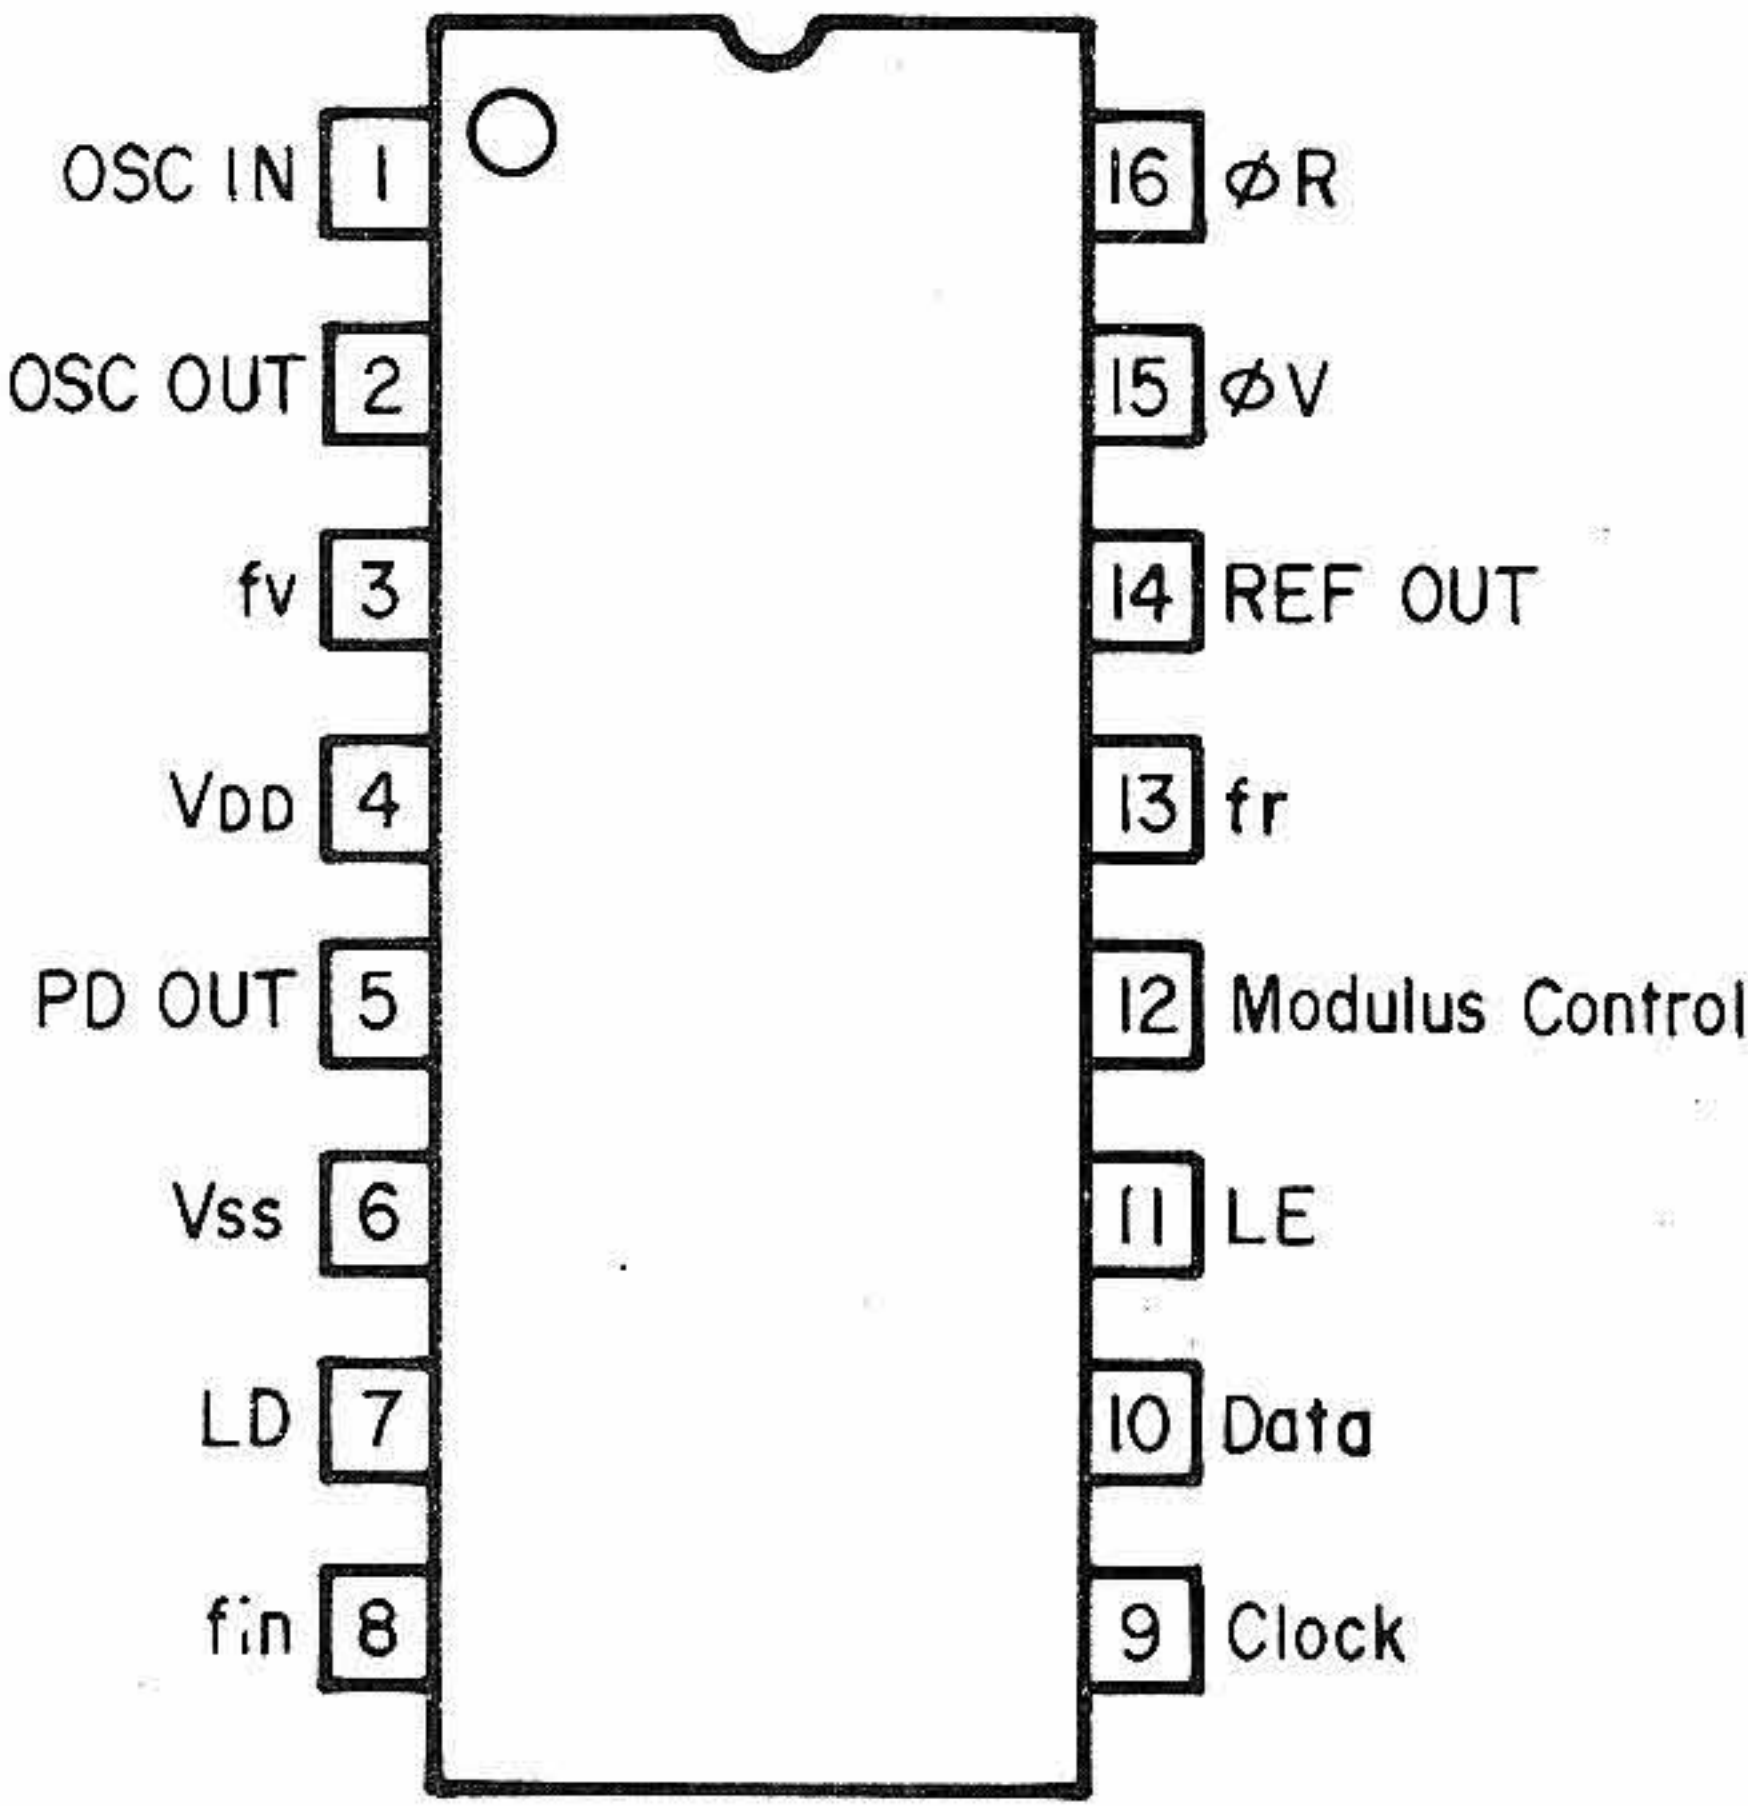

IC9 LM386N-1

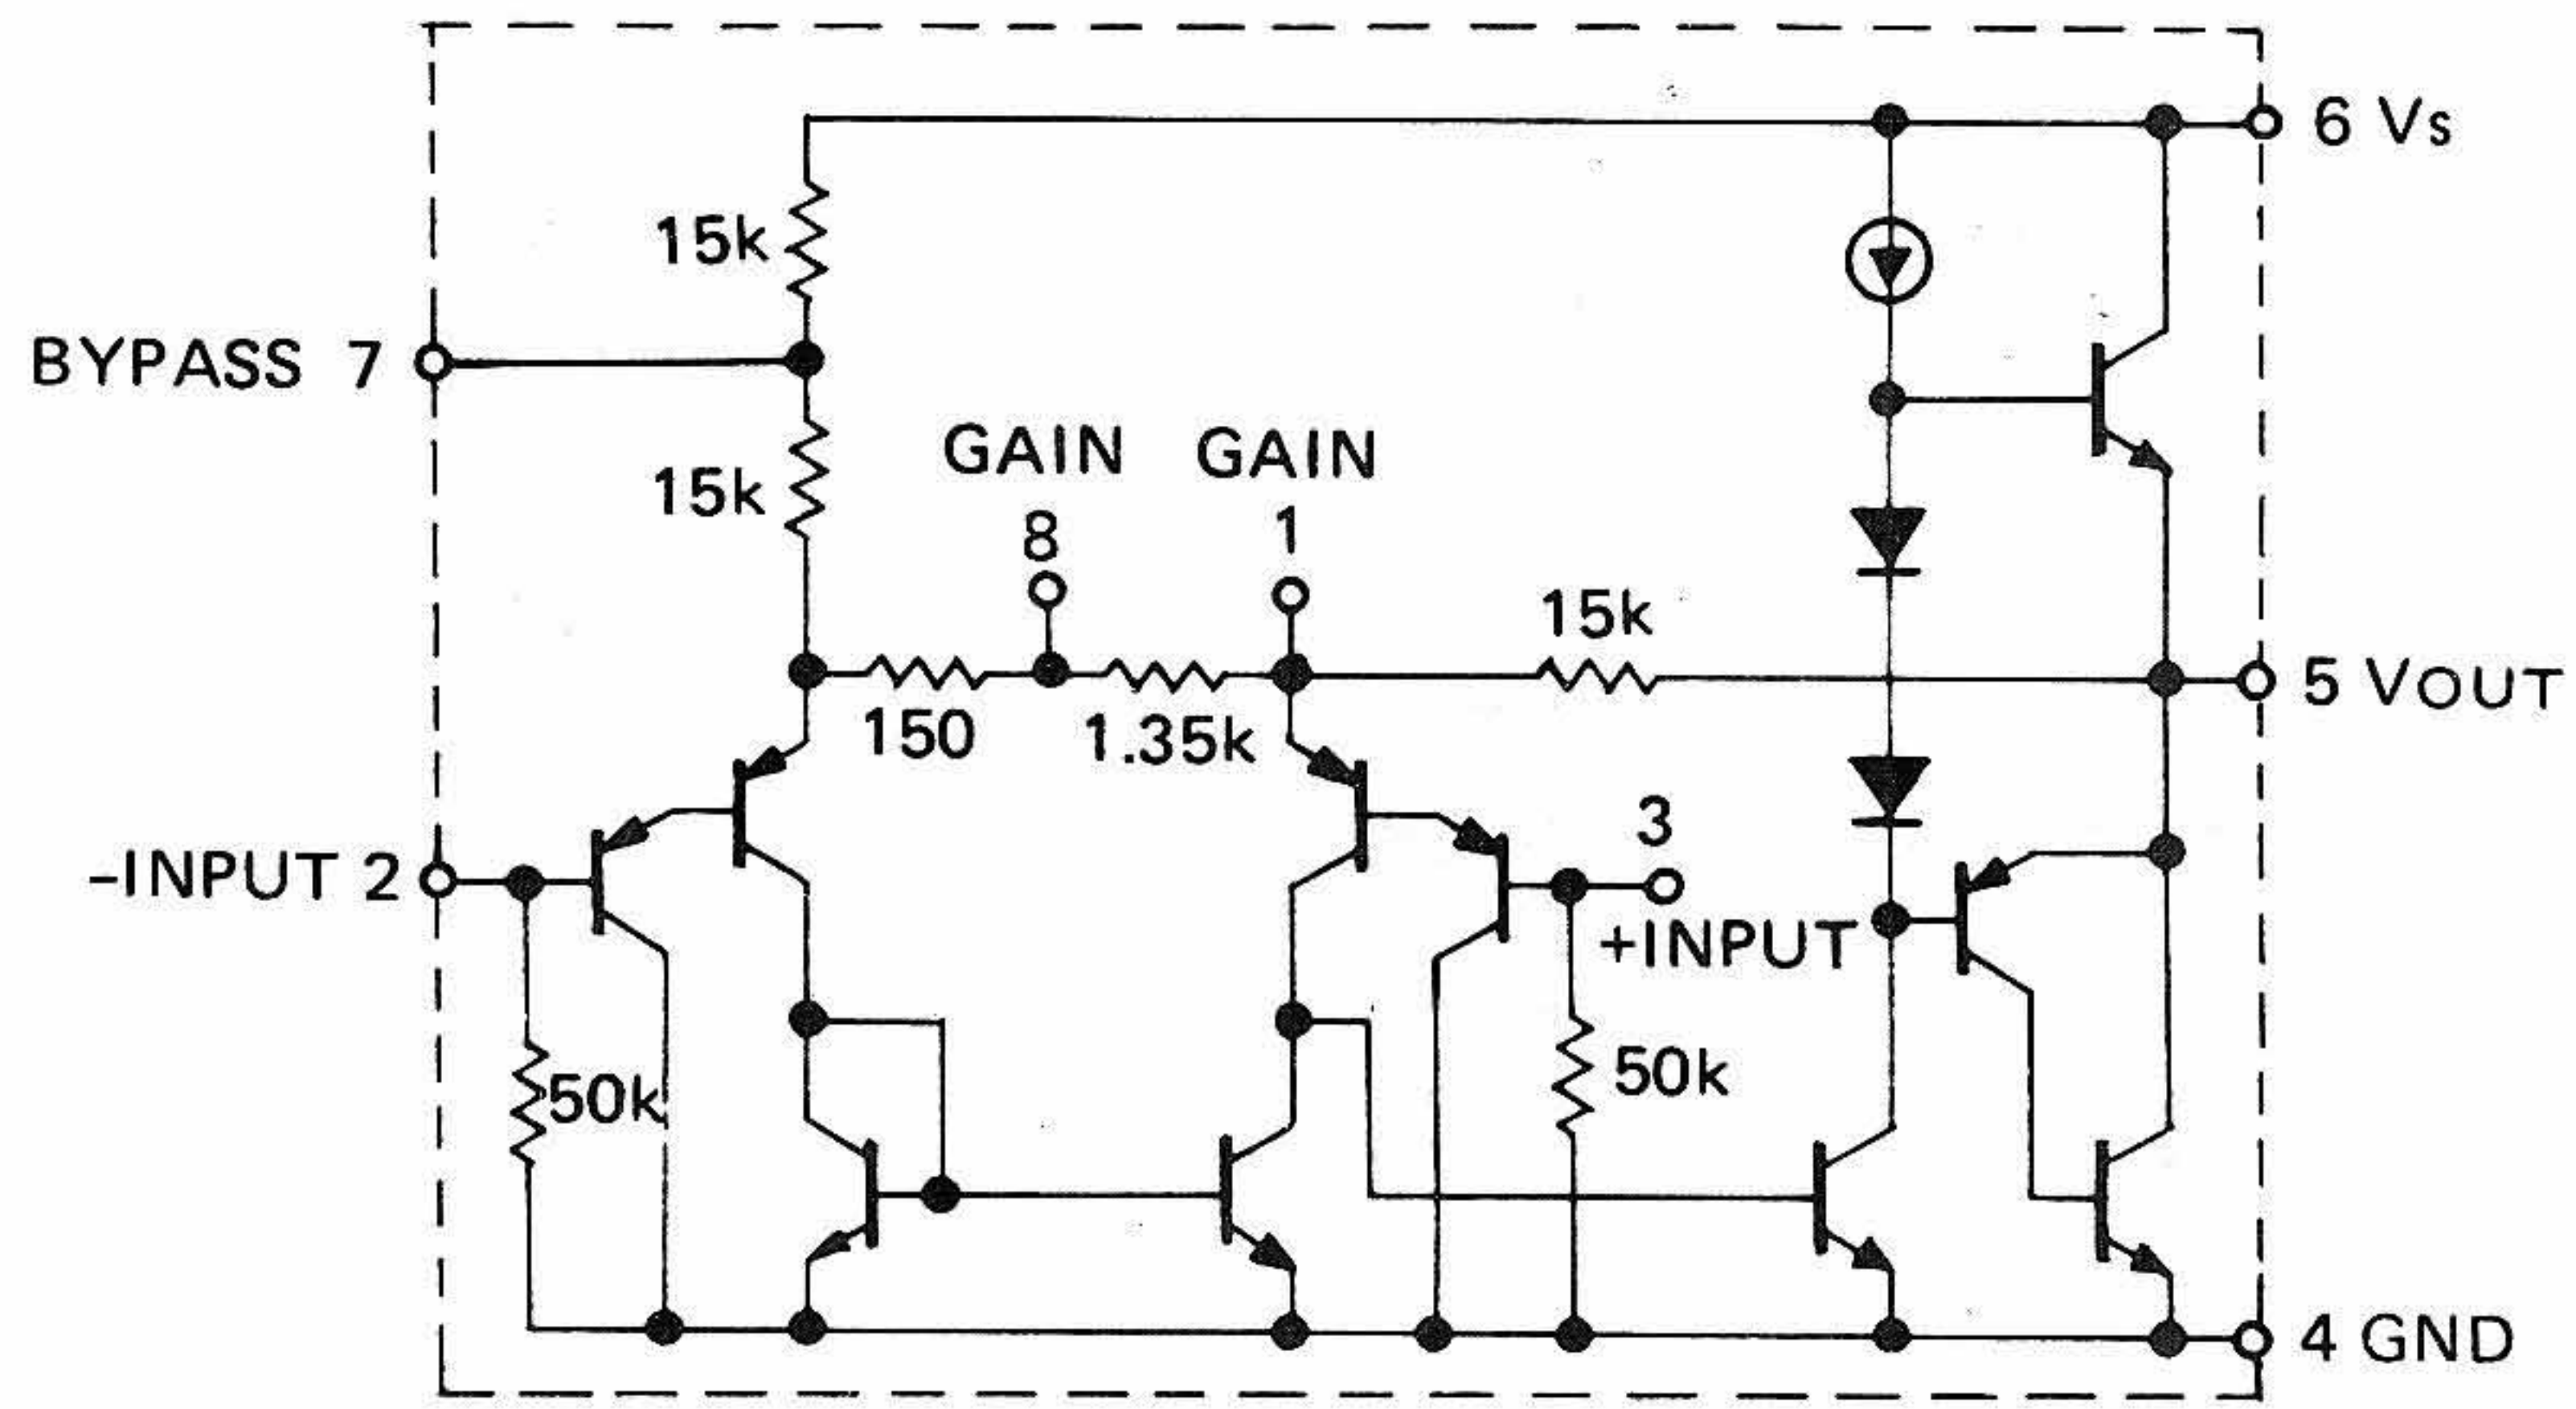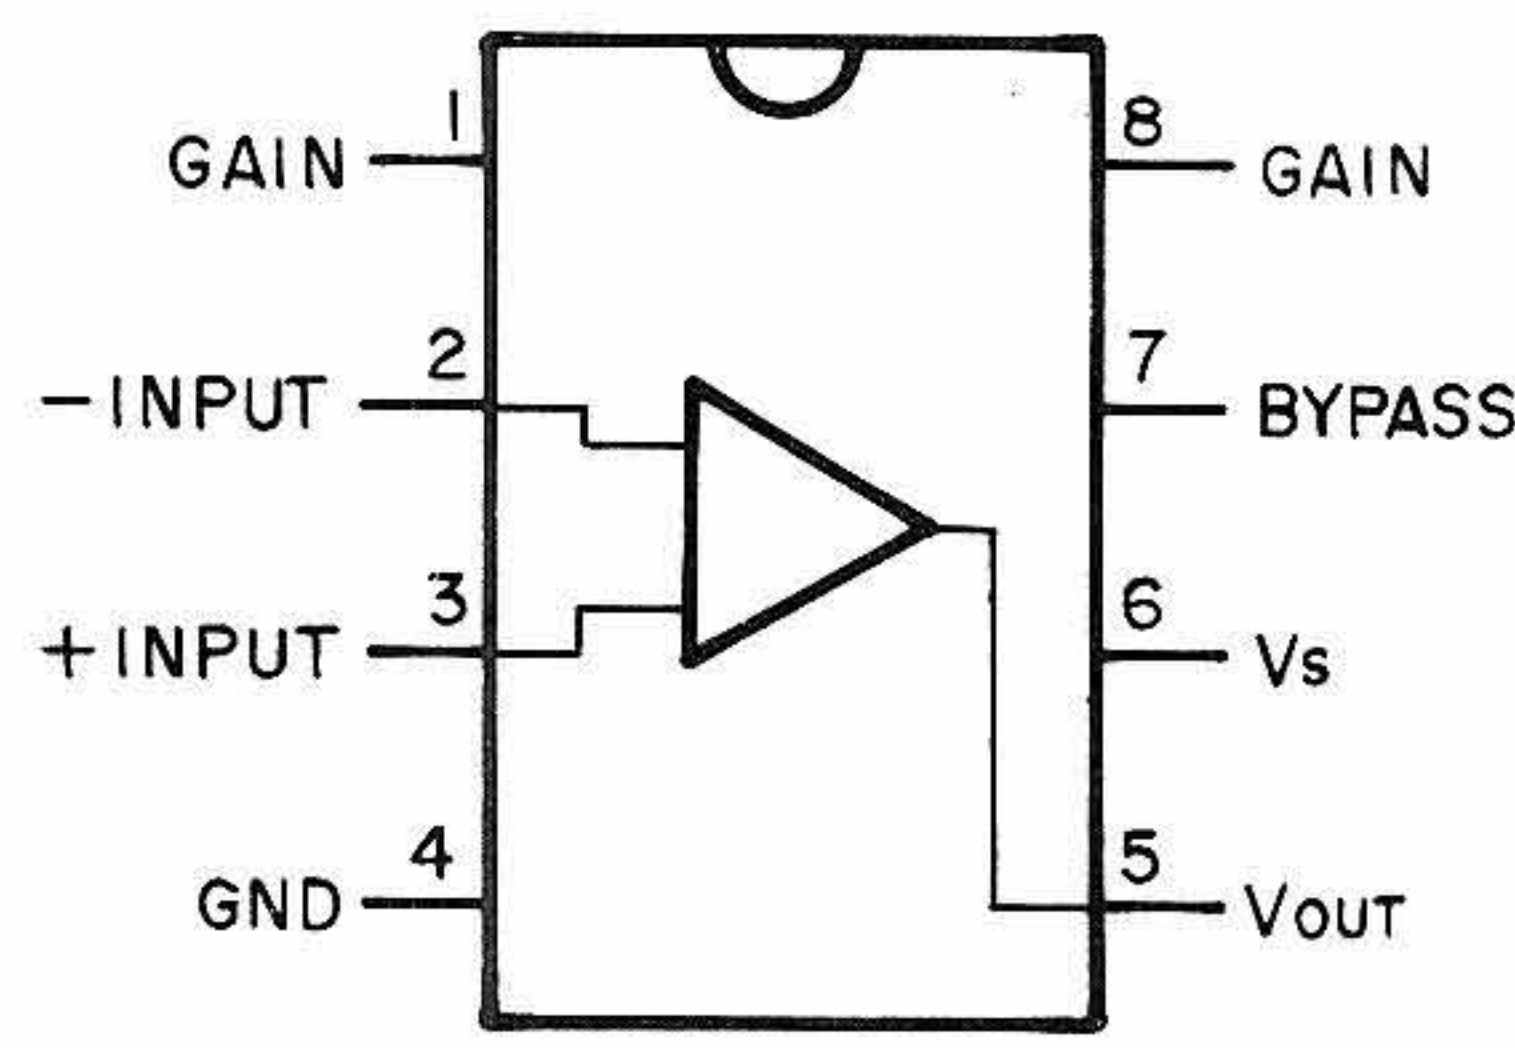


IC101 TK 10420

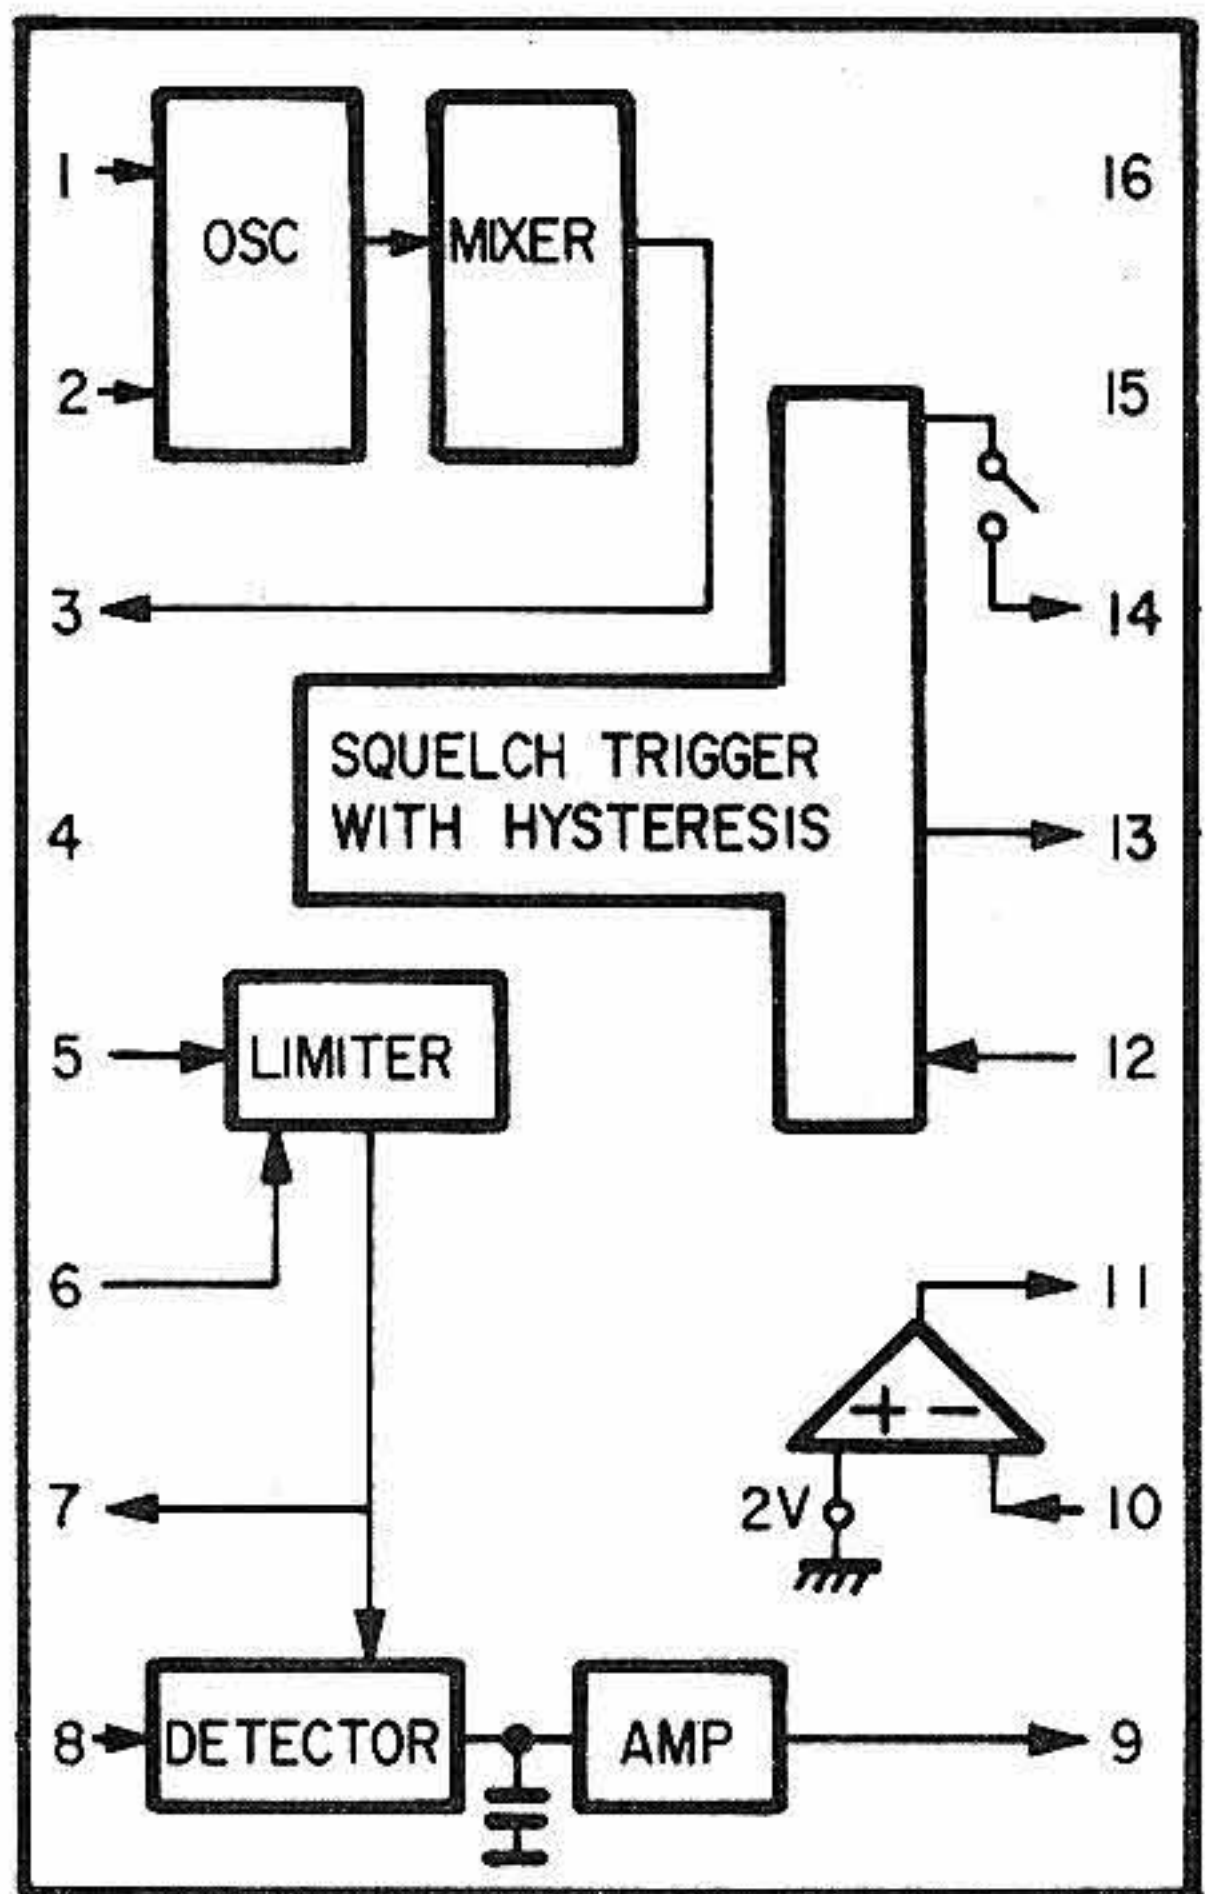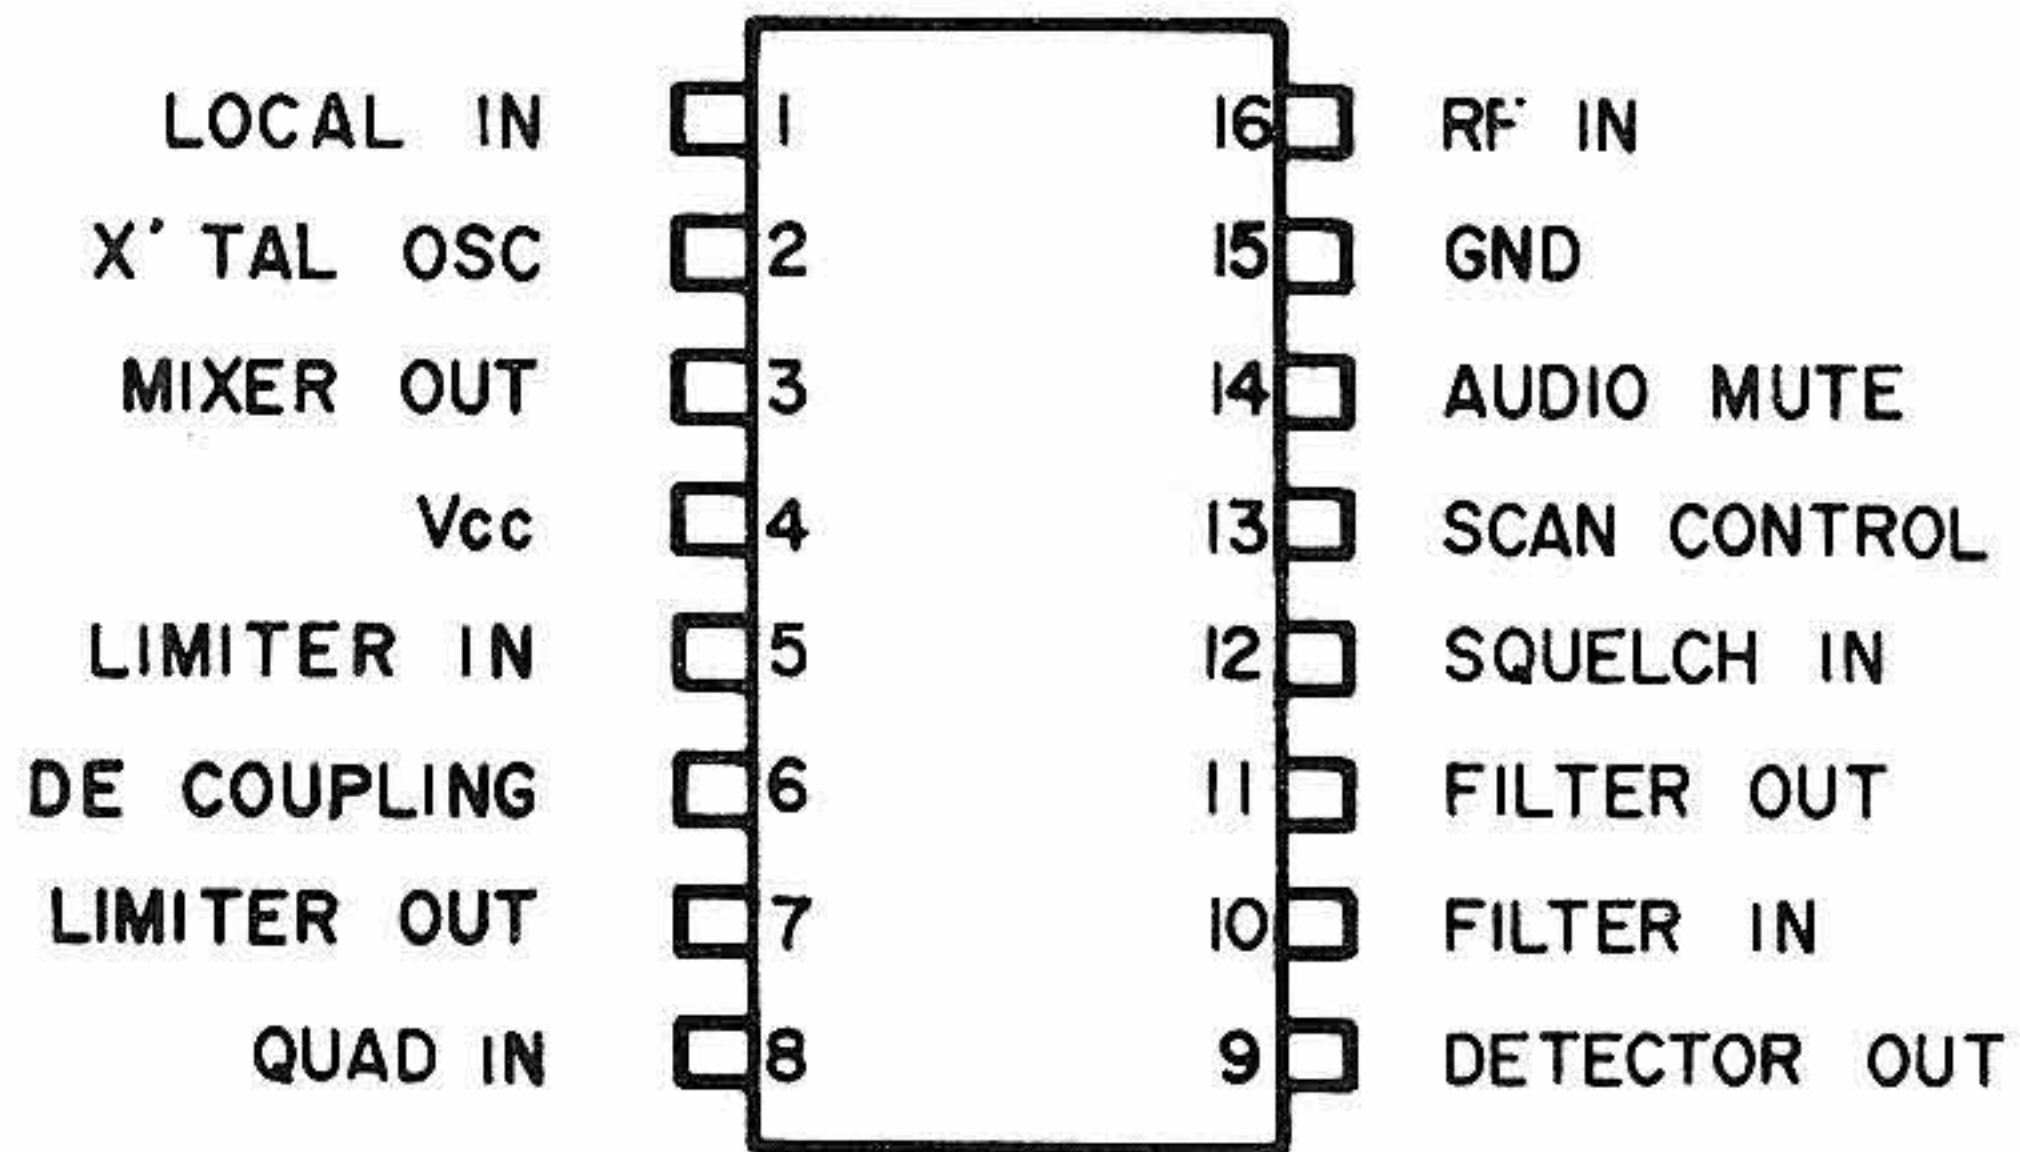


Transistor Lead Identification

(A) 2SC2712 (Y, O, GR)
2SC2714 (O)
2SC2732
2SC2734
2SC3356
RN2402
UN2111

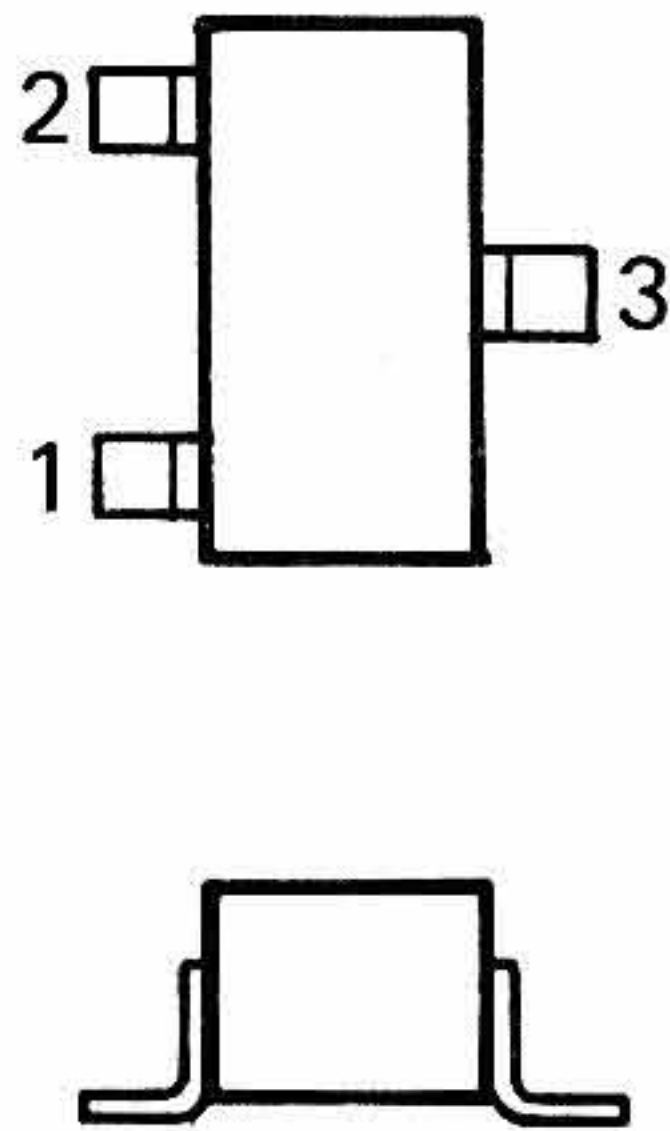


- 1. Emitter
- 2. Base
- 3. Collector

(B) 2SA1150 (Y)
2SC2458 (GR)
RN2202
UN4111

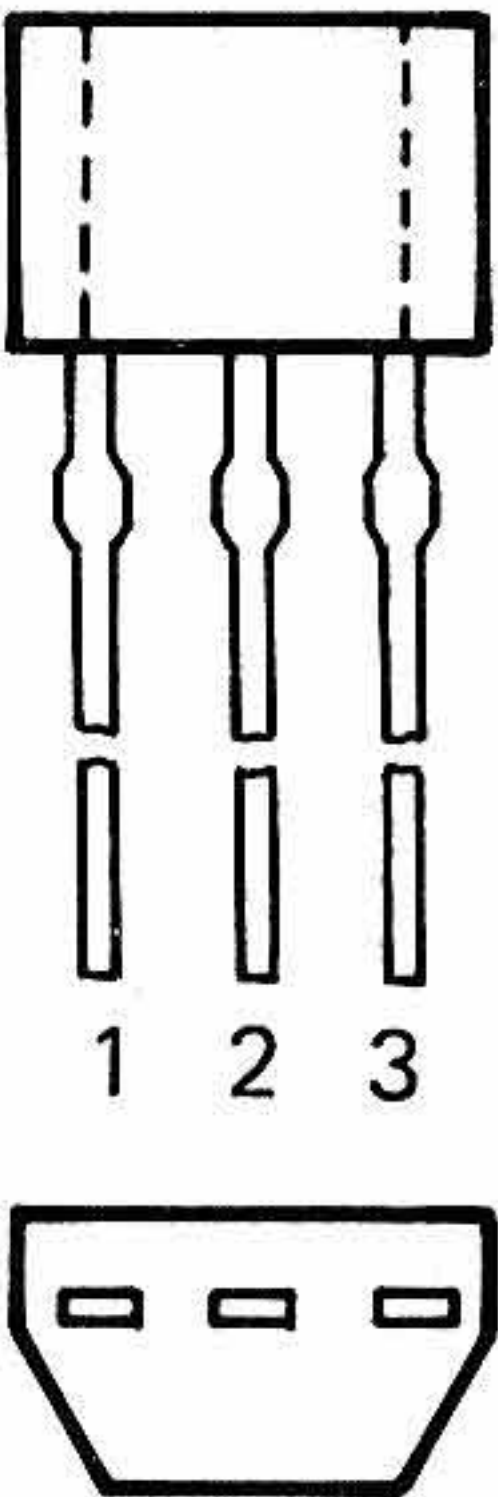


- 1. Emitter
- 2. Collector
- 3. Base

(C) 3SK126 (O)
3SK136 (IV)

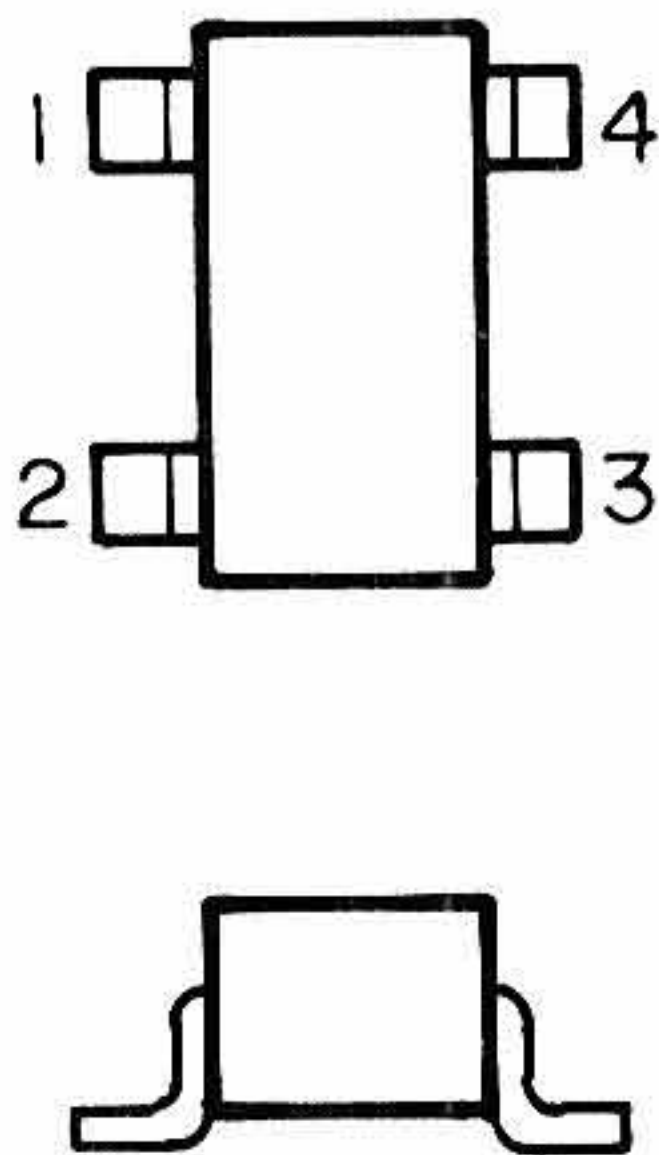


- 1. Gate 1
- 2. Gate 2
- 3. Drain
- 4. Source

(D) 2SK208

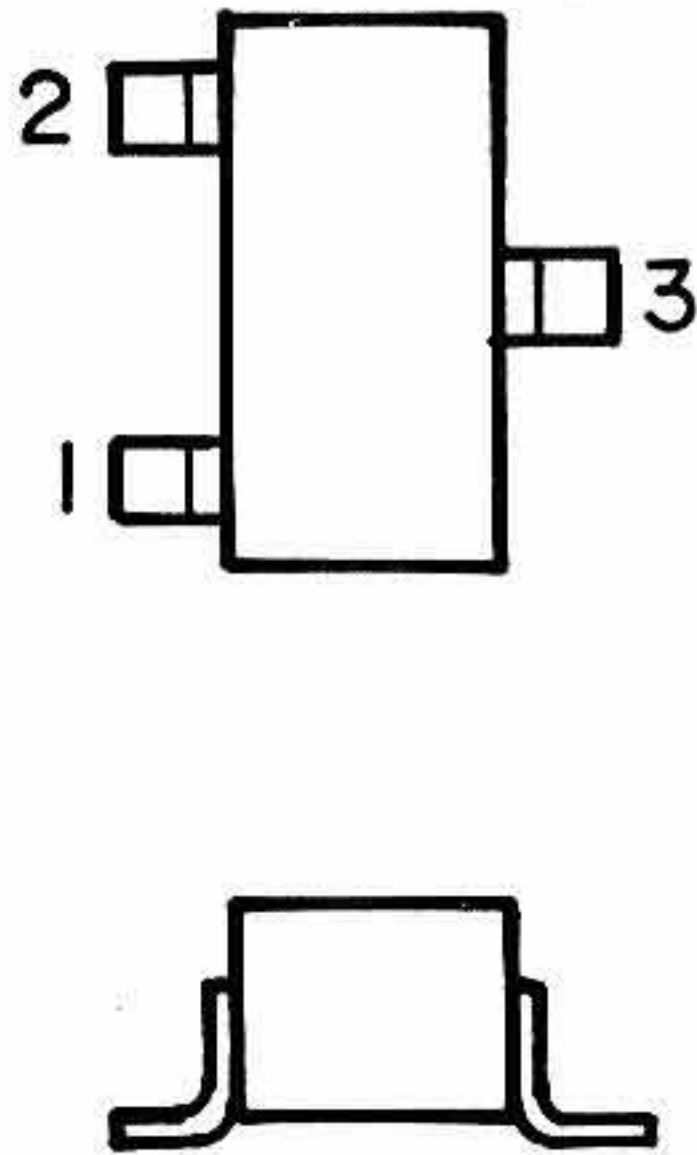

- 1. Drain
- 2. Source
- 3. Gate


(E) 2SK118 (O or R)

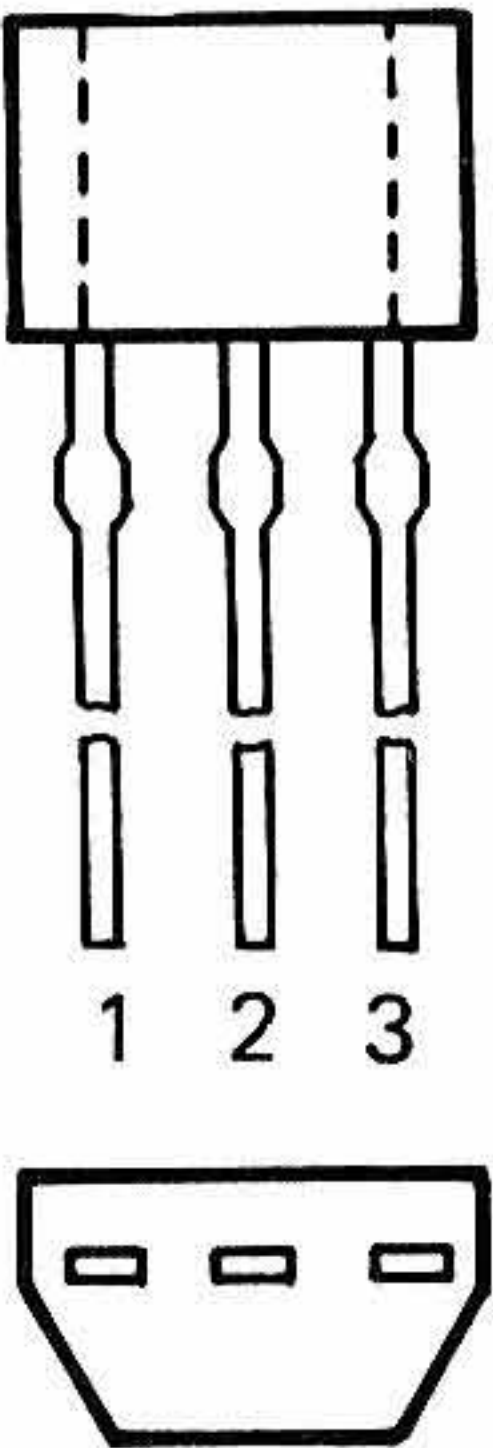


- 1. Source
- 2. Gate
- 3. Drain

Diode Identification and Lead Polarity


A) 1SS168U2

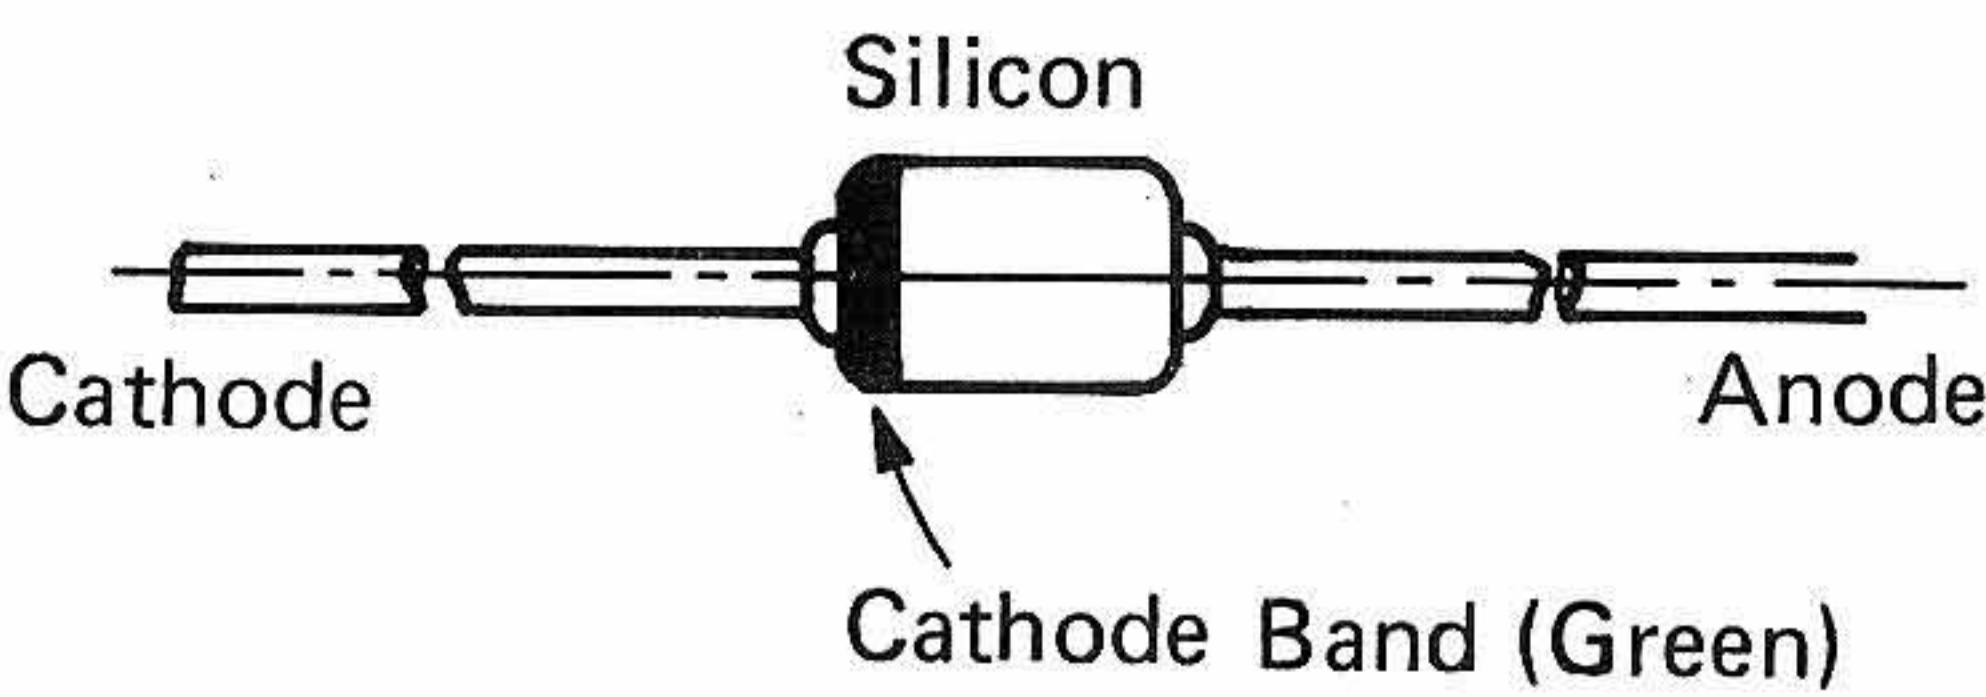


B) 1S2076A

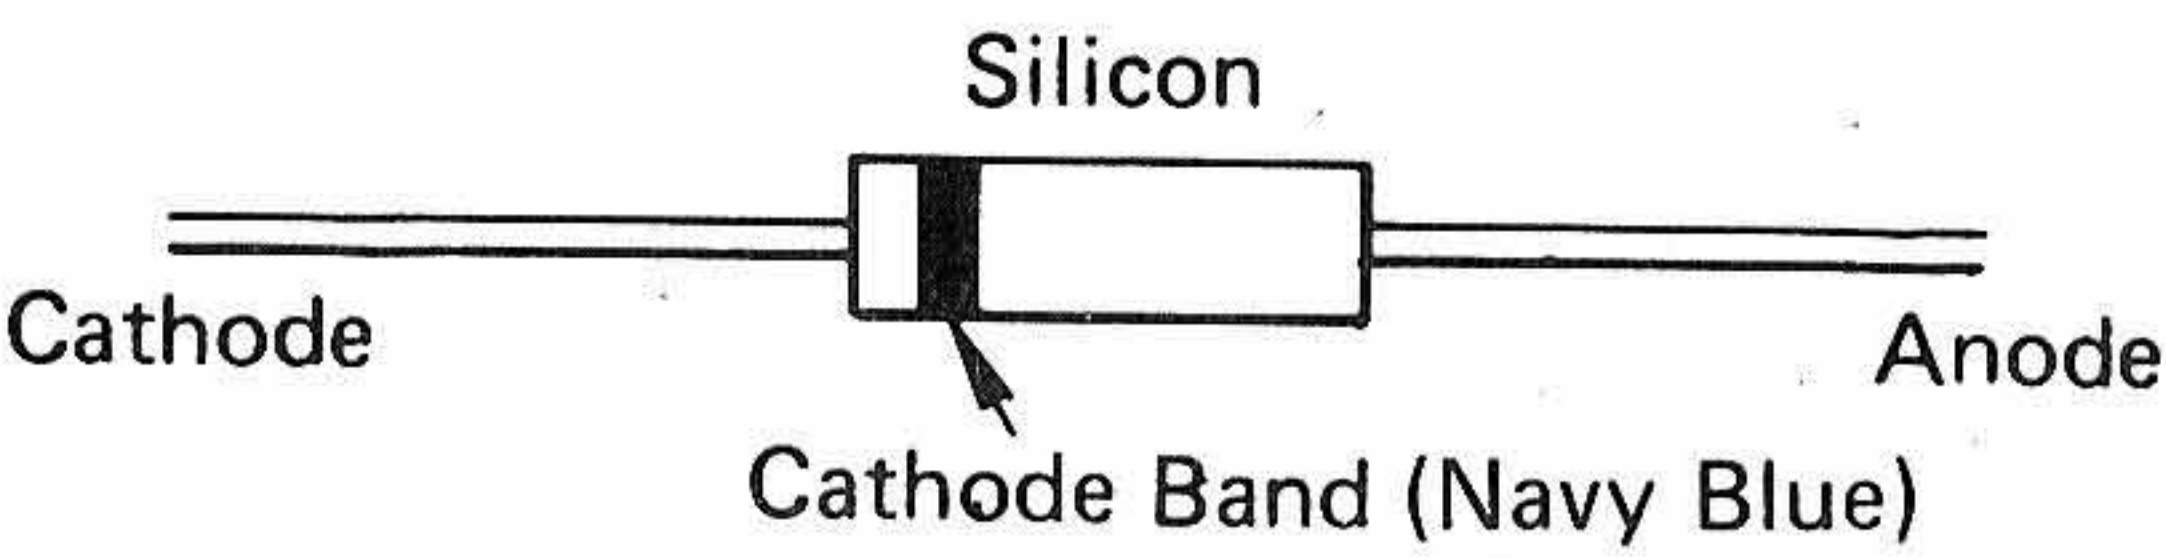


C) HZ6A1L, HZ12B2L
HZ16-3L

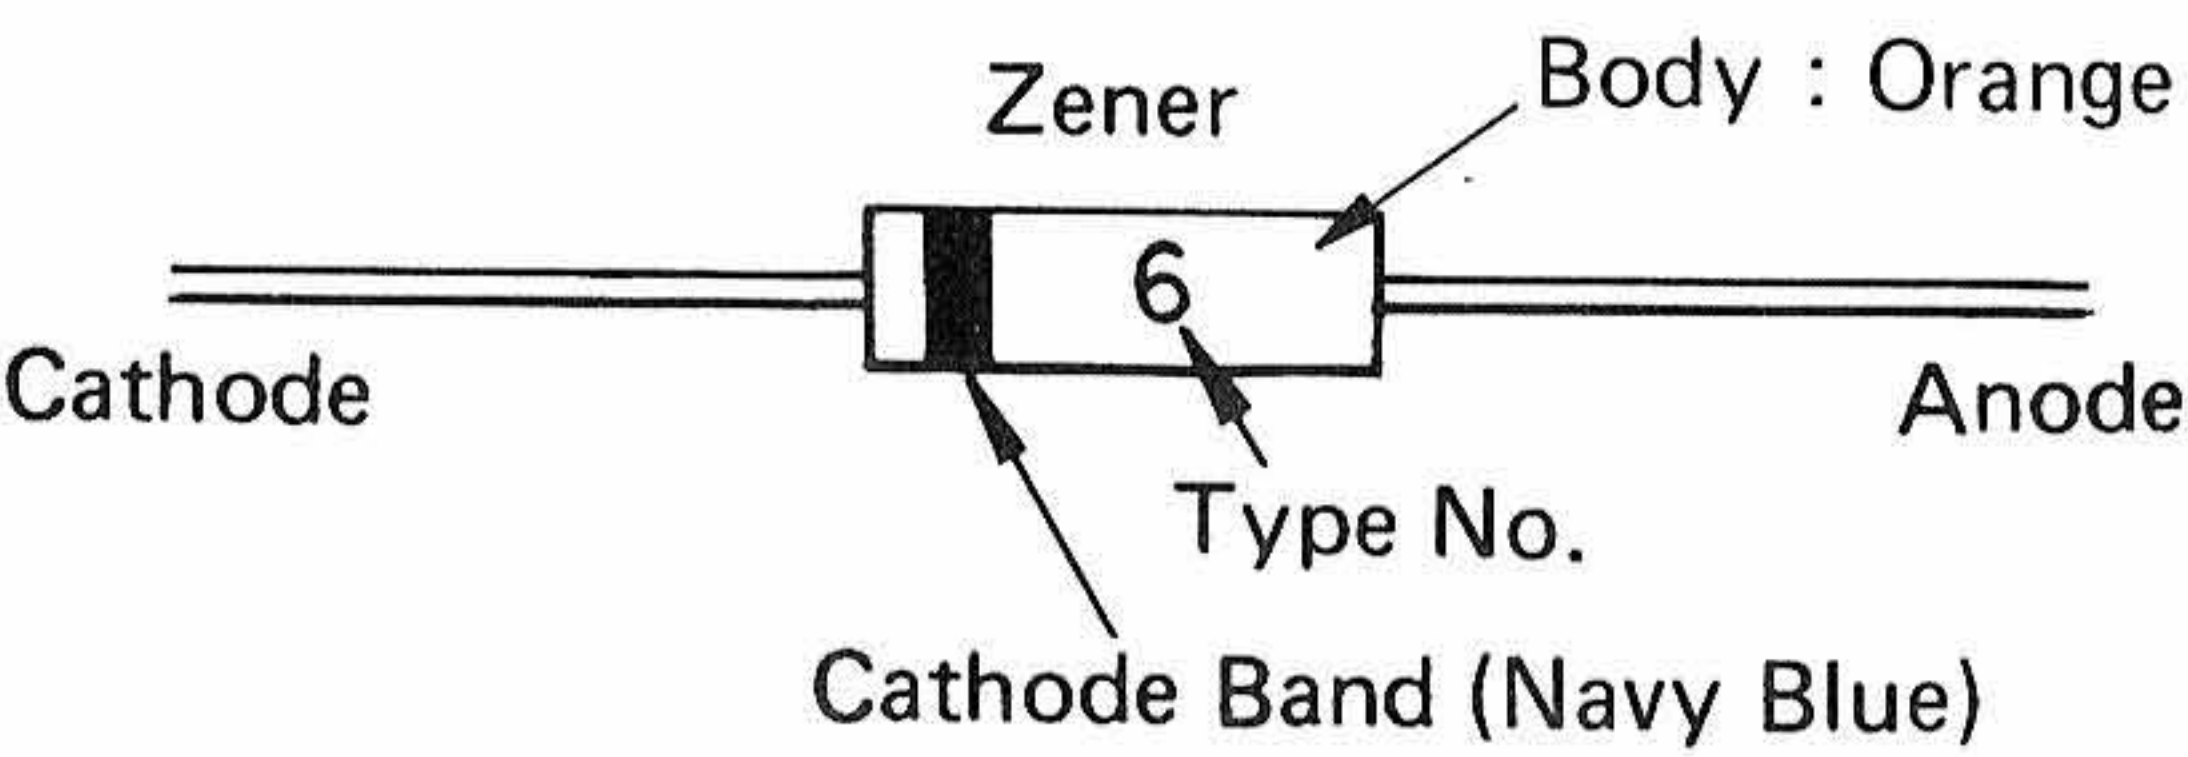


D) BB609A

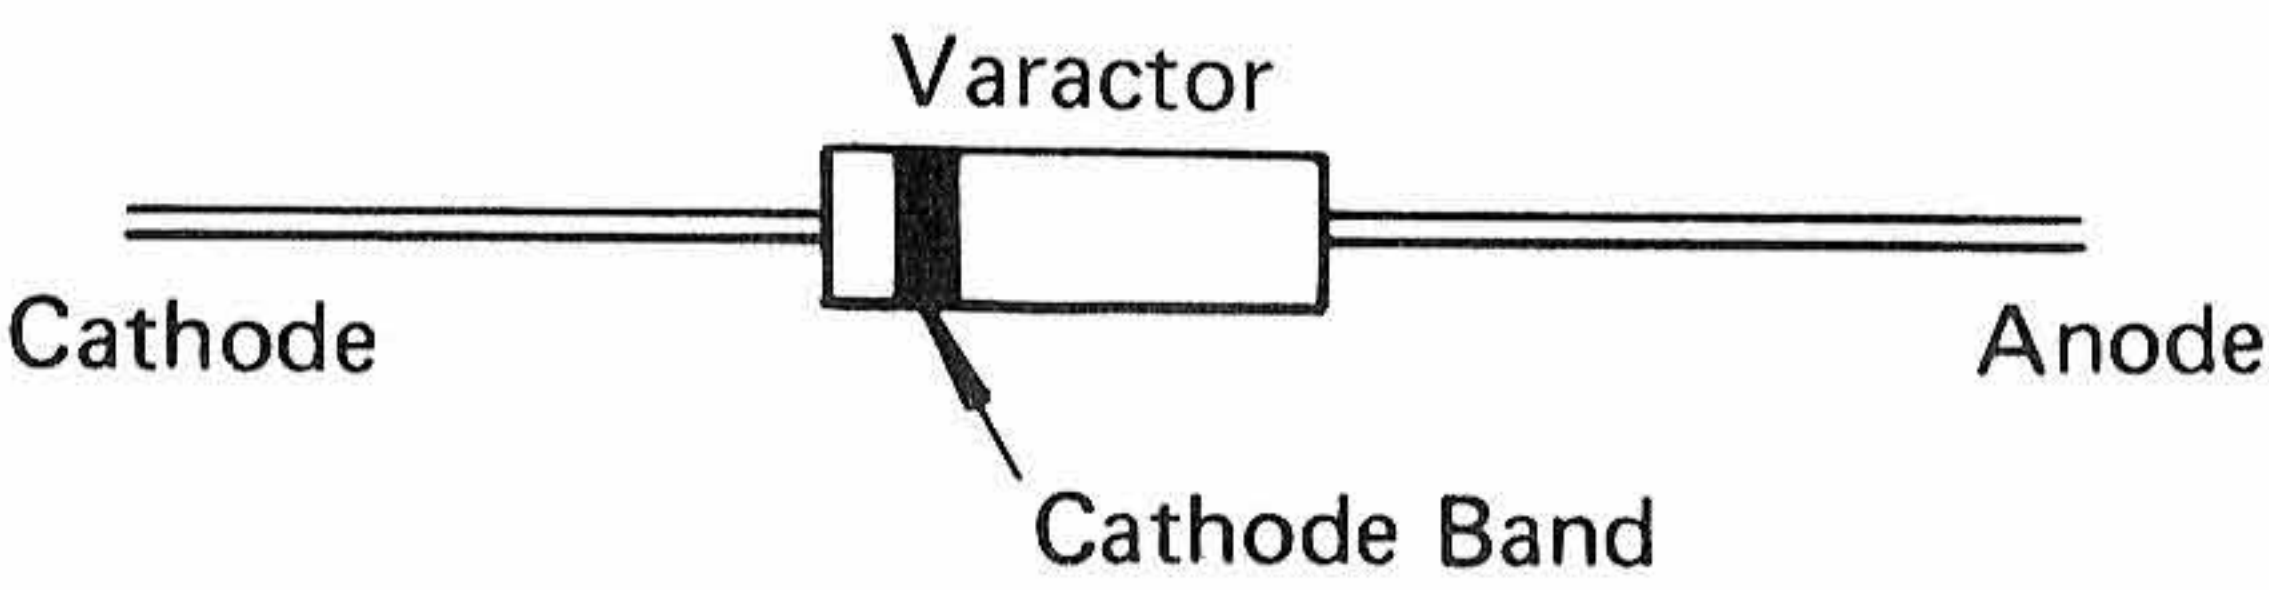


E) 1SV136AU2

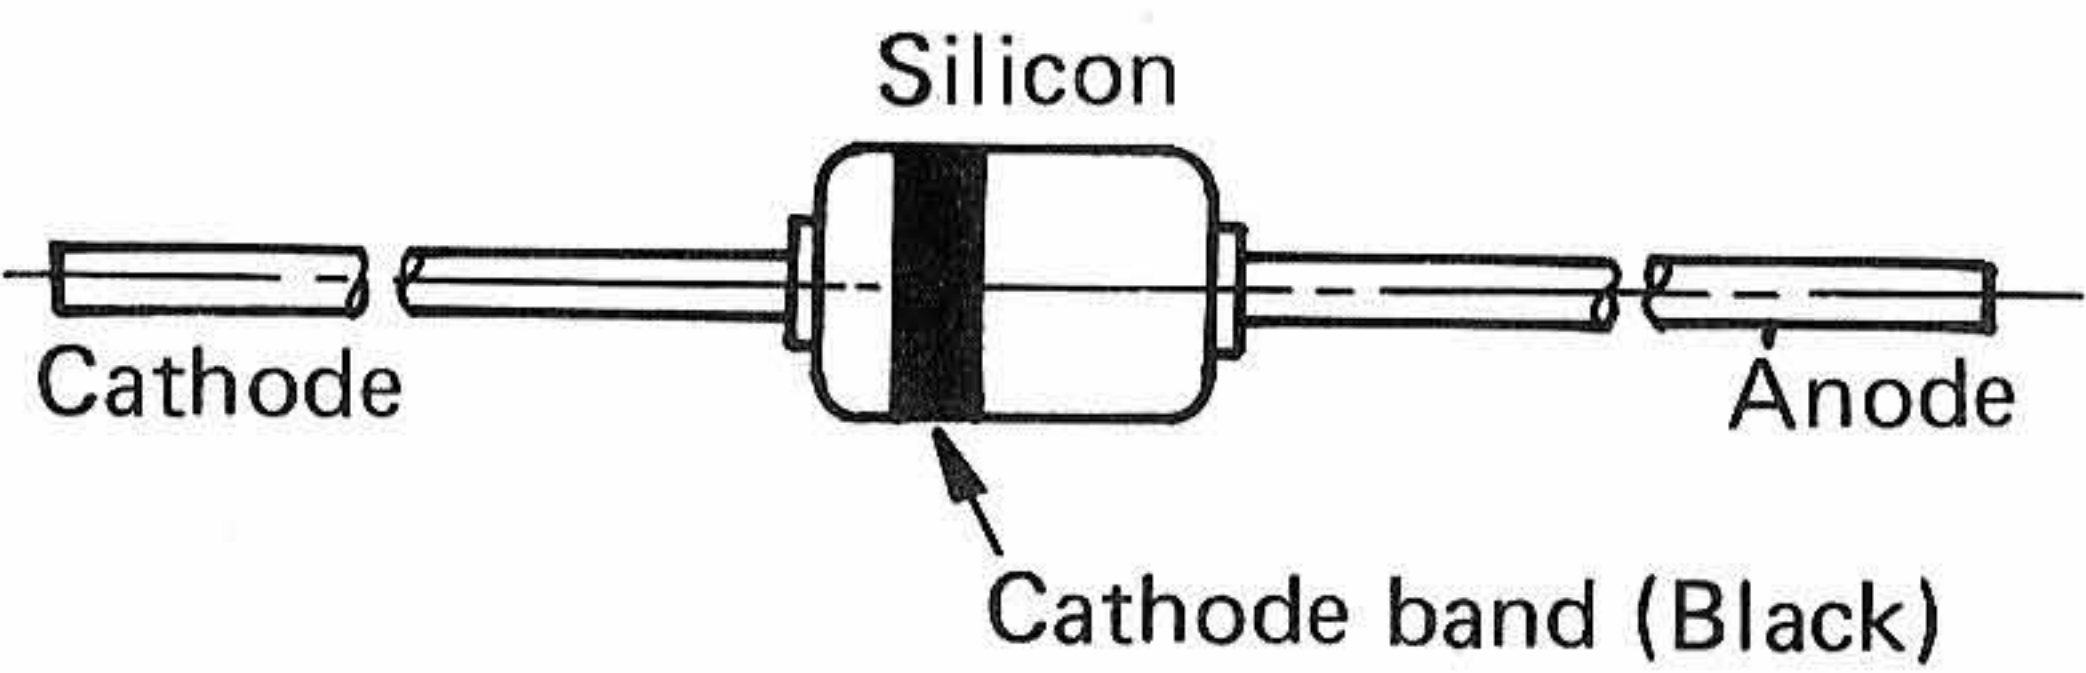


F) 1SV146U2

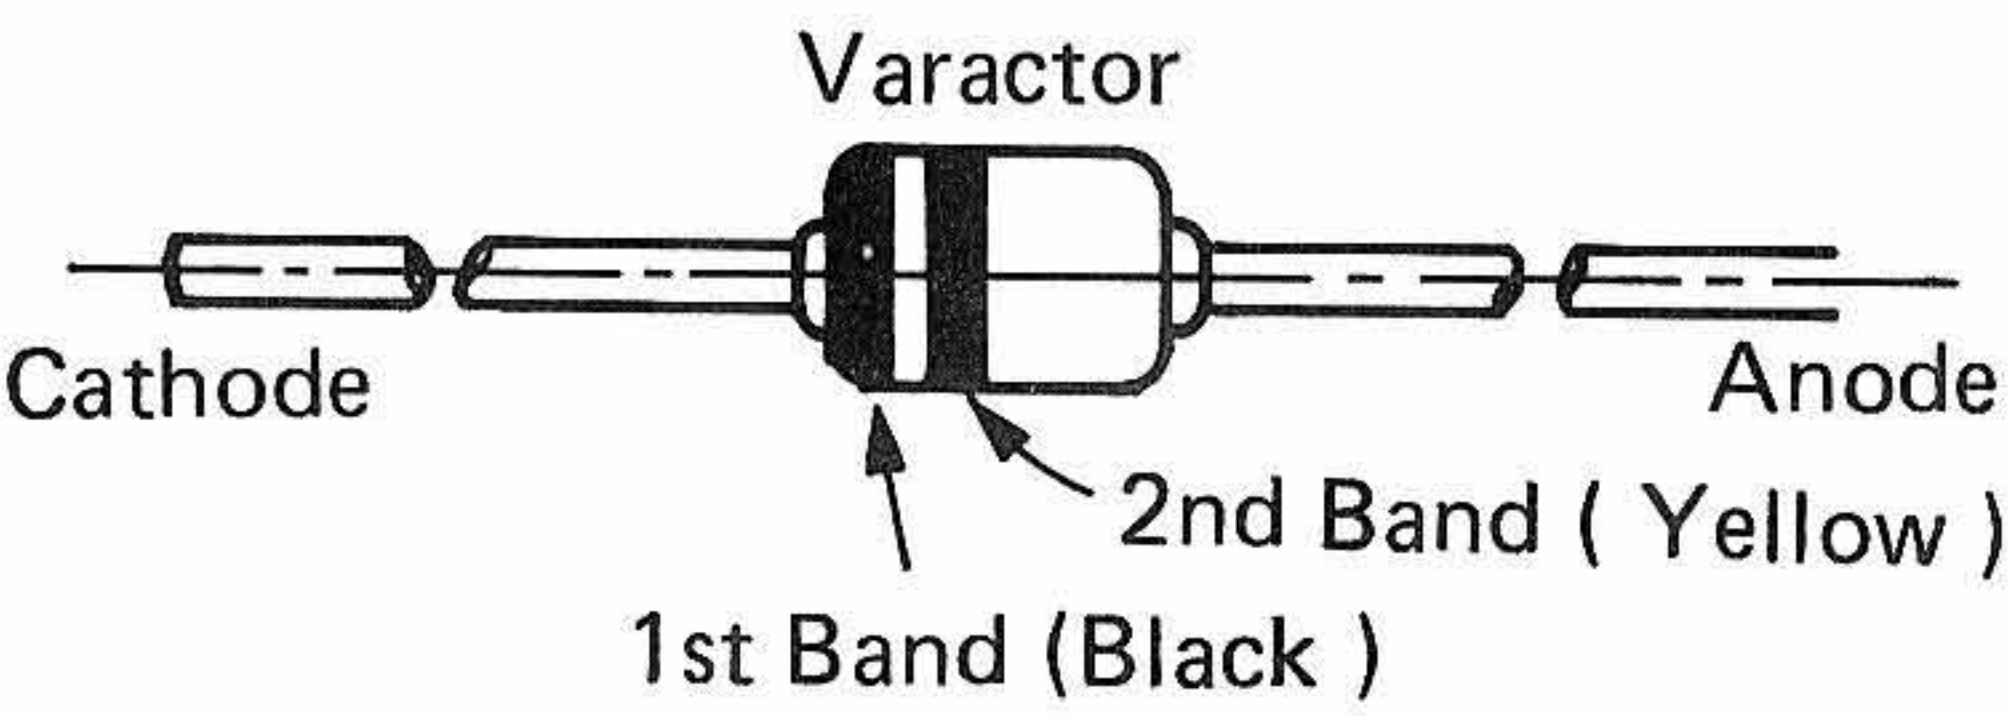


G) 1S2090

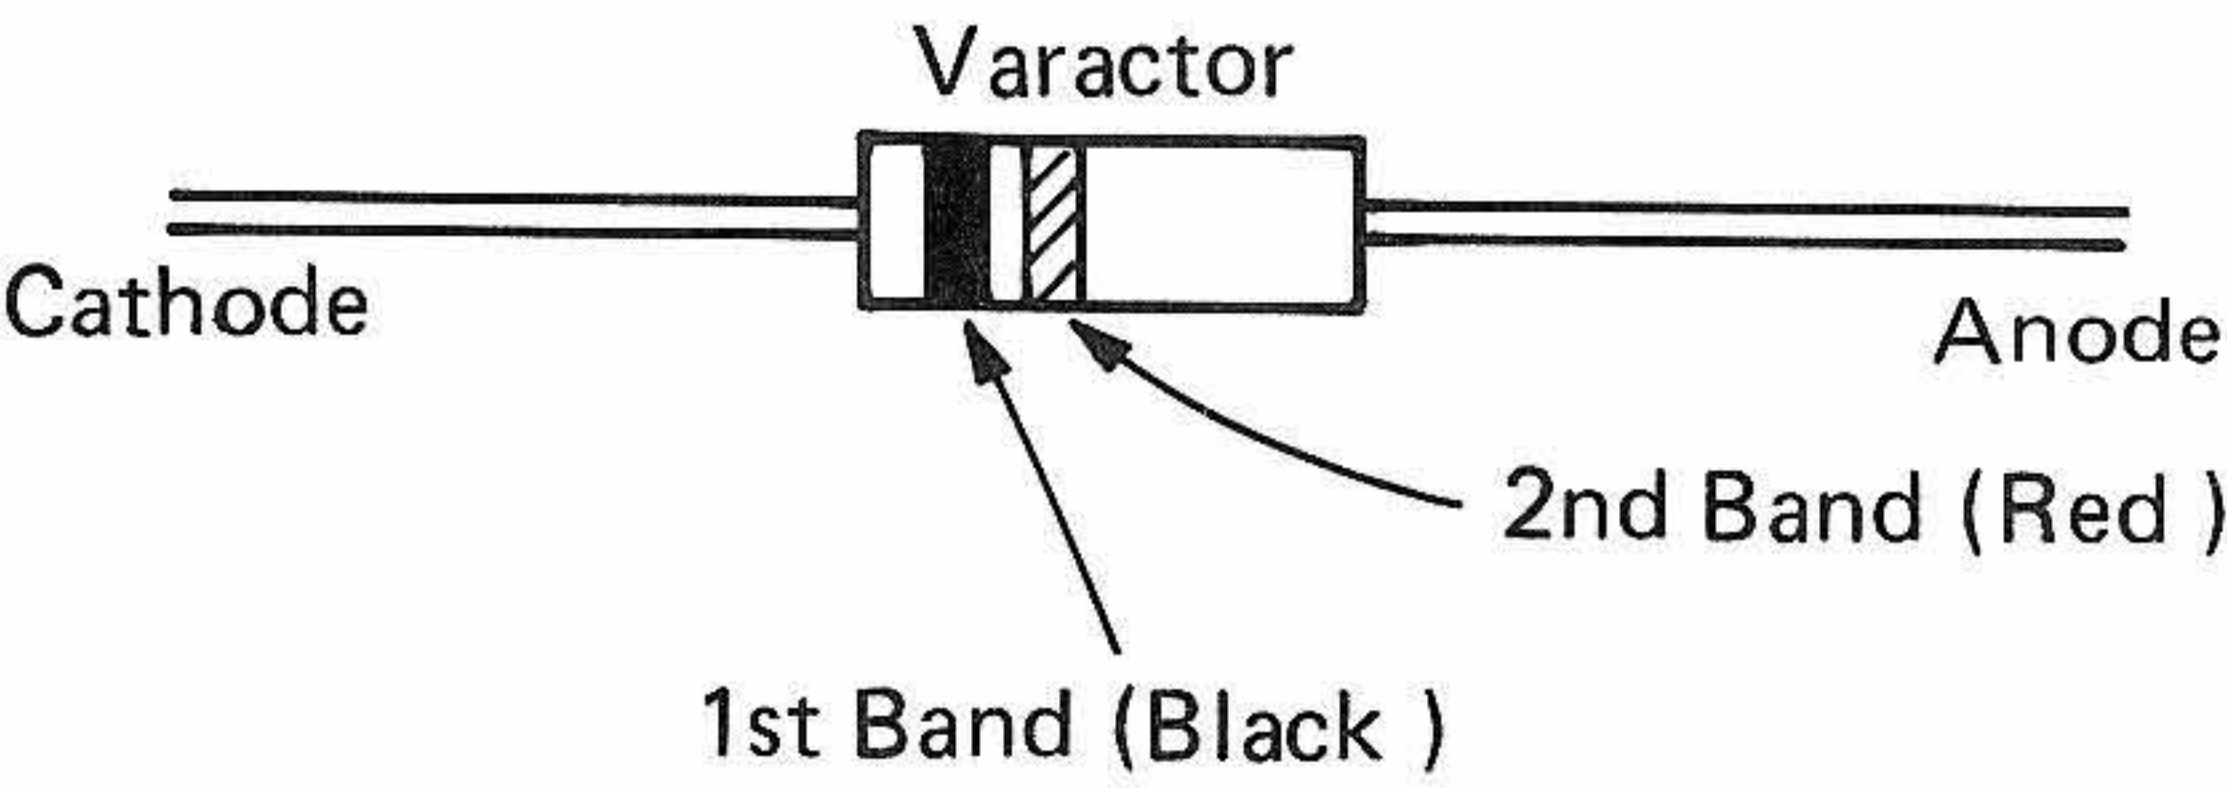


H) OA90R

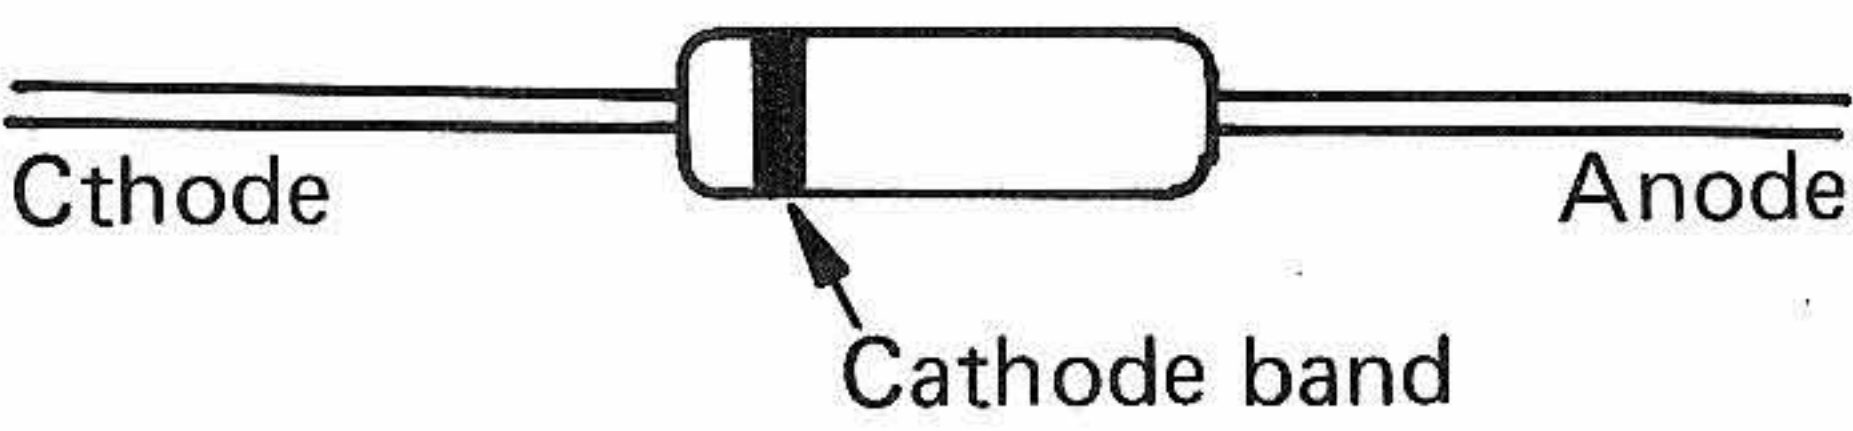


I) IK261

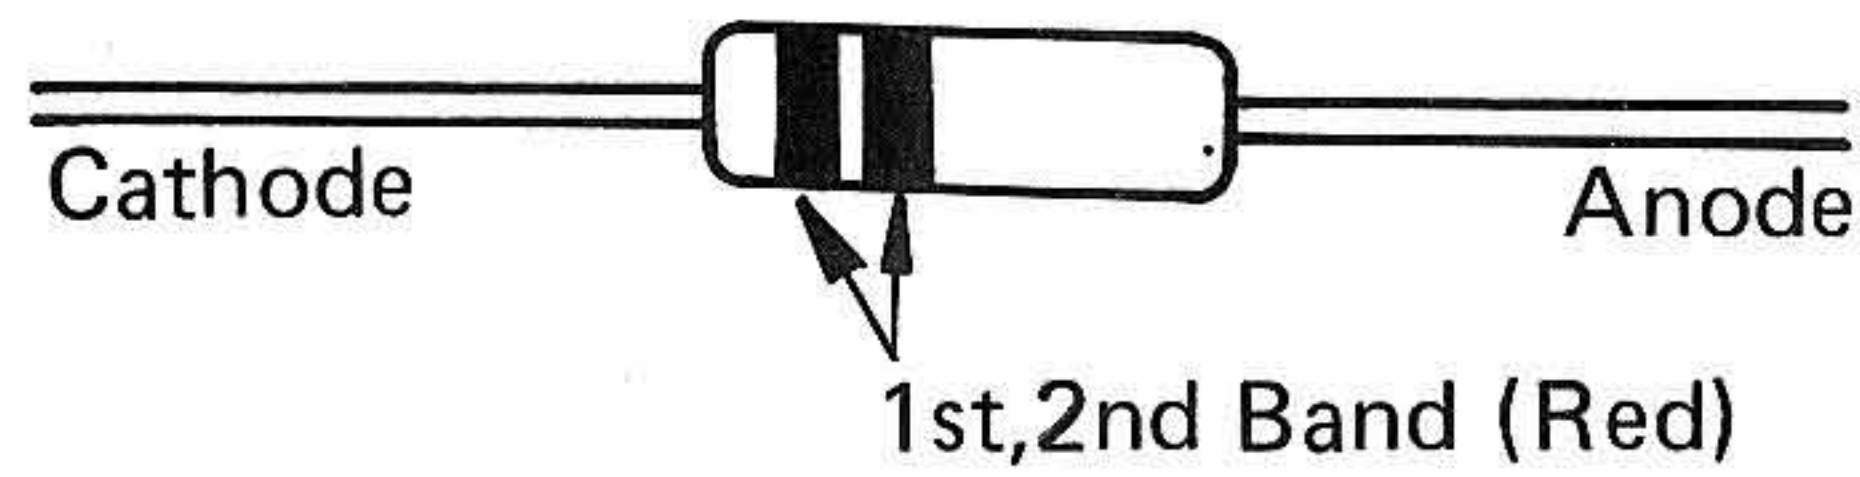


J) S5566B

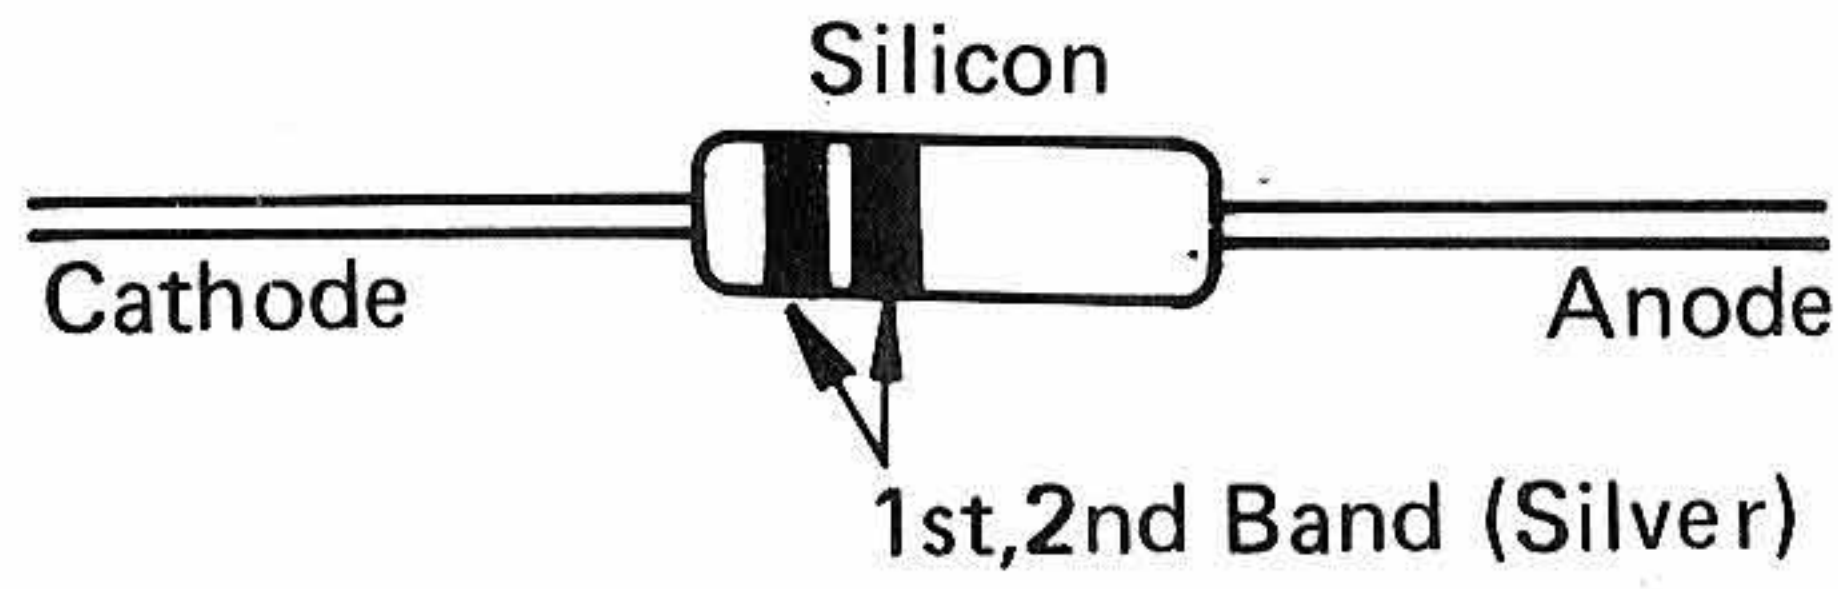


K) HSM2692

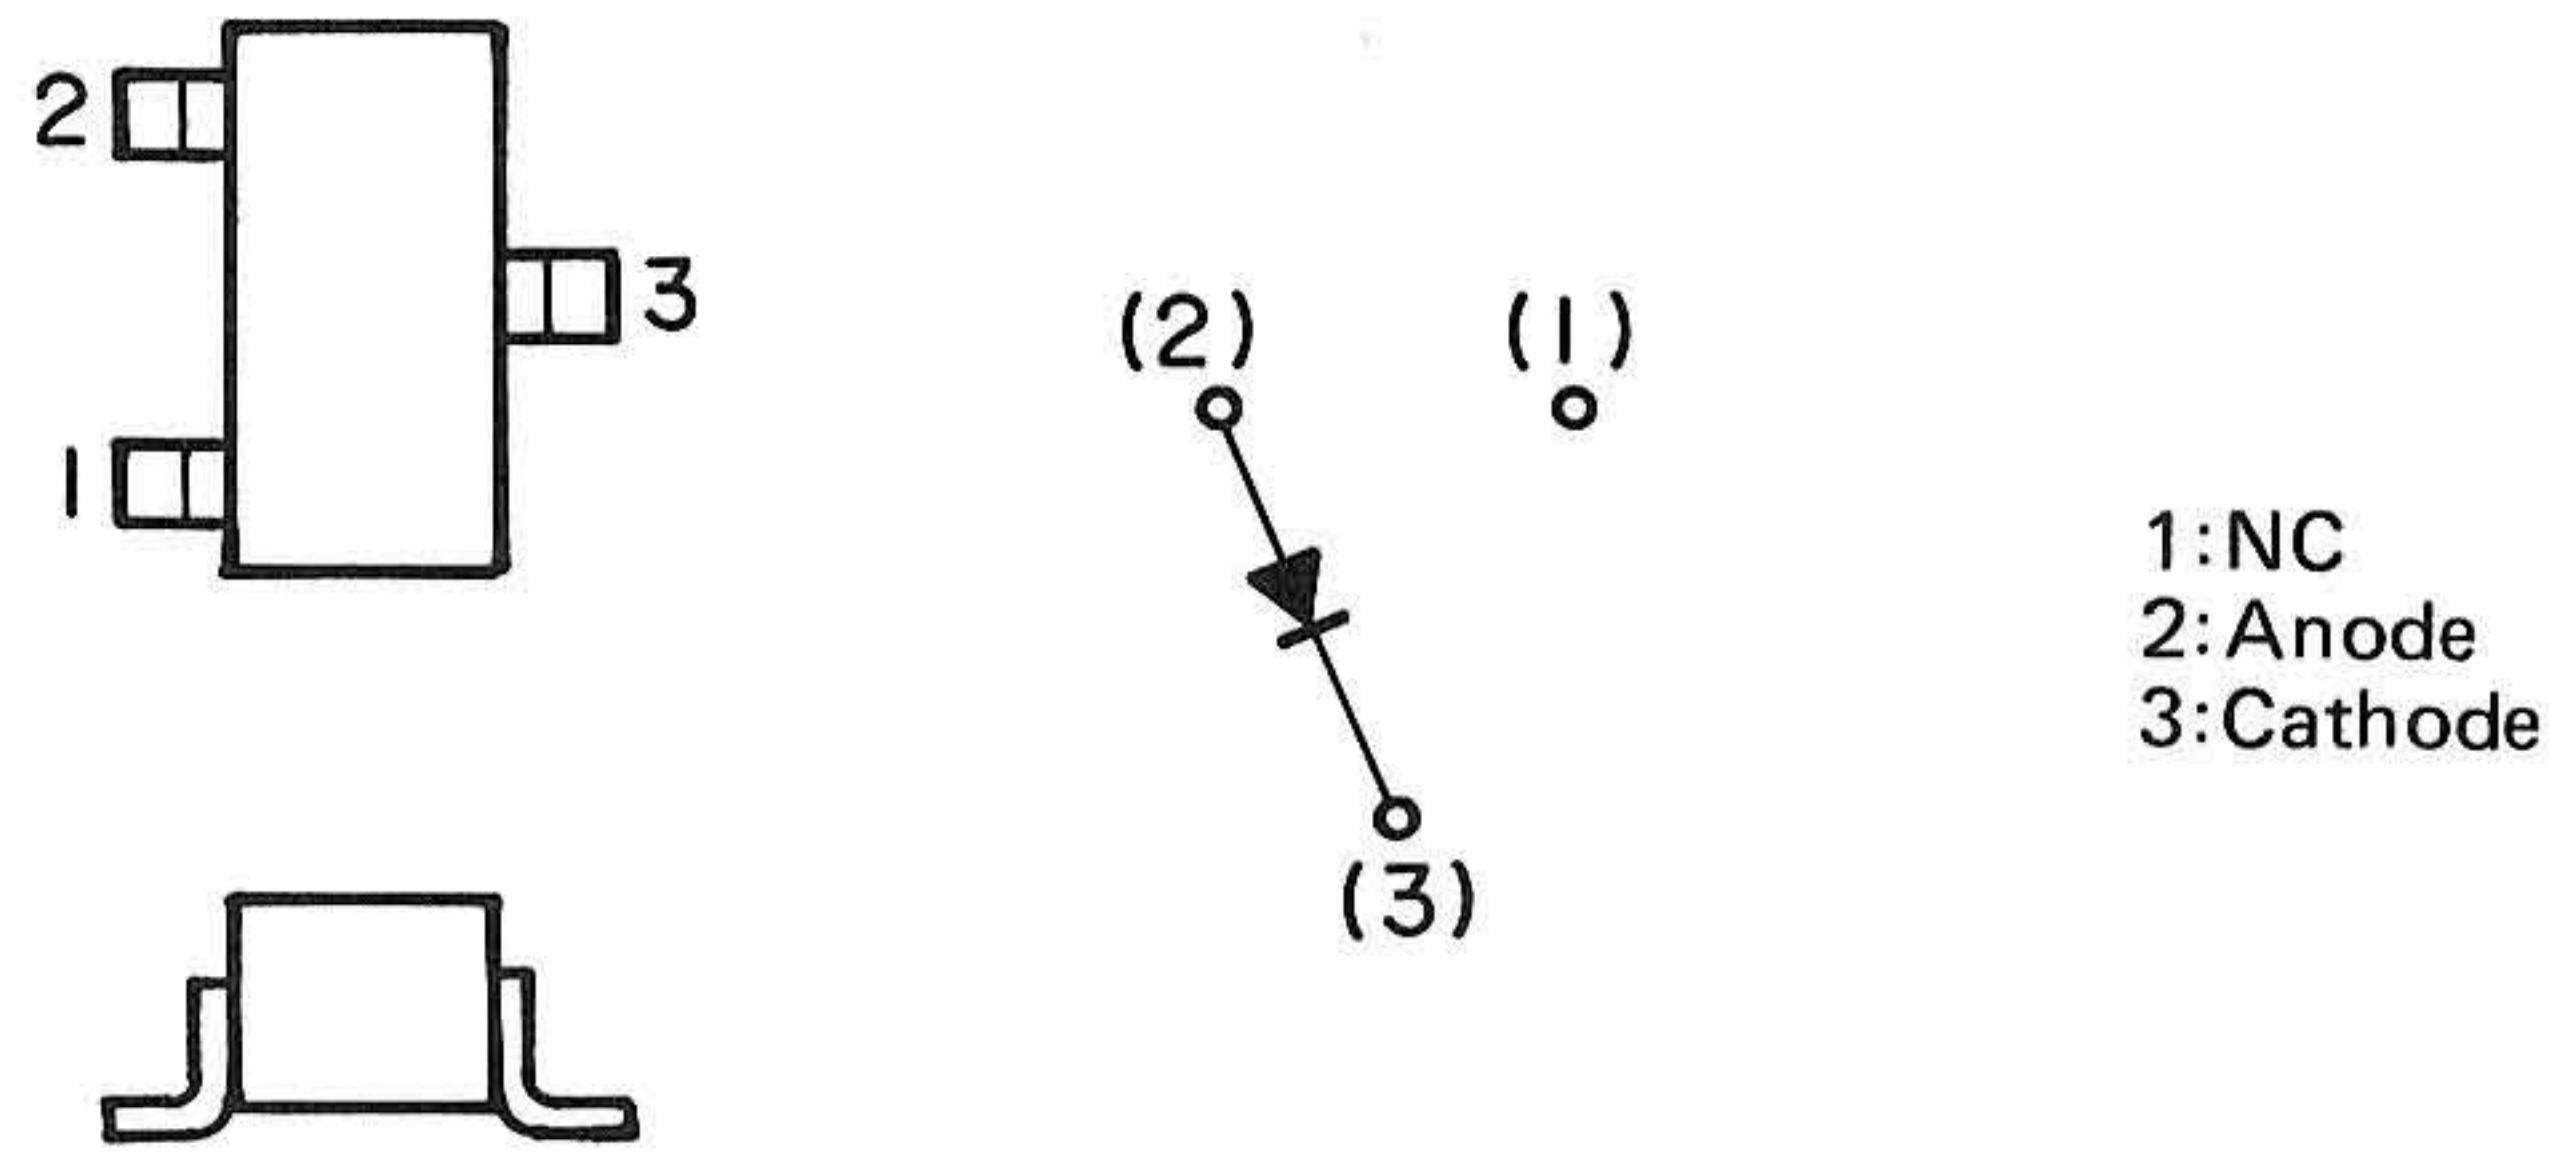


L) HSM2693
DAN202K

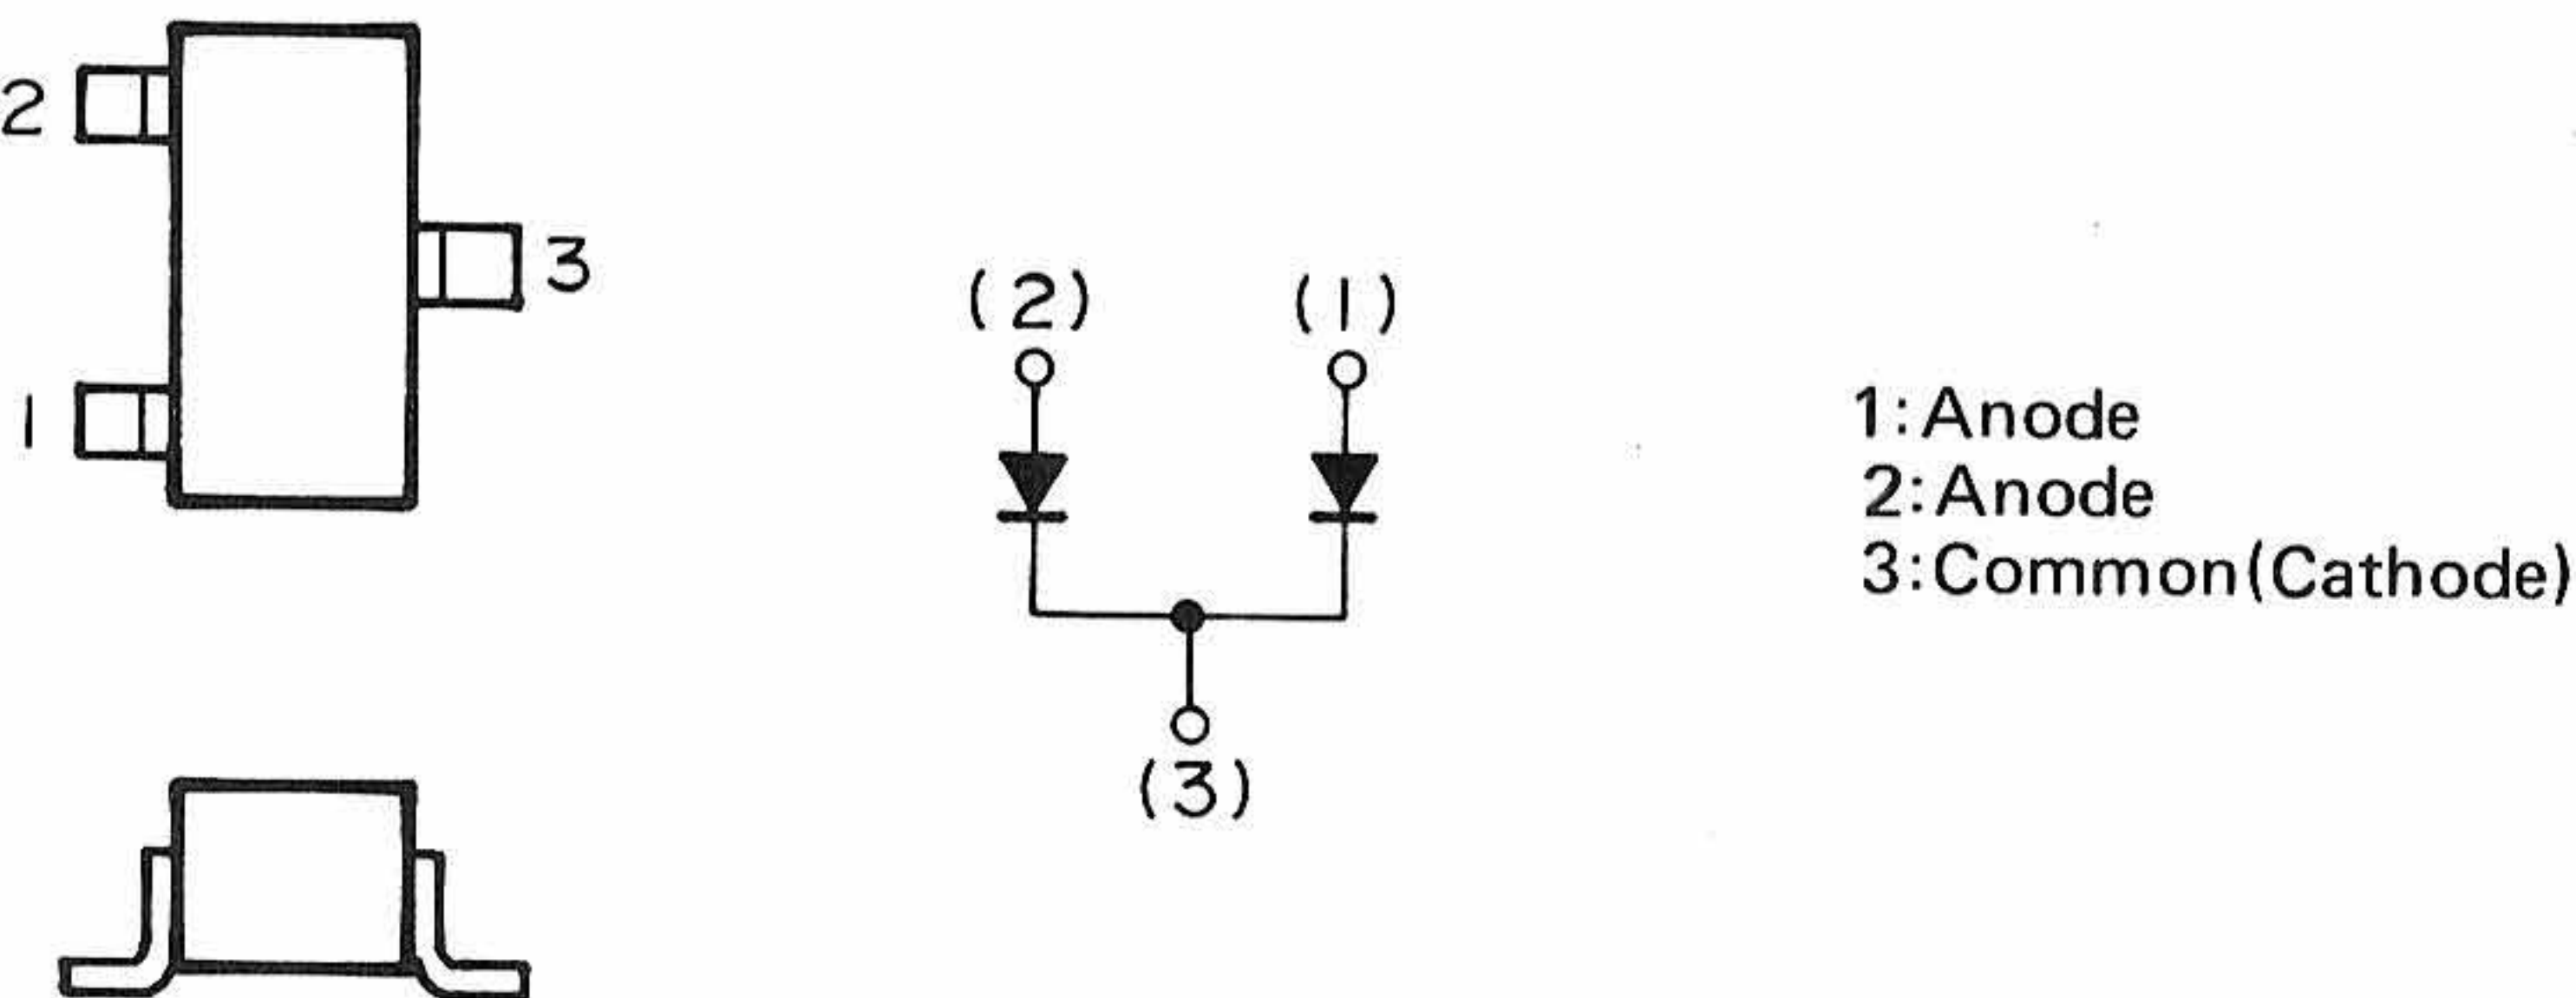


M) DAP202K

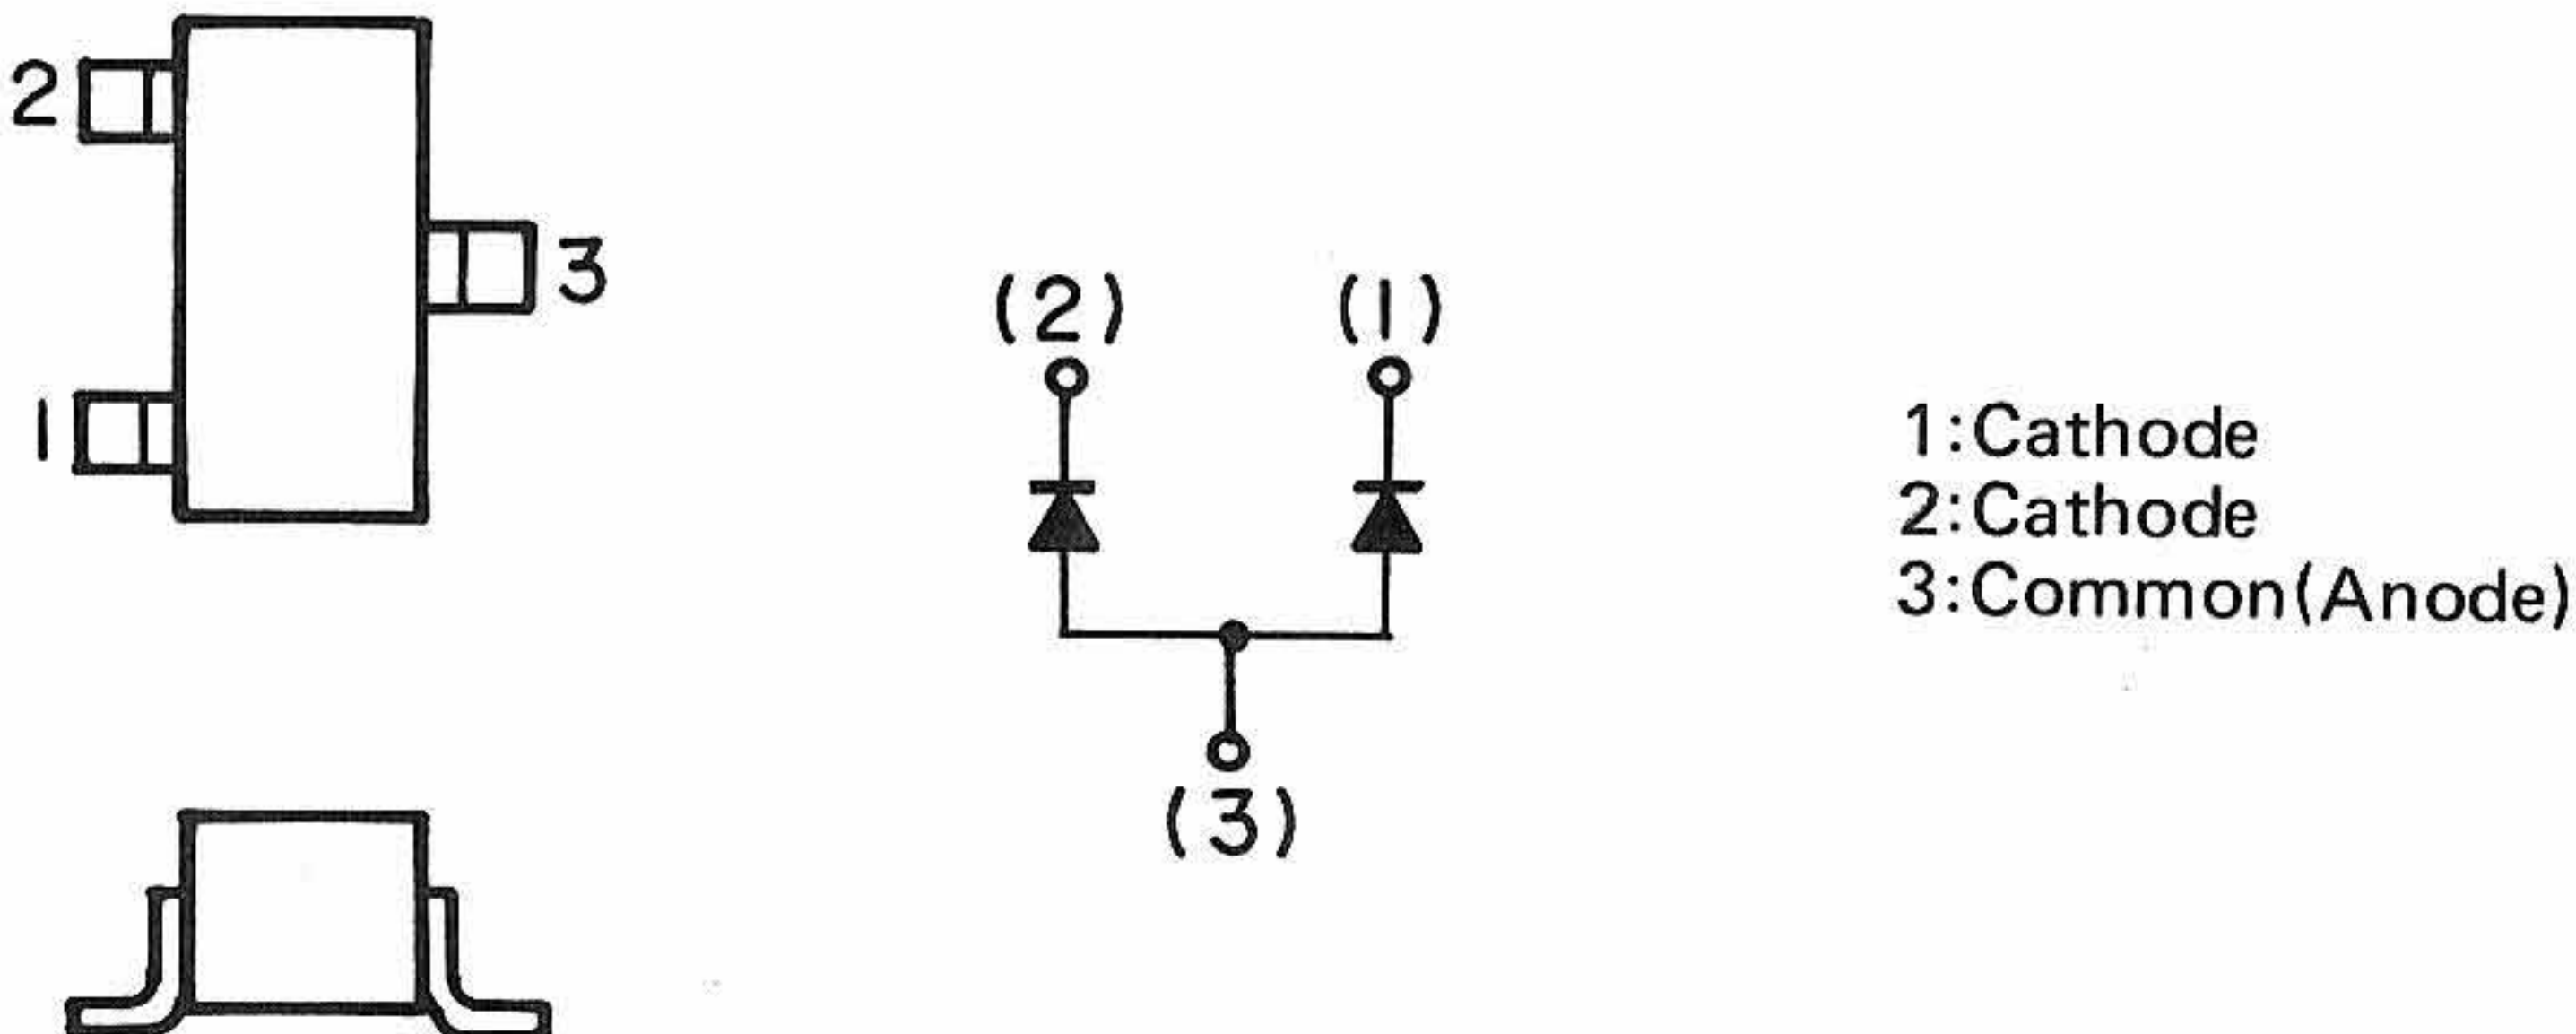

N) IMN10

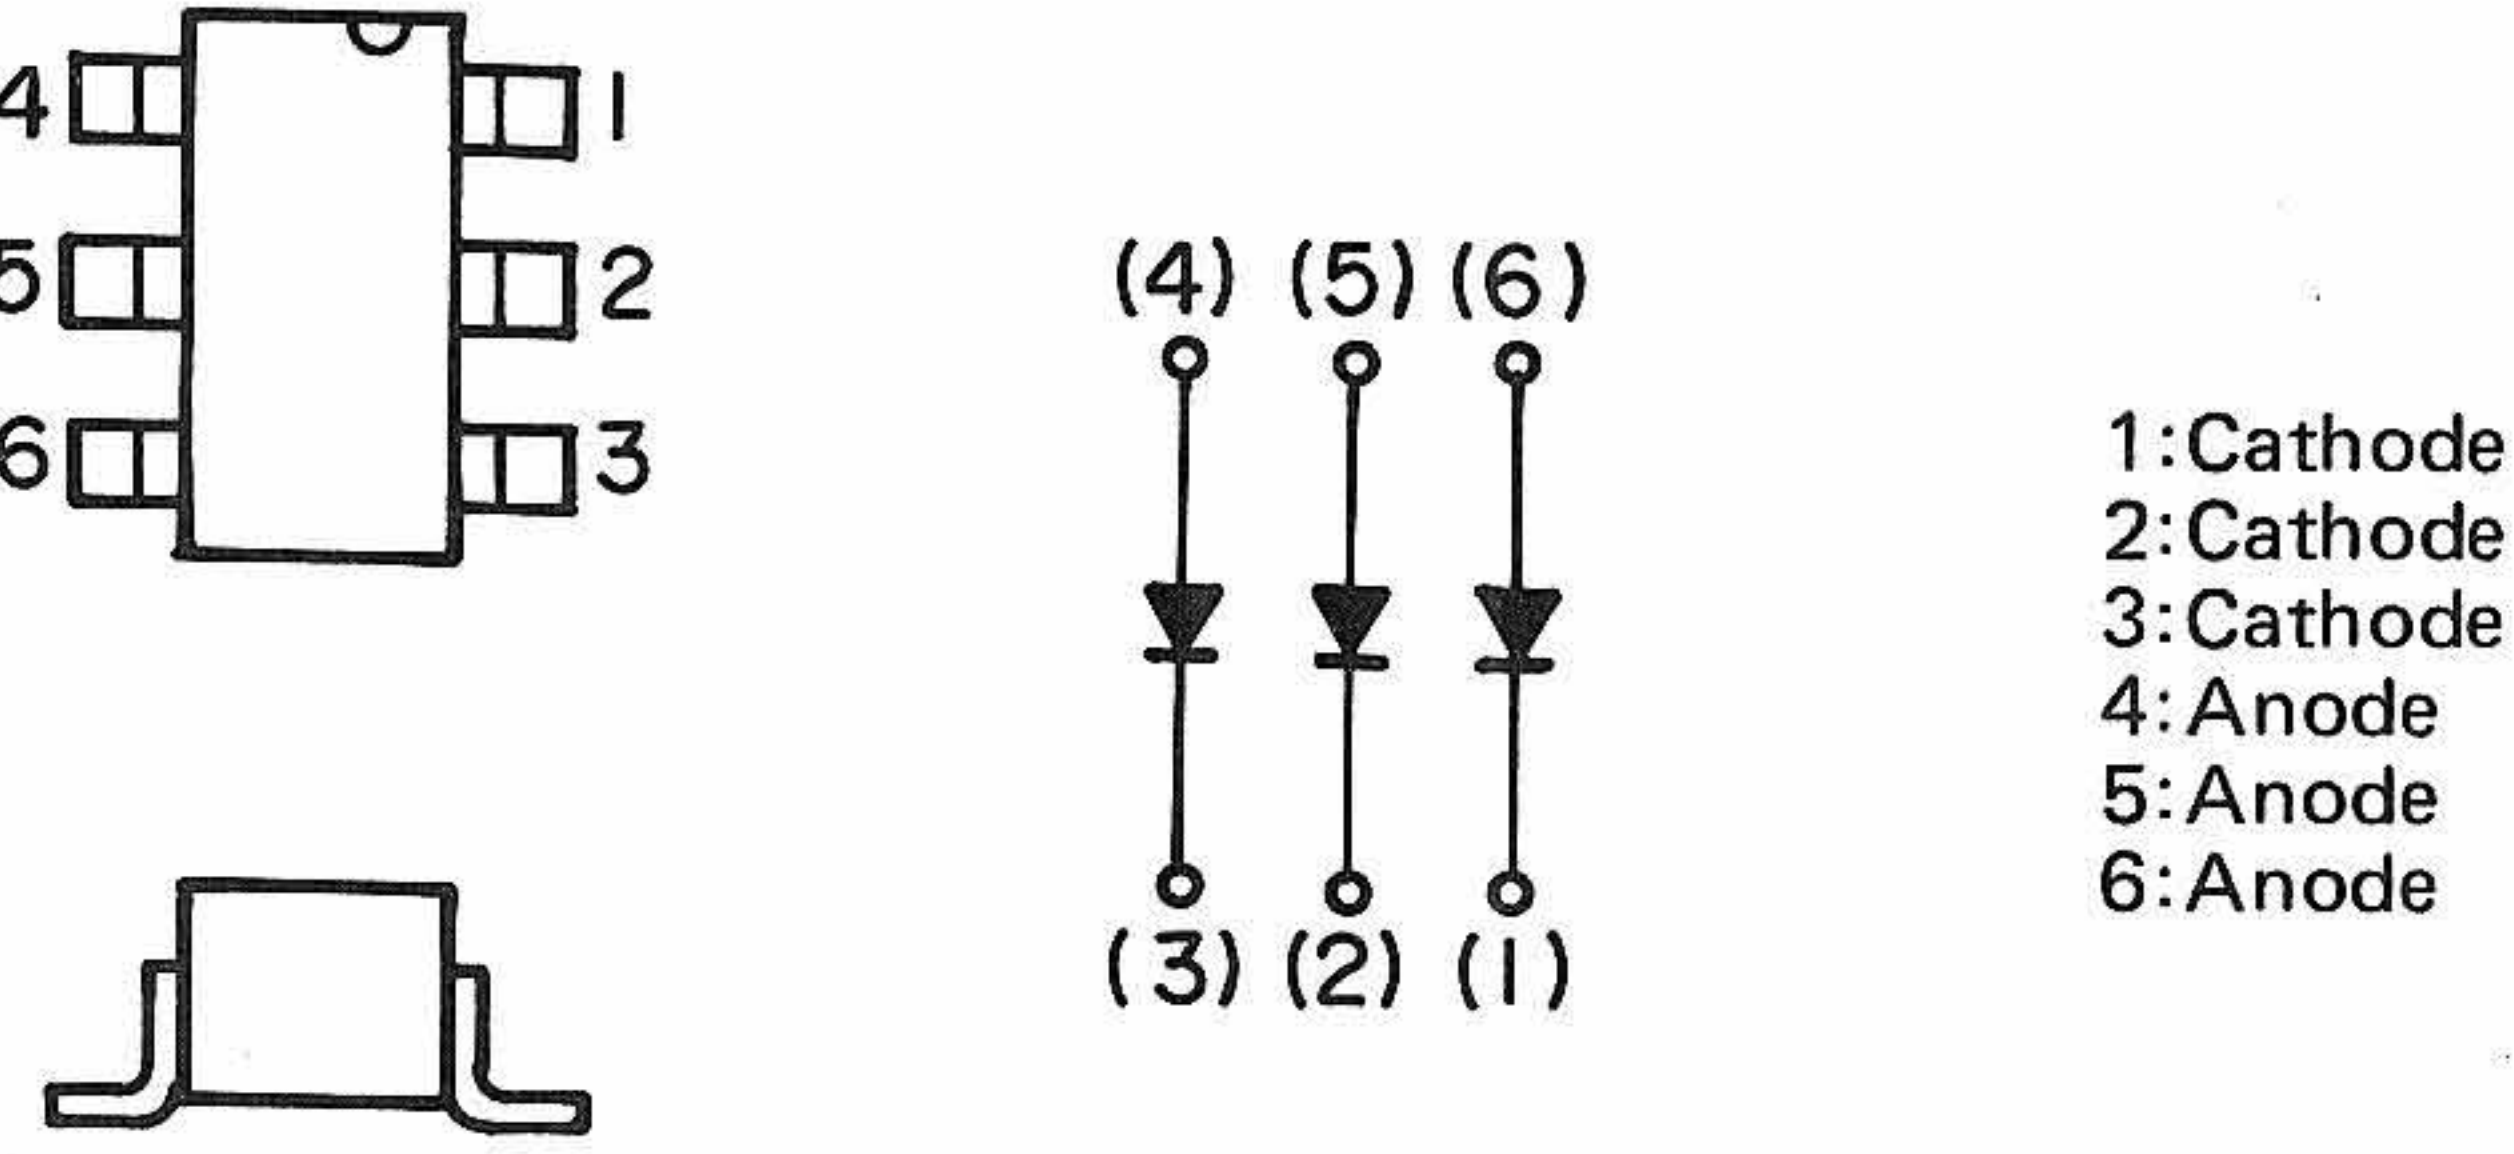

MICROPROCESSOR (IC1) PORT FORMAT

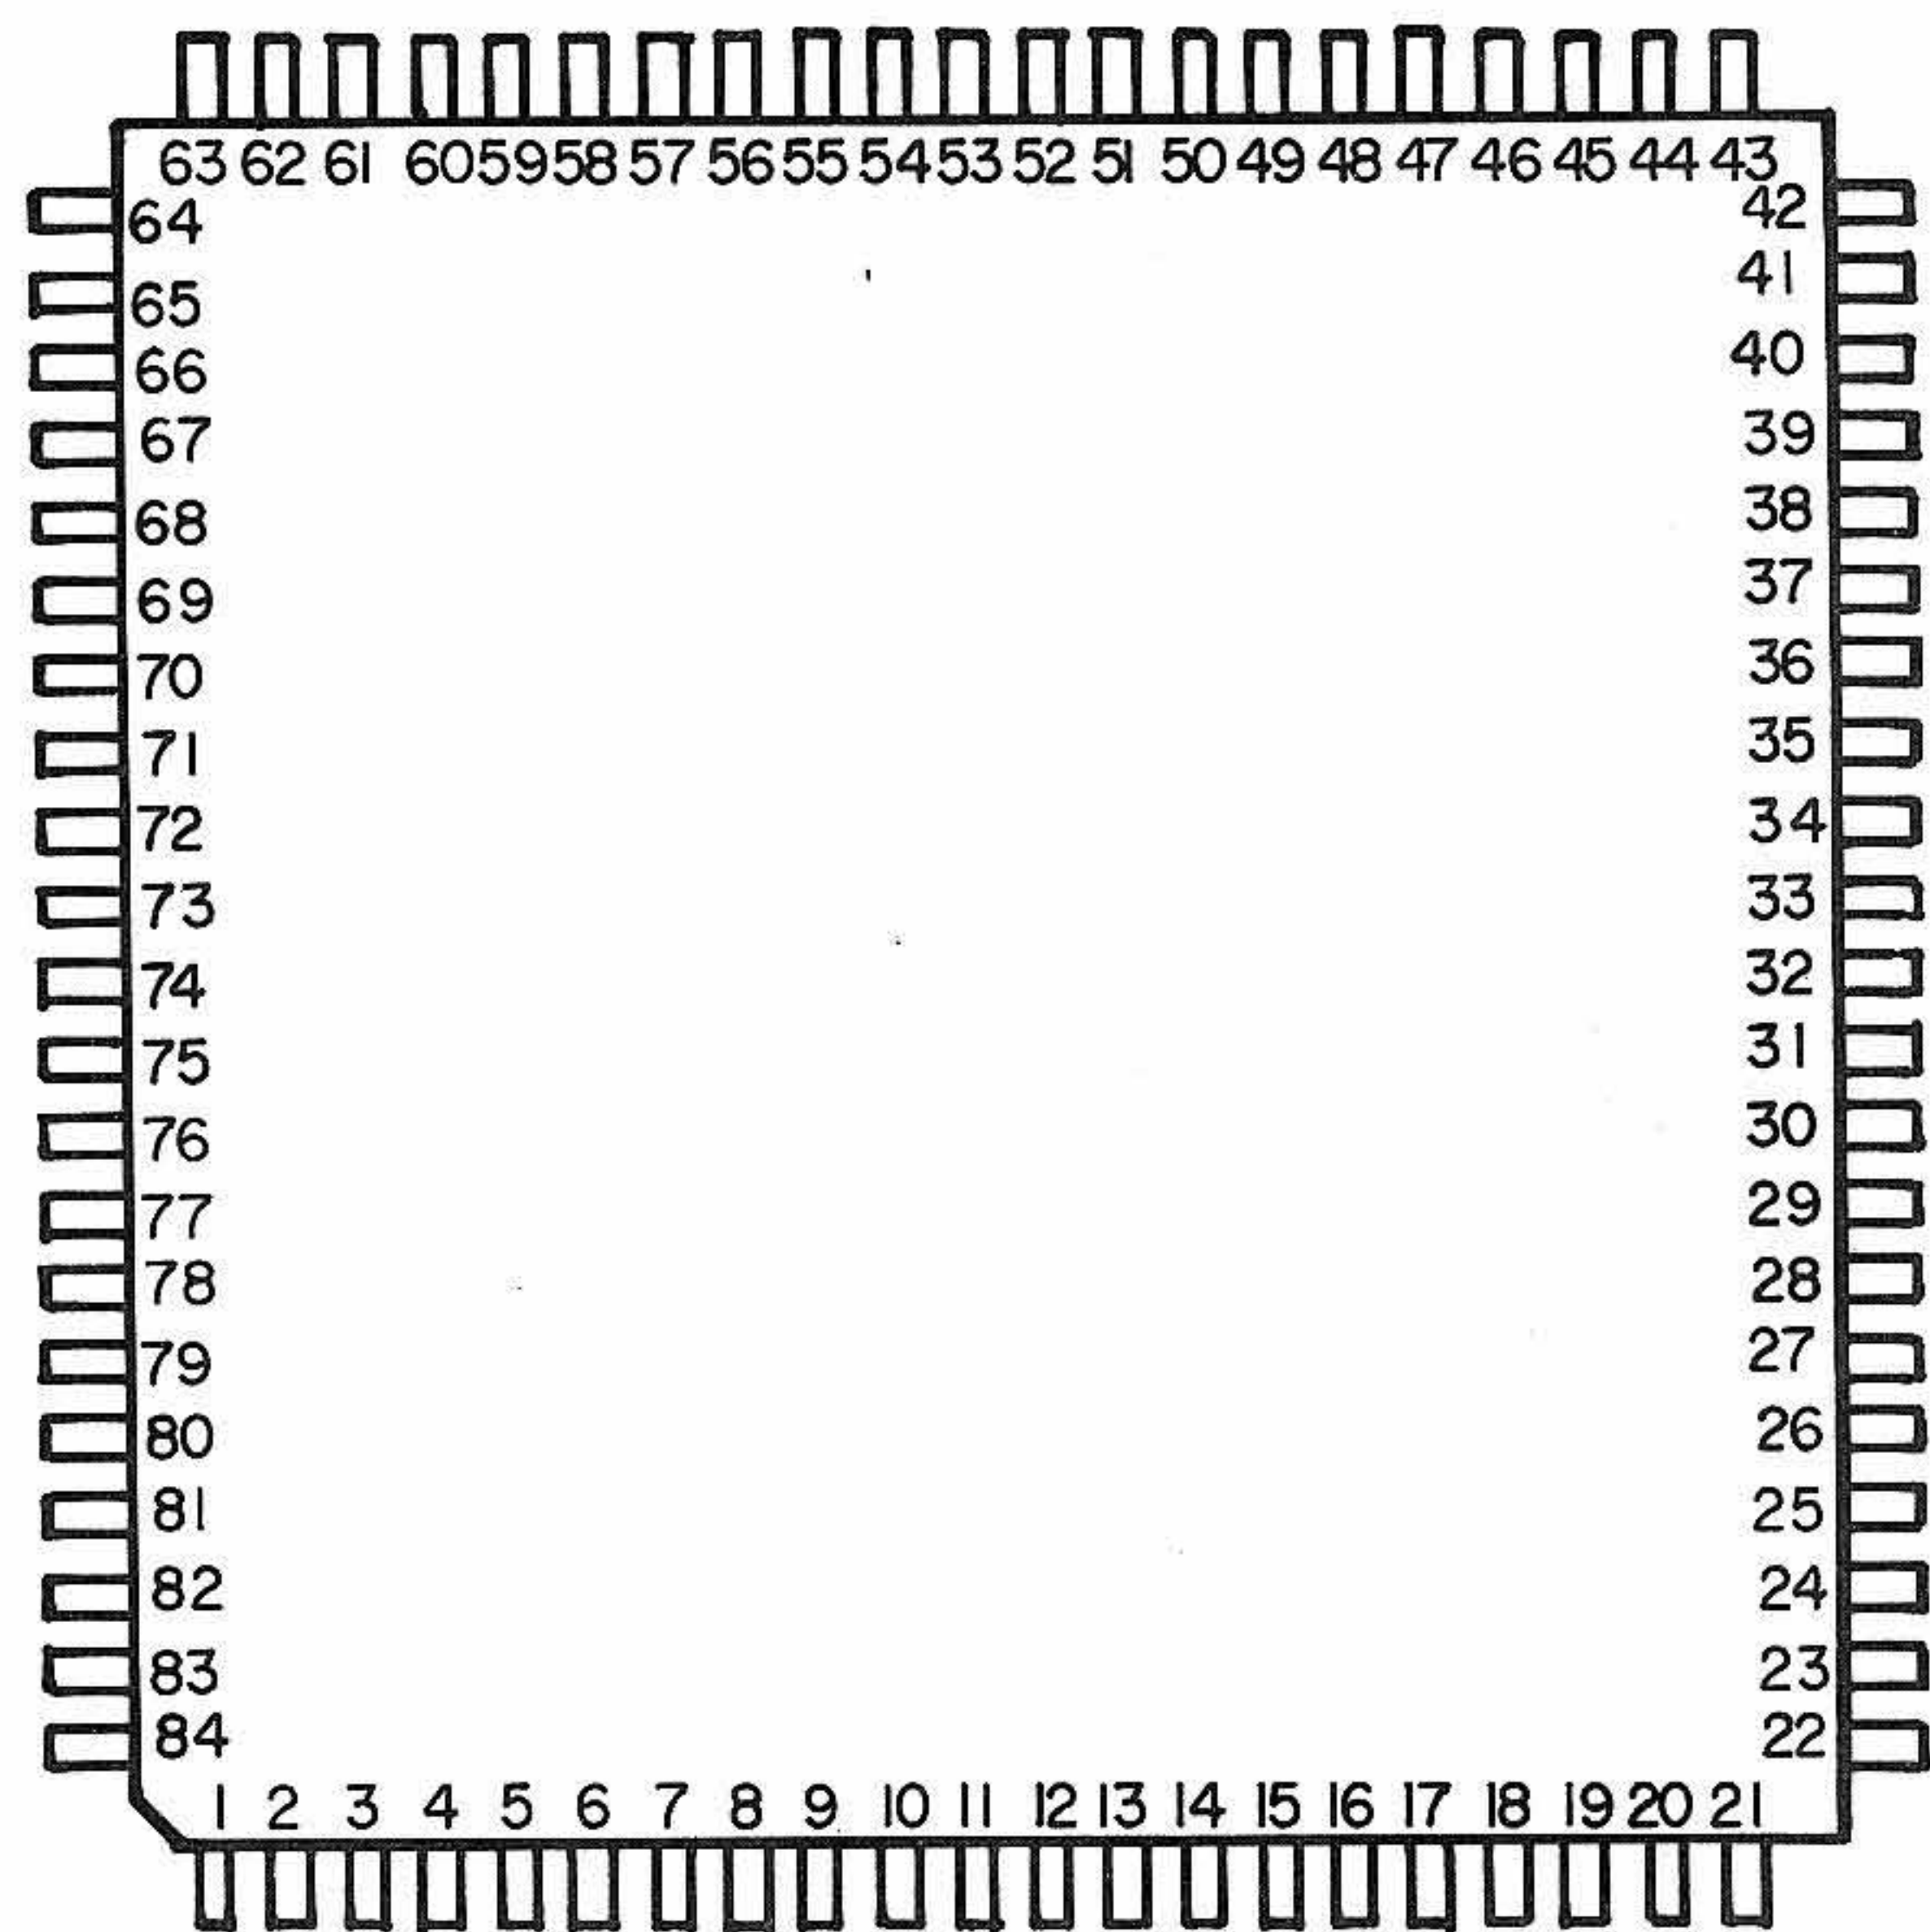

Pin No.		Pin No.	
1	Initialize signal input	43	LCD segment driver output
2	NC	44	LCD segment driver output
3	+B	45	LCD segment driver output
4	Vss	46	LCD segment driver output
5	Resonator connection terminal	47	LCD segment driver output
6	Resonator connection terminal	48	LCD segment driver output
7	VDD	49	LCD segment driver output
8	NC	50	LCD segment driver output
9	Peep output	51	LCD segment driver output
10	BAND 6 output	52	LCD segment driver output
11	BAND 5 output	53	LCD segment driver output
12	BAND 4 output	54	LCD segment driver output
13	BAND 3 output	55	LCD segment driver output
14	BAND 2 or BAND 1 output	56	LCD segment driver output
15	Prescaler switch	57	LCD segment driver output
16	Squelch input	58	LCD segment driver output
17	Zeromatic input	59	LCD segment driver output
18	Memory R/W output	60	LCD segment driver output
19	Memory CE output	61	LCD segment driver output
20	Memory I/O 1	62	LCD segment driver output
21	Memory I/O 2	63	LCD segment driver output
22	Memory I/O 3	64	LCD segment driver output
23	Memory I/O 4	65	LCD segment driver output
24	Memory address A0	66	LCD segment driver output
25	Memory address A1	67	LCD segment driver output
26	Memory address A2	68	NC
27	Memory address A3	69	NC
28	Memory address A4	70	NC
29	Memory address A5	71	LCD bias control
30	Memory address A6	72	PLL latch output
31	Memory address A7	73	Mute output
32	Memory address A8	74	Power control
33	Memory address A9	75	Key input
34	Memory address A10	76	Key input
35	Memory OE output	77	Band switch
36	LCD drive power supply	78	Serial clock output
37	LCD drive power supply	79	Low battery input
38	LCD drive power supply	80	Serial data output
39	LCD common driver output	81	Key input
40	LCD common driver output	82	HOLD input
41	LCD common driver output	83	+B
42	LCD common driver output	84	Timing output

APPENDIX

VHF-MID Band Alignment for 20-9135

Circuit Revision

1. The following parts should be changed as shown below:

Ref. No.	Lo band	Mid band
C103	0.001 μ F	33pF
C107	0.001 μ F	33pF
C191	47pF	3pF
C192	33pF	27pF
C193	33pF	15pF
C194	0.001 μ F	39pF
D119	BB609A	Not used
L101	4LNC-092	4LNC-122
T101	7SSR-278	7SSR-287
T102	7SSR-278	7SSO-281

2. Add D9 and D12, and remove D11.

VCO Alignment

Step 1: Connect a DC SSVM to TP103 and ground.

Step 2: Program CH1, 2 and 3 as follows:

CH1 (68 MHz), CH2 (78 MHz), CH3 (88 MHz)

Step 3: Select channel 3 (88 MHz) and adjust TC103 for 12.0 V on the DC SSVM.

Step 4: Select channel 1 (68 MHz) and adjust T107 for 1.5 V on the DC SSVM.

Step 5: Repeat steps 3 and 4 until no improvement is observed.

The DC SSVM should show as below.


68 MHz Voltage of TP103 1.4-1.6 V

78 MHz Voltage of TP103 6.0-7.0 V

88 MHz Voltage of TP103 11.5-12.5 V

RF Amp Alignment

Step 1: Connect instruments as shown below:

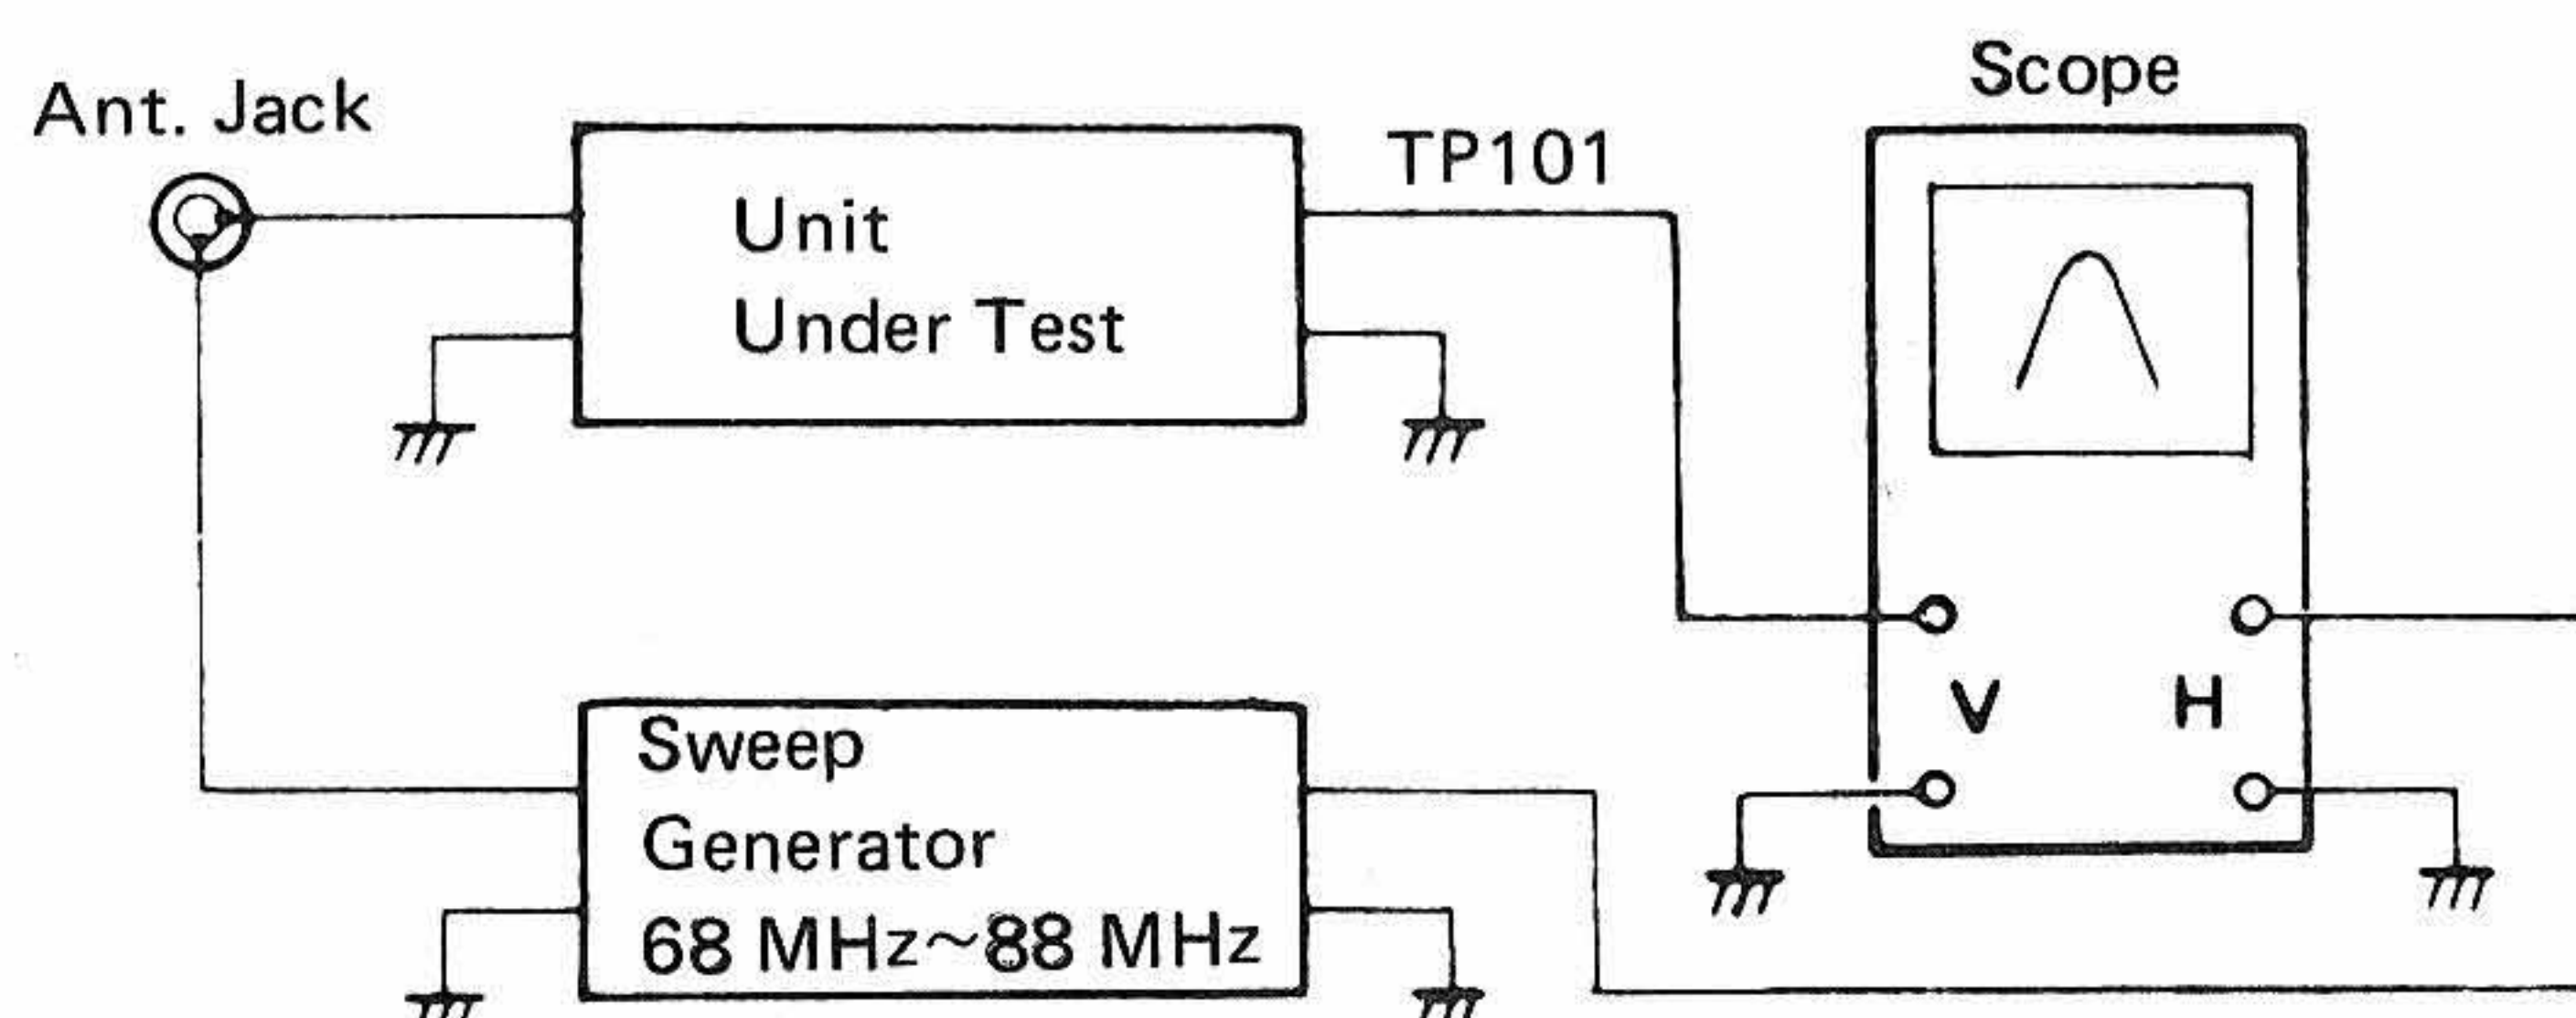


Step 2: Program 68 MHz (CH1), 78 MHz (CH2), 88 MHz (CH3).


Step 3: Select Channel 1 (68 MHz) and adjust T101 and T102 for maximum RF waveform.

Step 4: Check the Channels 1~3 one by one for maximum RF waveform.

Slight deviation as shown below is acceptable.

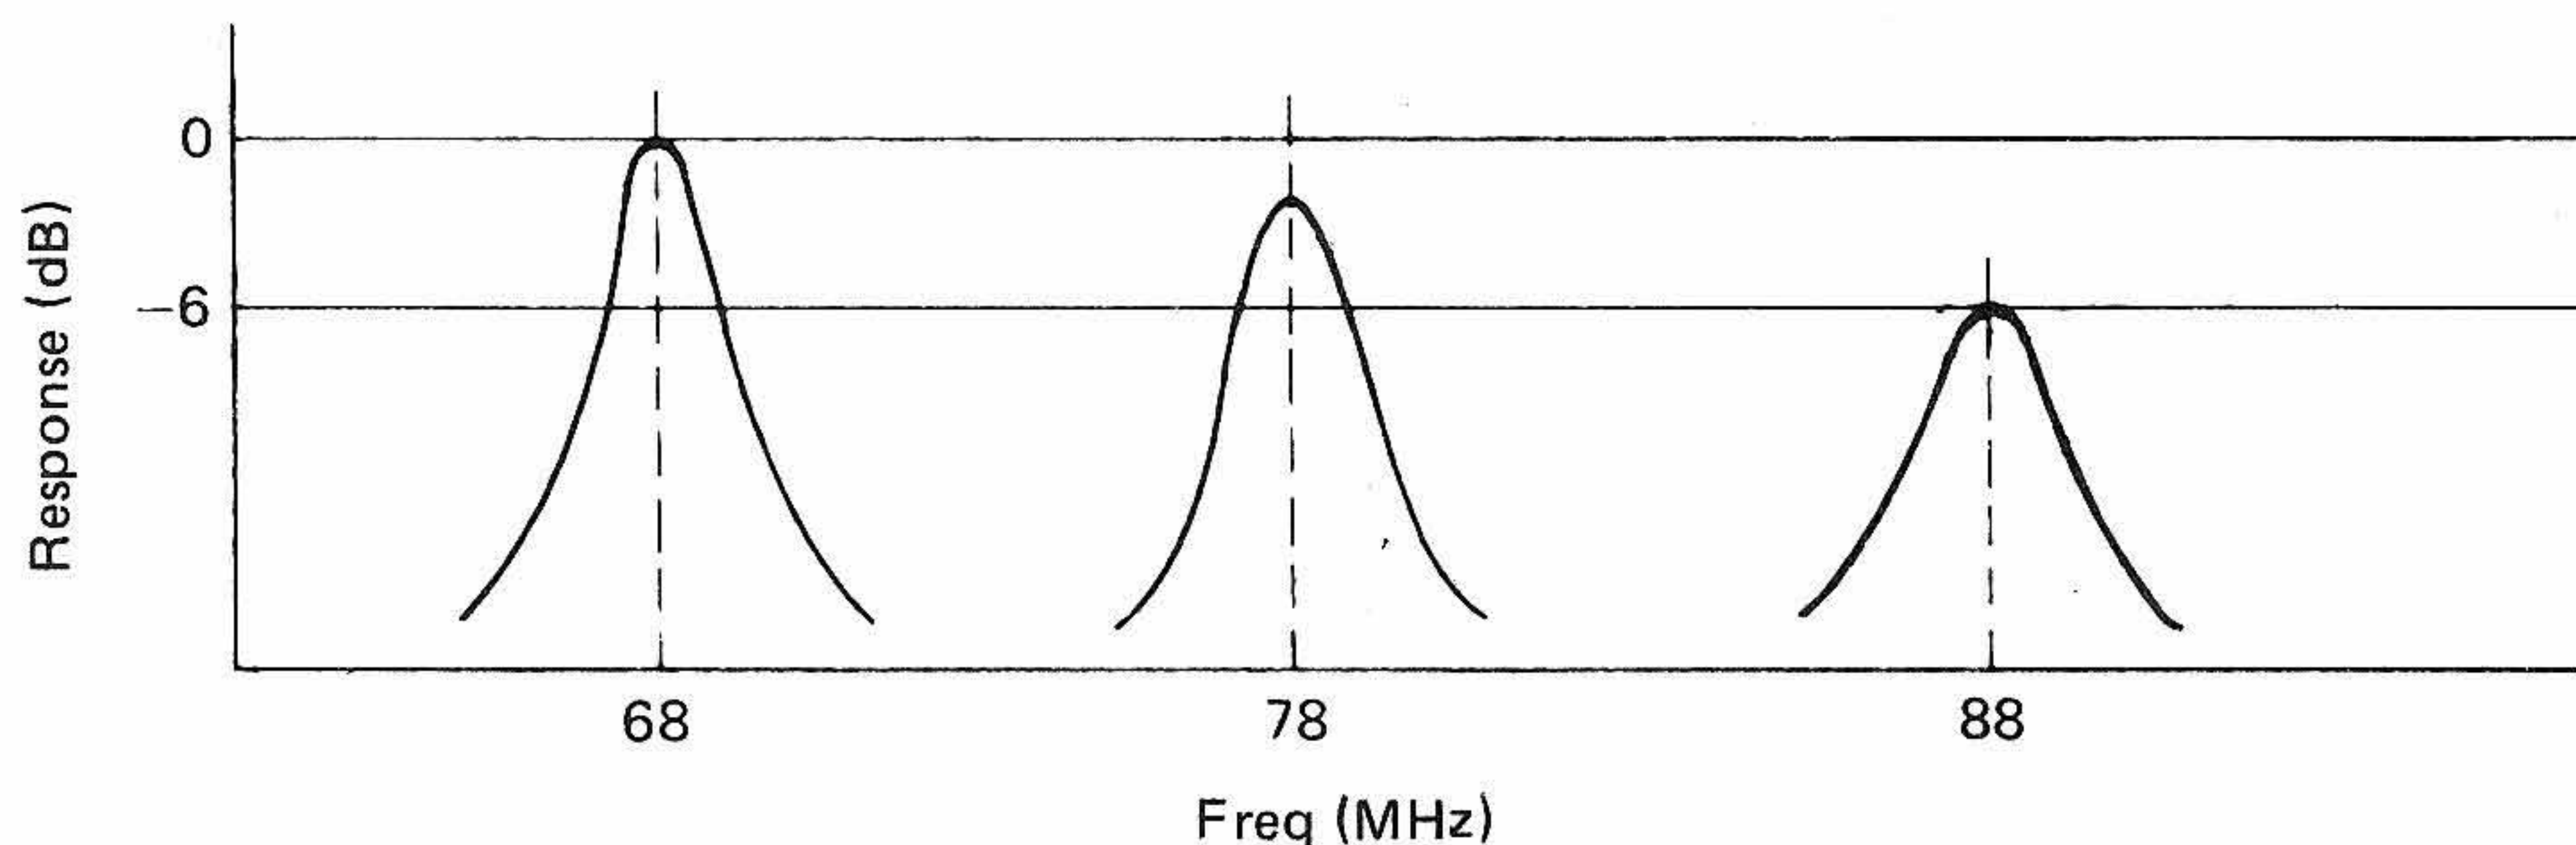

SCHEMATIC DIAGRAM (Linear Section)

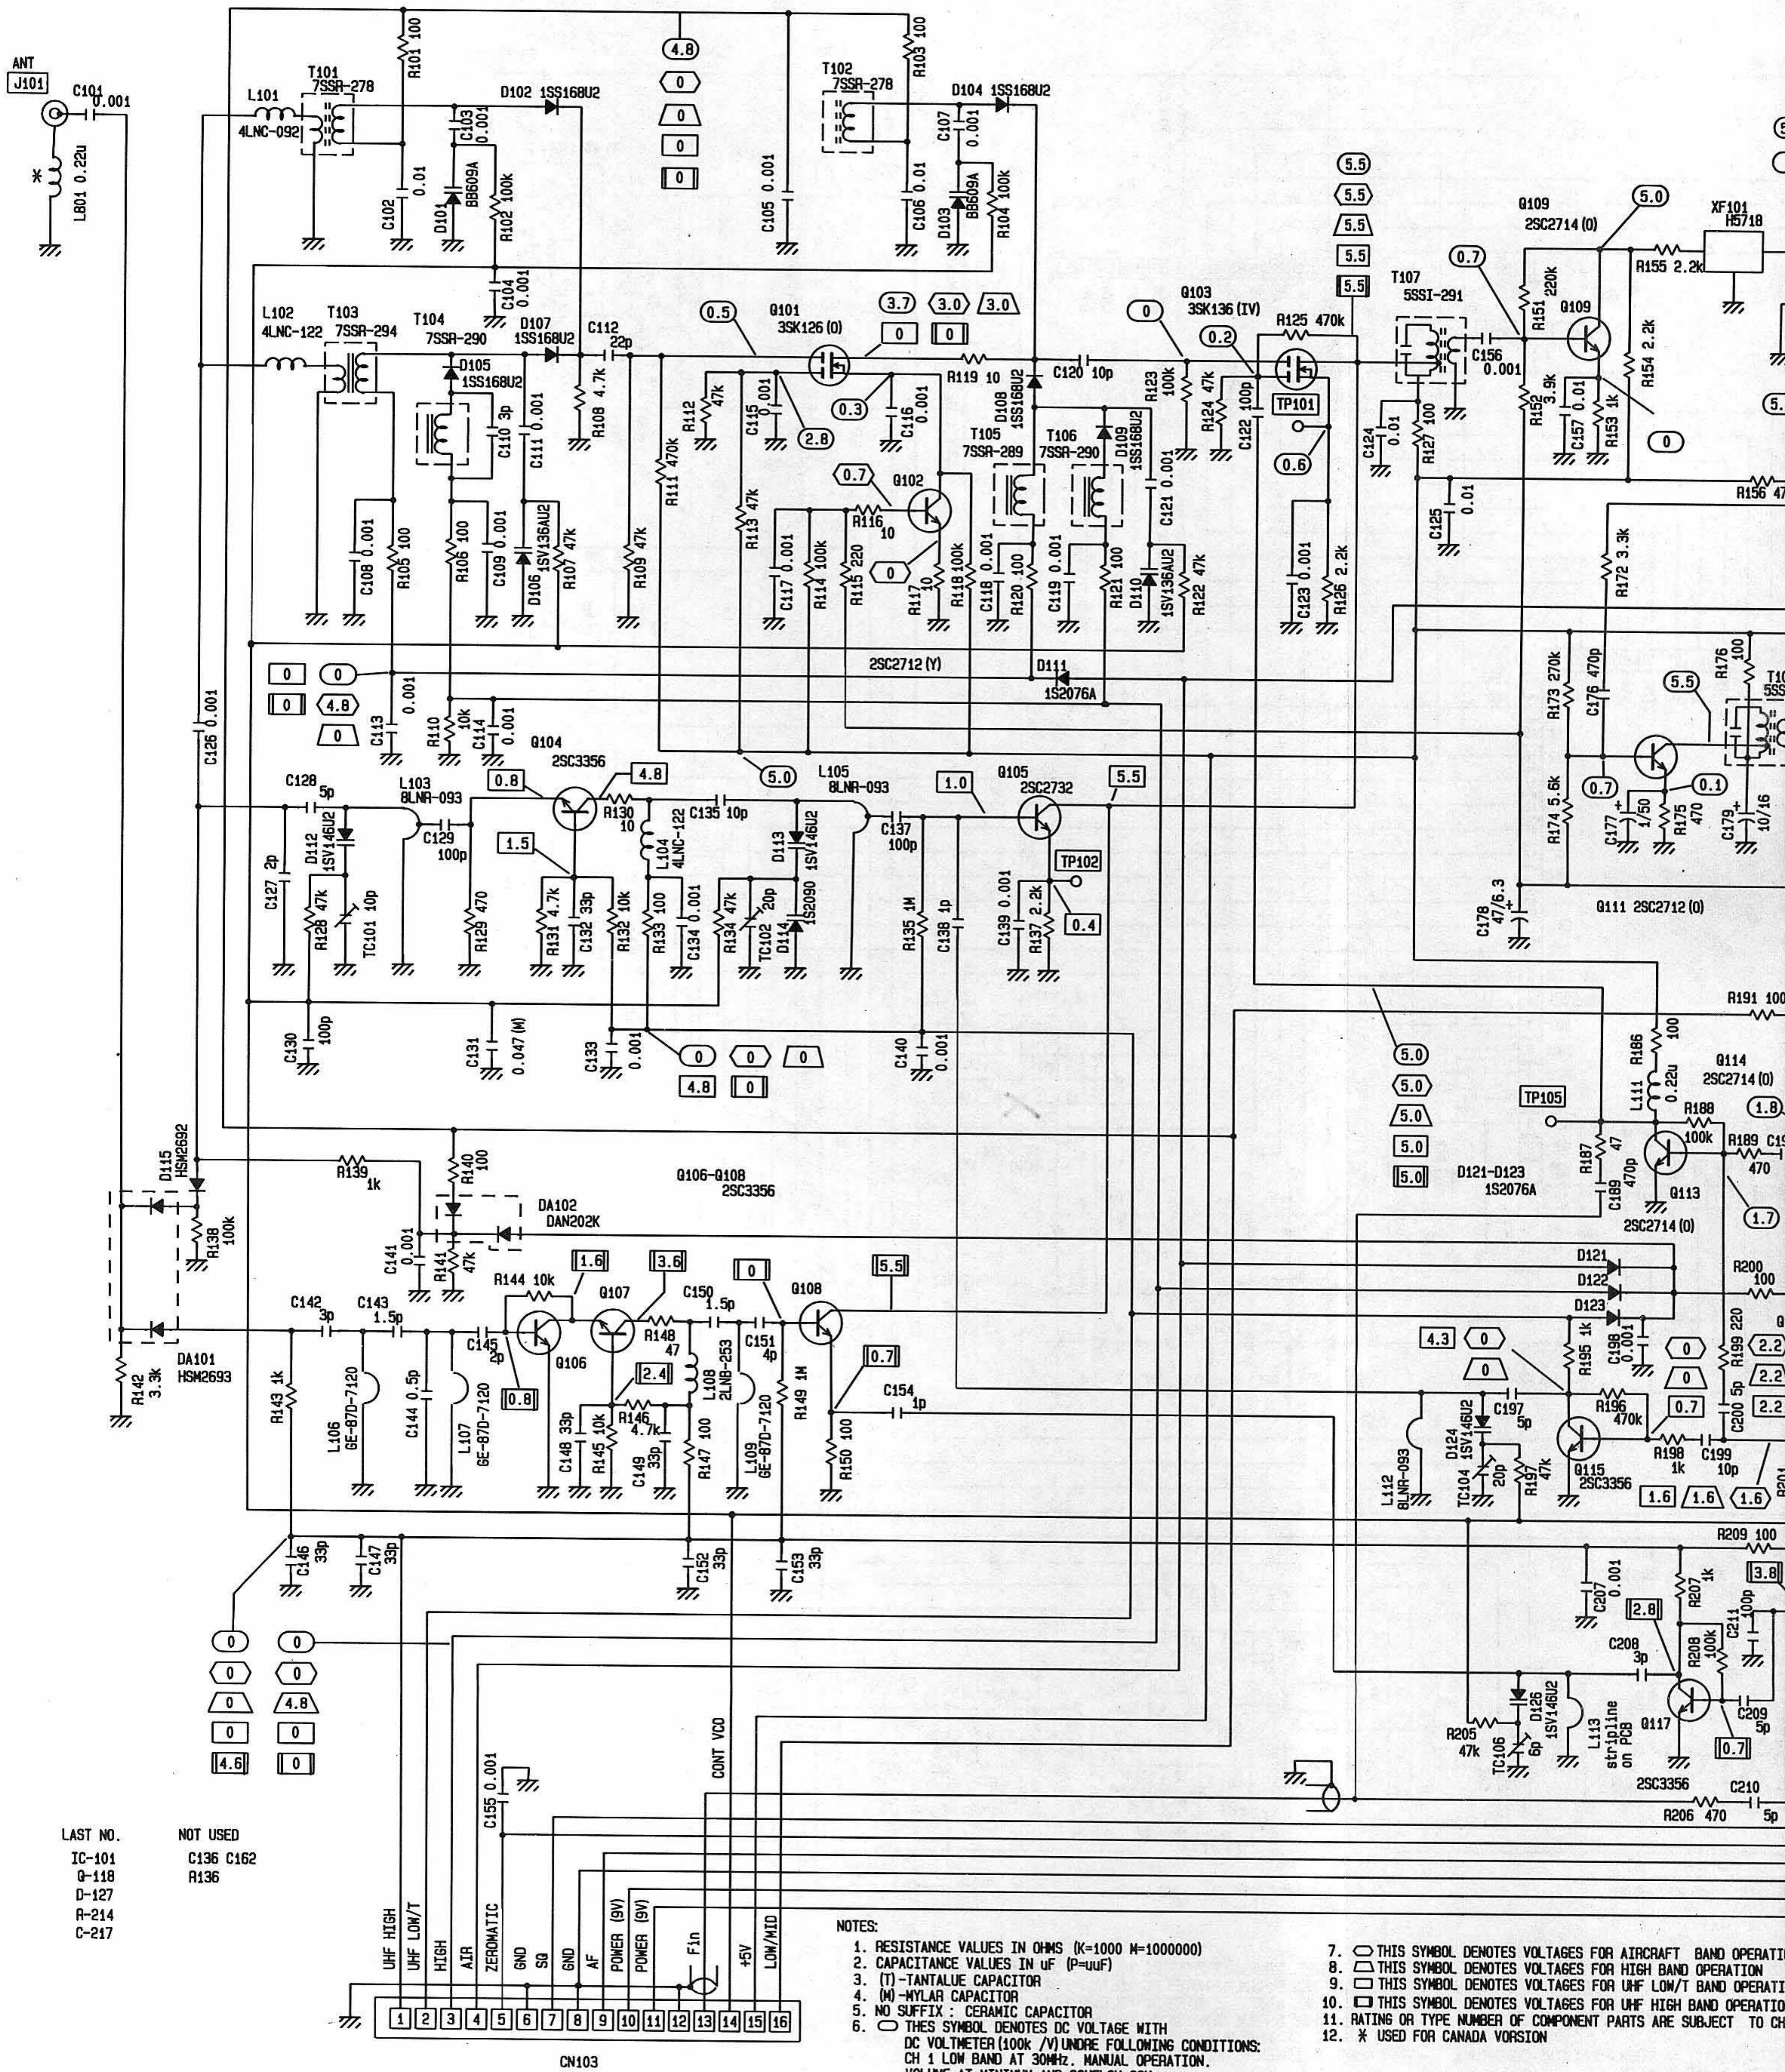


LAST NO.
IC-101
Q-118
D-127
R-214
C-217

NOT USED
C136 C162
R136

- NOTES:
1. RESISTANCE VALUES IN OHMS (K=1000 M=1000000)
 2. CAPACITANCE VALUES IN μ F (P=PPF)
 3. (T)-TANTALUM CAPACITOR
 4. (M)-MYLAR CAPACITOR
 5. NO SUFFIX : CERAMIC CAPACITOR
 6. THIS SYMBOL DENOTES DC VOLTAGE WITH DC VOLTMETER (100K Ω /V) UNDER FOLLOWING CONDITIONS:
CH 1 LOW BAND AT 30MHz. MANUAL OPERATION.
VOLUME AT MINIMUM AND SQUELCH CCW

7. $\square$ THIS SYMBOL DENOTES VOLTAGES FOR AIRCRAFT BAND OPERATION
8. $\square$ THIS SYMBOL DENOTES VOLTAGES FOR HIGH BAND OPERATION
9. $\square$ THIS SYMBOL DENOTES VOLTAGES FOR UHF LOW/T BAND OPERATION
10. $\square$ THIS SYMBOL DENOTES VOLTAGES FOR UHF HIGH BAND OPERATION
11. RATING OR TYPE NUMBER OF COMPONENT PARTS ARE SUBJECT TO CHANGE
12. * USED FOR CANADA VERSION

SCHEMATIC DIAGRAM (Logic Section)

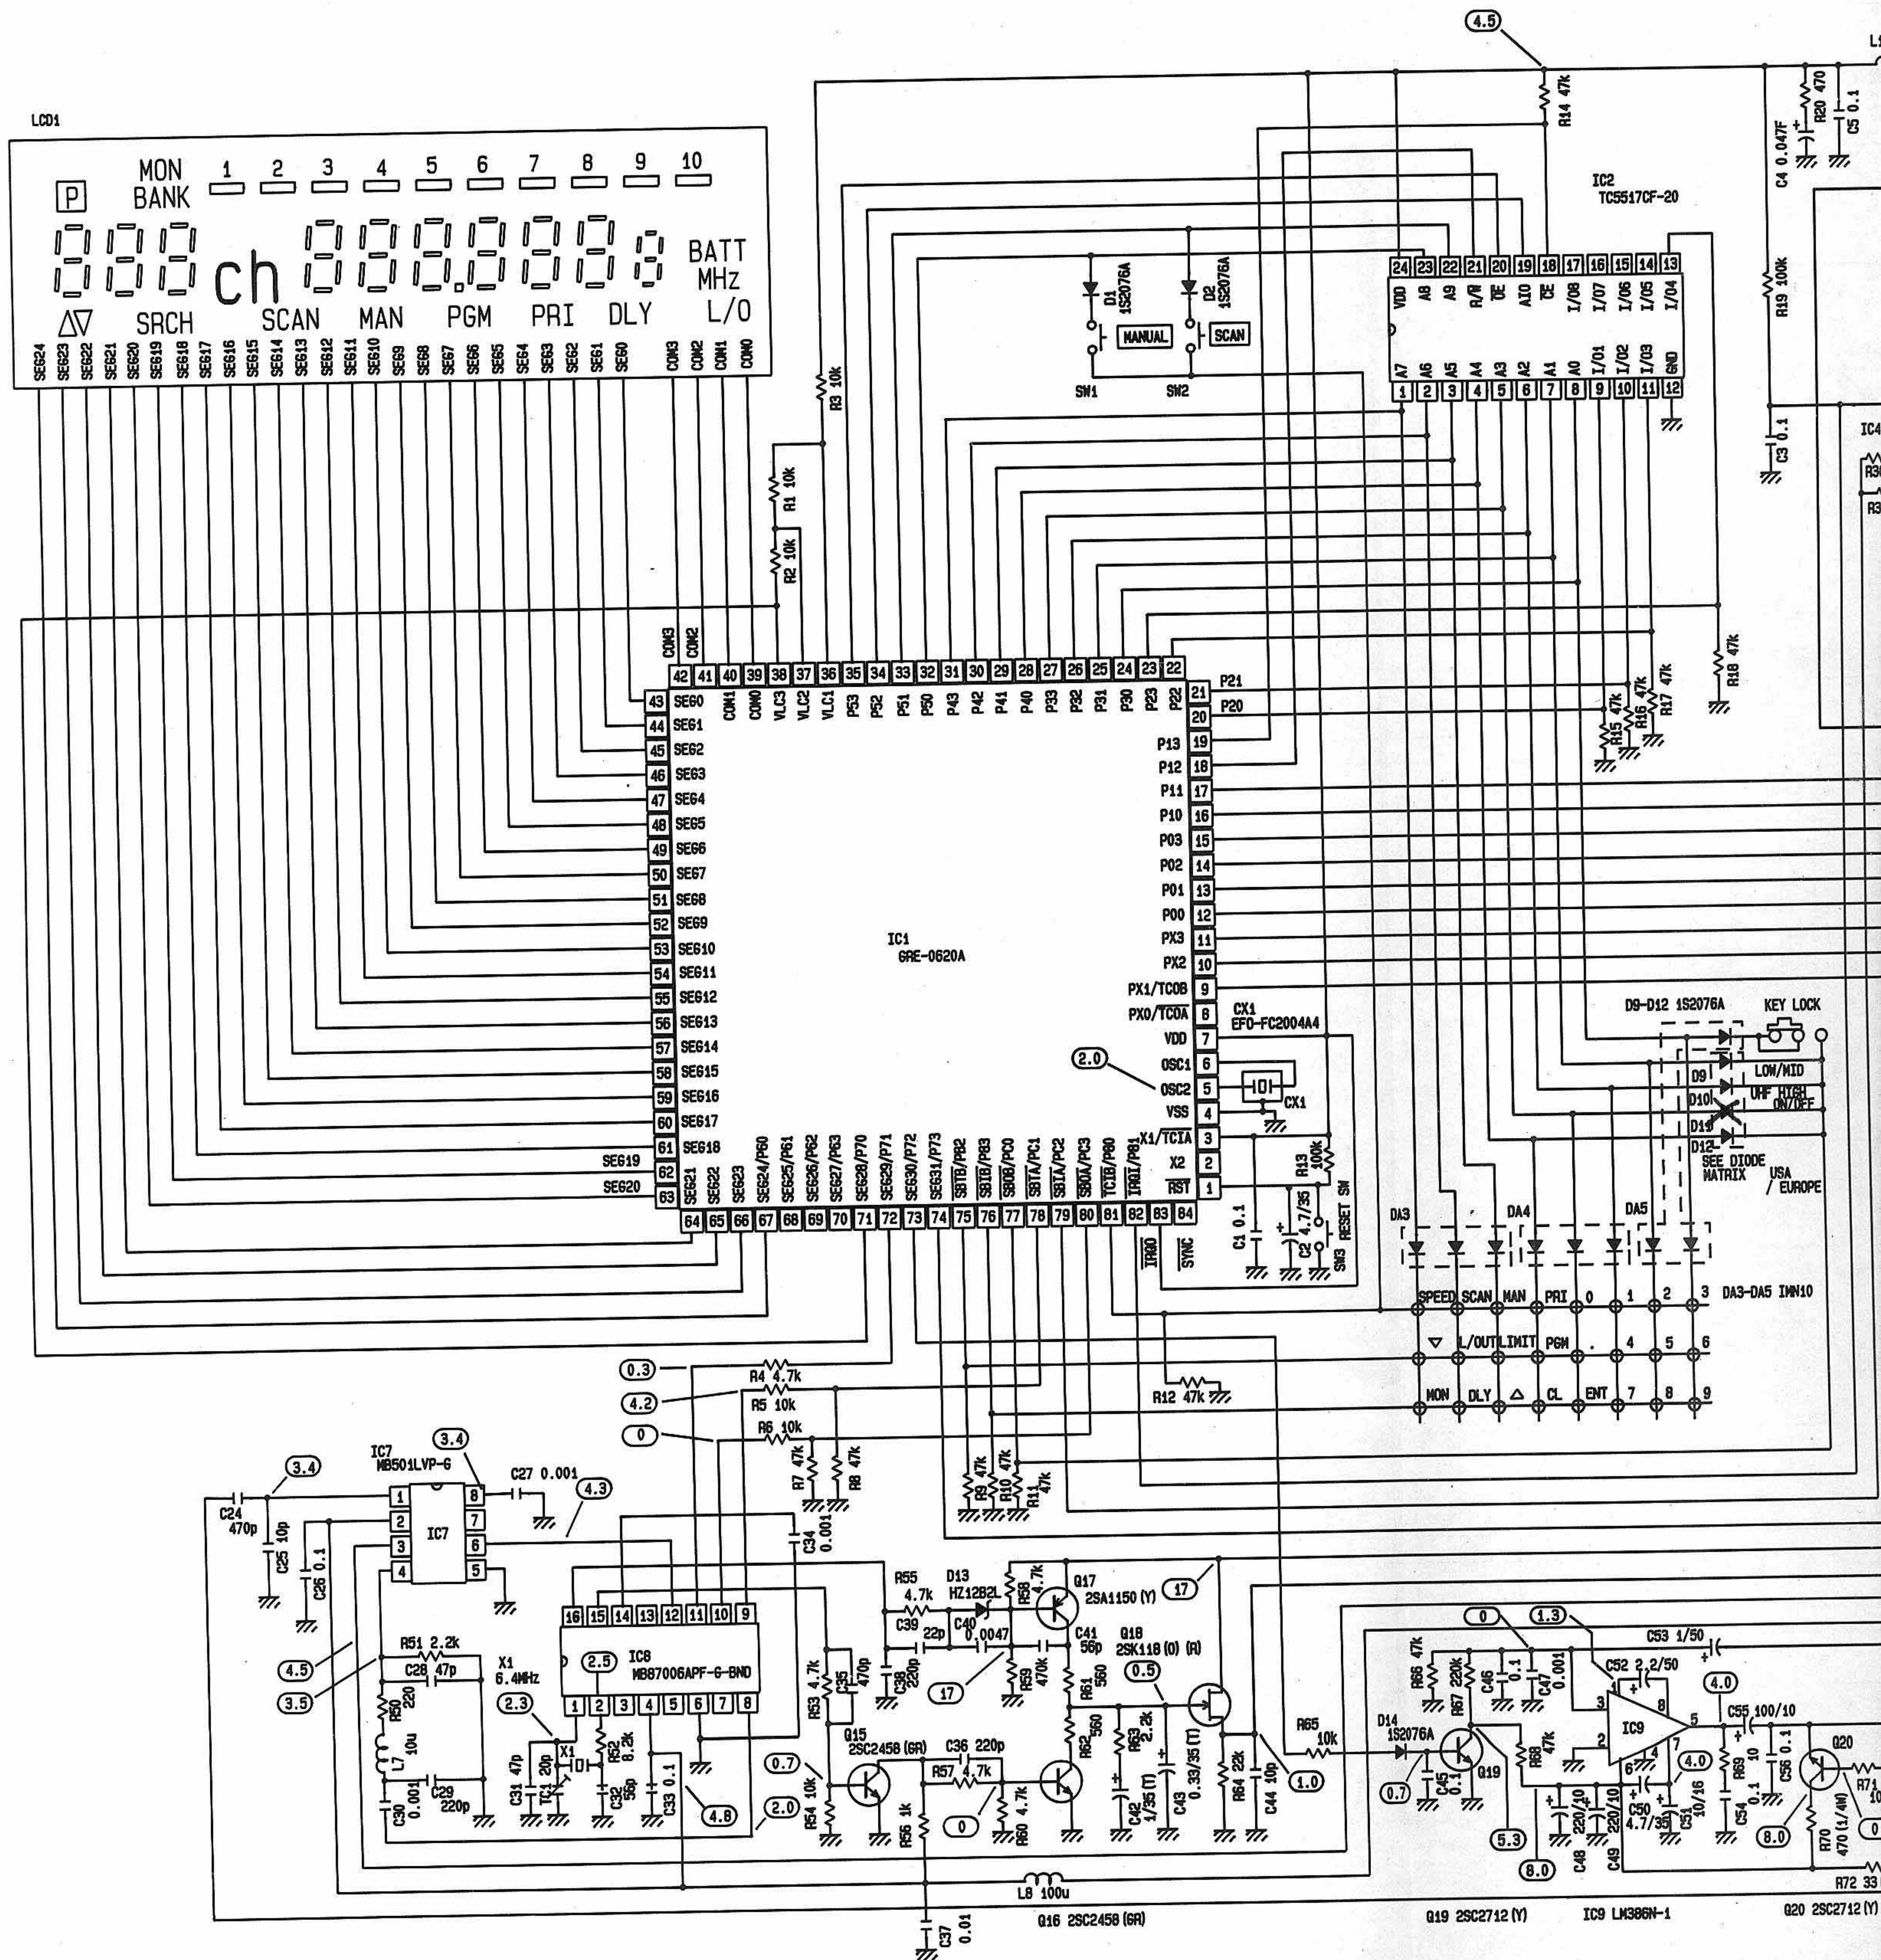


NOTES:

1. RESISTANCE VALUES IN OHMS (K=1000 M=1000000)
2. CAPACITANCE VALUES IN UF (P=UF)
3. (T)-TANTALUM CAPACITOR
4. (M)-MYLAR CAPACITOR
5. NO SUFFIX : CERAMIC CAPACITOR
6. $\square$ THIS SYMBOL DENOTES DC VOLTAGE MEASURED WITH DC VOLTMETER (100K / V) UNDER FOLLOWING CONDITIONS:
CH 1 LOW BAND AT 30MHz. MANUAL OPERATION. VOLUME AT MINIMUM AND SQUELCH CCM

7. $\square$ THIS SYMBOL DENOTES DC VOLTAGE FOR AIRCRAFT BAND OPERATION
8. $\square$ THIS SYMBOL DENOTES DC VOLTAGE FOR HIGH BAND OPERATION
9. $\square$ THIS SYMBOL DENOTES DC VOLTAGE FOR UHF LOW/T BAND OPERATION
10. $\square$ THIS SYMBOL DENOTES DC VOLTAGE FOR UHF HIGH BAND OPERATION
11. RATING OR TYPE NUMBER OF COMPONENT PARTS ARE SUBJECT TO CHANGE FOR IMPROVEMENT WITHOUT NOTICE

SCHEMATIC DIAGRAM (Logic Section)

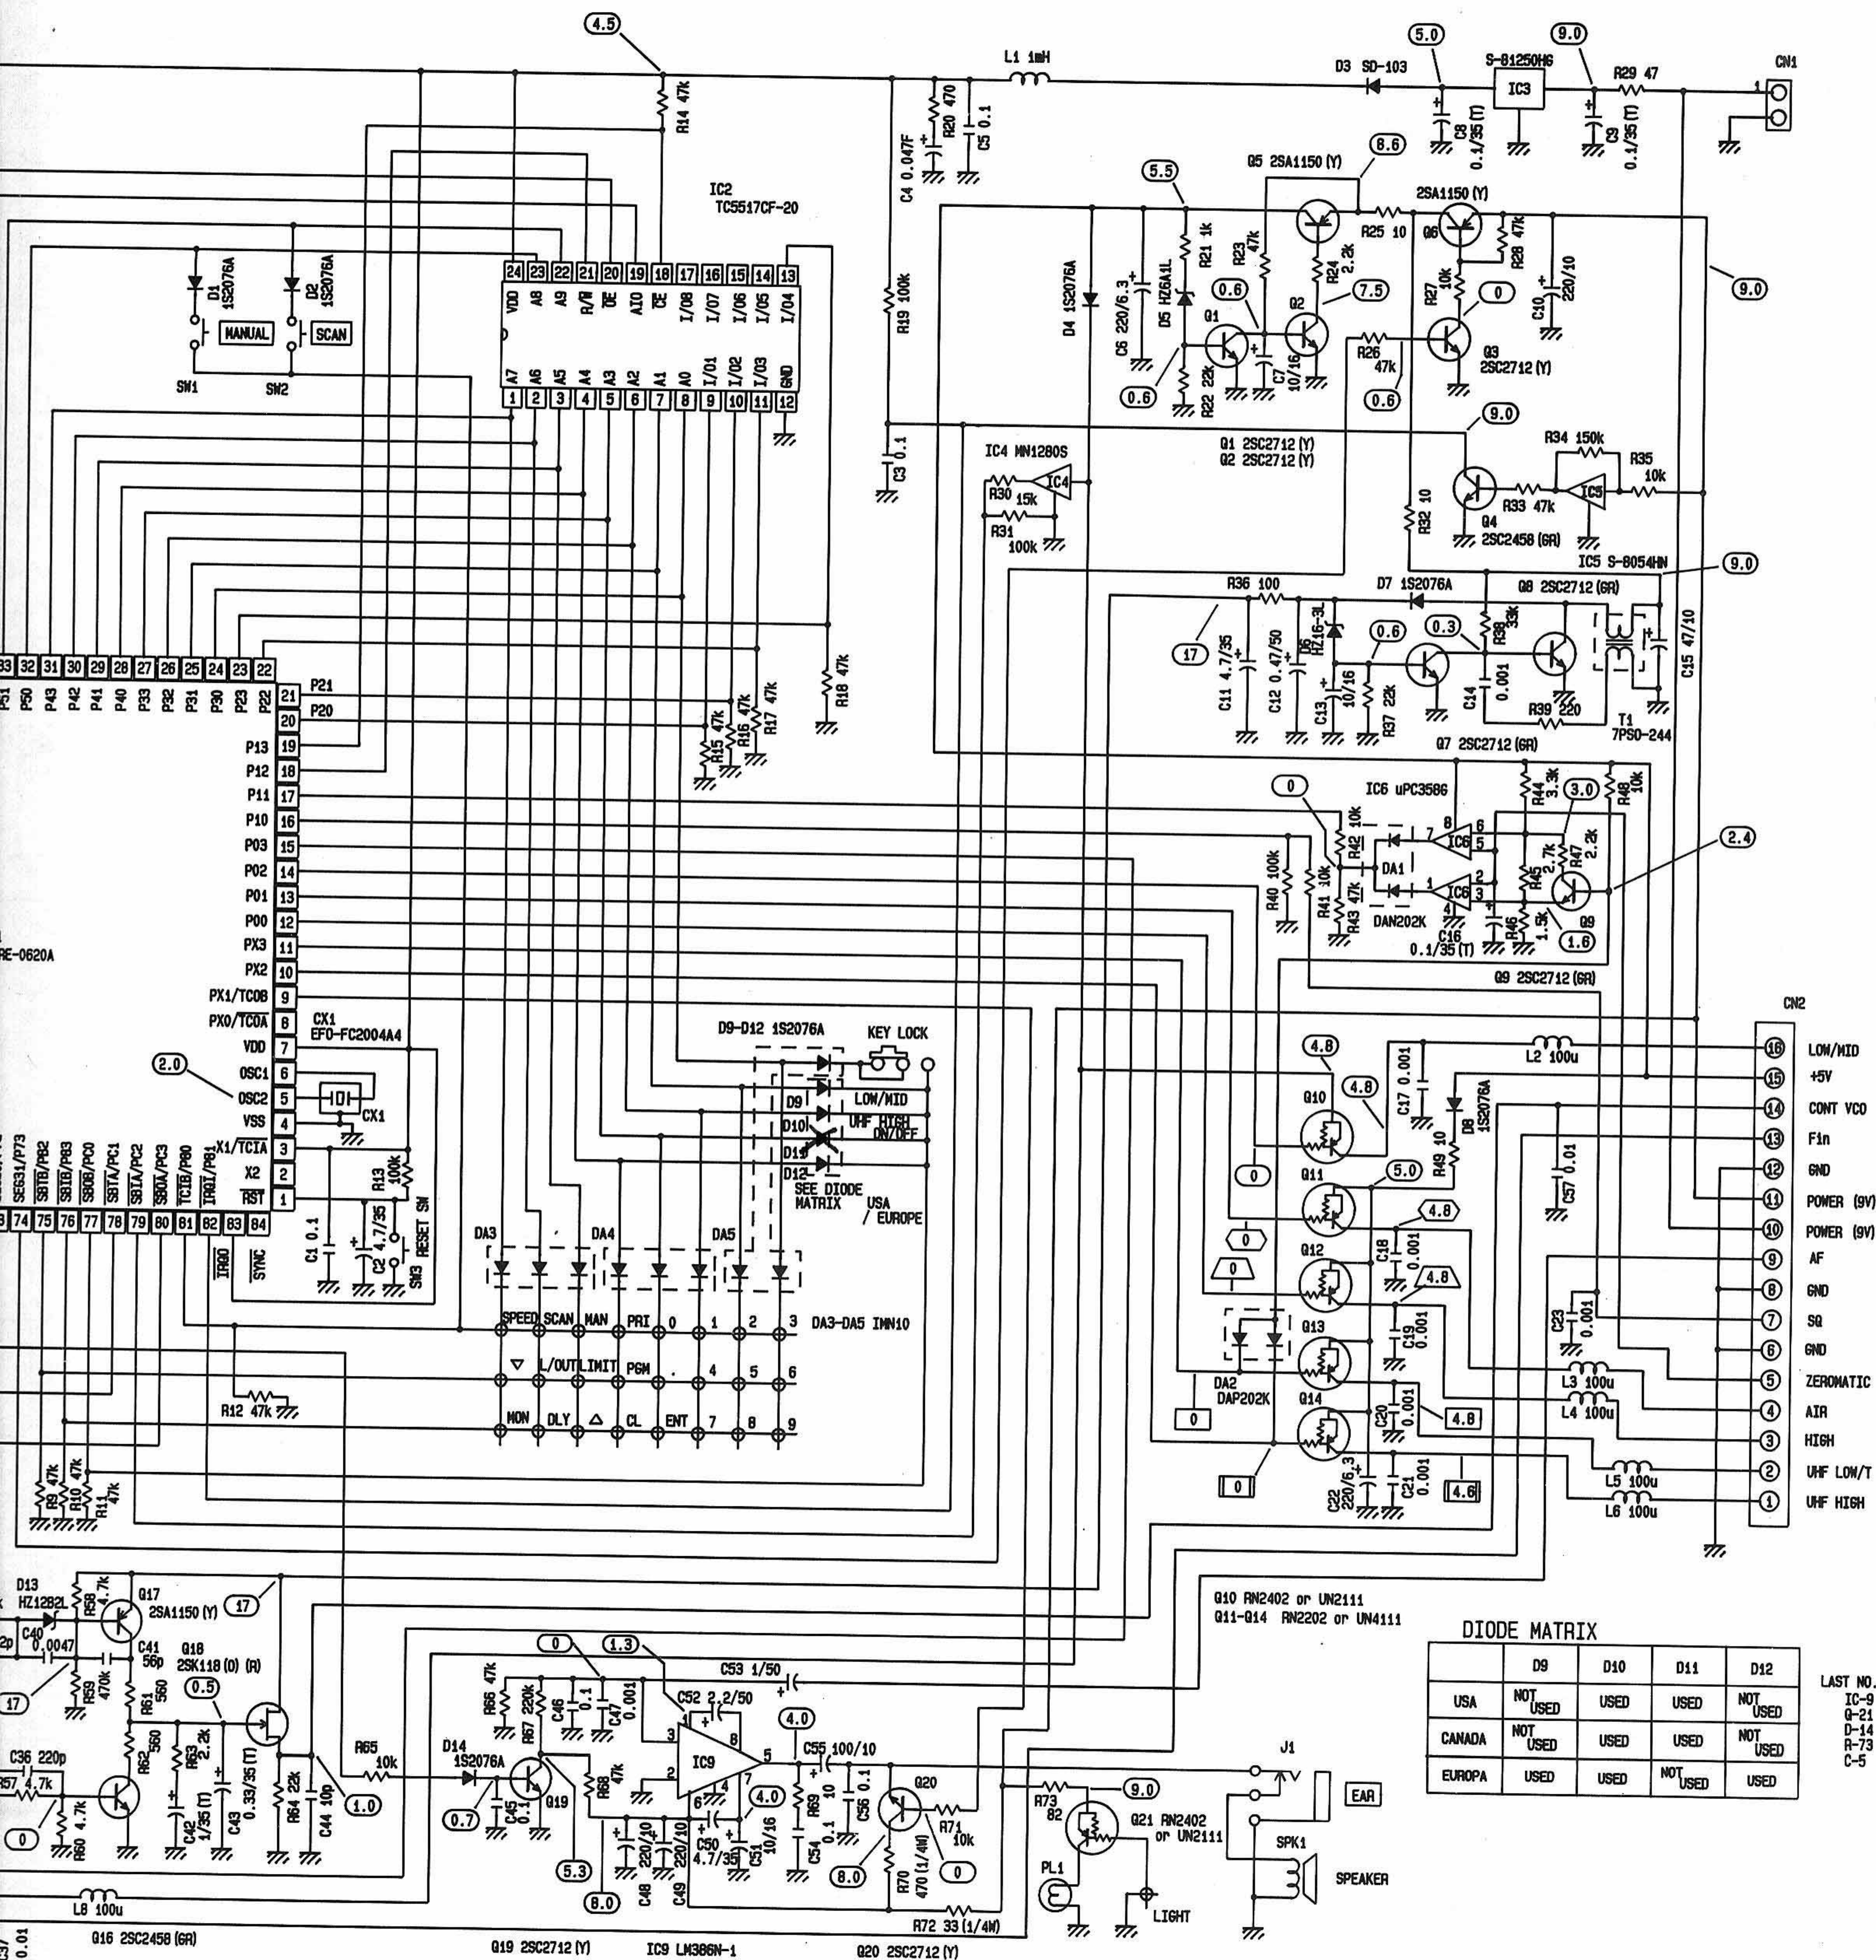

ULTMETER (100k / V) UNDER FOLLOWING CONDITIONS:
AT MINIMUM AND SQUELCH CCH

COPYRIGHT 1988

RADIO SHACK
A Division of Tandy Corporation
Fort Worth, Texas 76102

U.S. PATENT NOS.

3,794,925
3,801,914
3,961,261
3,962,644
4,027,251
4,092,594
4,123,715
4,245,348